

How To Use and Enjoy Your Lightweight Coleman Lantern Model 222B7101

U.S. PATENT NO.
R.E. 29,457 - 4,186,760





1. Ventilator

2. Mantle

3. Bail

4. Globe

5. Heat Shield

6. Fuel Valve

7. Pump Knob

8. Fuel Cap

9. Tank

1

Follow Instructions And Warnings To Avoid Injury Or Fires.

WARNING:

1. Coleman fuel is extremely flammable, handle with extreme care. Fuel vapors are invisible, explosive, and can be ignited by ignition sources many feet away.
2. This lantern is designed to use Coleman fuel. Never use kerosene, gasoline, regular or premium leaded automotive fuel.
3. Store fuel in a clean, properly marked container away from flame (including pilot lights), other sources of ignition, or excessive heat.
4. Always fill outdoors. Never fill lantern, loosen or remove fuel cap while lantern is lighted, near flame (including pilot lights), other ignition sources, or while top of lantern is hot to touch.
5. Always light and use lantern outdoors; never inside house, camper, tent, or other unventilated or enclosed areas.
6. This lantern consumes air (oxygen). Do not use in unventilated or enclosed areas to avoid endangering your life.
7. Keep lantern away from flammables. Never allow fabric, clothing, or any flammable material to come within four feet of the top and one foot of the side of the lantern.
8. Use for lighting only. Never alter in any way or use with any device or part not expressly approved by Coleman. Do not use as a space heater.
9. Replace any mantle with a hole in it. A hole can cause lantern to overheat and create a hazard.
10. Keep out of reach of children.

2

To Fill

Always fill outdoors. Never fill lantern, loosen or remove fuel cap while lantern is near flame (including pilot lights), other ignition sources, or while top of lantern is hot to touch.

1. Turn FUEL VALVE to "OFF". (Fig. 1)
2. Close PUMP KNOB firmly. Turn in direction of arrow. (Fig. 2)
3. Remove FUEL CAP. Use a funnel or suitable filling device and fill with clean, fresh fuel. Lantern must be in a level position to avoid overfilling. DO NOT TIP. (Fig. 3)
4. Replace FUEL CAP on lantern and on fuel container. Tighten firmly. WIPE UP ANY SPILLED FUEL AND DISPOSE OF IN A SAFE PLACE.



3

To Tie On Mantle

1. ALWAYS USE A 20-101 COLEMAN MANTLE.


This is a smaller MANTLE than the standard Coleman 21A MANTLE which is used on other Coleman gasoline and propane lanterns.

2. Tie MANTLE around grooves in BURNER. (Fig. 4) Distribute folds of MANTLE evenly. CUT OFF SURPLUS STRING 1/4" FROM KNOT. EXCESS STRING CAN CAUSE HOLES IN MANTLE.

3. Light bottom of MANTLE evenly. Burn until nothing but white ash remains. Once the MANTLE has been burned, it is very fragile. Be careful not to touch it with finger or match.

4. Allow MANTLE to cool before lighting lantern.

5. Install HEAT SHIELD, GLOBE, VENTILATOR, and BAIL.

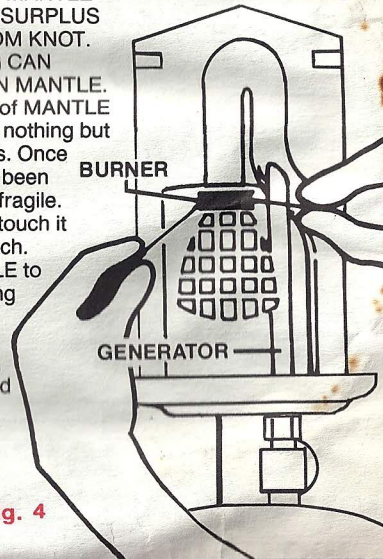

4 To Pump

1. Be sure fuel valve is in the "Off" position and that the fuel cap is tightened firmly.
2. Open pump knob one turn.
3. With thumb over hole in pump knob, pump approximately 30 strokes. If lantern is not full of fuel, more pump strokes are required.
4. Close pump knob firmly.

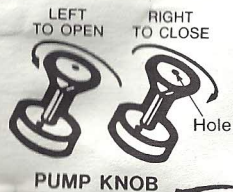


Fig. 5

5 To Light

1. Push lighted MATCH through lighting hole; hold near mantle and turn FUEL VALVE to the "ON" position. (Fig. 6) The mantle will take a few seconds to light.
- CAUTION:** Flames other than at mantle indicate flooding or a leak. Turn FUEL VALVE "OFF". Permit flames to burn out and lantern to cool. Carefully review instructions and correct problem before relighting lantern.
2. Open PUMP KNOB and pump 15-25 strokes. Close PUMP KNOB.
 3. Turn the FUEL VALVE from "ON" to "OFF" to "ON" several times. This will clean the small gas up in the generator. Repeat as necessary during operation.
 4. Additional pumping will be required at intervals for full light output.
 5. To avoid burns to hands, do not leave bail in upright position while lantern is burning.

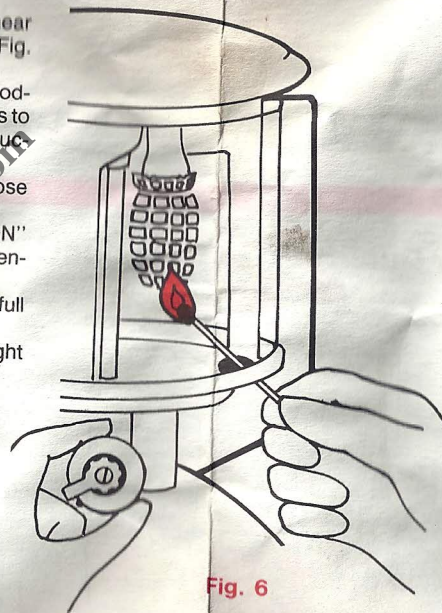


Fig. 6

6 To Turn Off


1. Turn FUEL VALVE to the "OFF" position. Light will dim and go out in approximately 1-2 minutes. **NOTE:** Allow lantern to cool before handling.

Things You Should Know

- 1.** Always carry spare Coleman 20-101 mantles. Mantles are fragile and easily damaged. To avoid breakage, never touch burned mantles with a match or fingers. Mantles are available at stores that handle Coleman Peak 1 products.
- 2.** Rinse tank twice a year with fresh fuel to remove sediment, gum formations, and moisture accumulations.
- 3.** Oil pump periodically to keep it soft and pliable.
- 4.** The usual storage areas for camping and picnic equipment is the basement, attic, or garage. To avoid the accumulation of dust, cobwebs, etc. that is common in these storage areas, place your lantern in a plastic bag and seal it with a rubber band.
- 5.** For repair service call 1-800-835-3278 TOLL FREE for location of your nearest Coleman Service Center. If lantern must be mailed to Service Center, attach your name, address, and a description of problem to product and mail it to Service Center prepaid, less globe and ventilator to prevent breakage. If necessary to write the Service Center or factory, refer to your lantern as model 222B7101.

www.oldtimelamp.com



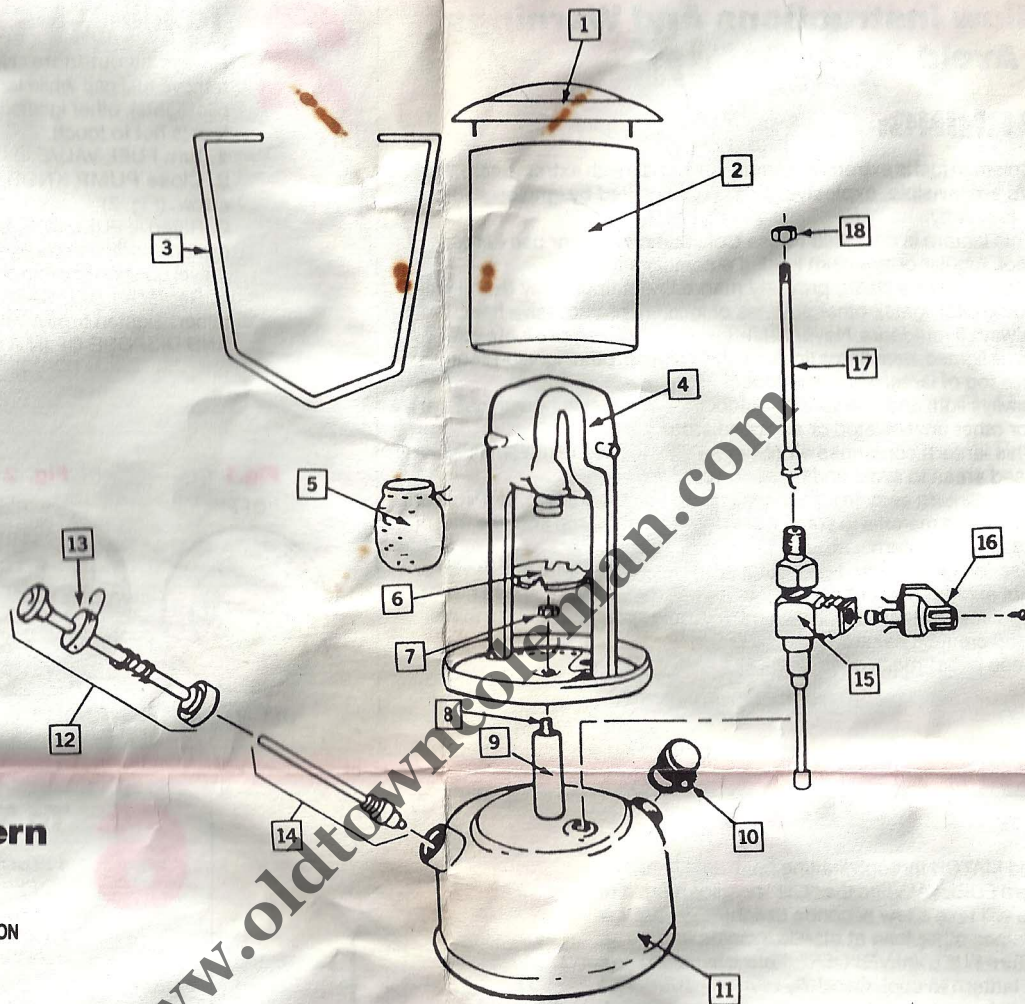

Parts List For Coleman Lantern model 222B



I.D. NO.	PART NO.	DESCRIPTION
1	222Y4851	Ventilator
2	5414-0481	Globe
3	5414-4235	Bail
4	222-3265	Burner Assy.
5	20-101	Mantle
6	5414-4605	Heat Shield
7	604A4565	Frame Nut
8	321-6031	Stud
9	222A4291	Base Rest
10	550A1405	Filler Cap
11	222Y1601	Fount Comp.
12	400-5201	Pump Plunger Assy.
13	530A5071	Clip, Pump Cap
14	400-6381	Check Valve and Stem Assy.
15	222A6565	Valve Assy.
16	222A6491	Knob and Screw
17	222A2991	Generator
18	288-162	Generator Nut

Other Quality Peak 1® Products




The finest
backpacking equipment.

High quality
sleeping bags.

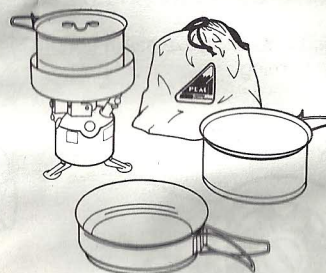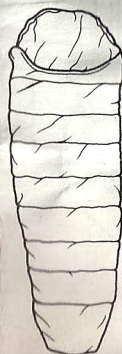

Compact, stain resistant
and durable cookware.

Innovative frames
and packs.

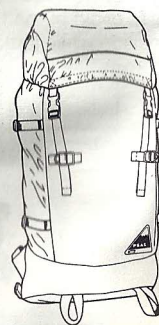

Coleman® Peak 1® Limited Warranty

Coleman will repair or replace, at its option, the product or any component of the product found to be defective in materials or workmanship as follows:

Peak 1® Lantern — model 222B7101 . . . within 3 years of the original retail purchase.

This warranty is valid for the original retail purchase and is **not transferable**. **Keep the original sales receipt. Proof of purchase is required to obtain warranty performance.** Coleman dealers, service centers, or retail stores offering Coleman products do not have authority to alter, modify or in any way change the terms or conditions of this warranty.

WHAT IS NOT COVERED

- Cost of shipment to Coleman
- Normal wear and tear, including chips, scratches, abrasion, discoloration or fading from use or exposure to sunlight
- Damage caused by misuse, abuse, neglect, alterations, repairs by unauthorized persons, use of non-Coleman accessories or parts, or failure to follow recommended care or maintenance instructions
- Products sold outside the United States, Puerto Rico, Virgin Islands, Guam, Canal Zone or American Samoa
- Mantles, generators, light bulbs, batteries, fuel
- Products used for commercial purposes or in profit or non-profit instructional or rental operation
- CONSEQUENTIAL DAMAGES, INCIDENTAL DAMAGES, OR EXPENSES, INCLUDING DAMAGES TO PROPERTY. SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATION OR EXCLUSION MAY NOT APPLY TO YOU.

IMPLIED WARRANTIES

ANY IMPLIED WARRANTIES, INCLUDING IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, SHALL BE LIMITED TO THE DURATION AND TERMS OF THE EXPRESS WARRANTIES SET FORTH IN THE LIMITED WARRANTY. SOME STATES DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, SO THE ABOVE LIMITATION MAY NOT APPLY TO YOU.

HOW TO OBTAIN WARRANTY PERFORMANCE

Take the product to an authorized Coleman Service Center. If one is not conveniently located, attach a tag to the product which includes your name, address, telephone number and description of the problem. Include a copy of the original sales receipt. Carefully package the product and send prepaid either by U.P.S. or Parcel Post, insured, to: The Coleman Co., Inc., 3600 N. Hydraulic, Wichita, KS 67219. Please do not mail products with fuel in tanks, or with disposable propane cylinders. Remove glass globes from lanterns.

NOTE: To the extent any provision of this warranty is prohibited by federal, state, or local law and cannot be preempted, it shall not be applicable. This warranty gives you specific rights and you may also have other rights which vary from state to state.

Made in United States of America

THE COLEMAN COMPANY, INC.

General Office and Factory: Wichita, Kansas U.S.A. 67219