

1 Follow Instructions And Warnings To Avoid Injury Or Fires.

WARNING:


1. This stove consumes air (oxygen). Do not use in unventilated areas. Ample ventilation must be provided to avoid endangering your life. Provide additional ventilation for persons and other fuel burning appliances occupying the same enclosed area.
2. Use for cooking only. Never alter in any way or use with any device or part not expressly approved by Coleman. Never use as a space heater. Never leave stove unattended while burning.
3. This stove is designed to use Coleman fuel. Never use kerosene, regular or premium leaded automotive fuel.
4. Fuel for your stove is extremely flammable. Use the same care as when using gasoline.
5. Always fill outdoors. Never fill tank, loosen or remove fuel cap while tank is on or attached to stove, near flame (including pilot lights), or other ignition sources.
6. Store fuel in a clean, properly marked container away from flame (including pilot lights), other sources of ignition, or excessive heat.
7. Never allow tents, sleeping bags, clothing, or any flammable material to come within three feet of the top and one foot of all sides of the stove.
8. Clean stove frequently to avoid grease accumulations and possible grease fires.
9. Keep out of reach of children.

2 To Fill Tank

Always Fill Outdoors. Never fill tank, loosen or remove fuel cap while tank is on or attached to stove, near flame (including pilot lights), or other ignition sources.

1. Close FUEL VALVE firmly. (fig. 1)
2. Close PUMP KNOB firmly. (fig. 2)
3. Place tank on level surface resting at angle shown in fig. 3.
4. Remove FUEL CAP. Use a funnel or suitable filling device and fill with clean, fresh fuel.
5. Replace FUEL CAP on tank and on fuel can. Tighten firmly.

WIPE UP ANY SPILLED FUEL AND DISPOSE OF IN A SAFE PLACE.

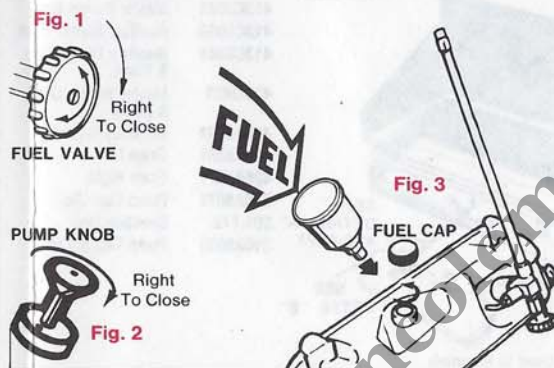


3 To Pump

1. The FUEL VALVE and FUEL CAP MUST be closed firmly.

2. Open PUMP KNOB one turn. Place thumb over hole in PUMP KNOB and pump approximately 35 full strokes.

3. Close PUMP KNOB firmly.

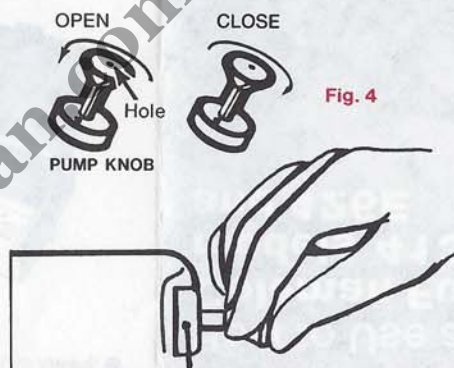


4 To Install Tank

1. Insert generator into large hole on the front of the stove and into mixing chamber above burner.


2. Engage tank clips into slots on the front of the stove.

3. If windy, swing wind baffles out and insert the wire clips into slots in ends of stove.

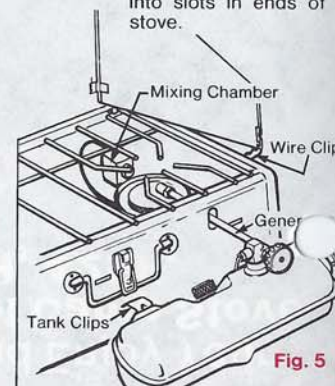

6 To Light Auxiliary Burner(s)

1. After the main burner has been lighted, the auxiliary burner(s) may be lighted.
2. Hold a lighted match at edge of an AUXILIARY BURNER and open the AUXILIARY VALVE located on the end of the stove next to the burner.
3. For stoves with 3 burners, repeat 1 and 2 above to light 2nd auxiliary burner.

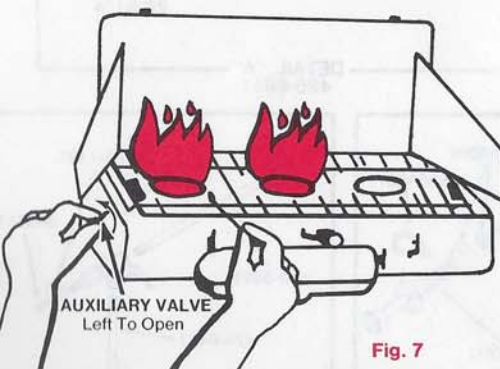


7 To Shut Off Burners

1. Shut off auxiliary burner(s) by closing the AUXILIARY VALVE(S).
2. Close FUEL VALVE firmly.

NOTE: Flame will linger on main burner for a few minutes after fuel valve is closed.

8 To Pack Stove

The tank goes in the left end of the stove with the valve wheel fitted in under the rear flange of the case.

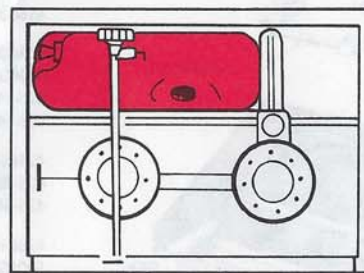

Things You Should Know

1. For best results, use only Coleman fuel in this stove. Coleman fuel is especially formulated and tested to rigid specifications with stabilizer additives for long storage life and a rust inhibitor to help prevent corrosion. Use of other fuels including unleaded automotive fuel may shorten generator life, damage stove, and result in unsatisfactory performance.
2. Rinse tank occasionally with fresh fuel to remove sediment, gum formations, and moisture accumulations. If stove is to be used for standby service, rinse and refill annually with fresh fuel.
3. Oil pump periodically to keep it working smoothly.
4. If a small orange flame develops where the generator enters the mixing chamber above the main burner, shut off all burners and allow the generator to cool. Use a wrench to tighten the fitting on the end of the generator.
5. The usual storage areas for camping and picnic equipment is the basement, attic, or garage. To avoid the accumulation of dust, cobwebs, etc., that is common in these storage areas, place your stove in a plastic bag and seal it with a rubber band.
6. For repair service call 1-800-835-3278 TOLL FREE for location of your nearest Coleman Service Center. If stove must be mailed to Service Center, attach your name, address, and a description of problem to stove and mail to Service Center prepaid. If necessary to write the Service Center or factory, refer to your stove by specific model number: 413H, 425F, or 426E.



1 Follow Instructions And Warnings To Avoid Injury Or Fires.

WARNING:


1. This stove consumes air (oxygen). Do not use in unventilated areas. Ample ventilation must be provided to avoid endangering your life. Provide additional ventilation for persons and other fuel burning appliances occupying the same enclosed area.
2. Use for cooking only. Never alter in any way or use with any device or part not expressly approved by Coleman. Never use as a space heater. Never leave stove unattended while burning.
3. This stove is designed to use Coleman fuel. Never use kerosene, regular or premium leaded automotive fuel.
4. Fuel for your stove is extremely flammable. Use the same care as when using gasoline.
5. Always fill outdoors. Never fill tank, loosen or remove fuel cap while tank is on or attached to stove, near flame (including pilot lights), or other ignition sources. Never remove tank while stove is burning.
6. Store fuel in a clean, properly marked container away from flame (including pilot lights), other sources of ignition, or excessive heat.
7. Never allow tents, sleeping bags, clothing, or any flammable material to come within three feet of the top and one foot of all sides of the stove.
8. Clean stove frequently to avoid grease accumulations and possible grease fires.
9. Keep out of reach of children.

2 To Fill Tank


Always Fill Outdoors. Never fill tank, loosen or remove fuel cap while tank is on or attached to stove, near flame (including pilot lights), or other ignition sources.

1. Close FUEL VALVE firmly. (fig. 1)
2. Close PUMP KNOB firmly. (fig. 2)
3. Place tank on level surface resting at angle shown in fig. 3.
4. Remove FUEL CAP. Use a funnel or suitable filling device and fill with clean, fresh fuel.
5. Replace FUEL CAP on tank and on fuel can. Tighten firmly.

WIPE UP ANY SPILLED FUEL AND DISPOSE OF IN A SAFE PLACE.

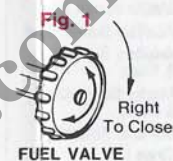

FUEL VALVE

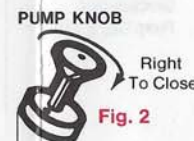

PUMP KNOB

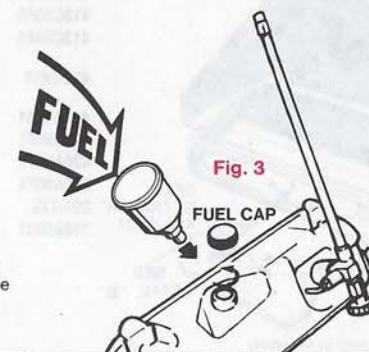


Fig. 3

3 To P

1. The F...
2. MUST b...
3. Place the...
4. KNOB at...
5. full str...
6. Close



PUMP KNOB

5 To Light Main Burner

To light the stove, follow the numbered steps below. Be sure to hold a lighted match at the main burner **before** opening the fuel valve. When opening the fuel valve, **QUICKLY** open it **AT LEAST 2 FULL TURNS**.

1. Close AUXILIARY VALVE(s). (fig. 6)
2. Turn LIGHTING LEVER to "Up" position. (fig. 6)
3. First, hold lighted match at edge of main burner and then **QUICKLY** open FUEL VALVE **AT LEAST 2 FULL TURNS**. **CAUTION:** A persistent high, yellow flame indicates flooding or a leak. Close fuel valve, allow flames to burn out, and stove to cool. Turn stove upside down to empty out any fuel from inside the burner. Wipe dry. Carefully review instructions before relighting stove.
4. Wait at least one minute and then turn LIGHTING LEVER down.
5. Open PUMP KNOB and pump additional pressure into tank. Close PUMP KNOB.
6. Adjust flame to desired heat with FUEL VALVE.

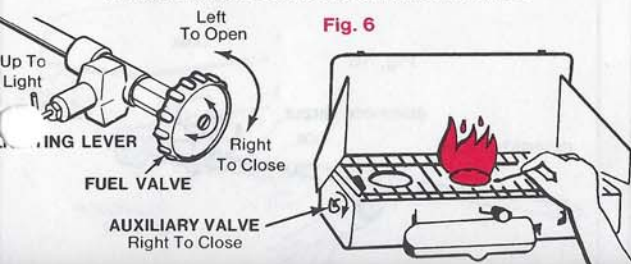


Fig. 6

6 To Light Auxiliary Burner(s)

1. After the main burner has been lighted, the auxiliary burner(s) may be lighted.
2. Hold a lighted match at edge of an AUXILIARY BURNER and open the AUXILIARY VALVE located on the end of the stove next to the burner.
3. For stoves with 3 burners, repeat 1 and 2 above to light 2nd auxiliary burner.

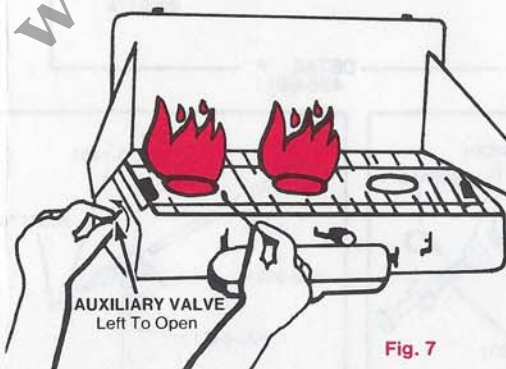


Fig. 7

7 To Shut Off Burners

1. Shut off auxiliary burner(s) by closing the AUXILIARY VALVE(S).
 2. Close FUEL VALVE firmly.
- NOTE:** Flame will linger on main burner for a few minutes after fuel valve is closed.

8 To Pack Stove

The tank goes in the left end of the stove with the valve wheel fitted in under the rear flange of the case.

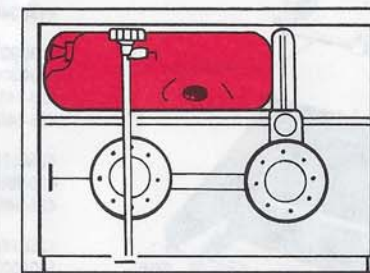



Fig. 8

Things

1. For best results, use a fuel formulated and tested for automotive use.
2. Rinse tank out with fresh fuel.
3. Oil pump periodically.
4. If a small amount of moisture accumulates, place stove in a dry area.
5. The usual storage area is the garage. To avoid areas, place stove in a dry area.
6. For repair service, contact the Service Center.


426E.



Coleman

How to Use and Enjoy Your Coleman Fuel Camp Stove models 413H, 425F, and 426E

model 426E

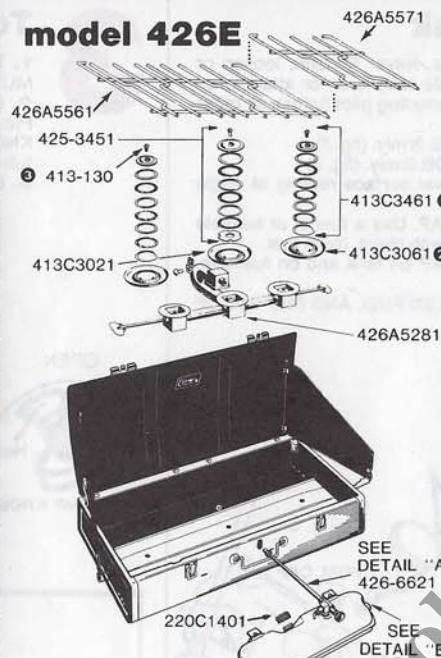


PART NO.
8B242

DESCRIPTION

200-6381	Enamel, Fount Green
220B175	Check Valve & Stem Ass'y
220C1401	Self-Tapping Screw
242D5201	Filler Cap
407-6491	Pump Plunger Ass'y.
413-130	Valve Wheel
413-130	Screw
413-5601	Tank Complete
426-5621	Generator
426-5021	Tube Ass'y. Fuel & Air
426-6611	Valve & Generator Complete
413C3021	Master Burner Bowl
413C3016	Auxiliary Burner Bowl
413C3461	Auxiliary Burner Cap & Fillers
425-3451	Master Burner Cap & Fillers
426A5281	Manifold Assembly
426A5561	Grate Left
426A5571	Grate Right
530A5071	Pump Cap Clip
201-172	Direction Disc
216A5091	Pump Cup & Clip

② Quantity of Parts Used in Assembly
③ Quantity of Parts Used in Assembly

model 413H

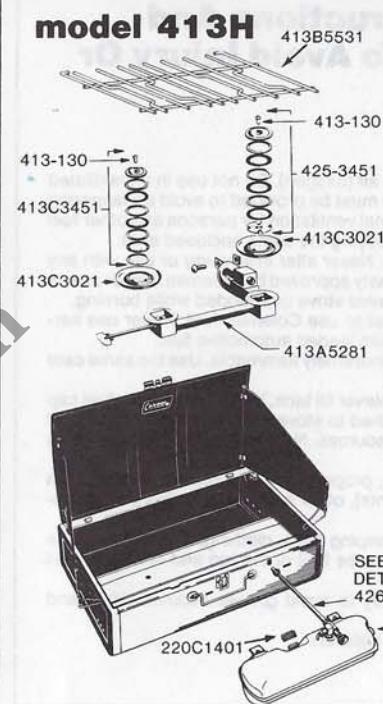

PART NO.
8B242

DESCRIPTION

200-6381	Enamel, Fount Green
220B175	Check Valve & Stem Ass'y
220C1401	Self-Tapping Screw
242D5201	Filler Cap
407-6491	Pump Plunger Ass'y.
413-130	Valve Wheel
413-130	Screw
413A5281	Manifold Assembly
413-5601	Tank (Complete)
413B5531	Grate
426-5621	Generator
426-5021	Tube Ass'y. (Fuel & Air)
426-6611	Valve & Generator Complete
413C3021	Burner Bowl
413C3451	Cap and Fillers
425-3451	Cap and Fillers
530A5071	Pump Cap Clip
201-172	Direction Disc
216A5091	Pump Cup & Clip

SEE DETAIL "A"
426-6621
SEE DETAIL "B"

model 425F






PART NO.
8B242

DESCRIPTION

200-6381	Enamel, Fount Green
220B175	Check Valve & Stem Ass'y
220C1401	Self-Tapping Screw
242D5201	Filler Cap Complete
412-5621	Pump Plunger Ass'y.
412-6601	Generator
413-130	Valve and Generator Screw
413C3461	Auxiliary Burner Cap and Fillers
413C3021	Master Burner Bowl
413C3061	Auxiliary Burner Bowl
425-1491	Valve Wheel
425-3451	Master Burner Cap and Fillers
425A5281	Manifold Ass'y.
425-5561	Grate
425-6461	Tube Assembly (Fuel and Air)
425B1651	Tank Complete
530A5071	Pump Cap Clip
216A5091	Pump Cup & Clip

② Quantity of Parts Used in Assembly

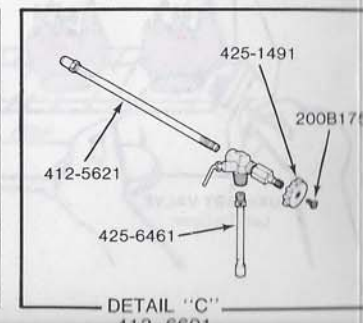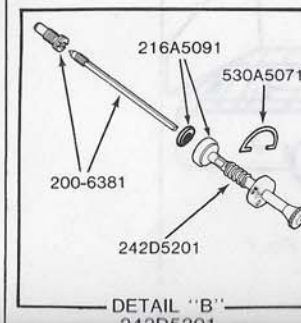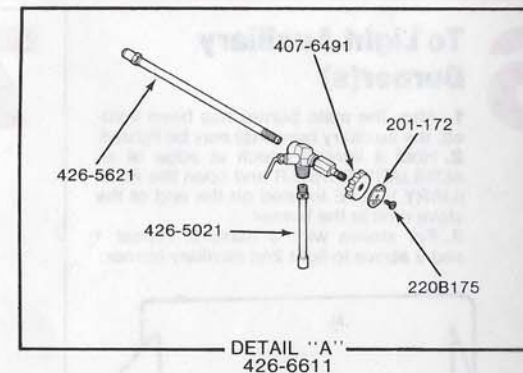

Coleman Limited 1 Year Warranty

This product is warranted to the retail consumer for one year from date of retail purchase against defects in material and workmanship and is transferable. If a Customer Information Card is enclosed please return it so that we may reach you in the unlikely event that a safety recall is needed. Return is not required to validate this warranty.

WHAT IS COVERED: Replacement parts and labor. Transportation charges to Consumer for repaired Product.

WHAT IS NOT COVERED: Transportation charges to Coleman for defective Product. Damages caused by abuse or failure to perform normal maintenance — see owner's manual. Sales outside of the United States. Any other expense. **Consequential damages, incidental damages, or incidental expenses, including damage to property.** Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

HOW TO OBTAIN WARRANTY PERFORMANCE: Locate nearest Coleman Service Center by calling 1/800/835-3278 TOLL FREE! Attach to Product your name, address, description of problem, phone number and proof of date of retail purchase (sales slip). Package and return Product to Coleman Service Center, transportation charges prepaid.

IMPLIED WARRANTIES: Any implied warranties, including the implied warranties of merchantability and fitness for a particular purpose, are limited in duration to one year from date of retail purchase. Some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you.

To the extent any provision of this warranty is prohibited by federal, state, or municipal law and cannot be preempted, it shall not be applicable. This warranty gives you specific rights, and you may also have other rights which vary from state to state.


COLEMAN COMPANY, INC. 3600 N. HYDRAULIC WICHITA, KANSAS 67219

Made in United States of America

THE COLEMAN COMPANY, INC.

General Office and Factory: Wichita, Kansas U.S.A. 67201


model 426E

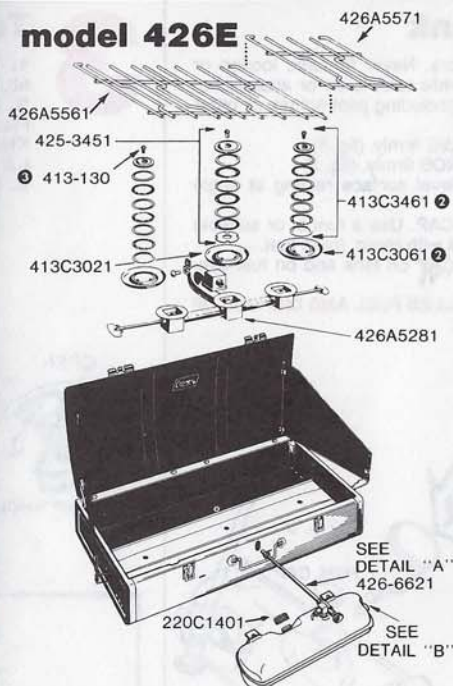

- ② Quantity of Parts Used in Assembly
③ Quantity of Parts Used in Assembly


PART NO.	DESCRIPTION
8B242	Enamel, Fount Green
200-6381	Check Valve & Stem Ass'y
220B175	Self-Tapping Screw
220C1401	Filler Cap
242D5201	Pump Plunger Ass'y.
407-6491	Valve Wheel
413-130	Screw
413-5601	Tank Complete
426-5621	Generator
426-5021	Tube Ass'y. Fuel & Air
426-6611	Valve & Generator Complete
413C3021	Master Burner Bowl
413C3016	Auxiliary Burner Bowl
413C3461	Auxiliary Burner Cap & Fillers
425-3451	Master Burner Cap & Fillers
426A5281	Manifold Assembly
426A5561	Grate Left
426A5571	Grate Right
530A5071	Pump Cap Clip
201-172	Direction Disc
216A5091	Pump Cup & Clip

model 413H

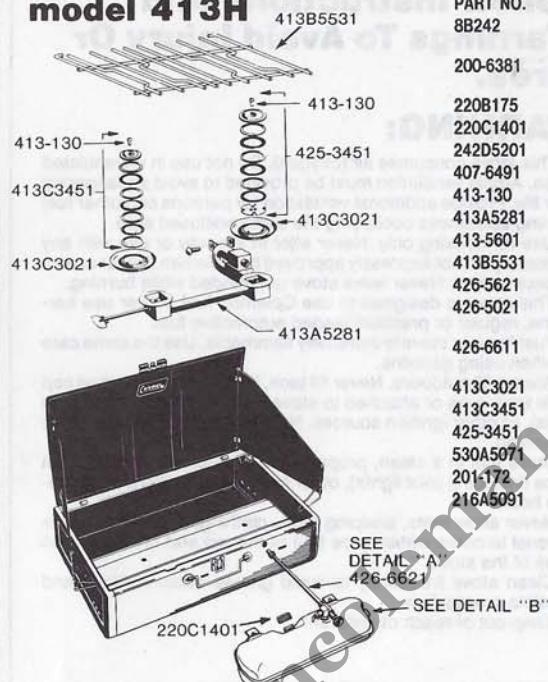


PART NO.	DESCRIPTION
8B242	Enamel, Fount Green
200-6381	Check Valve & Stem Ass'y
220B175	Self-Tapping Screw
220C1401	Filler Cap
242D5201	Pump Plunger Ass'y.
407-6491	Valve Wheel
413-130	Screw
413A5281	Manifold Assembly
413-5601	Tank (Complete)
413B5531	Grate
426-5621	Generator
426-5021	Tube Ass'y. (Fuel & Air)
426-6611	Valve & Generator (Complete)
413C3021	Burner Bowl
413C3451	Cap and Fillers
425-3451	Cap and Fillers
530A5071	Pump Cap Clip
201-172	Direction Disc
216A5091	Pump Cup & Clip


Coleman Accessories

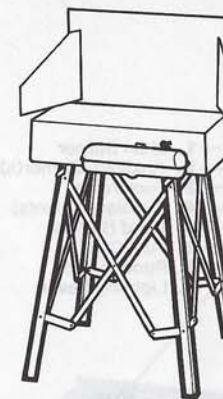

MODEL 5918499 ALUMINUM HIGH STAND. Holds stove or cooler firmly at comfortable level. Folds up easily and completely for storage and carrying.

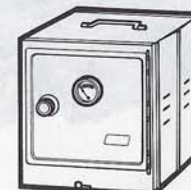


MODEL 5010A700 CAMP OVEN. For real home cooked meals. Bakes biscuits, roasts, casseroles, even cakes. Adjustable rack — easy to read thermometer — folds flat for storage.

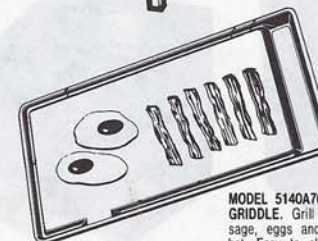


MODEL 5140A700 TEFLON GRIDDLE. Grill pancakes, sausage, eggs and bacon sizzling hot. Easy to clean — easy to use.

model 425F

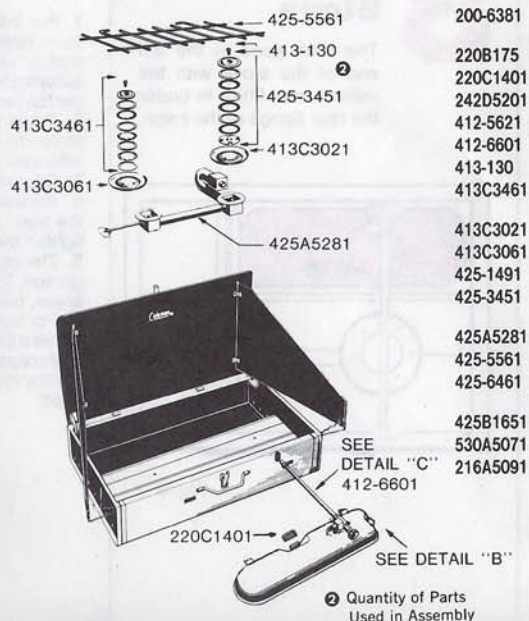


- ② Quantity of Parts Used in Assembly


PART NO.	DESCRIPTION
8B242	Enamel, Fount Green
200-6381	Check Valve & Stem Ass'y
220B175	Self-Tapping Screw
220C1401	Filler Cap Complete
242D5201	Pump Plunger Ass'y.
412-5621	Generator
412-6601	Valve and Generator Screw
413-130	Screw
413C3461	Auxiliary Burner Cap and Fillers
413C3021	Master Burner Bowl
413C3061	Auxiliary Burner Bowl
425-1491	Valve Wheel
425-3451	Master Burner Cap and Fillers
425A5281	Manifold Ass'y.
425-5561	Grate
425-6461	Tube Assembly (Fuel and Air)
425B1651	Tank Complete
530A5071	Pump Cap Clip
216A5091	Pump Cup & Clip

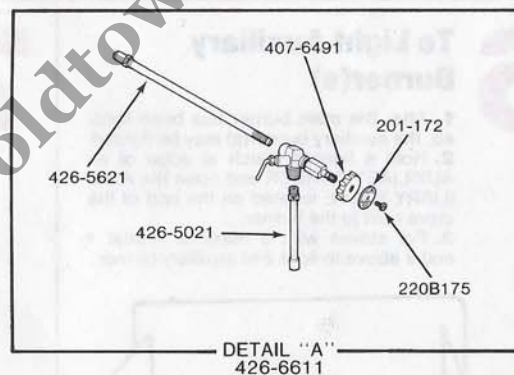

DETAIL "A"
426-6611

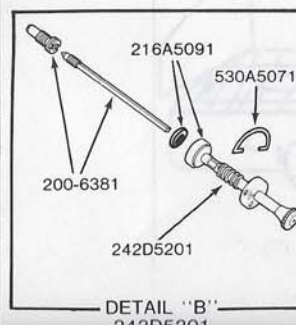

DETAIL "B"
242D5201

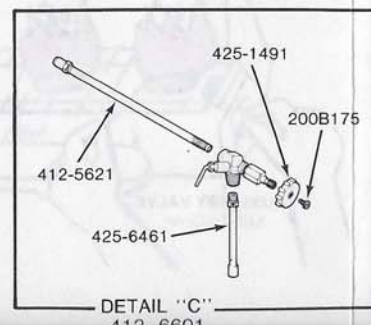

DETAIL "C"
412-6601

Generator Replacement

If your stove is hard to light or fails to provide full heat output, the generator should be replaced.

1. Remove tank from stove. Take tank away from flames (including pilot lights) and other ignition sources.
2. Invert tank and securely grip square top of valve in a vise. Using pliers or a pipe wrench, unscrew and discard generator tube and coil.
3. Using pliers, unscrew and discard generator needle.
4. Finger tighten new generator needle into valve. Using pliers, tighten generator needle $\frac{1}{4}$ turn. **DO NOT OVER TIGHTEN.**
5. Slip new coil and generator tube over needle. Wrench tighten generator tube to valve to form a leak-tight joint.
6. Visually check for leaks immediately after lighting.

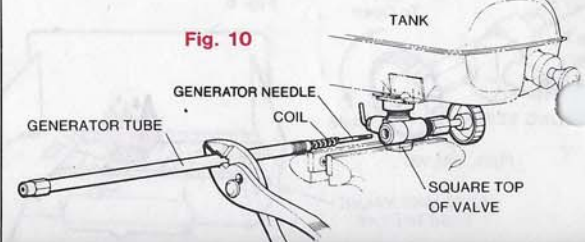


Fig. 10