

Canadian Office and Factory: Toronto, Canada
 General Office and Factory: Wichita, Kansas U.S.A. 67201
THE COLEMAN COMPANY, INC.

Made in United States of America

THE COLEMAN COMPANY, INC. 445 N. Minnesota Wichita, Kansas 67214

To the extent any provision of this warranty is prohibited by federal, state, or municipal law and cannot be preempted, it shall not be applicable. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

IMPLIED WARRANTIES: Any implied warranties, including the implied warranties of merchantability and fitness for a particular purpose, are limited in duration to one year from date of retail purchase. Some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you.

HOW TO OBTAIN WARRANTY PERFORMANCE: Locate nearest Coleman Service Center from date of retail purchase (sales slip). Package of problem, phone number and proof of date of retail purchase (sales slip). Attach to Product near your name, address, description of problem, phone number and proof of date of retail purchase (sales slip). Package and return Product to Coleman Service Center, transportation charges prepaid.

WHAT IS NOT COVERED: Transportation charges to Coleman for defective Product. Damages caused by abuse or failure to perform normal maintenance — see owner's manual. Sales outside of the United States. Any other expense. Consequential damages, incidental damages, or incidental expenses, including damage to property. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.


WHAT IS COVERED: Replacement parts and labor. Transportation charges to Consumer for repaired Product.

This product is warranted to the retail consumer for one year from date of retail purchase against defects in material and workmanship and is transferable. If a Customer Information Card is enclosed please return it so that we may reach you in the unlikely event that a safety recall is needed. Return is not required to validate this warranty.


Limited 1 Year Warranty



**How to Use and Enjoy Your
 Coleman Fuel Camp Stove
 models 413G, 425F,
 and 426D**

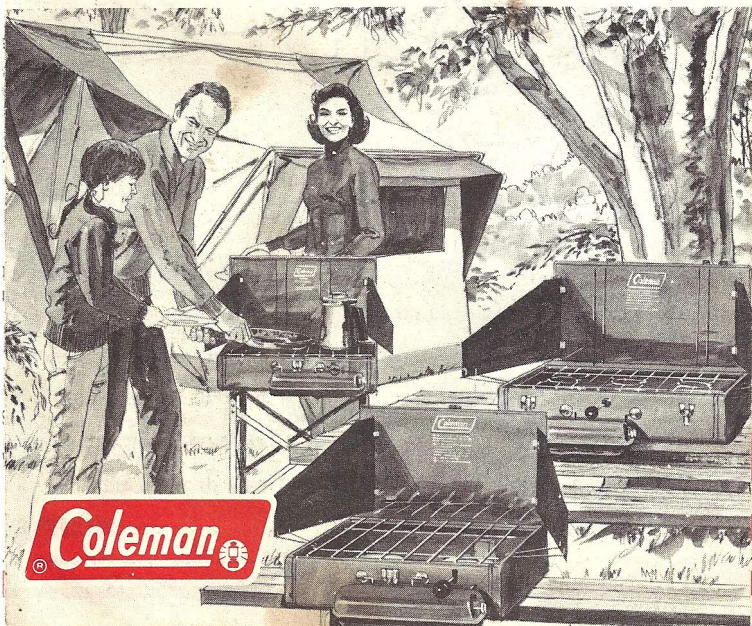

model 426D

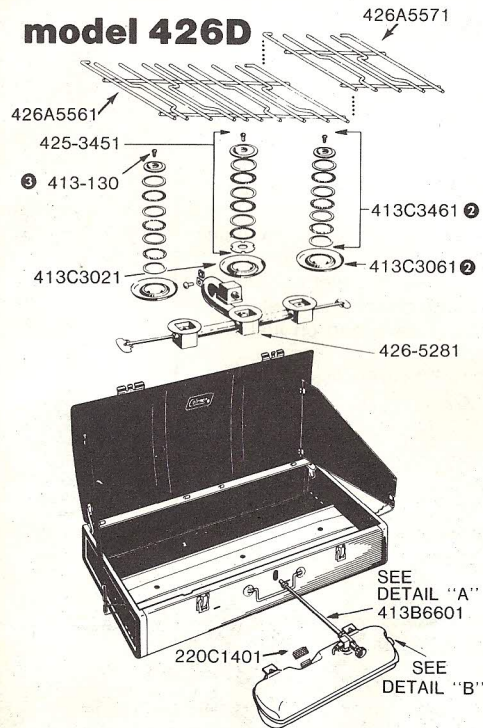


SEE
DETAIL "A"
413B6601

SEE
DETAIL "B"

- ② Quantity of Parts Used in Assembly
- ③ Quantity of Parts Used in Assembly

PART NO.	DESCRIPTION
8B242	Enamel, Fount Green
200-6381	Check Valve & Stem Ass'y
220B175	Self-Tapping Screw Filler Cap
220C1401	Filler Cap
242D5201	Pump Plunger Ass'y.
401-2181	Gas Tip, Marked B
407-6491	Valve Wheel Screw
413-130	Screw
413-5601	Tank Complete
413A5621	Generator
413A6461	Tube Ass'y. Fuel & Air
413B6601	Valve & Generator Complete
413C3021	Master Burner Bowl
413C3016	Auxiliary Burner Bowl
413C3461	Auxiliary Burner Cap & Fillers
425-3451	Master Burner Cap & Fillers
426-5281	Manifold Assembly
426A5561	Grate Left
426A5571	Grate Right
530A5071	Pump Cap Clip
201-172	Direction Disc

model 413G

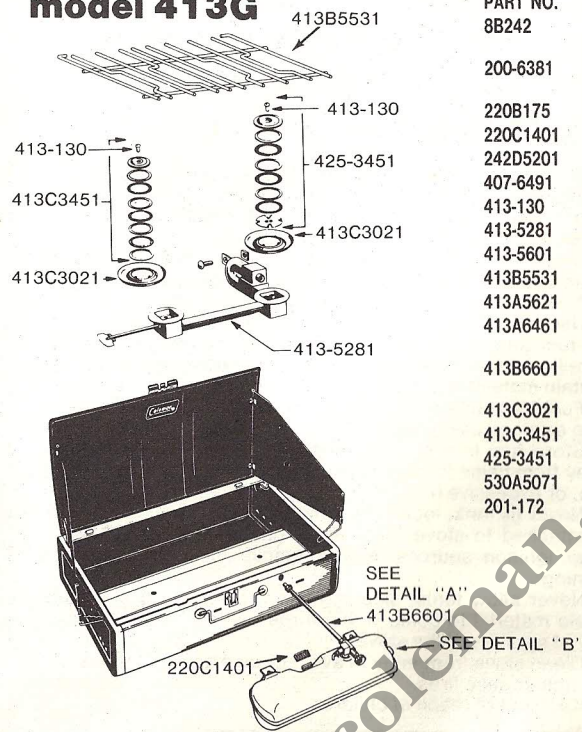

SEE
DETAIL "A"
413B6601

SEE
DETAIL "B"

PART NO.	DESCRIPTION
8B242	Enamel, Fount Green
200-6381	Check Valve & Stem Ass'y.
220B175	Self-Tapping Screw Filler Cap
220C1401	Filler Cap
242D5201	Pump Plunger Ass'y.
407-6491	Valve Wheel Screw
413-130	Screw
413-5281	Manifold Assembly
413-5601	Tank (Complete)
413B5531	Grate
413A5621	Generator
413A6461	Tube Ass'y. (Fuel & Air)
413B6601	Valve & Generator (Complete)
413C3021	Burner Bowl
413C3451	Cap and Fillers
425-3451	Cap and Fillers
530A5071	Clip (Pump Cap)
201-172	Direction Disc

To Service Pump

1. Remove clip from pump cap.
2. Turn pump knob counter clockwise several times to unscrew air stem.
3. Pull out pump and air stem.
4. Work several drops of oil into pump leather.
5. Insert pump and air stem into tank. (Pump leather must not invert or fold.)
6. Replace pump cap and clip. Turn pump knob clockwise several times to screw air stem into tank.


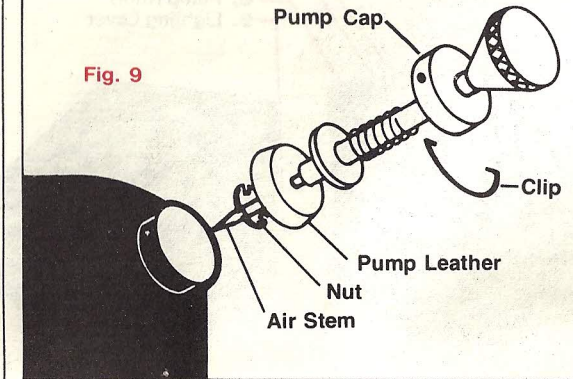


Fig. 9

model 425F

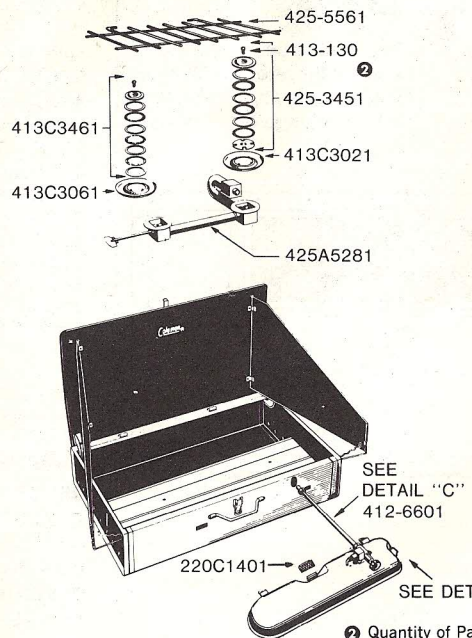


SEE
DETAIL "C"
412-6601


SEE
DETAIL "B"

- ② Quantity of Parts Used in Assembly


PART NO.	DESCRIPTION
8B242	Enamel, Fount Green
200-6381	Check Valve & Stem Ass'y.
220B175	Self-Tapping Screw Filler Cap Complete
220C1401	Filler Cap Complete
242D5201	Pump Plunger Ass'y.
412-5621	Generator
412-6601	Valve and Generator
413-130	Screw
413C3461	Auxiliary Burner Cap and Fillers
413C3021	Master Burner Bowl
413C3061	Auxiliary Burner Bowl
425-1491	Valve Wheel
425-3451	Master Burner Cap and Fillers
425A5281	Manifold Ass'y.
425-5561	Grate
425-6461	Tube Assembly (Fuel and Air)
425B1651	Tank Complete
530A5071	Pump Cap Clip

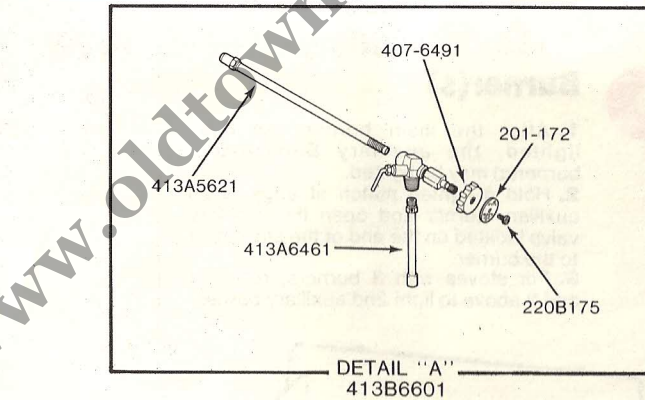

DETAIL "A"
413B6601

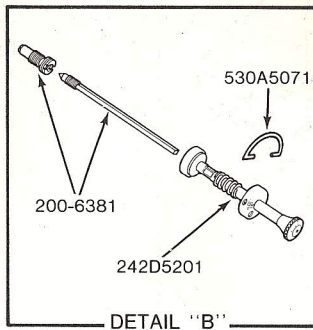

DETAIL "B"

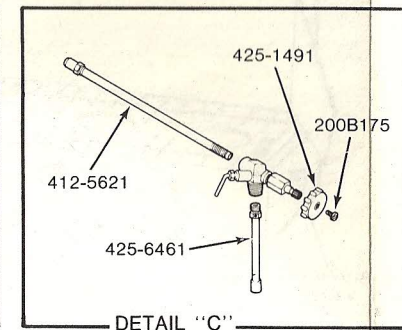

DETAIL "C"
412-6601

The Generator

The generator vaporizes fuel. After extended use, deposits may build up in the generator causing the stove to lose efficiency. Replace generator to restore efficiency.

1. Remove tank from stove. Take tank away from flames (including pilot lights) and other ignition sources.
2. Invert tank and securely grip square top of valve in a vise. Using pliers or a pipe wrench, unscrew and discard generator tube and coil.
3. Using pliers, unscrew and discard generator needle.
4. Finger tighten new generator needle into valve. Using pliers, tighten generator needle 1/4 turn. **DO NOT OVER TIGHTEN.**
5. Slip new coil and generator tube over needle. Wrench tighten generator tube to valve to form a leak-tight joint.
6. Visually check for leaks immediately after lighting.


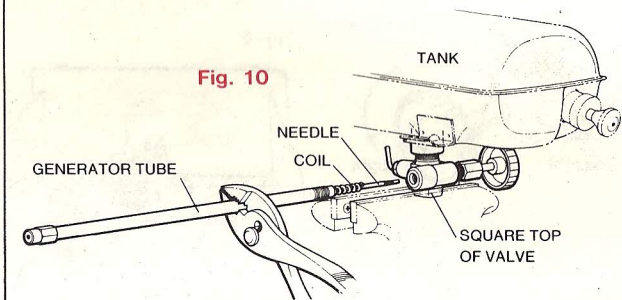


Fig. 10

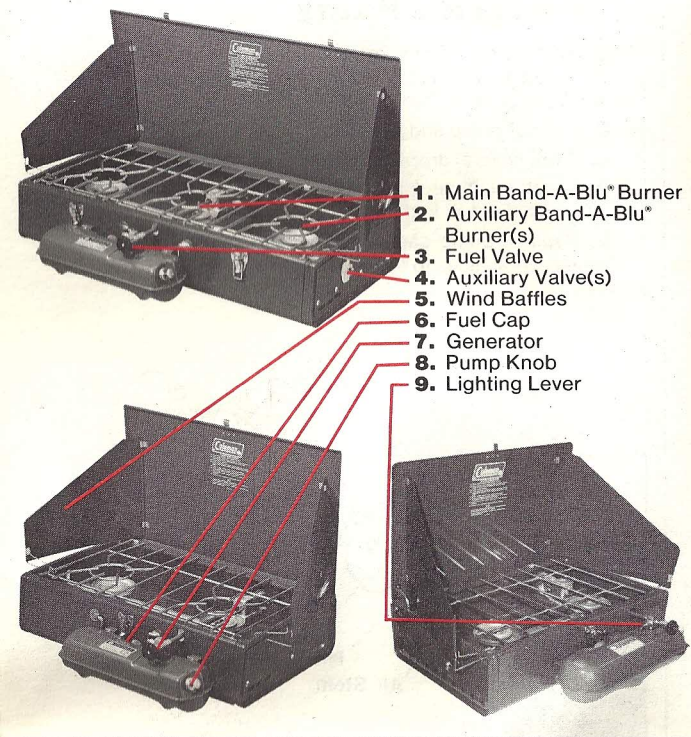

1. Main Band-A-Blu® Burner
2. Auxiliary Band-A-Blu® Burner(s)
3. Fuel Valve
4. Auxiliary Valve(s)
5. Wind Baffles
6. Fuel Cap
7. Generator
8. Pump Knob
9. Lighting Lever


1 Follow Instructions And Warnings To Avoid Possible Injury Or Property Damage.

WARNING:

1. This stove consumes air (oxygen). Do not use in unventilated areas. Ample ventilation must be provided. Provide additional ventilation for persons and other fuel burning appliances occupying the same enclosed area.
2. Never alter in any way or use with any device or part not expressly approved by Coleman. Never use as a space heater. Never leave stove unattended while burning.
3. Use only Coleman fuel or clean, fresh, white gas. Never use fuel containing lubricating oils, lead compounds, or other metallic compounds. Some unleaded automotive fuels may contain metallic compounds.
4. Fuel for your stove is extremely flammable. Use the same care as when using gasoline.
5. Store fuel in a clean, properly marked, metal container away from flame (including pilot lights), other sources of ignition, or excessive heat.
6. Never fill tank, loosen or remove fuel cap while tank is on or attached to stove, near flame (including pilot lights), or other ignition sources. Never remove tank while stove is burning.
7. Never allow tents, sleeping bags, clothing, or any flammable material to come within three feet of the top and one foot of all sides of the stove.
8. Clean stove frequently to avoid grease accumulations and possible grease fires.
9. Keep out of reach of children.

2 To Fill Tank

- Never fill tank, loosen or remove fuel cap while tank is on or attached to stove, near flame (including pilot lights), or other ignition sources.
1. Close fuel valve firmly. Turn in direction of arrow. (fig. 1)
 2. Close pump knob firmly. Turn in direction of arrow. (fig. 2)
 3. Place tank on level surface resting at angle shown in fig. 3.
 4. Remove fuel cap. Use a funnel or suitable filling device and fill with clean, fresh fuel.
 5. Replace fuel cap on tank and on fuel can. Tighten firmly.
- WIPE UP ANY SPILLED FUEL AND DISPOSE OF IN A SAFE PLACE.**

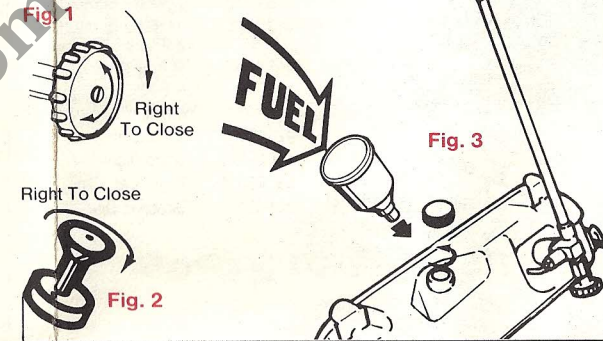


3 To

1. F...
2. T...
3. C...
4. C...




5 To Light Main Burner

1. Close Auxiliary Valve(s). (fig. 6)
 2. Turn lighting lever to "Up" position. (fig. 6)
 3. Hold lighted match at edge of main Band-A-Blu® burner and open fuel valve **COMPLETELY OPEN**.
- NOTE:** If burner fails to light, foreign materials in tank may have clogged generator gas tip. To clear, rapidly open and close fuel valve a few times while holding lighted match at edge of burner.
4. After one minute AND yellow flame is no longer visible, turn lighting lever to "Down" position.
- NOTE:** A persistent high, yellow flame indicates flooding. Close fuel valve, allow flame to burn out, and stove to cool. Turn stove upside down to empty any possible accumulation of fuel in the burner. Wipe dry. Carefully review instructions before relighting stove.
5. Open pump knob and pump additional pressure into tank. Close pump knob.
 6. Adjust flame to desired heat with fuel valve.

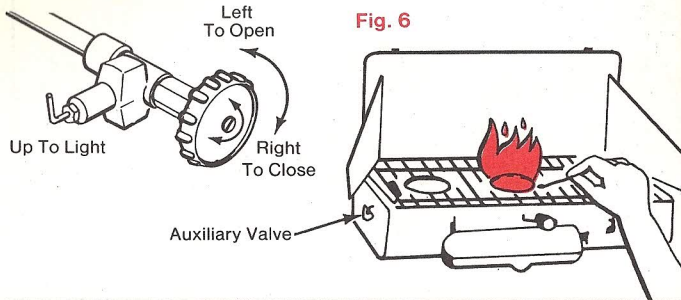

6 To Light Auxiliary Burner(s)

1. After the main burner has been lighted, the auxiliary Band-A-Blu® burner(s) may be lighted.
2. Hold a lighted match at edge of an auxiliary burner and open the auxiliary valve located on the end of the stove next to the burner.
3. For stoves with 3 burners, repeat 1 and 2 above to light 2nd auxiliary burner.

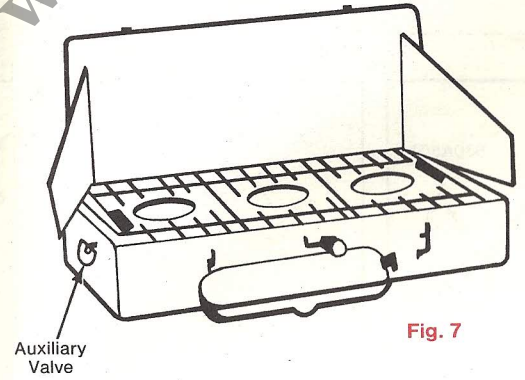


7 To Shut Off Burners

1. Shut off auxiliary burner(s) by closing the auxiliary valve(s).
 2. Open fuel valve fully. Turn lighting lever to "Up" position and let burn for one minute. (Clears generator of heavier fuel.)
 3. Close fuel valve firmly.
- NOTE:** Flame will linger on main burner for a few minutes after fuel valve is closed.

8 To Pack Stove

The tank goes in the left end of the stove with the valve wheel fitted in under the rear flange of the case.

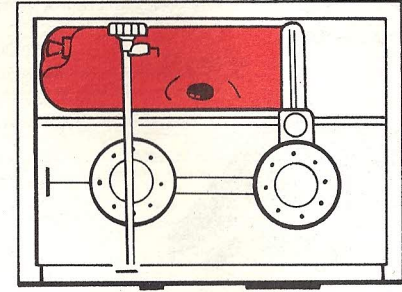

Things

1. Rinse tank...
2. Oil pump...
3. If a sma...
4. The us...
5. For rep...

Coleman
DIFFERENT
CLEANER
wicks.
CONSIST
DEPENDA
CONVEN
ECONOM


3 To Pump

1. Fuel valve and fuel cap must be closed firmly.
2. Test Pump: Close pump knob firmly. Place thumb over hole in pump knob and slowly pump one full stroke. If you feel little or no resistance, service the pump. If you feel resistance, go on to next step.
3. Open pump knob one turn. Place thumb over hole in pump knob and pump approximately 35 full strokes.
4. Close pump knob firmly.

OPEN




Fig. 4

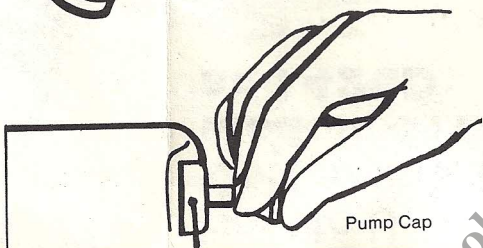

4 To Install Tank

1. Insert generator into large hole on the front of the stove and into mixing chamber above burner.
2. Engage tank hanger brackets into slots on the front of the stove.
3. If windy, shield burners with wind baffles.

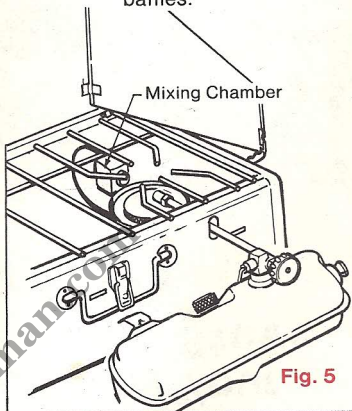

Things You Should Know

1. Rinse tank occasionally with fresh fuel to remove sediment, gum formations, and moisture accumulations. If stove is to be used for standby service, rinse and refill annually with fresh fuel.
2. Oil pump leather periodically to keep it soft and pliable.
3. If a small orange flame develops where the generator enters the mixing chamber above the main burner, shut off all burners, allow generator to cool. Use a wrench to tighten the fitting on the end of the generator.
4. The usual storage areas for camping and picnic equipment is the basement, attic, or garage. To avoid the accumulation of dust, cobwebs, etc., that is common in these storage areas, place your stove in a plastic bag and seal it with a rubber band.
5. For repair service call 1-800-353-3278 TOLL FREE for location of your nearest Coleman Service Center. If stove must be mailed to Service Center, attach your name, address, and a description of problem to stove and mail to Service Center prepaid. If necessary to write the Service Center or factory, refer to your stove by specific model number: 413G, 425F, or 426D.

Coleman FUEL . . .

DIFFERENT FROM "JUST ANY FUEL"!

CLEANER . . . Quality checked for longer appliance life. Won't clog generators or wicks.

CONSISTENT . . . Tested constantly to meet Coleman's rigid quality standards.

DEPENDABLE . . . Will not sour or form gums even if stored for long periods.

CONVENIENT . . . Available nationwide in handy, easy-to-store containers.

ECONOMICAL . . . Eliminates repair costs resulting from fuel contamination.