


HOW TO USE
AND ENJOY
YOUR NEW

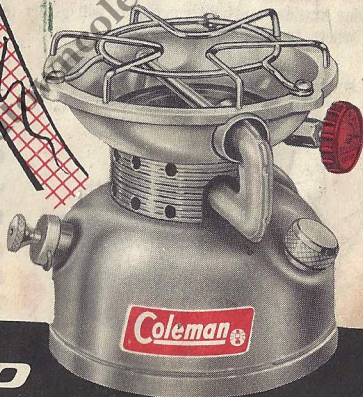

502-700

SPORTSTER STOVE

ALWAYS USE THE RIGHT KIND OF FUEL

The length of service you get from your stove and generator depends greatly upon the kind of fuel you use. Substances in gasoline that do not vaporize will stop up and shorten the life of your generator.


Use only Coleman Stove and Lantern Fuel or clean "white" gasoline; never use fuel containing lead compounds or lubricating oils. Store your fuel in a clean, closed metal container. (Glass containers are dangerous—may break.)

If Coleman Stove and Lantern Fuel or ordinary "white" gasoline is not available at your favorite service station, most oil companies will gladly tell you where to obtain it.



TO FILL FOUNT

Close shut-off valve (1) by turning valve wheel to the right. Unscrew filler cap (2). With stove in level position, fill with clean, fresh fuel. Fount holds approximately one pint. Replace filler cap and tighten firmly with fingers. **Never remove filler cap while the stove is lighted or near flame or excessive heat.**

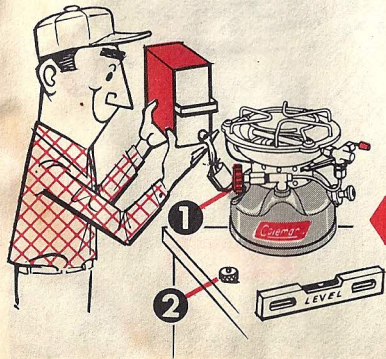


TO PUMP AIR PRESSURE INTO FOUNT

Shut-off valve and filler cap must be closed. Turn pump plunger knob two complete turns to the left. Place thumb over small hole in knob and pump 20 to 25 full strokes. Turn pump plunger knob to the right and tighten firmly with fingers. Air may be added while stove is lighted or in operation without closing shut-off valve.



TO LIGHT STOVE

1. Rotate cleaner-regulator lever (3) several times to be sure tip is clean. Leave lever pointing away from stove to avoid flooding while lighting.
2. Hold a lighted match above the burner and open shut-off valve (1) 1/4 turn to left.
3. During the lighting process, a small amount of air from the tank is consumed. Maintain strong flame by pumping air into the fount (4) as required. (CAUTION: Hold stove firmly on level surface while pumping.)
4. After stove has been burning 1-2 minutes and the flame is blue, open shut-off valve (1) wide. Flame may be adjusted by turning cleaner-regulator lever (3)

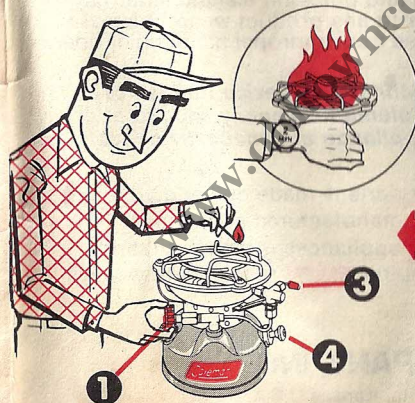


TO TURN STOVE OFF

Turn shut-off valve wheel (1) to the right until closed.

LEFT
TO
OPEN



 SHUT-OFF
VALVE
1



RIGHT
TO
CLOSE

COOK KIT
HANDLE ONLY,
501-4051



501-960 COOK KIT

ALUMINUM CASE for Sportster. Lightweight, corrosion resistant, has detachable handle. Lid is 6" fry pan. Bottom—two-quart sauce pan. Buy it from your Coleman dealer!



502-952 HEAT DRUM

HEAT DRUM designed for the Sportster Stove. Perfect for heating duck blinds, fishing cabins, tents, etc. Buy it from your Coleman dealer!

THE HIKERS FRIEND

Slip a light 30-inch webbing strap (or strong cord) through the three loops provided on the cook kit (501-960), it can be hung securely on the outside of your pack or on your belt, with the stove in it. This gives a neat pack containing stove and utensils.



GENERAL SUGGESTIONS

KEEP BURNER CLEAN. An obstruction such as a burned match head near the burner ports will produce a yellow flame at that point.

THE PUMP PLUNGER not only pumps air into the tank but acts as a wrench to turn the air stem. Turned to the left, it opens the air stem so air may be forced through check valve. Turned to the right, the air stem closes the check valve and provides a positive shutoff. Air pressure may be added while the stove is burning. Oil the leather occasionally for top efficiency.

KEEP TANK CLEAN by rinsing it occasionally with clean fuel.

BEFORE STORING STOVE, clean the entire stove—burner, fount, case—and it will give you years of dependable service.


THE STOVE GENERATOR changes liquid fuel to a vapor. Eventually it may fill with carbon so no fuel can be forced through it. Avoid problems by keeping a spare generator No. 502-5891 on hand.

VALVE PACKING NUTS should be checked for tightness each season before being put into service, to be sure that there is no evidence of leaks, and that there is a medium drag on valve stem.


CONTACT YOUR DEALER for service assistance or parts for your stove. Or write The Coleman Co., Inc., mentioning that your stove is a No. 502.

DESIGNED FOR fast meals, hot coffee, heat for duck blinds, ice fishing, pack trips, picnics, emergency use, etc. . . . Excellent companion burner to Coleman camp stove.

PARTS LIST FOR COLEMAN 502-700 SPORTSTER STOVE

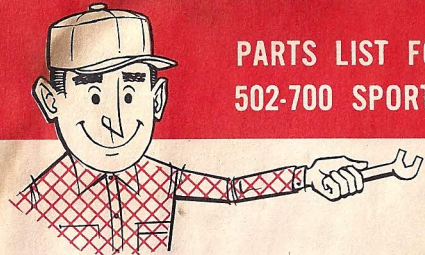


PART NO.	DESCRIPTION	PART NO.	DESCRIPTION
200 - 533	Air Stem	502 - 1651	Fount (Complete)
200 - 6491	Valve Wheel	502 - 4891	Collar Assembly
216 - 5091	Pump Cup (Leather)	502 - 5011	Bunsen (Complete)
220C1401	Filler Cap (Complete)	502 - 5201	Burner Support
242 - 1071	Push-On Nut,	502 - 5261	Burner Assembly
242B5381	Check Valve	502A5571	Shut-Off Valve Assembly (Complete)
242D5201	Pump Plunger (Complete)	502 - 5601	Stem Assembly (Regulator)
500 - 147	Lock Nut	502 - 5891	Generator
501 - 215	Direction Disc	502 - 6671	Regulator Assembly
501 - 5411	Valve Stem Assembly (Complete)	530A5071	Pump Cap Clip
501 - 5461	Feed Tube Assembly	605 - 210	Jamb Nut
501A5101	Grate Ass'y. with Screws	1016D0816	Screw (Burner Support)
501B3181	Gas Tip	220B175	Screw (Valve Wheel)
502 - 1221	Burner Bowl	1123D0805	Screw (Grate)
		1131D0608	Screw (Burner)

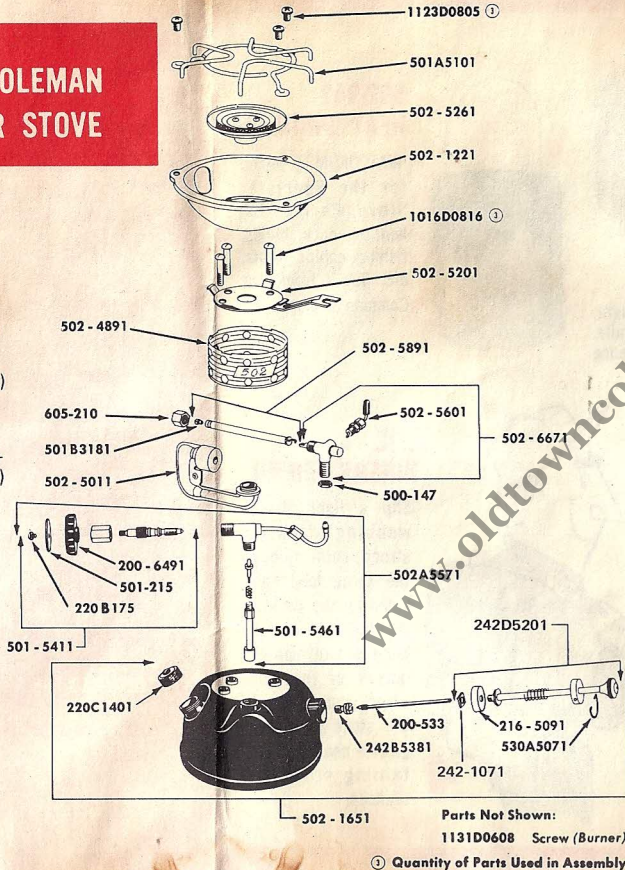

COLEMAN STOVE AND LANTERN FUEL

especially blended for top performance and

longer burning time in Coleman products. Burns cleanly—no soot, smoke, or odor. Contains rust and gum inhibitors which protect against clogging, rust, and corrosion. Available in quart and gallon sizes in reusable, leak-proof can with built-in pouring spout. Does not deteriorate in the can.

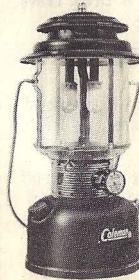

WORLD-FAMOUS COLEMAN LANTERNS

A Coleman lantern stretches days to give more hours of fun while hunting, fishing, camping, or vacationing. It's a life saver for use during emergencies. It keeps camps bright as day. Floods a 100-foot area with strong light, bright as a 300-watt electric bulb, and keeps burning until morning all on a few cents worth of fuel. It's wind-proof, stormproof, bugproof. Available in one- and two-mantle models.

Your Coleman Guarantee

All new models of Coleman Outing Products are guaranteed against faulty material or workmanship.

Any part found defective because of imperfect material or workmanship will be replaced without charge when returned with transportation charges prepaid to the Coleman factory, or to the nearest Coleman authorized in-warranty service center.

EXCLUSION OF OTHER GUARANTEES:

The only guarantee or warranty extended is the guarantee set out above. Buyer acknowledges that Coleman is extending **no other warranties** express or implied, nor any warranties of merchantability nor fitness for a particular purpose and that neither Coleman nor its dealers or agents shall be liable for any consequential or incidental damages including injury to the property of others. This guarantee does not apply to generators on stoves and lanterns, batteries and bulbs on electric lanterns, wicks on catalytic heaters nor to any product where it is evident that damage has developed from improper handling or operation.

NOTICE: The use of any attachment or device that is not expressly approved by The Coleman Company, Inc., to alter or affect the operation of the appliance automatically cancels all warranties.

Coleman's warranty on repair parts is made null and void by their use on other than Coleman manufactured appliances. Coleman's warranty on Coleman appliances is made null and void by use of other than genuine Coleman repair parts. Always look for this Coleman label.

Made in United States of America

THE COLEMAN COMPANY, INC.

General Office and Factory: Wichita, Kansas U.S.A. 67201
Canadian Office and Factory: Toronto, Canada

1960B011 3-72 P.I.

LITHO IN U.S.A.