

How to Use and Enjoy Your Coleman Fuel Sportster™ II Stove – model 508A700

Pat. No. 3933146
& 4126117



Limited 3-Year Warranty

This product is warranted to the retail consumer for three years from date of retail purchase against defects in material and workmanship and is transferable. This warranty is for sales within the United States. The warranty may vary for sales outside the United States.

WHAT IS COVERED: Replacement parts and labor. Transportation charges to Consumer for repaired Product.

WHAT IS NOT COVERED: Transportation charges to Coleman for defective Product. Damages caused by abuse or failure to perform normal maintenance — see owner's manual. Any other expense. **Consequential damages, incidental damages, or incidental expenses, including damage to property. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.**

HOW TO OBTAIN WARRANTY PERFORMANCE: Locate nearest Coleman Service Center by calling 1/800/835-3278 TOLL FREE! Attach to Product your name, address, description of problem, phone number and proof of date of retail purchase (sales slip). Package and return Product to Coleman Service Center, *transportation charges prepaid*.

IMPLIED WARRANTIES: Any implied warranties, including the implied warranties of merchantability and fitness for a particular purpose, are limited in duration to three years from date of retail purchase. Some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you.

To the extent any provision of this warranty is prohibited by federal, state, or municipal law which cannot be preempted, such provision shall not be applicable. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

COLEMAN OUTDOOR PRODUCTS, INC.
3600 N. Hydraulic Wichita, Kansas 67219


Made in United States of America

COLEMAN OUTDOOR PRODUCTS, INC.

General Office and Factory: Wichita, Kansas U.S.A. 67219

508-0500 (9-91) P.I.

LITHO IN U.S.A.

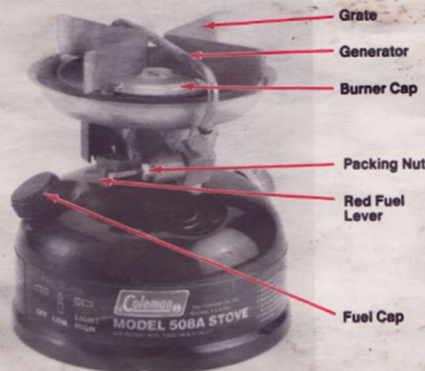

1 Follow Instructions and Warnings To Avoid Possible Injury Or Property Damage.



WARNING:

1. Coleman fuel is extremely flammable, handle with extreme care. Fuel vapors are invisible, explosive, and can be ignited by ignition sources many feet away.
2. This stove is designed to use Coleman fuel. Never use kerosene, gasohol, regular or premium leaded automotive fuel.
3. Store fuel in a clean, properly marked, container away from flame (including pilot lights), other sources of ignition, or excessive heat.
4. Always fill outdoors. Never fill tank, loosen or remove fuel cap near flame (including pilot lights), or other ignition sources.
5. Always light and use stove outdoors; never inside house, camper, tent, or other unventilated or enclosed areas.
6. This stove consumes air (oxygen). Do not use in unventilated or enclosed areas to avoid endangering your life.
7. Use for cooking only. Never alter in any way or use with any device or part not expressly approved by Coleman. Never use as a space heater. Never leave stove unattended while burning.
8. Keep stove away from flammables. Never allow fabric, clothing, or any flammable material to come within four feet of the top and one foot of all sides of the stove.
9. When stove is in use, all metal parts of the burner assembly and generator become extremely hot. DO NOT TOUCH.
10. Never place heavy or large capacity utensils on stove.
11. Never pump the stove while a utensil is on it.
12. Keep out of reach of children.

2 To Fill Tank

NEVER FILL OR LIGHT STOVE INSIDE HOUSE, CAMPER, OR TENT.

1. Place stove on a smooth, level surface.
2. Move the RED FUEL LEVER to the OFF position. (Fig. 1)
3. Close PUMP KNOB firmly. Turn in direction of arrow on pump knob. (Fig. 2)
4. Remove FUEL CAP. Use a funnel or suitable filling device and fill with clean, fresh fuel. DO NOT TIP STOVE. (Fig. 3)
5. Replace FUEL CAP on stove and on fuel container. Tighten firmly. Move fuel container away from stove. WIPE UP ANY SPILLED FUEL AND DISPOSE OF IN A SAFE PLACE.

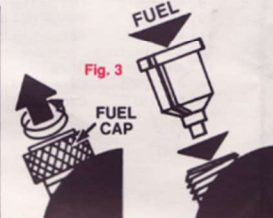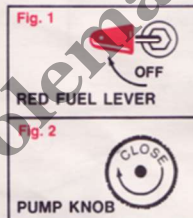

3 To Pump

1. Make sure RED FUEL LEVER is in the OFF position. (Fig. 4)
2. Open PUMP KNOB one turn.
3. With thumb over hole in PUMP KNOB, pump approximately 25 full strokes.
4. Close PUMP KNOB firmly.



4 To Light

For Temperatures below freezing, see note below.

1. Place stove on a smooth, LEVEL surface.
2. First hold lighted match at burner.
3. Turn RED FUEL LEVER to "HIGH/LIGHT". (Fig. 6)
4. As soon as burner lights, open PUMP KNOB one turn and pump for 30 seconds (30 Pumps). Close PUMP KNOB. CAUTION: If fuel or flames appear below burner, immediately turn RED FUEL LEVER "OFF". Allow stove to cool. Turn stove upside down to empty any fuel that accumulated in the burner. Wipe dry. Carefully review instructions before relighting stove.
5. Adjust flame to desired heat with RED FUEL LEVER. Additional pumping may be required for full heat output.

NOTE: IN TEMPERATURES BELOW FREEZING PREHEATING MAY BE REQUIRED. Place generous amount of preheating paste on burner cap beneath the generator (Fig. 7). Light the paste. After the paste is almost consumed, follow the above lighting instructions.

Fig. 6

 


Fig. 7



5 To Turn Off


1. Move RED FUEL LEVER from OFF to HI several times.
2. Watch RED FUEL LEVER in OFF position. (Fig. 8)



Fig. 8

Things You Should Know

- PREHEATING PASTE is available at most stores that sell backpacking equipment.
- To reduce the possibility of rust and corrosion, flush tank and refill frequently with fresh fuel.
- During operation for an extended period at a low heat setting, you may notice an intermittent yellow flame. This can be corrected by adjusting the flame to a slightly higher level with the RED FUEL LEVER.
- Periodically squirt a few drops of oil into the oil hole in the PUMP CAP. This will keep the pump functioning properly.

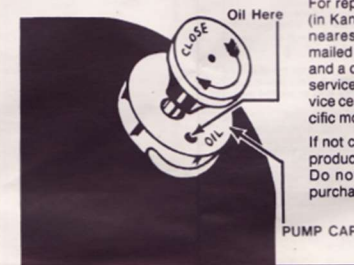

For repair service, call 1-800-835-3278 TOLL FREE (in Kansas, call 316-832-6153) for location of your nearest Coleman service center. If stove must be mailed to service center, attach your name, address, and a description of problem to product and mail to service center prepaid. If necessary to write the service center or the factory, refer to your stove by specific model number: 508A700.

If not completely satisfied with performance of this product, please call the toll-free number listed above. Do not return the product to the store where purchased.

Parts List for Coleman Sportster II Stove Model 508A700

| I.D. NO. | PART NO. | DESCRIPTION |
|-------------|----------|------------------------|
| 1 | 508A6151 | Fount |
| 2 | 220C1401 | Filler Cap |
| 3 | 508-5551 | Valve Assembly |
| 4 | 413C3021 | Burner Bowl |
| 5 | 400-3451 | Burner Ring Set |
| 6 | 216A5091 | Pump Cup |
| 7 | 242D5201 | Pump Plunger |
| 8 | 200-6381 | Air Stem & Check Valve |
| 9 | 530A5071 | Clip for Pump Cap |
| 10 | 400-5261 | Burner Box Assembly |
| 11 | 400-0601 | Screw (Pkg. of 6) |
| 12 | 400A1261 | Generator Bracket |
| 13 | 400-5401 | Grate |
| 14 | 400C2891 | Generator Assembly |
| 15 | 508-7631 | Carry Case |

