



LP-GAS
PICNIC STOVE
5402A

TO OBTAIN SATIS-
 FACTORY RESULTS
 READ AND FOLLOW
 THESE INSTRU-
 CTIONS CAREFULLY
 STEP BY STEP...


DIRECTIONS FOR OPERATING AND SERVICING *
 *
 *
 *

Made in United States of America
THE COLEMAN COMPANY, INC.
 General Office and Factory: WICHITA 1, KANSAS, U. S. A.
 Canadian Office and Factory: Toronto, Canada

1950-500 1-62
 P.I.

Litho. in U. S. A.

www.oldtowncoleman.com

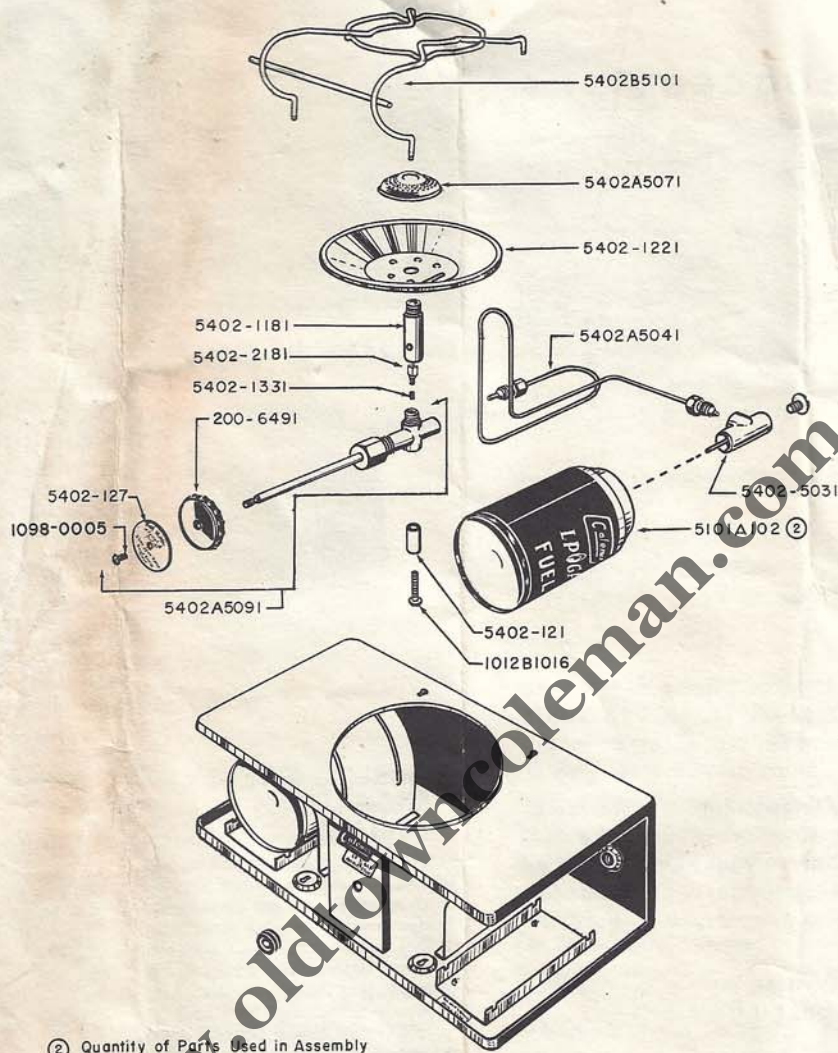

② Quantity of Parts Used in Assembly
Not Shown: 118B6201 PACKING (Valve Stem)

MODEL	FINISH	DIMENSIONS		
		HEIGHT	WIDTH	DEPTH
5402A	Patio Pink	5"	12"	7"

**PARTS
LIST FOR
COLEMAN
PICNIC
STOVE
5402A**


PART NO.	DESCRIPTION	PART NO.	DESCRIPTION	PART NO.	DESCRIPTION
1098-0005	Machine Screw (4-32x $\frac{1}{2}$ Brass Rd. Hd.)	5101A102	Cartridge (LP-Gas)	5402-5031	Supply Connector (Cartridge)
118B6201	Packing (Valve Stem)	5402-121	Spacer	5402A5091	Valve (Complete)
200-6491	Wheel (Valve)	5402-127	Direction Disc	5402A5041	Vaporizer Tube
1012B1016	Machine Screw (10-24 x 1" Steel Rd. Hd.)	5402-1181	Mixing Tube	5402A5071	Burner
		5402-1221	Burner Bowl	5402B5101	Grate
		5402-1331	Filter		
		5402-2181	Gas Tip (Marked Th)		

See your Coleman Dealer for Repair Parts

HOW TO USE YOUR

Coleman

5402A PICNIC STOVE

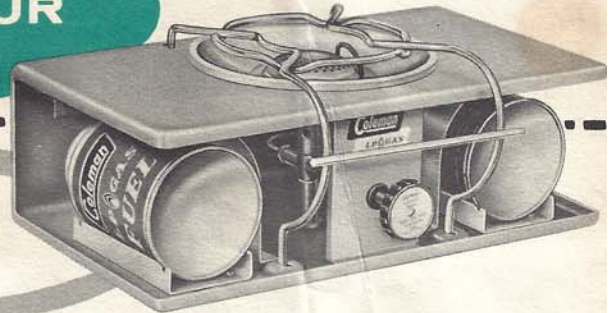

After removing your Coleman Picnic Stove from its carton, place it so the front of the stove is toward you.

There are two cartridges of Coleman LP-Gas Fuel packed with the stove. You will have to install one of these cartridges.

To Install Coleman LP-Gas Fuel Cartridge

Remove the fuel cartridge on your right by lifting the cartridge up so the rim clears the notches in slide, then pull free.

Be sure Fuel Valve is closed (turn Valve Wheel to right).

Place cartridge on slide with rubber nipple toward rear of stove. Fuel Needle must enter opening in rubber nipple. Push firmly against end of cartridge until rim drops into notches in slide. This locks cartridge in place. The fuel cartridge at left is a spare.



To Light Picnic Stove

Hold lighted match at edge of burner.

Open valve slowly.

If valve is opened too fast burner may flare for first 30-60 seconds of operation.

To Regulate Flame

Turn Valve Wheel to right for less flame and to left for maximum flame. To conserve fuel adjust flame height in accordance with good cooking practice.

To Turn Out Flame

Turn Valve Wheel to right until valve is closed.

When Fuel Cartridge Is Empty

DO NOT change fuel cartridges near open flame.

Close valve by turning wheel to right.

Lift up on end of fuel cartridge until rim clears notches in slide.

Pull empty fuel cartridge from slide and discard it.

Replacement cartridges may be purchased at leading filling stations, hardware, sporting goods, department, and drug stores.

To Install Spare Fuel Cartridge

Move spare cartridge from left to right side of stove. Follow instructions for installing Coleman LP-Gas fuel cartridge.

GENERAL SUGGESTIONS

KEEP BURNER CLEAN. If food should boil over or spill onto burner, remove and clean port openings with a stiff brush.

TO REPLACE OR CLEAN GAS TIP

Remove Grate

Pull out then up on lower ends of grate until the ends are clear of openings in frame. Push grate back, then pull up until ends clear openings in top of stove.

Reverse procedure for installing grate.

Remove Burner

Turn burner to left to remove.

Remove Mixing Tube

Turn to left to remove. A large nail can be pushed through air opening in tube for leverage.

Remove Gas Tip



Turn to left.


Clean gas tip and mixing tube in benzene to remove gum deposits. **DO NOT ENLARGE GAS TIP** with a needle, pin, or other instruments of similar nature.

REMEMBER – When the temperature is in the lower thirties, there is very little pressure in the fuel cartridge. The warmth from your hands, if placed tightly around the fuel cartridge, will soon generate enough pressure to enable you to light the stove.

WHEN STOVE IS USED OUTSIDE, normal precautions should be taken to protect it from the wind.

NOTICE: The use of any attachment or device that is not expressly approved by The Coleman Company, Inc., to alter or affect the operation of the appliance automatically cancels all warranties, implied or expressed. Furthermore, the Company shall not be liable for any consequences that result from the use of equipment under these circumstances.

Coleman's warranty on repair parts is made null and void by their use on other than  manufactured appliances. Coleman's warranty on  appliances is made null and void by use of other than genuine  repair parts.

Always look for this  label.

other Coleman products
to add to your
outings fun!



WORLD'S FINEST SNOW-LITE® PICNIC JUGS

100% insulated with Thermo-Lock styrene to hold cold or heat up to 115% longer. Exclusive one-piece molded liner is smooth, easy to clean, lightweight, unbreakable, won't chip or crack, will withstand temperatures of boiling water or freezing ice. Tough Royalite base is rust and corrosion-proof; guaranteed for the life of the jug. Available in aristocrat or deluxe models with Pitcher-Pour handle or nylon spring-loaded push button faucet. Your choice of three beautiful colors.

WORLD'S FINEST SNOW-LITE® COOLERS

Lightweight, yet will withstand the most rugged abuse. Snow-Lite linings are strong and durable, rust and leak-proof, stain resistant, will not retain odors. They wipe clean instantly. Thermo-Lock styrene insulation holds cold up to 45% longer than ordinary coolers. Tough Royalite bottoms won't scuff, rust, corrode, or stain. Steel or aluminum models available in two sizes and four beautiful colors.



WORLD FAMOUS COLEMAN LANTERNS

A Coleman lantern stretches days to give more hours of fun while hunting, fishing, camping, or vacationing. It's a life saver for use during emergencies. It keeps camps bright as day. Floods a 100-ft. area with strong light, bright as a 300-watt electric bulb, and keeps burning until morning all on a few cents worth of fuel. It's windproof, stormproof, bug-proof. Available in one and two-mantle models.

® REGISTERED TRADEMARK