








# 3 To Pump

1. Be sure FUEL VALVE is "Off" and fuel cap is closed firmly.
2. Open PUMP KNOB one turn.
3. With thumb over hole in PUMP KNOB, pump approximately 30 strokes. If lantern is not full of fuel, more pump strokes are required. **GOOD AIR PRESSURE IS IMPORTANT.**
4. Close PUMP KNOB firmly

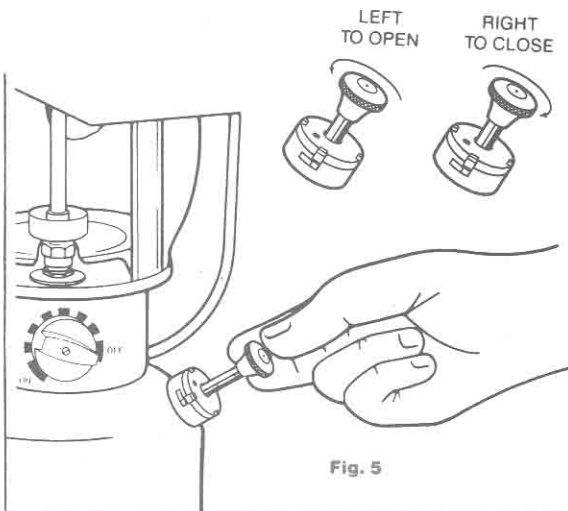


# 4 To Light

1. Fill PREHEATER CUP with alcohol (do not use gasoline or kerosene) using bottle provided. (See Fig. 6)
2. Light alcohol with a match through lighter hole. (See Fig. 7)
3. Allow flame to consume nearly all the alcohol, then turn FUEL VALVE to "ON".  
**CAUTION:** Flames other than at mantle indicate flooding or a leak. Turn FUEL VALVE "OFF", allow flames to burn out and lantern to cool. Carefully review instructions and correct problem before relighting lantern.
4. To clean tip, turn FUEL VALVE from "ON" to "OFF" to "ON" several times.
5. Additional pumping will be required at intervals. Good air pressure is important.



# 5 To Turn Off

1. Turn FUEL VALVE to "OFF". Light will dim and go out in about 1-2 minutes.

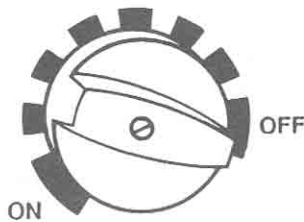

# Things You Should Know

1. If lantern lights poorly or burns dimly, the generator gas tip may be clogged. To clean tip, turn FUEL VALVE from "ON" to "OFF" to "ON" several times.
2. For best results, use only clean, clear kerosene in this lantern. Use of other fuels may shorten generator life, damage lantern, and result in unsatisfactory performance.
3. Rinse tank occasionally with fresh fuel to remove sediment, gum formations, and moisture accumulations. If lantern is to be used for standby service, rinse and refill annually with fresh fuel.
4. Oil pump periodically to keep it working smoothly.
5. The usual storage areas for camping and picnic equipment is the basement, attic, or garage. To avoid the accumulation of dust, cobwebs, etc. that is common in these storage areas, place your lantern in a plastic bag and seal it with a rubber band.
6. For repair service call one of the numbers listed below for location of your nearest Coleman Service Center. If lantern must be mailed to Service Center, attach your name, address, an a description of problem to product and mail to Service Center prepaid, less globe and ventilator to prevent breakage. If necessary to write the Service Center or factory, refer to your lantern by specific model number.
7. Carry a spare set of Coleman Mantles. Once burned, a mantle is fragile and can be damaged if touched or dropped.
8. If not completely satisfied with performance of this product, please call one of the numbers listed below. Do not return the product to the store where purchased.

The Coleman Co., Inc.  
3600 N. Hydraulic  
Wichita, KS 67219 U.S.A.  
1-800-835-3278  
TDD: 316-832-8707

The Canadian Coleman Co., Ltd.  
15 North Queen Street  
Toronto CANADA M8Z 2C6  
1-800-387-6161

The Coleman Company Inc.  
International Export Operations  
7975 N.W. 154th Street, Suite 440  
Miami Lakes, FL 33016 U.S.A.  
1-305-362-6868