



Coleman

Parts and Supplies Catalog No. 31

NOTICE

For detailed information on the use of this
catalog see Page 1

The Coleman Company, Inc.

General Offices and Factory: Wichita 1, Kansas, U.S.A.
Canadian Office and Factory: Toronto, Ontario
For Sales Offices, See Page 3



Parts Display Cabinet

Provides Automatic Stock Control
Easy to Check Bottles and Order Parts Needed



Price of Cabinet and 36 Bottles
\$3.95

- Helps You Give Better Service
- Builds Repeat Business
- Helps Make Your Store Coleman Headquarters

Cabinet Packed Complete With
36 Bottles

Screw-top lids and a quantity of gummed labels

The Coleman Parts Display Cabinet is built of choice, selected white pine finished in synthetic enamel, orange color and trimmed in black. It is attractive in appearance and if placed in a prominent location will add to a dealer's sales by reminding his customers that they need some Coleman part or product.

SPECIFICATIONS

Height	Width	Depth	Shipping Carton	Weight Less Parts	Shipping Wt. With Parts
28¾ in.	21⅜ in.	3½ in.	29x22x4¼ in.	7½ lbs.	25 lbs.

ORDER CABINET OR PARTS FROM YOUR JOBBER SALESMAN
OR FROM YOUR NEAREST COLEMAN OFFICE

Printed in United States of America



PARTS AND SUPPLIES CATALOG No. 31

Effective January 1, 1948

Includes Coleman Stove Models from 1934 to 1943 Inclusive

Do Not Destroy No. 27 or No. 8A Catalogs. Keep Them For Reference. Certain Repair Parts For Semi-Obsolete Models Are Not Included in Nos. 29, 30 and 31 Catalogs.

INSTRUCTIONS FOR USING No. 31 CATALOG

1. To find the factory number of any part wanted for a Coleman Appliance or Stove, refer to the index to find the page illustrating the appliance for which parts are required.
2. If the parts list is not included under the illustration, refer to the numerical parts list beginning on page 46 for price, description and list of different products on which the part is interchangeable.

INDEX TO PARTS

PRODUCT	PAGE
Accessories	5
Assortments of Parts	4
Burners	18, 19
Cabin and Utility Stoves	27
Cabin and Utility Stove Generators	8
Camp Stoves	22, 23
Camp Stove Generators	8
Gasoline Irons	15
Gasoline Iron Generators	7
Generator Parts for Instant Gas Ranges	47
Generator Parts for Cabin Stoves, Burners and Handy Gas Plants	31
Handy Gas Plants	20
Hollow Wire and Fittings	9
Instant Gas Ranges	32
Lamps	11
Lamp and Lantern Generators	7
Lanterns	12, 14
Mantles	6
Pocket Stoves	23
Radiant Heaters	16, 17, 18
Shades and Globes	5
Tank Parts for Coleman Stoves	45, 46
Trailer Ranges	28, 29
Trailer Range Generators	8

*For Information On Coleman Appliances Not Shown Or Listed in This Catalog,
Please Write Nearest Coleman Office.*

The Coleman Company, Inc.

General Offices and Factory: Wichita 1, Kansas, U.S.A.

Canadian Office and Factory: Toronto, Ontario

Export Office: Toronto, Ontario

European Office: London, England

FOR U.S.A. SALES OFFICES SEE PAGE 3

Printed in U.S.A.

Introductory

THIS catalog is prepared especially for your convenience in ordering parts and supplies for Coleman Lamps, Lanterns, Camp Stoves, Irons, Heaters, Burners, Cabin and Trailer Stoves, Ranges and Accessories. It gives a complete list of parts with net retail prices for the different models made by The Coleman Company, Inc.

When Ordering always be sure you have the correct number and description of the part or parts ordered. This insures prompt handling and quick delivery of your order.

Repair Service—It is the policy of The Coleman Company, Inc., to cooperate with users of Coleman products in assisting them to secure the largest measure of satisfaction from their purchases. We therefore maintain a Repair and Service Department at each of our branch houses, located at Second and St. Francis, Wichita 1, Kansas; 332 East Third St., Los Angeles 54, Calif.; 401 N. Broad St., Philadelphia 8, Pa.; 589 E. Illinois St., Chicago 11, Ill., and 29 South King St., Honolulu, T.H., (Territory of Hawaii). It is the duty of these departments to furnish operative and handling suggestions and to supply the necessary parts for all Coleman products at reasonable prices.

How to Ship Packages—When sending in goods for repairs, service or credit, please observe the following points:

1. See that goods are securely packed to prevent damage in transit.
2. Address package to the Coleman office nearest you and mark it "Attention Repair and Service Department."
3. Be sure to put your name and return address on the package, also.
4. Send package by **insured** parcel post, (insured parcels are traceable), express, or freight.
5. **Prepay all transportation charges.** We do not pay incoming transportation charges, except by special agreement.
6. On the same day that you send the package, write a letter to The Coleman Company, Inc., Attention Repair and Service Department, and give instructions as to what you wish done. Tell us how the shipment is being sent—by insured parcel post, express or freight. Mail your letter separately—do not send it inside the package.

It is the intention of each Repair and Service Department to handle all items the same day received. By making shipments as outlined above, you will materially assist us in speeding up the service and the attention your orders will receive.

Returns and Allowances—Please do not return merchandise to the factory for credit without first having obtained permission and shipping instructions. Otherwise this merchandise will be held at owner's risk. When merchandise is returned by agreement with transportation charges prepaid, credit will be issued on a basis of not exceeding the original invoice price, less an inspection, handling and restocking charge of 10%. Obsolete, shelfworn or damaged merchandise will be subject to appraisal and credit issued on a basis thereof.

WHERE TO SEND YOUR COLEMAN PRODUCTS TO BE REPAIRED



The Coleman Company, Inc.

General Offices and Factory: Wichita 1, Kansas, U.S.A.

Canadian Office and Factory: Toronto, Ontario

SALES OFFICES (Subsidiary Companies)

The Coleman Company, Inc., of Pa.

Terminal Commerce Building
401 North Broad Street
PHILADELPHIA 8, PA.

The Coleman Company, Inc.

589 East Illinois Street
CHICAGO 11, ILL.

The Coleman Company, Inc.

332-342 East Third Street
LOS ANGELES 54, CALIF.
Mailing Address: Box 2979, Terminal Annex

The Coleman Company, Inc., Ltd.

29 South King Street
HONOLULU, T.H.
Mailing Address: Box 2758

The above map shows the division of territories for the four different U. S. Coleman offices. Send your Coleman Products for service and all correspondence pertaining thereto to the Coleman office in whose territory you are located.

There are also many good privately owned Super Service Stores and Stations competent to render satisfactory service on Coleman Products. If there is one of these Stations closer to you than a Coleman office, it is often advisable to send your Coleman Appliance to them for service.

COLEMAN REPAIR PARTS ASSORTMENTS

HOW TO ORDER REPAIR PARTS ASSORTMENTS

Save Money by Ordering Under the "Fifty Dollar Order Plan"

Any parts order including small appliances placed with your jobber for direct factory shipment and totalling fifty dollars or more at net dealer prices qualifies under our \$50 Order Plan for an extra 5% discount and actual freight allowance not to exceed a rate of \$3.00 per cwt. When making up an order totaling \$50 or more under the \$50 Order Plan, mantles, globes, shades, and small gasoline appliances may be included such as lamps, lanterns, gasoline irons, trailer hot plates, camp stoves, pocket stoves, handy gas plants, and urn burners.

Any parts order including small appliances placed with your jobber for direct factory shipment and totaling \$150 or more at net dealer prices qualifies under our \$150 Order Plan for an extra 10% discount and actual freight allowance not to exceed a rate of \$3.00 per cwt. When making an order totaling \$150 or more under the \$150 Order Plan, mantles, globes, shades, and small gasoline

appliances may be included such as lamps, lanterns, gasoline irons, trailer hot plates, camp stoves, pocket stoves, handy gas plants, and urn burners.

After a careful analysis of our sales and repair department records over a period of years, the following assortment of spare parts are suggested as a basic stock for the maintenance of Coleman Instant-Lite Irons, Lamps, Lanterns and Camp, Cabin and Trailer Stoves.

These assortments include only the most called-for parts and are based on our sales records over a period of several years. They represent only a minimum stock. Dealers serving a large trade area should increase their orders and parts stock proportionately.

NOTE: Open market Heaters and Trailer Ranges are not to be included in either the \$50 or \$150 order plans.

Suggested Assortment for INSTANT-LITE IRON

Quan.	No.	Part
2	604 - 159	Fount
1	604A657	Valve & Generator
1	603 - 653	Valve Stem
2	604 - 445	Handle
1	603 - 326	Burner Casting
2	410 - 585	Pump
2	603 - 164	Filler Plug
3	604A648	Fuel Intake Assem.
6	216 - 509	Pump Leather
12	603 - 136	Gasket
12	604 - 299	Generators
3	603 - 299	Generators
1	603 - 132	Air Stem
1	604 - 301	Burner Slot Cleaner
1	604 - 920	Measuring Cup
1	604 - 905	Tip Cleaner

Suggested Assortment for LAMPS AND LANTERNS

Quan.	No.	Part
6	112 - 323	Burner Caps
6	101 - 324	Burner Tubes
3	242 - 323	Burner Caps
3	242 - 324	Burner Tubes
2	104 - 164	Filler Plugs
2	104 - 657	Valve
1	139 - 657	Valve
6	118B136	Gasket
6	115 - 136	Gasket
1	104 - 322	Air Intake Tube
1	220B322	Air Intake Tube
6	216 - 509	Pump Leather
6	R55	Generators
6	T66	Generators
6	T44G	Generators
3	216 - 538	Check Valve
3	216 - 532	Air Stem
2	220B357	Valve
3	242B538	Check Valve
2	242B532	Air Stem
1	242B520	Pump Plunger
1	203 - 657	Valve
1	216 - 520	Pump Plunger
6	603 - 136	Gasket
1	220B140	Filler Plug
1	118B326	Mixing Chamber
1	129 - 365	Air Intake Tube (Kerosene)
1	220D657	Valve
1	220D520	Plunger
1	242 - 140	Filler Plug
2	101 - 522	Pump

Suggested Assortment for CAMP, CABIN AND TRAILER STOVES

Quan.	No.	Part
1	395 - 660	Valve & Gen. Assem.
1	412 - 660	Valve & Gen. Assem.
1	413 - 660	Valve & Gen. Assem.
1	393 - 660	Valve & Gen. Assem.
3	412 - 262	Generator
3	413 - 262	Generator
3	393 - 262	Generator
3	393 - 251	Needle & Rod
3	412 - 251	Needle & Rod
1	413 - 653	Valve Stem
3	412 - 218	Gas Tip
3	401 - 218	Gas Tip
3	950 - 218	Gas Tip
3	471 - 238	Needle & Holder
6	216 - 509	Pump Leather
2	216 - 538	Check Valve
1	216 - 532	Air Stem
2	242B538	Check Valve
1	242B532	Air Stem
2	412 - 253S	Valve Stem
1	391 - 660	Assembly
2	393 - 253	Valve Stem
2	390 - 532	Air Stem
6	118B136	Gaskets
1	391 - 653	Valve Stem
1	500 - 262	Valve & Gen. Assem.
2	500 - 289	Generators


COLEMAN LAMP SHADES AND GLOBES



DECORATED SHADE

No. 139SD — Attractively decorated parchment shade. Fifteen inches in diameter at bottom of shade. For use on Lamps Nos. 152, 132A, 131P, 132P and 139.

Retail Price, each.....\$1.25

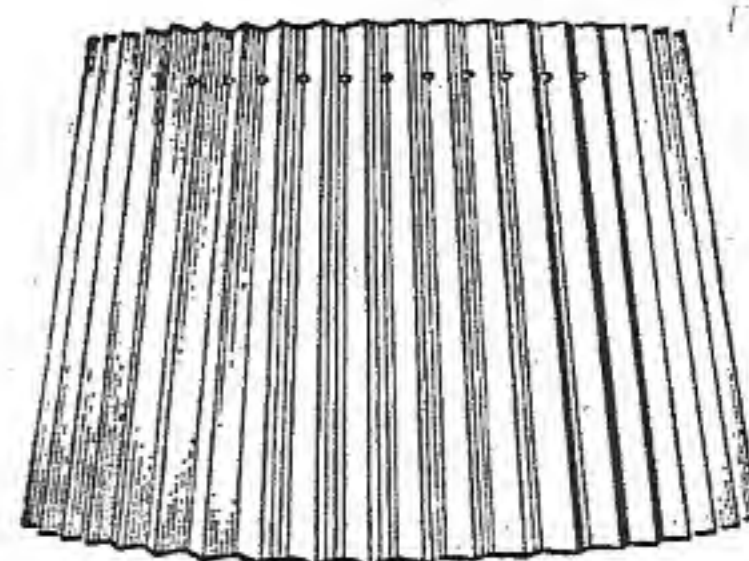

FLUTED PLASTIC SHADE

No. 152SD—A new fluted plastic shade. Comes in assorted colors. Can be used on any Coleman portable table lamp.

Retail Price, each.....\$1.80

DECORATED PARCHMENT SHADE




No. 160SD—This shade is of extra-heavy, non-oiled parchment, attractively colored. 14 inches in diameter, 9 inches high. For Ker-O-Lite Lamp No. 160.

Retail Price, each.....\$1.50

No. 160T Tripod, must be used on Ker-O-Lite Lamp for supporting shade.

Retail Price, each.....25c

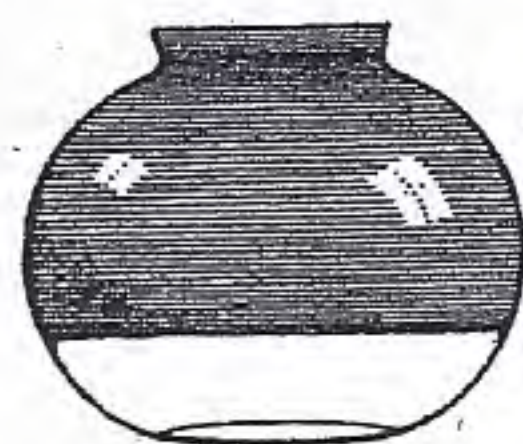

GLASS GLOBE

No. 062—A three-quarter frosted globe, 7" in diameter. Fitter 3 3/8". For use on Lamps Nos. C362 and 130G and Compressed Gas Lighting Fixtures Nos. 851, 852, 853, 854, 855, and 856.

Retail Price, each.....\$1.50



LONG LIFE WICK

No. 160-371S—A high grade wick selected and carefully inspected for its absorption power to carry sufficient fuel to the burner. For No. 160 Ker-O-Lite Lamp.

Retail Price, each.....60c

PYREX GLASS GLOBE



No. 355—Protects mantles from damage by flying insects. For use on all 1935 and later model lamps and Liquid Butane Fuel Fixtures Nos. 857, 857A, 858, and 859. 5 3/8 inches in diameter, 3 inch top opening, and 3-3/16 inch bottom opening. (132-355).

Retail Price, each.....\$1.00



PYREX GLASS GLOBE

No. 550—Bulge type, Pyrex glass globe, for use on Coleman Lanterns Nos. 242, 242A, 242B, 243, 243A and 234. 3 1/2" in diameter by 4-3/16" high.

Retail Price, each.....75c



PYREX GLASS GLOBE

No. 330—Made of genuine heat-resisting Pyrex. For use on Coleman Lanterns Nos. 220B, 228B and 235. Straight type, 4 7/8" in diameter by 5 1/4" high.

Retail Price, each.....\$1.00



PYREX GLASS GLOBE

No. 660—Bulge type glass globe for use on Coleman Lantern No. 237A. 5 1/2" in diameter by 5 1/4" high.

Retail Price, each.....\$1.00

COLEMAN MANTLES

As manufacturers of Coleman Lamps and Lanterns, it is to the interest of ourselves and to our dealers to supply the public with the best mantle it is possible to produce.

We use only the best light-giving chemicals, correct fabric, and proper size to give maximum brilliance. Good mantles satisfy—poor mantles do not repeat. Play safe—sell only Coleman Mantles.

SILK-LITE MANTLE No. 21A

Longer Life

Triple-lock weave with reinforced bottom, where pressure is strongest, contribute to long life of mantles. All Coleman mantles are denitrated, moisture proof, and will not deteriorate with age.

Lower Cost

Coleman Silk-Lite Mantles cost less to use in the long run because they outlast and outshine cheaper mantles, or even mantles priced the same.



Retail Price, each.....2 for \$.25
Retail Price, Per ½ Doz..... .60
Retail Price, Per 1 Doz..... 1.20

Greater Strength

Triple Lock Weave, high quality materials, and scientifically correct shape and size, give unusual strength to Coleman Silk-Lite Mantles.

More Light

Only the highest grade of light-giving chemicals are used in Coleman Silk-Lite Mantles. The chemicals are used in correct proportions to give the most intense brilliance.


SILK-LITE MANTLE



No. 20 Senior—A large mantle for use where the greatest amount of light is needed and only one mantle is used. Designed for the No. 237A Lantern. Same quality materials as used in the No. 21A Junior Mantle.

Retail Price, each..... 25c
Retail Price, Per ½ Doz..... 1.20
Retail Price, Per Doz..... 2.40

KER-O-LITE MANTLE AND HOLDER

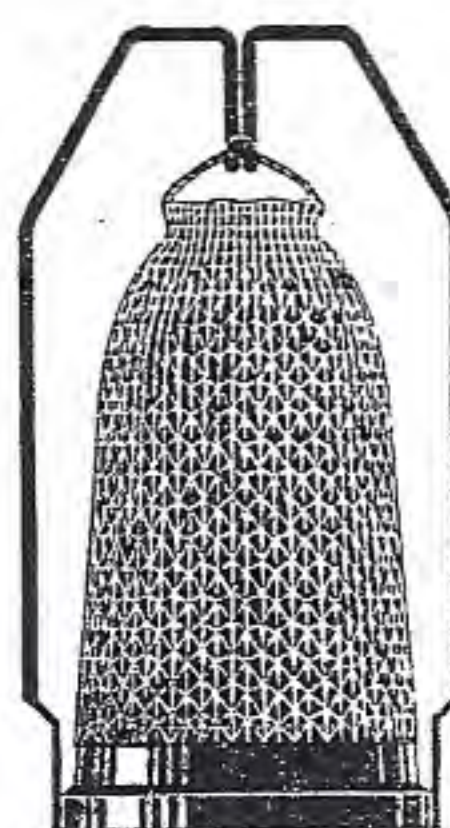

No. 159—Coleman Ker-O-Lite Mantles are saturated with the same light-giving chemicals as the mantles used on Coleman Gasoline Pressure Lamps. Ker-O-Lite Mantles are woven with the new double-lock stitch, that braces the mantles three ways, giving them more strength so that they last longer and require less frequent replacements.

No. 159—Mantle, complete with Stainless Steel Holder.

Retail Price, each.....40c

RAYTEX MANTLE



No. 31 Junior — An unusually good grade, low priced mantle made of specially selected Rayon fibre, single weave design. While not as good as the Coleman Silk-Lite it has greater durability and gives more light than many so-called "quality" mantles.

Retail Price, each..... 10c
Retail Price, Per ½ Doz..... 50c
Retail Price, Per Doz..... 1.00

KER-O-LITE MANTLE WITHOUT HOLDER


No. 139—Ker-O-Lite Mantle is the same as the No. 159 except that it is less the stainless steel holder. There is no need to buy a new holder each time you replace the mantles. Simply slip the new mantles on the long-life holder and enjoy the savings.

Retail Price, each.....30c

COLEMAN GENERATORS AND ACCESSORIES

COIL GENERATOR No. Q99

(Gas Tip Marked "Q")

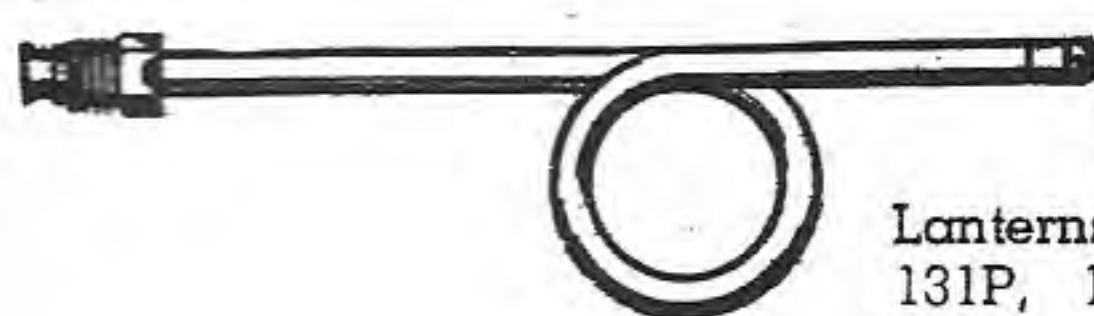


Regular standard equipment on all Coleman Quick-Lite Lamps and Lanterns except Nos. 130G, 130P, 131P, 134P, 150B, 150G, 150I, 150R.

Retail Price, each.....45c

JUMBO ROTARY GENERATOR No. R55

(Gas Tip Marked "Q")

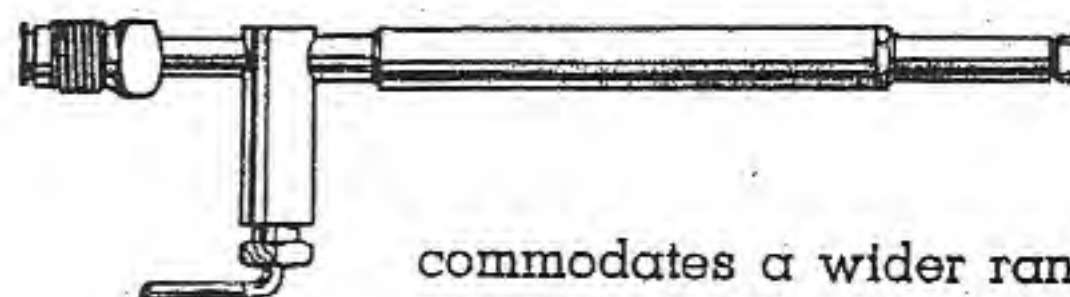

Has large carbon space. Special inside construction retards carbon formation, accommodates a wider range of fuels. Longer lasting, more economical, gives more dependable lighting service. Built-in rotary-lever operates cleaning needle, keeps generator tip clean. For use on all Coleman Quick-Lite Lamps and Lanterns and Instant-Lite Lamps and Lanterns Nos. 132P, 117, 118, 119, 220 and 228.

Retail Price, each.....70c

ROTO-CLEANING GENERATOR No. T44G

(Gas Tip Marked "V")



Fits Coleman Lamps Nos. 117A, 118A, 119A, 133, 134A, 134P, 134G, 139, 143, 132A, 150B, 150G, 150I, 150R and Instant-Lite Lantern Nos. 220B and 228B. Equipped with gas tip cleaning needle operated by a rotary lever which is built in the burner.

Retail Price, each.....60c

ROTO-CLEANING GENERATOR No. 237A299

(Gas Tip Marked "V")



Equipped with tip cleaning needle. For use on Coleman Lantern No. 237A. Dual filler coils assure a long life of smooth, steady light.

Retail Price, each.....70c

GENERATORS FOR COLEMAN GASOLINE IRONS



604-299 Generator for Nos. 4, 4A, 8, 8A, 603, 609 and 609A.

Retail Price, each.....70c

ROTO-CLEANING GENERATOR No. T44K


(Gas Tip Marked "V")



Has same general construction as T44G except it is made for Kerosene Lamps Model Nos. 129, 129A, 129G, 139, 150BK, 150GK, 150IK, 150RK and Kerosene Lantern No. 235.

Retail Price, each.....60c

WRENCH No. 220B950

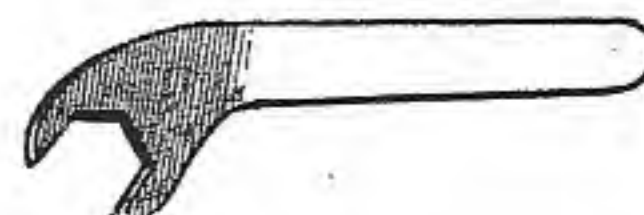

For disassembling 220B, 228B and 235 Lanterns only.

Retail Price, each.....21c

ROTO-CLEANING GENERATOR No. T66


(Gas Tip Marked "6")



Roto-Cleaning Generator. With same long-life design and construction as T44G and T44K Generators. For use only on Coleman Lanterns, Nos. 242, 242A, 242B, 234, 243 and 243A.

Retail Price, each.....60c

UNIVERSAL WRENCH

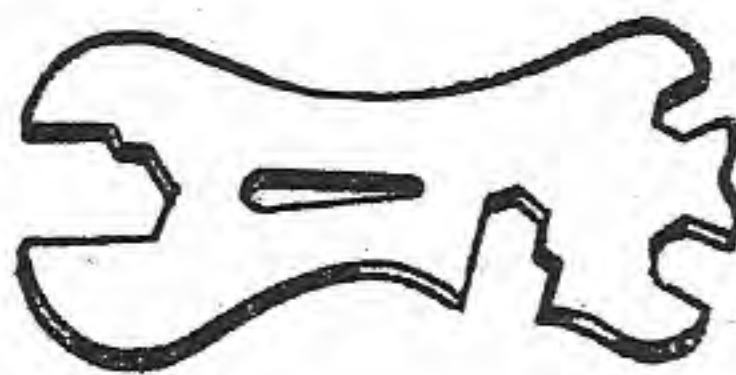

No. 605-950—Just the thing for changing generators and making minor repairs. Easily and conveniently fits all Coleman Appliances.

Retail Price, each.....21c

HANGER ROD FOR LAMPS



No. 104-489 — To suspend all Standard Coleman Lamps.

Retail Price, each.....21c

COLEMAN GENERATORS AND ACCESSORIES

CAMP STOVE GENERATORS

- 412-262—Generator Tube, Gas Tip, Bushing, Coil, Needle and Holder for Nos. 412B, 415C, 416C and 417B.
Retail Price, each.....\$1.20
- 413-262—Generator Tube, Gas Tip, Bushing, Coil, Needle and Holder for Nos. 413B, 418B, 419 and 420
Retail Price, each..... 1.20
- 500-289—Generator Tube, Needle, Coil and Gas Tip Assembled ("BX") for No. 500 Speedmaster Stove.
Retail Price, each..... .91

CABIN AND TRAILER STOVE GENERATORS AND ACCESSORIES

- 387-660—Valve and Generator for Model Nos. 387 and 392.
Retail Price, each.....\$3.00
- 391-660—Valve and Generator for Model No. 391.
Retail Price, each..... 2.70
- 393-262—Generator for Model Nos. 396, 396LC, 396A and 397.
Retail Price, each..... 1.50
- 393-660—Valve and Generator for Model Nos. 396, 396LC, 396A and 397.
Retail Price, each..... 3.60
- 395-262—Generator for Model No. 395.
Retail Price, each..... 1.20
- 412-262—Generator for Model No. 370A, 370B, 386 and 391.
Retail Price, each..... 1.20
- 412-660—Valve and Generator for Model Nos. 370A, 370B, and 386.
Retail Price, each..... 2.70
- 413-262—Generator for Model Nos. 371, 387 and 392.
Retail Price, each..... 1.20
- 413-660—Valve and Generator for Model No. 371.
Retail Price, each..... 3.00
- 940-262—Generator for Model Nos. 377A, 378A and 397A.
Retail Price, each..... 3.00

GENERATORS AND RADIANTS (For Gasoline Heaters)


- 475-262—Generator for Heater Model No. 5B.
Retail Price, each..... 4.80
- 486-262—Generator for Heater Model No. 16.
Retail Price, each..... 2.70
- 475-303—Radiants for Heaters Model Nos. 16 and 5B.
Retail Price, each..... .42
- 490-262—Generator for Heater Model No. 490.
Retail Price, each..... 2.70
- 490A262—Generator for Heater No. 490A.
Retail Price, each..... 2.70

GENERATOR CLEANING TOOLS

The following special tools are very convenient for cleaning generators and should be part of your service equipment:

- No. 599-817—Coil Puller\$.21
- No. 599-809—Carbon Scraper60
- No. 599-812—Brush48

JUMBO AIR PUMP

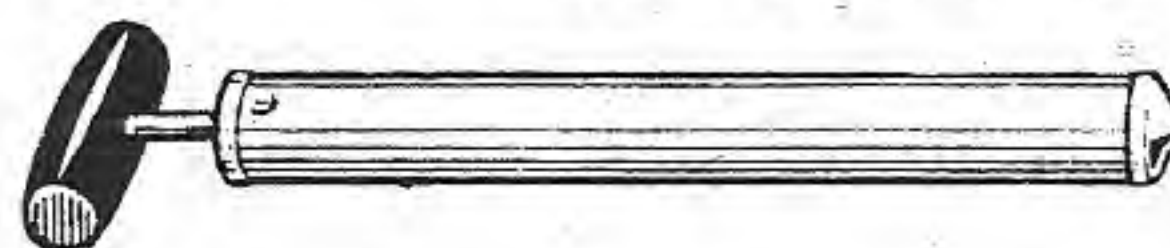

No. 451-522—For Stove and Fuel Tanks not equipped with Built-in Pump.

Length 10"; Diameter of Barrel 1 1/4".

Retail Price, each.....\$1.80

AIR PUMP



No. 410-585—For use with irons and lamps not equipped with Built-in Pump.

Retail Price, each.....75c

AIR PUMP



No. 101-522—For use with Lamps, Lanterns and small Tanks not equipped with Built-in Pump. Length 8"; Diameter of Barrel 7/8".

Retail Price, each.....\$1.05

GAS TIP CLEANING NEEDLE



No. 104-905 — For cleaning gas tip on Generator Nos. Q77 and Q99, and fuel tips on Gasoline

Self-Heating Iron Nos. 3, 4, 4A, 8, 8A, 609 and 609A.

Retail Price, each.....9c

COLEMAN FILTERING FUNNELS



No. 0—Removes dirt, water and other impurities from fuel. For use on lamps, lanterns and small appliances; 2 1/4" diameter. Solid Copper, with filtering fabric.

Retail Price, each.....75c

Pad for No. 0 Filtering Funnel.

Retail Price, each.....25c




No. 1A—A large size funnel for use with stoves, heaters, etc.; 5" diameter, aluminum, with filtering fabric.

Retail Price, each.....\$1.50

Pad for No. 1A Filtering Funnel.

Retail Price, each.....60c

STOVE TANK CLEANING TUBE

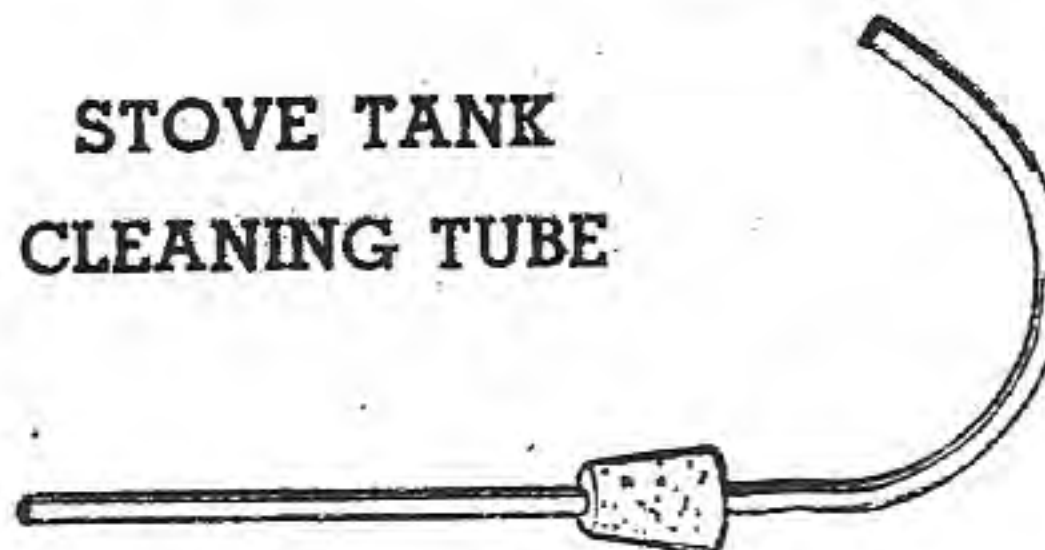


No. 599-910 — For removing dirty or stale fuel from 1-gallon stove tanks which are equipped with built-in pumps.

Retail Price, each 42c

COLEMAN ACCESSORIES AND SUPPLIES

HOLLOW WIRE FITTINGS

599-101— $\frac{1}{8}$ " O.D. x .040" Wall Soft Seamless Brass Tubing
599-102— $\frac{3}{16}$ " O.D. x $\frac{3}{64}$ " Wall Soft Seamless Brass Tubing

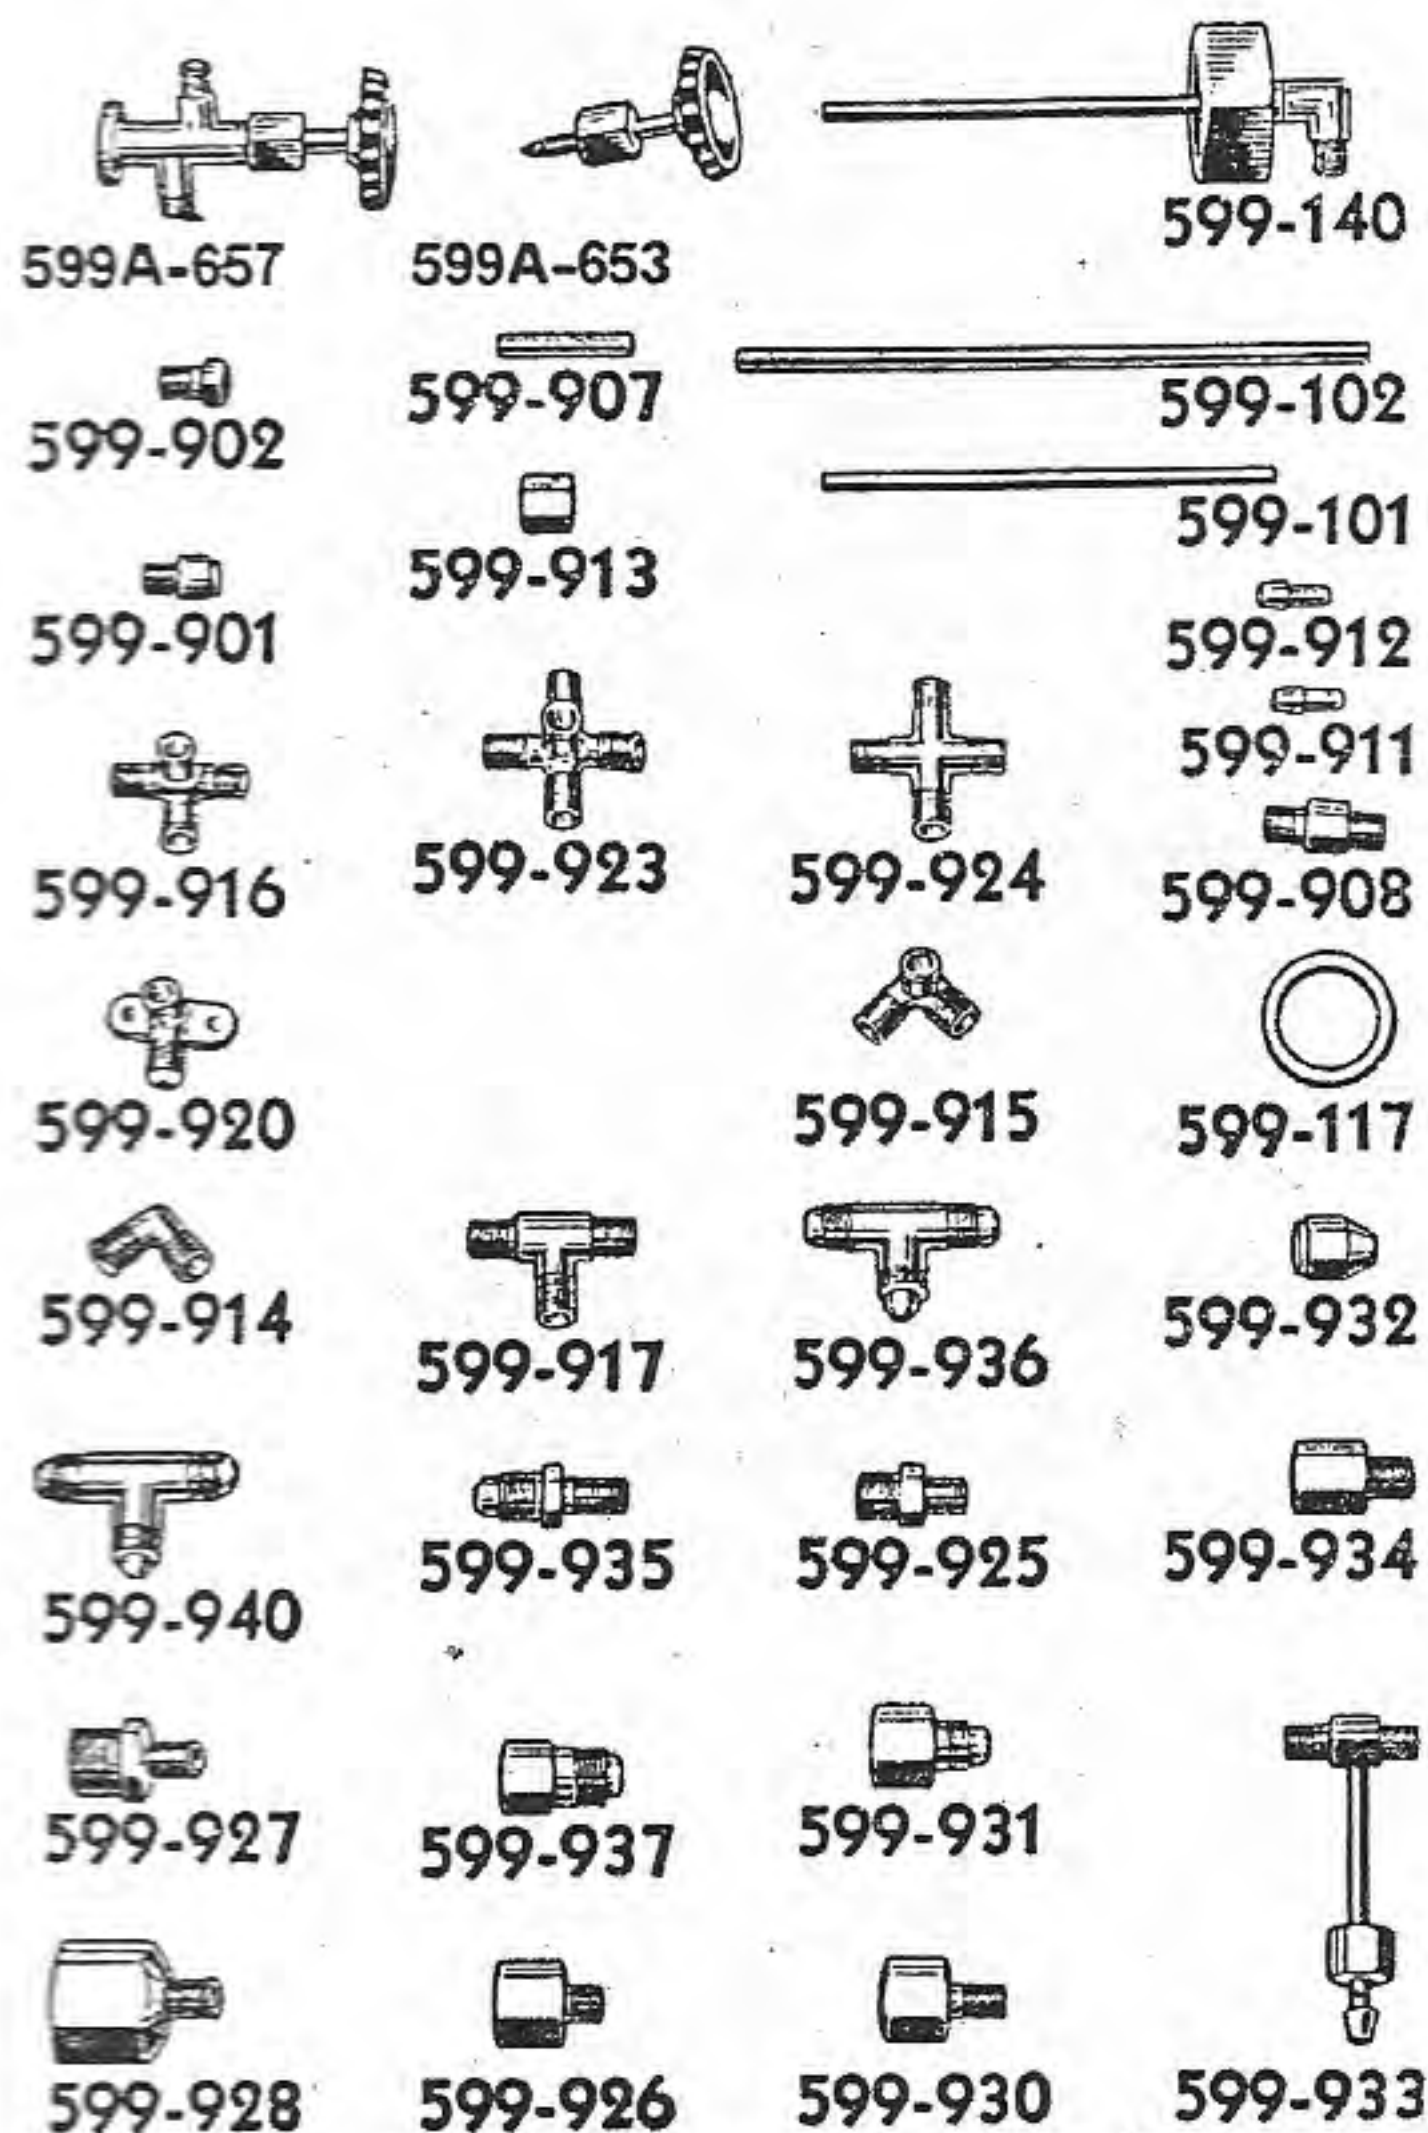

FUEL MEASURING CUP

No. 604-920

For Iron Nos. 4A, 8A, 609 and 609A.

Retail Price, each.....33c

FILLING CAN

No. 242K910

For filling alcohol pre-heating cup on Kerosene Lamp No. 129 and Kerosene Lantern Nos. 234 and 237A.

Retail Price, each.....42c

No. 604-301 IRON BURNER SLOT CLEANER




Clean burner slots occasionally to maintain complete efficiency.

Retail Price, each.....6c

No. 604-905 FUEL TIP CLEANER

(All Instant-Lite Model Irons)

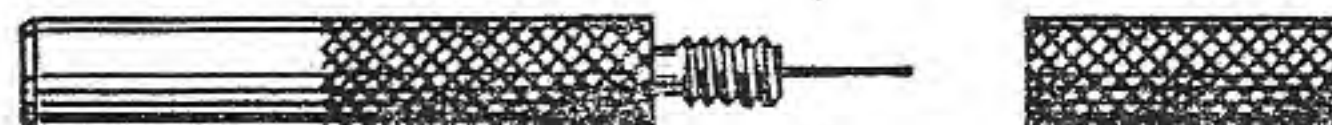

No. 604-905—For all Instant-Lite Model Irons.

Retail Price, each.....18c


Please order 599-101 Hollow Wire by parts numbers listed below.

328-172	$\frac{1}{8}$ " x 1' Feed Wire and Conn. Comp.....	\$.48
599-165	$\frac{1}{8}$ " x 2' Feed Wire and Conn. Comp.....	.60
599-166	$\frac{1}{8}$ " x 3' Feed Wire and Conn. Comp.....	.75
599-167	$\frac{1}{8}$ " x 4' Feed Wire and Conn. Comp.....	.90
599-168	$\frac{1}{8}$ " x 5' Feed Wire and Conn. Comp.....	1.05
599-172	$\frac{1}{8}$ " x 6' Feed Wire and Conn. Comp.....	1.20
599-169	$\frac{1}{8}$ " x 8' Feed Wire and Conn. Comp.....	1.50
599-173	$\frac{1}{8}$ " x 10' Feed Wire and Conn. Comp.....	1.80
599-174	$\frac{1}{8}$ " x 15' Feed Wire and Conn. Comp.....	2.40
599-175	$\frac{1}{8}$ " x 20' Feed Wire and Conn. Comp.....	3.30
599-176	$\frac{3}{16}$ " x 2' Feed Wire and Conn. Comp.....	.60
599-177	$\frac{3}{16}$ " x 3' Feed Wire and Conn. Comp.....	.75
599-178	$\frac{3}{16}$ " x 4' Feed Wire and Conn. Comp.....	.90
599-179	$\frac{3}{16}$ " x 5' Feed Wire and Conn. Comp.....	1.05
599-180	$\frac{3}{16}$ " x 6' Feed Wire and Conn. Comp.....	1.20
599-181	$\frac{3}{16}$ " x 8' Feed Wire and Conn. Comp.....	1.50
599-182	$\frac{3}{16}$ " x 10' Feed Wire and Conn. Comp.....	1.80
599-183	$\frac{3}{16}$ " x 15' Feed Wire and Conn. Comp.....	2.40
599-184	$\frac{3}{16}$ " x 20' Feed Wire and Conn. Comp.....	3.30


FOR LONGEST SERVICE FOR BEST SERVICE

Use only Genuine Coleman Parts and Accessories on Coleman Appliances . . . Each individual part is designed to exact precision and to work perfectly with all other parts; therefore, only Genuine Coleman Parts and Accessories can be trusted to give satisfactory service . . . The use of other than genuine Coleman Parts and Accessories invalidates the Coleman guarantee.


COLEMAN LAMP PARTS ILLUSTRATIONS

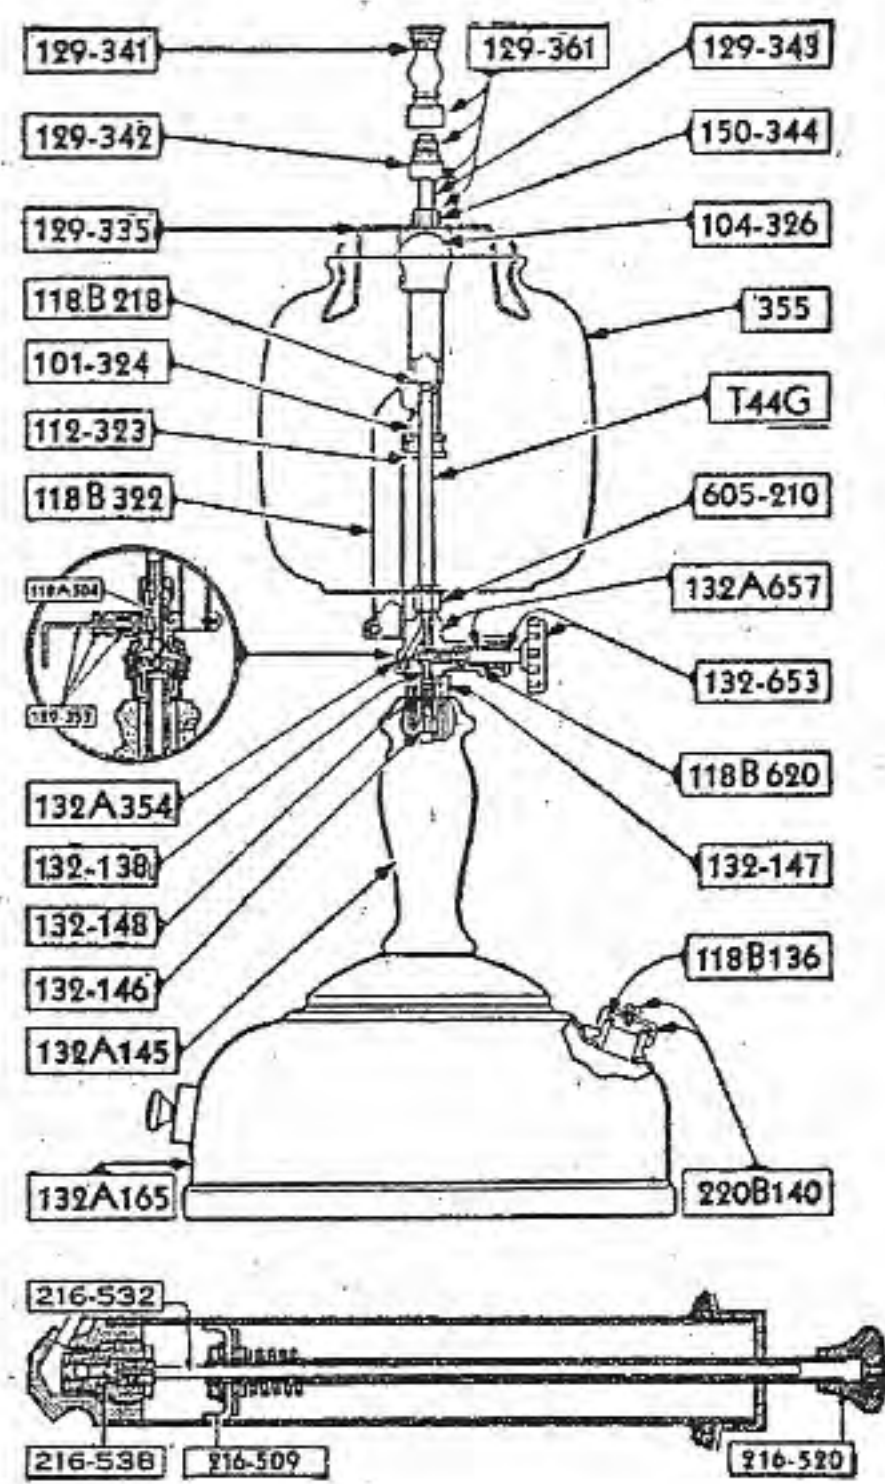

INSTANT-LIGHTING LAMPS
Model Nos. 132A, 133 and 143

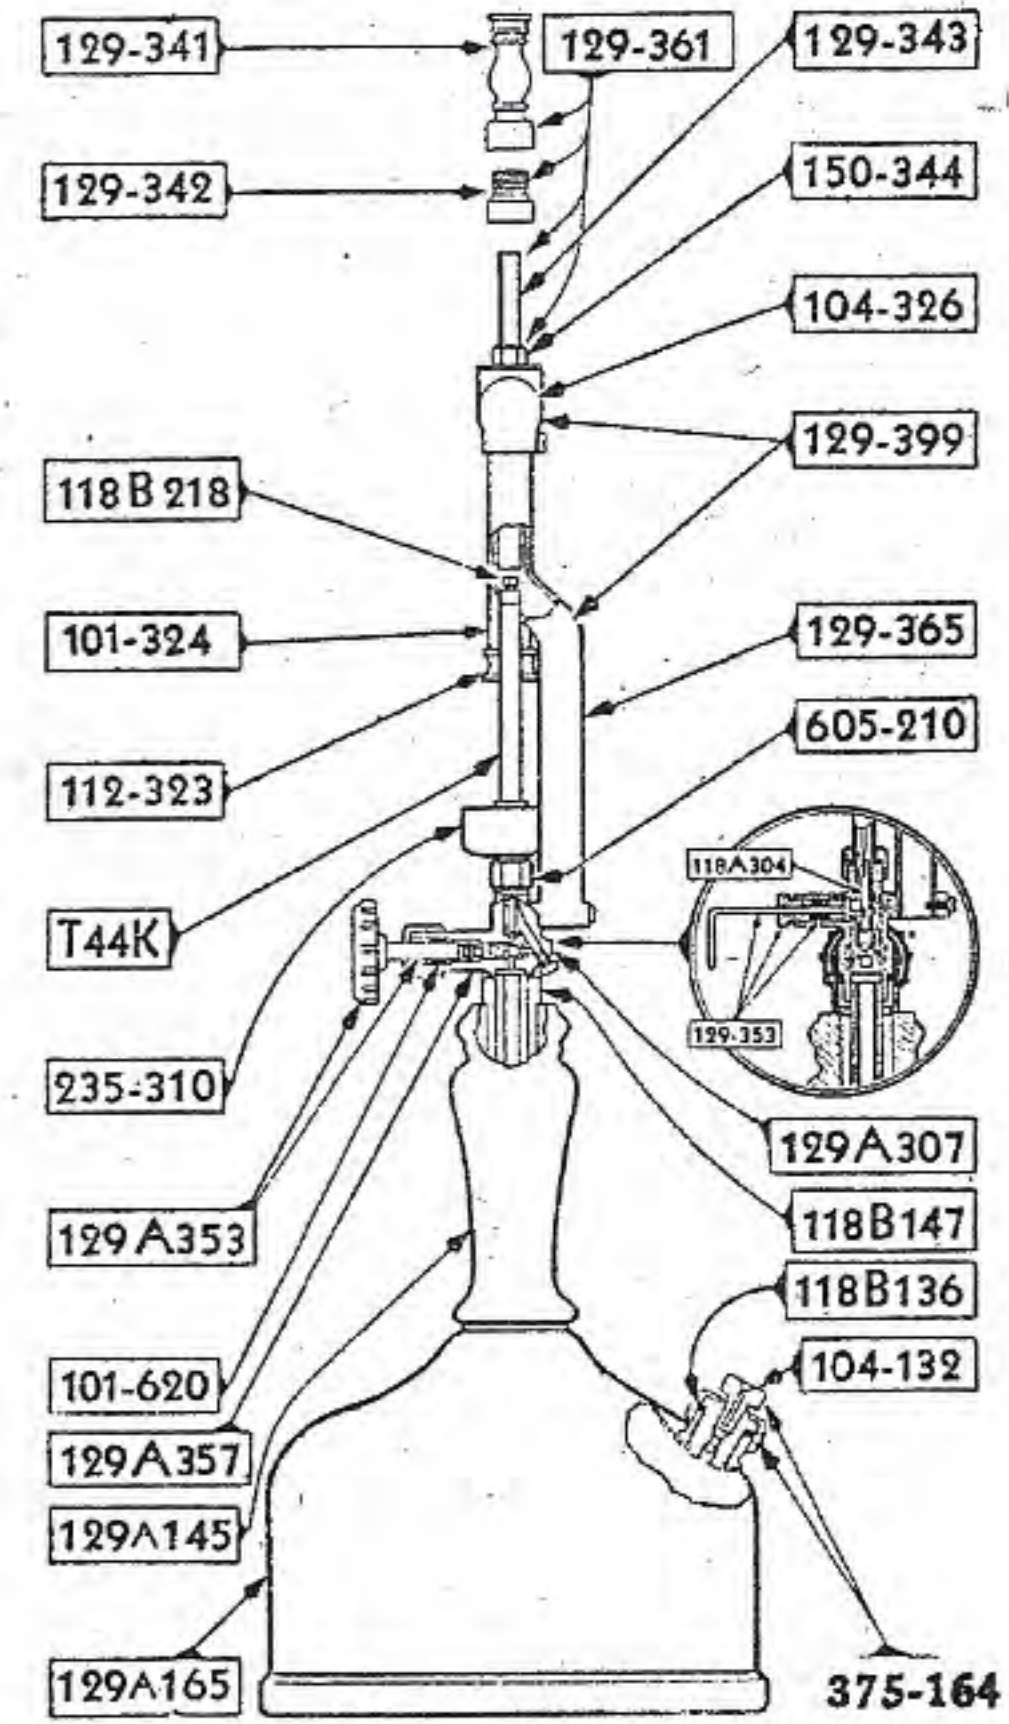


KEROSENE MANTLE LAMP
Alcohol-Generating
Model Nos. 129, 129A and 129G

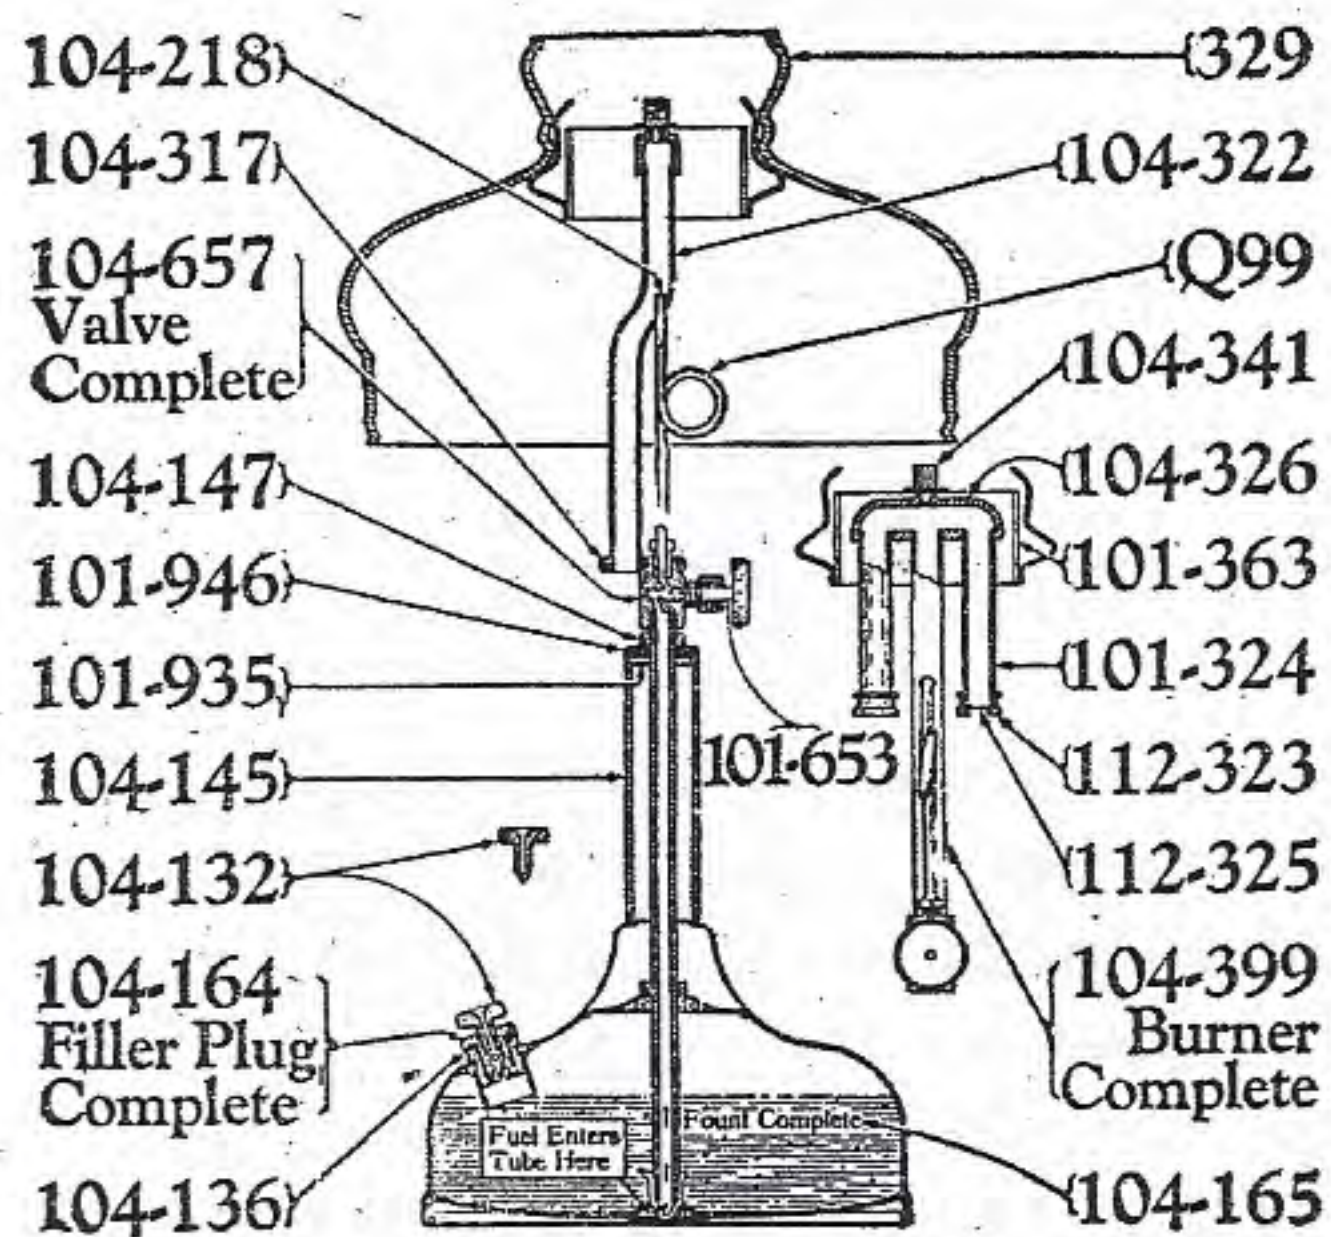


QUICK-LITE LAMP MODEL "C"

Burner Interchangeable with
Model No. C331

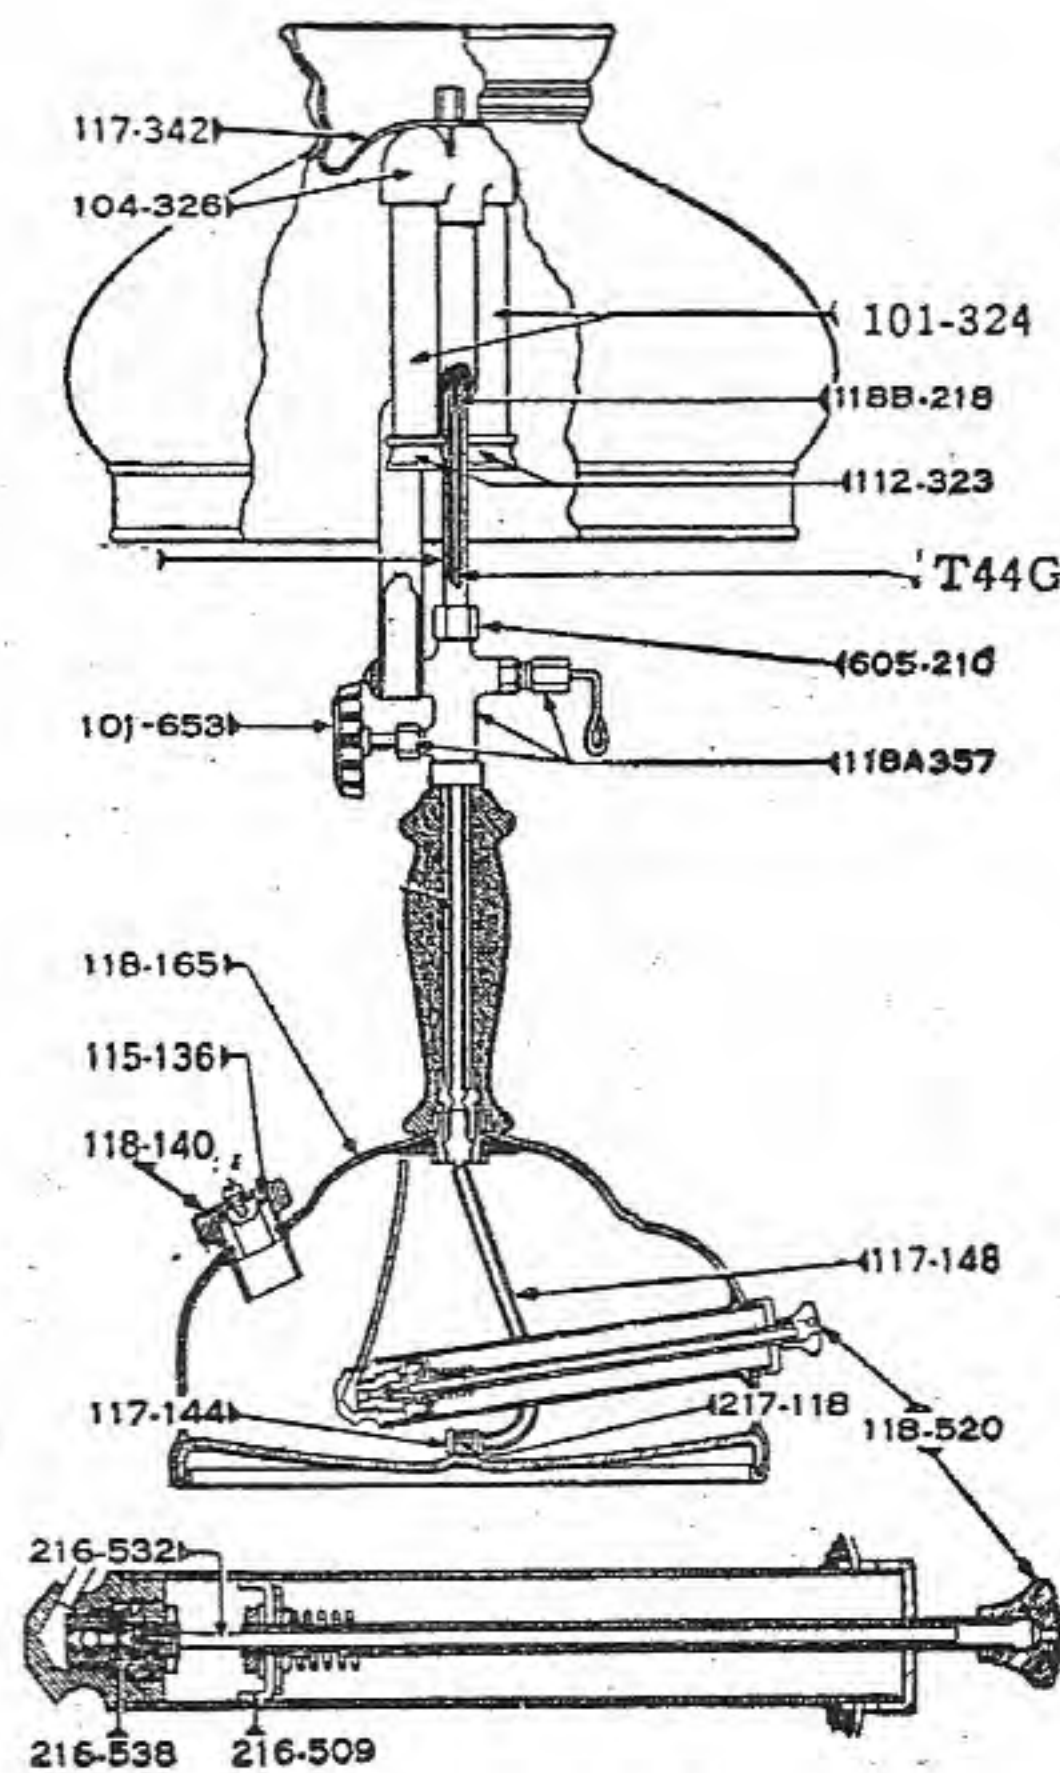


INSTANT-LITE LAMP
Model Nos. 118A, 119A
Burner Interchangeable with
Model Nos. 117, 117A

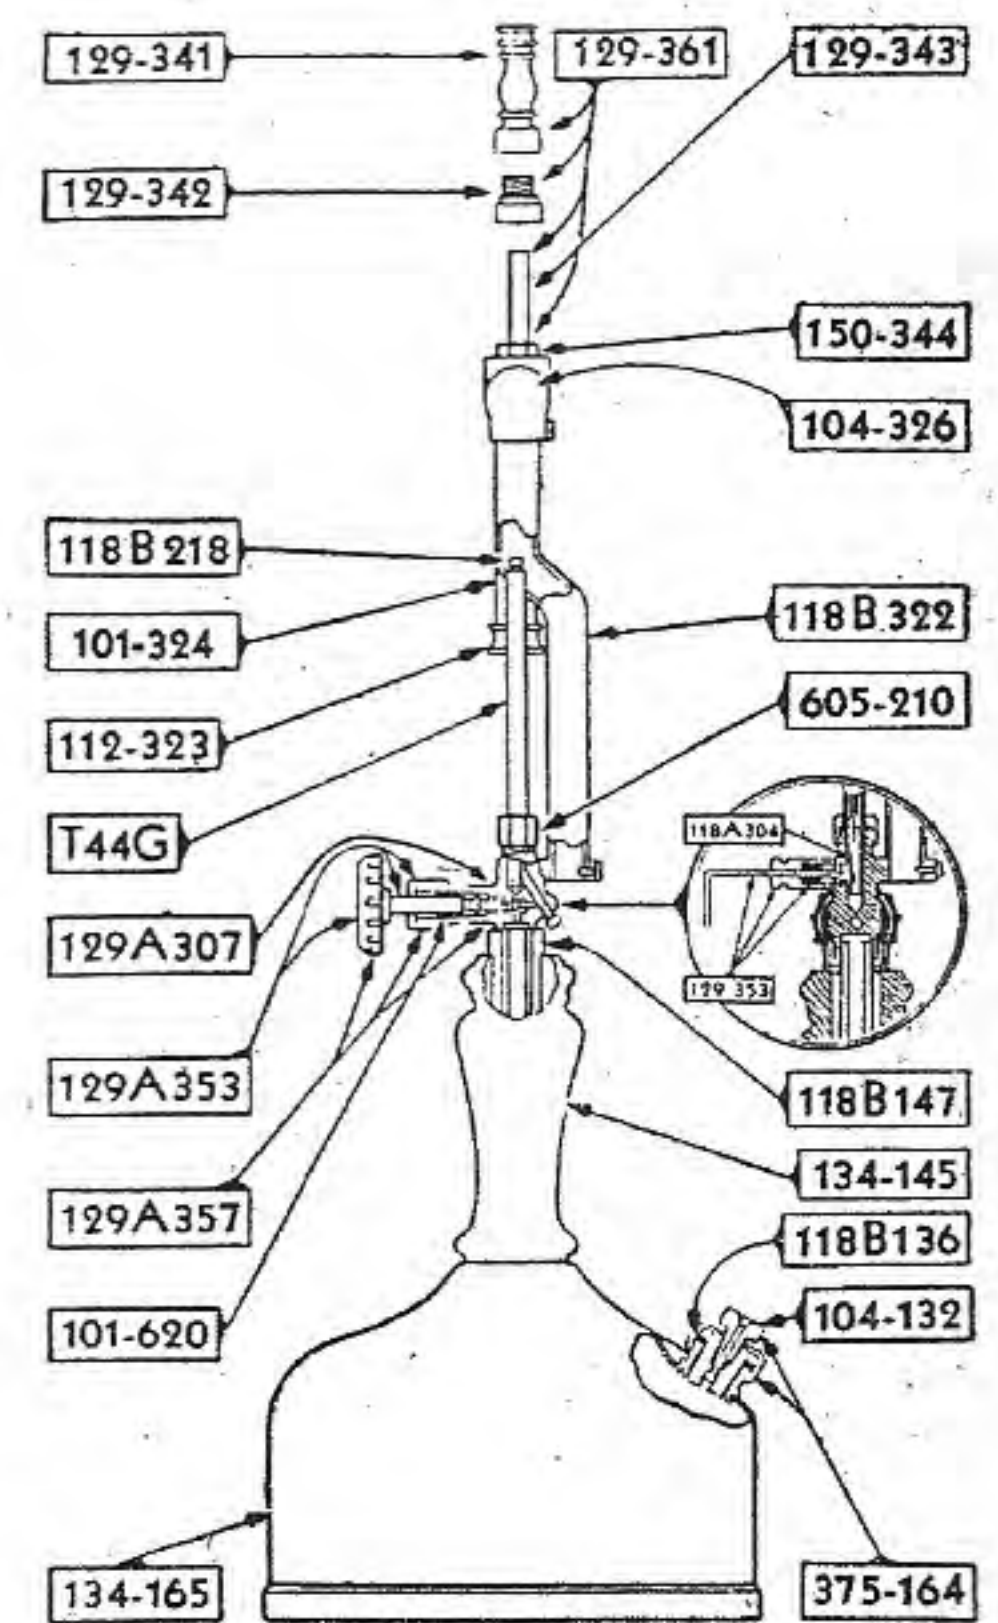

GASOLINE LAMP
Model Nos. 134A, 134P, 134G


Refer to Numerical Listings for Parts, Description and Prices

COLEMAN LAMP PARTS ILLUSTRATIONS

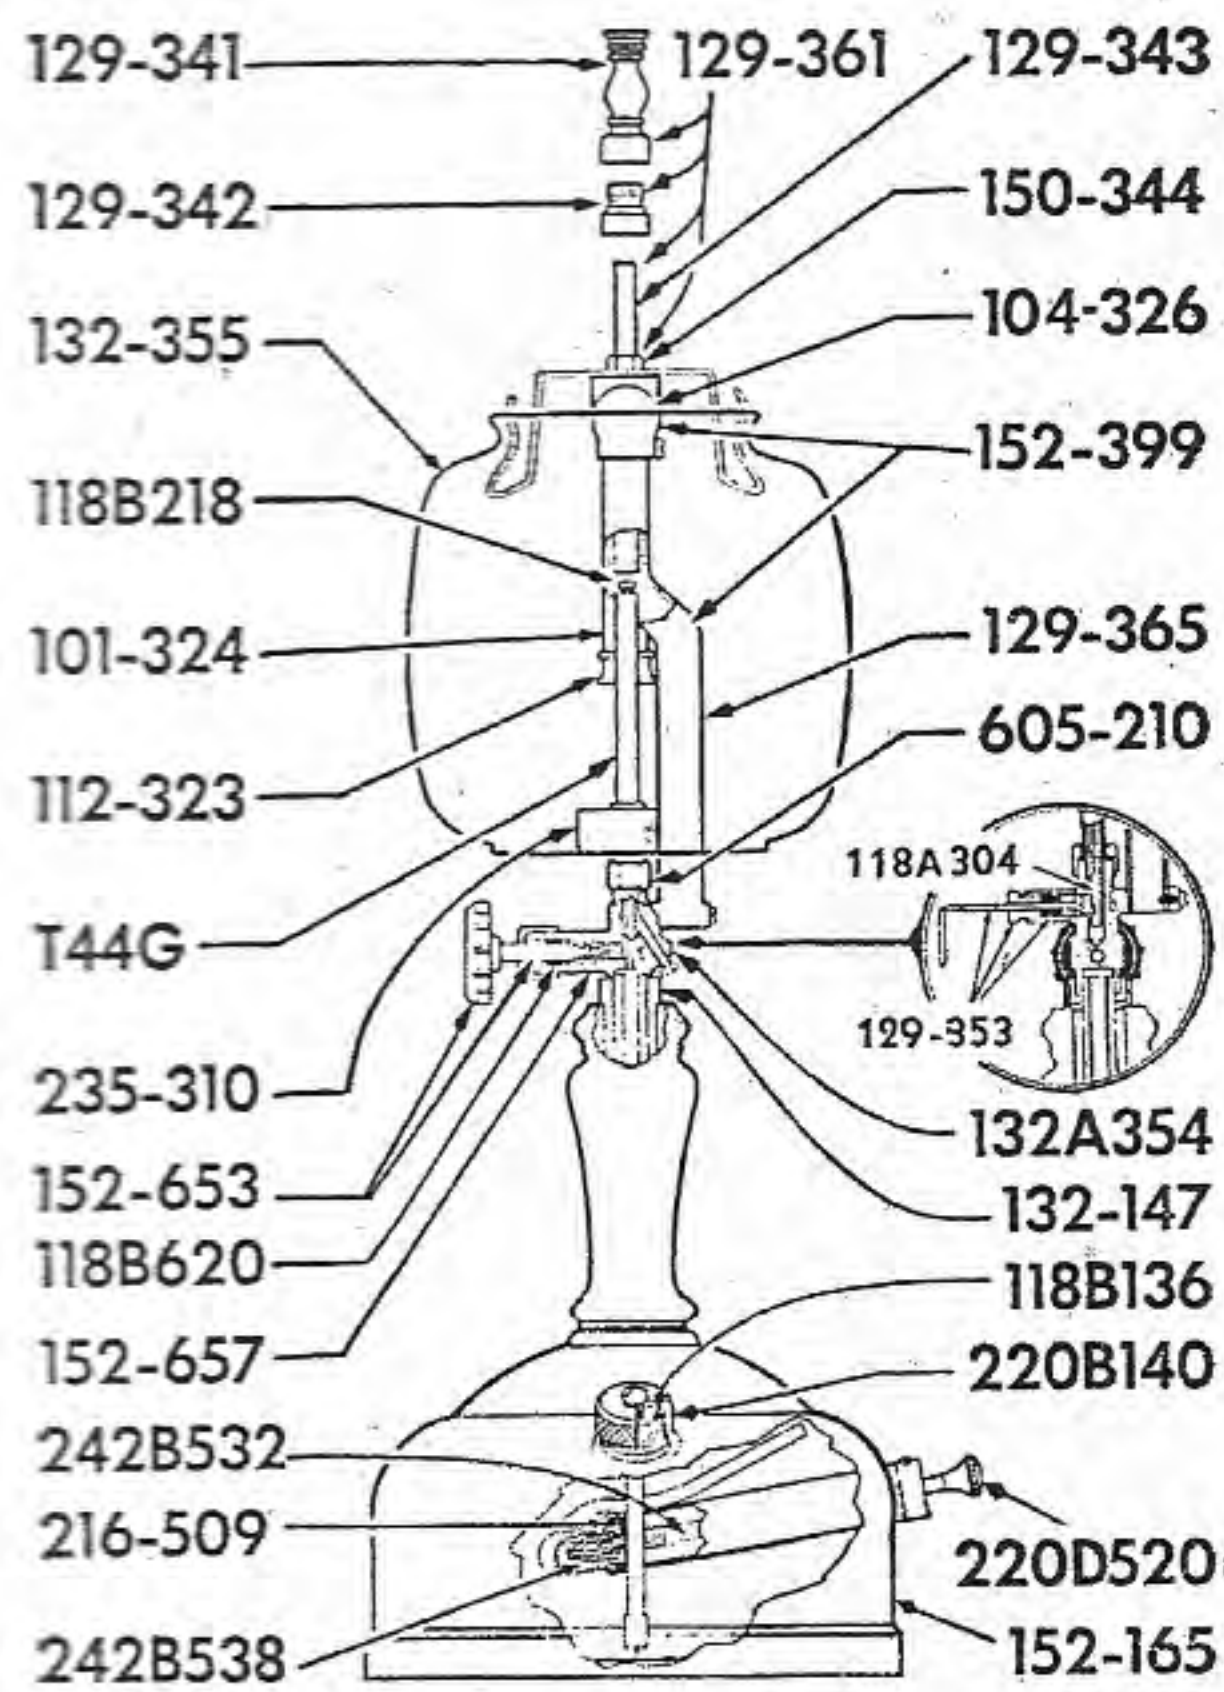

INSTANT LIGHTING AND KEROSENE LAMP
(Gasoline) (Alcohol-Generating)
Model No. 152


Order by Number	Part Name	Net Retail Price
T44G	Generator and Cleaning Needle (Less Jamb Nut) (Gas Tip Marked "V") (118B299).....	\$.60
T44K	Generator and Cleaning Needle (Less Jamb Nut) (Gas Tip Marked "V") (118C299).....	.60
139SD	Parchment Shade	1.25
355	Pyrex Glass Mantle Protector (132-355).....	1.00
101-324	Burner Tube	.21
104-326	Burner Mixing Chamber	.69
104-469	Hanger Rod	.21
112-323	Burner Cap and Screen.....	.18
112-325	Burner Cap Screen.....	.03
118A304	Eccentric Block	.09
118B136	Filler Plug Gasket.....	.03
118B218	Gas Tip (Marked "V").....	.09
118B620	Valve Stem Packing.....	.03
129-335	Shade Holder Clamps Packed.....	.42
129-341	Finale	.48
129-342	Finale Nut	.18
129-343	Shade Support Rod.....	.15
129-353	Tip Cleaner Stem Assembly.....	.21
129-361	Finale Assembly	.81
129-365	Air Intake Tube.....	.60
132-147	Handle Lock Nut.....	.15
132-148	Fuel and Air Tube Assembly.....	.81
132A354	Valve Body	.99
152-145	Handle	.45
152-165	Fount Complete	6.00
152-399	Burner Complete	4.05
152-653	Valve Stem Complete.....	.48
152-657	Valve Complete	1.80
150-344	Support Rod Nut.....	.03
216-509	Pump Leather	.06
220B140	Filler Plug Complete.....	.69
220D520	Pump Plunger	.81
235-310	Preheater Cup and Wick.....	.21
242B532	Pump Air Stem.....	.27
242B538	Check Valve	.27
242K910	Alcohol Generating Can.....	.42
605-210	Jamb Nut	.03

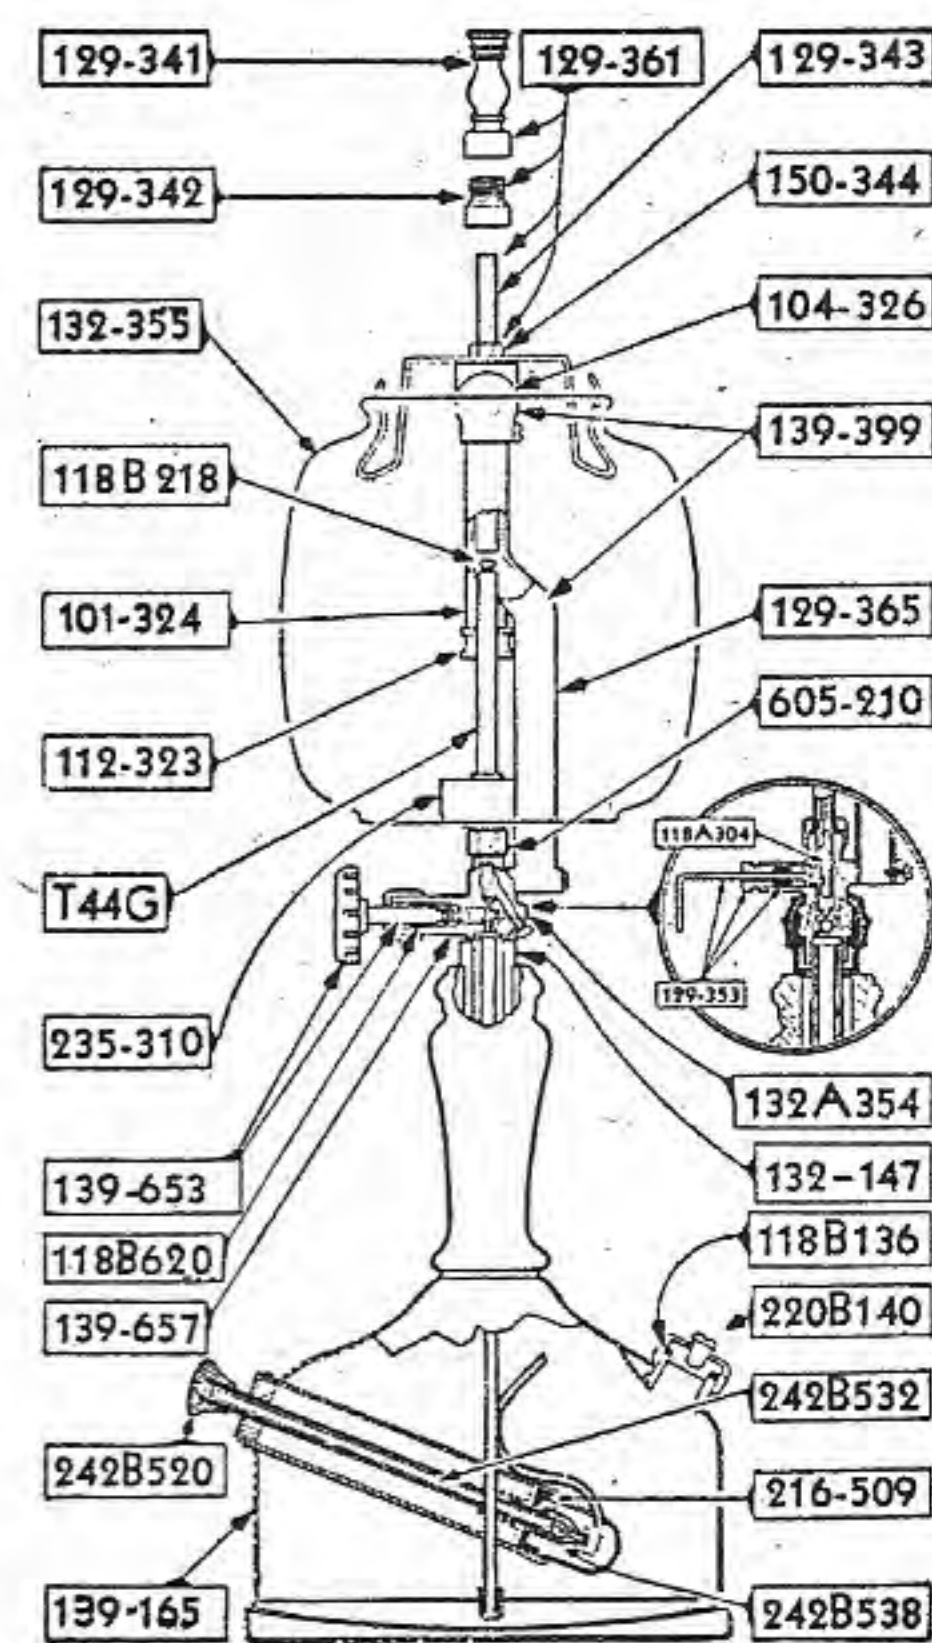

INSTANT-LIGHTING AND KEROSENE LAMP
(Gasoline) (Alcohol-Generating)
Model No. 139

Order by Number	Part Name	Net Retail Price
T44G	Generator and Cleaning Needle (Less Jamb Nut) (Gas Tip Marked "V") (118B299).....	\$.60
T44K	Generator and Cleaning Needle (Less Jamb Nut) (Gas Tip Marked "V") (118C299).....	.60
101-324	Burner Tube	.21
104-326	Mixing Chamber	.69
104-469	Hanger Rod	.21
112-323	Burner Cap and Screen.....	.18
112-325	Burner Cap Screen.....	.03
118A304	Eccentric Block	.09
118B136	Filler Plug Gasket.....	.03
118B218	Gas Tip (Marked "V").....	.09
118B620	Valve Stem Packing.....	.03
129-335	Shade Holder Clamps (Packed).....	.42
129-341	Finale	.48
129-342	Finale Nut	.18
129-343	Shade Support Rod.....	.15
129-353	Tip Cleaner Stem Assembly.....	.21
129-361	Finale Assembly	.81
129-365	Air Intake Tube.....	.60
132-147	Handle Lock Nut.....	.15
132-148	Fuel & Air Tube Assembly.....	.81
132A354	Valve Body	.99
139-145	Handle	.42
139-165	Fount Complete	4.80
139-399	Burner Complete	4.05
139-653	Valve Stem Complete.....	.48
139-657	Valve Complete	1.80
150-344	Support Rod Nut.....	.03
216-509	Pump Leather	.06
220B140	Filler Plug Complete.....	.69
235-310	Preheater Cup & Wick.....	.21
242B532	Pump Air Stem.....	.27
242B538	Check Valve	.27
242K910	Alcohol Generating Can.....	.42
605-210	Jamb Nut	.03


COLEMAN LAMP AND LANTERN PARTS ILLUSTRATIONS

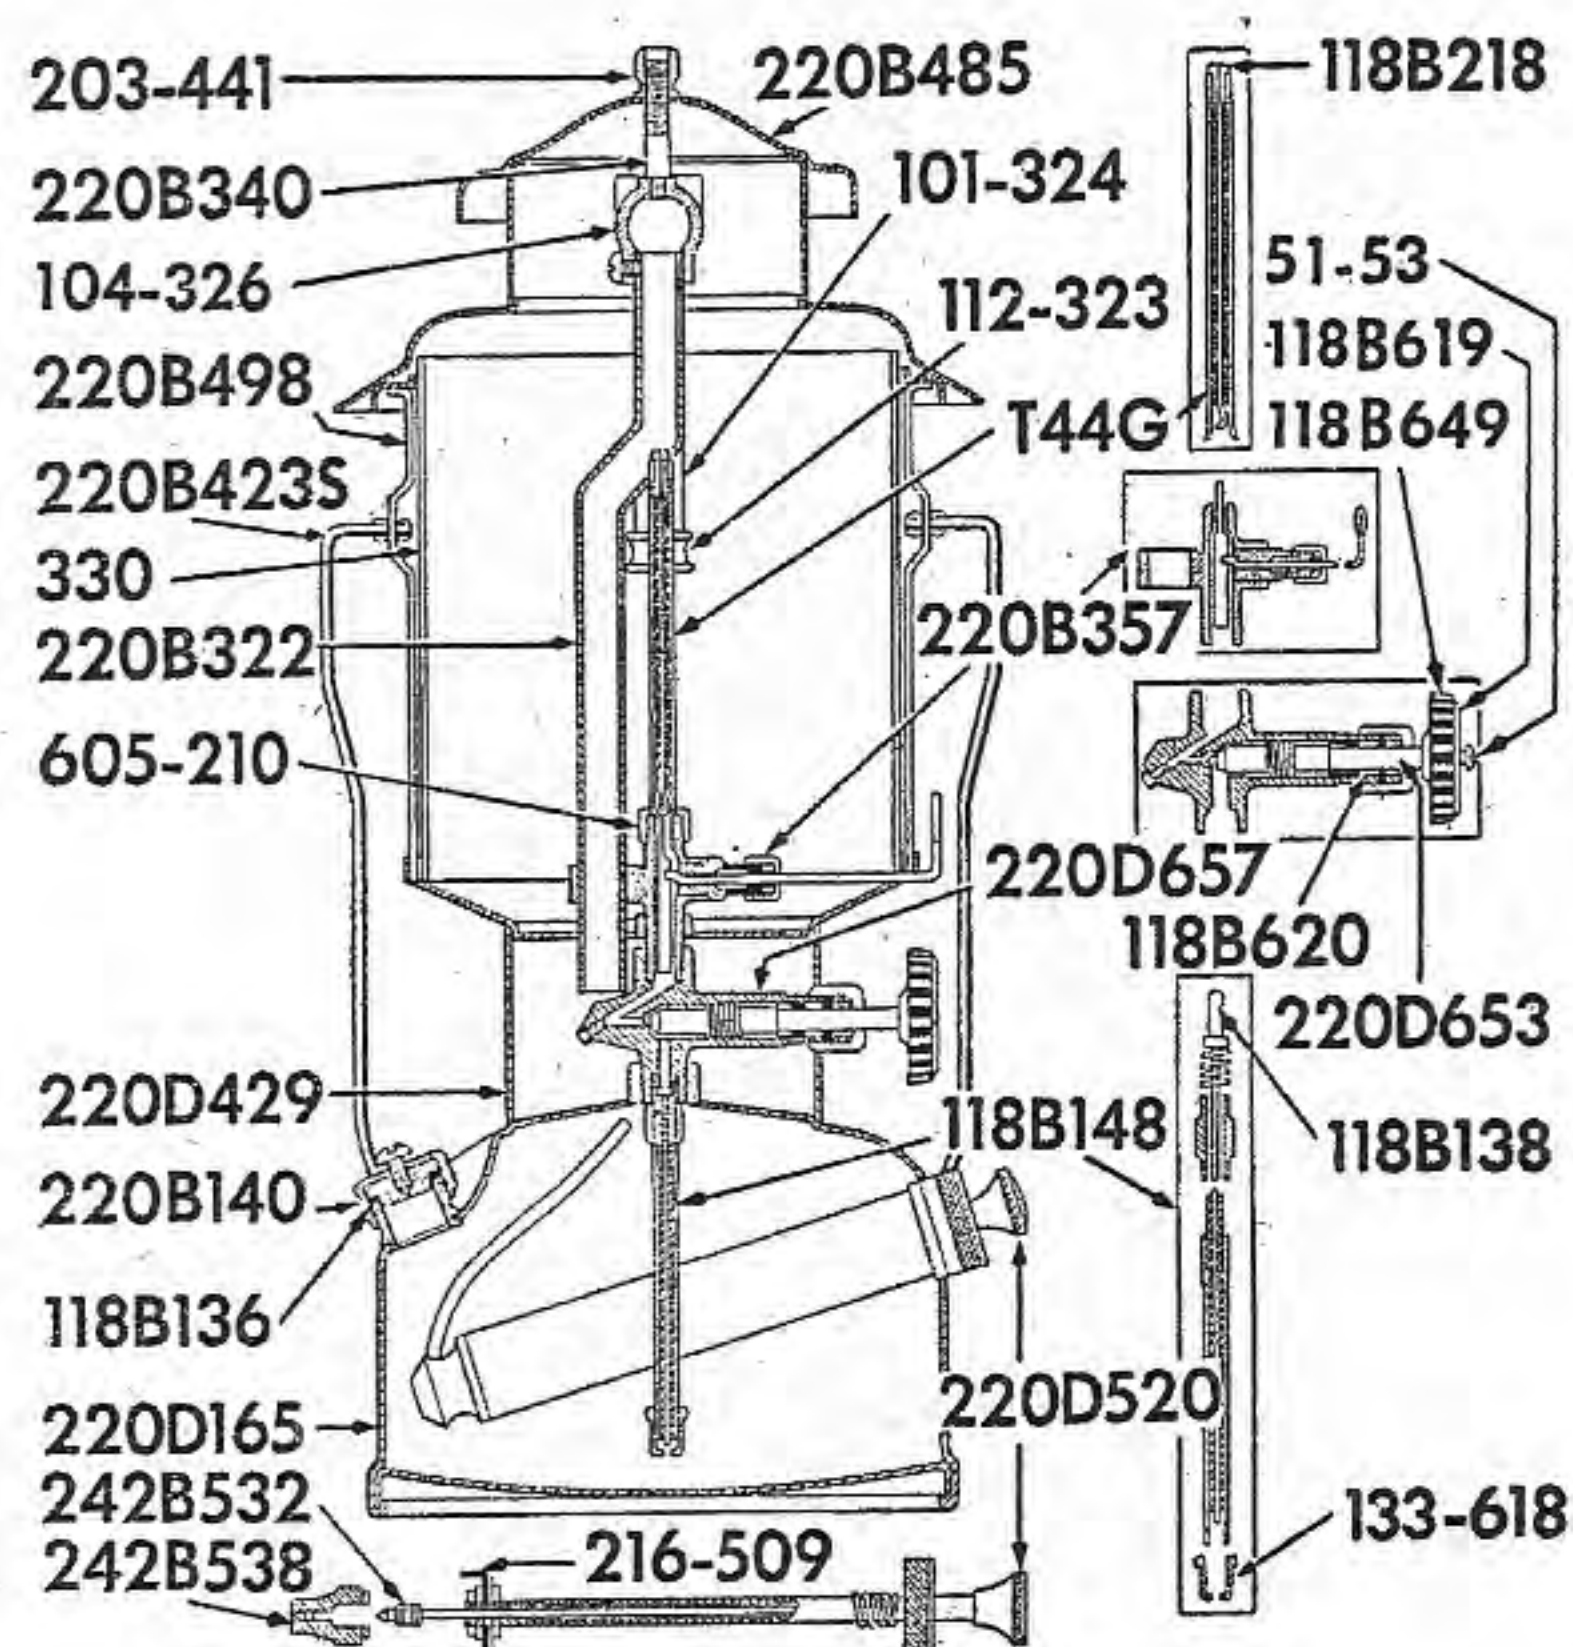

INSTANT-LITE LANTERNS
Model Nos. 220D and 228D

Order by Number	Part Name	Net Retail Price
21A	Mantle 2 for \$.25	
	Dozen	1.20
51-53	Screw	.03
T44G	Generator and Gas Tip Cleaning Needle (less Jamb Nut (Gas Tip Marked "V")).....	.60
330	Pyrex Glass Globe.....	1.00
101-324	Burner Tube	.21
104-107	Lock Nut	.06
104-326	Mixing Chamber	.69
112-323	Burner Cap and Screen.....	.18
118A304	Eccentric Block	.09
118B136	Filler Plug Gasket.....	.03
118B138	Fuel Tip Cleaning Needle.....	.21
118B218	Gas Tip (Marked "V").....	.09
118B619	Direction Disc	.09
118B620	Valve Stem Packing.....	.03
118B649	Valve Wheel	.18
133-618	Fuel Tip (Marked ★).....	.09
203-441	Ventilator Ball Nut.....	.15
216-509	Pump Leather	.06
220B140	Filler Plug Complete.....	.69
220B322	Air Intake Tube.....	.69
220B340	Ventilator Rod	.15
220B353	Tip Cleaner Stem Packed.....	.42
220B357	Gas Tip Cleaner Complete Assembled.....	.99
220B950	Wrench (Small)	.21
220D146	Fuel and Air Wire Complete (Fuel Tip Marked ★).....	.99
220D165	Fount Complete	6.00
220D520	Pump Plunger Complete (Less Air Stem).....	.81
220D653	Valve Stem Complete.....	.99
220D657	Fuel Valve Complete	2.40
220B485	Ventilator	1.95
220B423S	Bail	.21
220B498	Frame and Bail.....	1.20
220D429	Base Rest	.27
227-480	Ventilator	2.70
228B423S	Bail	.21
228B498	Frame and Bail.....	1.20
228D429	Base Rest	.27
242B532	Air Stem	.27
242B538	Check Valve	.27
605-210	Jamb Nut	.03
605-950	Wrench (Large)	.21


No. 242B538 Check Valve can be unscrewed with an ordinary screw driver.

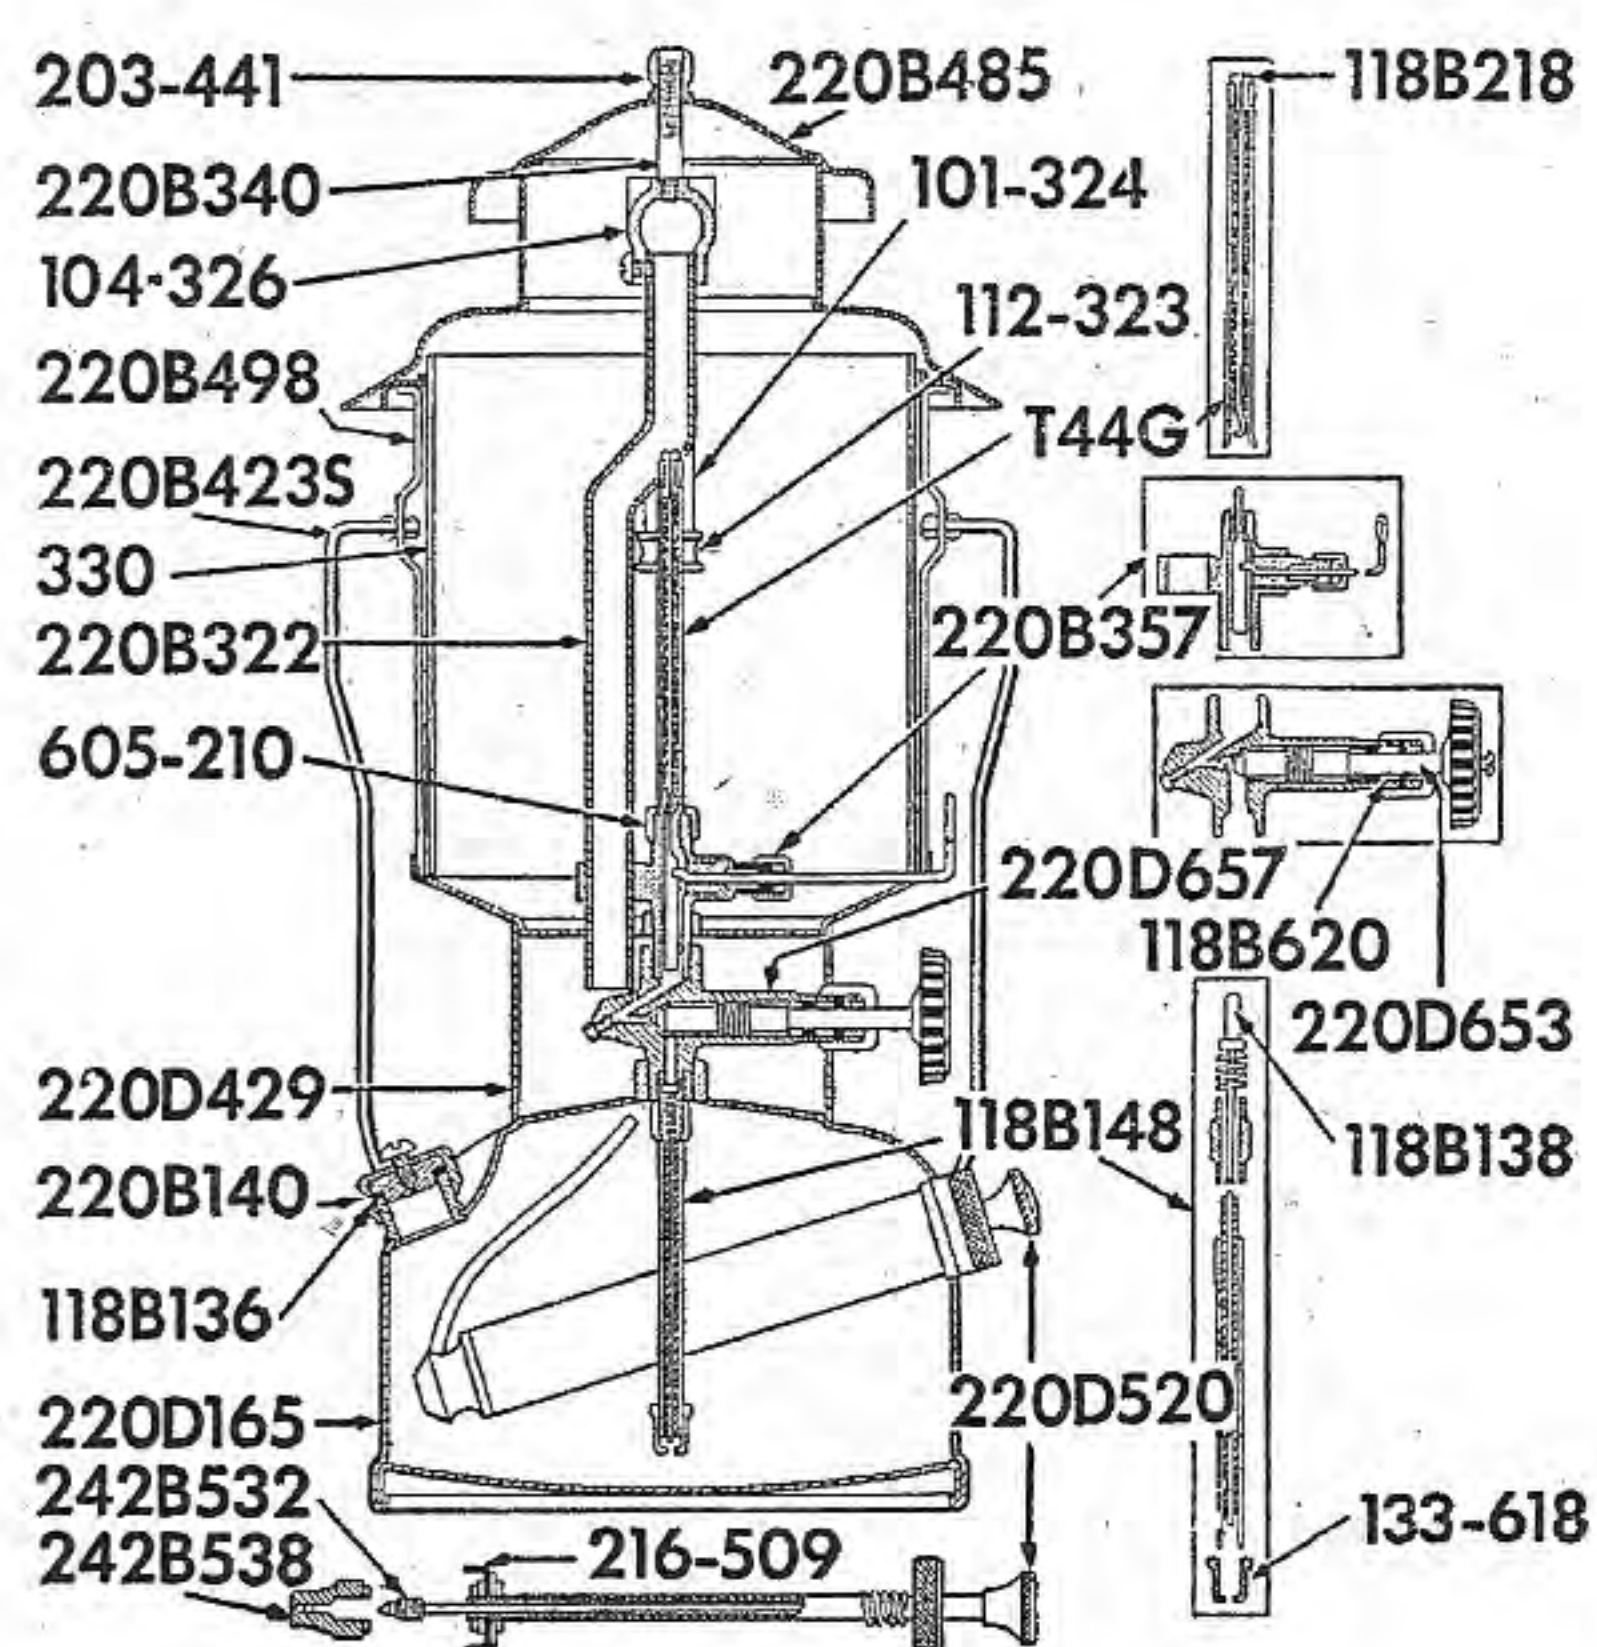

INSTANT-LITE LANTERNS
Model Nos. 220B, 220BX, 228B and 228C


Order by Number	Part Name	Net Retail Price
T44G	Generator & Gas Tip Cleaning Needle (Less Jamb Nut) (Gas Tip Marked "V") Model Nos. 220B, 220BX, 228B..	\$.60
101-324	Burner Tube. Model Nos. 220B, 220BX, 228B.....	.21
104-147	Handle Lock Nut. Model Nos. 220B, 220BX, 228B.....	.06
104-326	Mixing Chamber	.69
112-323	Burner Cap & Screen. Model Nos. 220B, 220BX, 228B..	.18
118A304	Eccentric Block. Model Nos. 220B, 220BX, 228B.....	.09
118B118	Fuel Tip (Marked "AB"). Model Nos. 220B, 220BX, 228B..	.09
118B136	Filler Plug Gasket. Model Nos. 220B, 220BX, 228B....	.03
118B138	Fuel Tip Cleaning Needle. Model Nos. 220B, 220BX, 228B	.21
118B148	Fuel & Air Wire Complete (Fuel Tip Marked "AB"). Model Nos. 220B, 220BX, 228B.....	.99
118B218	Gas Tip (Marked "V"). Model Nos. 220B, 220BX, 228B..	.09
118B620	Valve Stem Packing. Model Nos. 220B, 220BX, 228B...	.03
203-441	Ventilator Ball Nut. Model Nos. 220B, 220BX, 228B....	.15
216-509	Pump Leather. Model Nos. 220B, 220BX, 228B.....	.06
216-520	Pump Plunger Complete (Less Air Stem). Model Nos. 220B, 220BX, 228B.....	.81
216-532	Air Stem. Model Nos. 220B, 220BX, 228B.....	.27
216-538	Check Valve.. Model Nos. 220B, 220BX, 228B.....	.27
220B140	Filler Plug Complete, Model Nos. 220B, 220BX, 228B...	.69
220B165	Fount Complete. Model Nos. 220B, 220BX, 228B.....	6.00
220B322	Air Intake Tube. Model Nos. 220B, 220BX, 228B.....	.69
220B340	Ventilator Rod. Model Nos. 220B, 220BX, 228B.....	.15
220B353	Tip Cleaner Stem Packed. Model Nos. 220B, 220BX, 228B	.42
220B357	Gas Tip Cleaner, Complete Assembly. Model Nos. 220B, 220BX, 228B	.99
220B423S	Bail. Model Nos. 220B and 220BX.....	.21
	SUPPLY 228B423S on 228B.....	.21
220B429	Base Rest. Model Nos. 220B, 220BX, 228B.....	.27
220B485	Ventilator. Model Nos. 220B and 220BX Supply 227-480 on 228B.....	2.70
220B498	Frame and Bail. Model Nos. 220B and 220BX.....	1.20
	SUPPLY 228B498 on 228B.	
220B950	Wrench (Small). Model Nos. 220B, 220BX, 228B.....	.21
220C653	Valve Stem Complete. Model No. 220BX.....	.99
	SUPPLY 220B653 on 220B and 228B.....	.81
220C657	Fuel Valve Complete. Model Nos. 220B, 220BX and 228B	2.40
605-210	Jamb Nut. Model Nos. 220B, 220BX, 228B.....	.03
605-950	Wrench (Large). Model Nos. 220B, 220BX, 228B.....	.21

COLEMAN LANTERN PARTS ILLUSTRATIONS

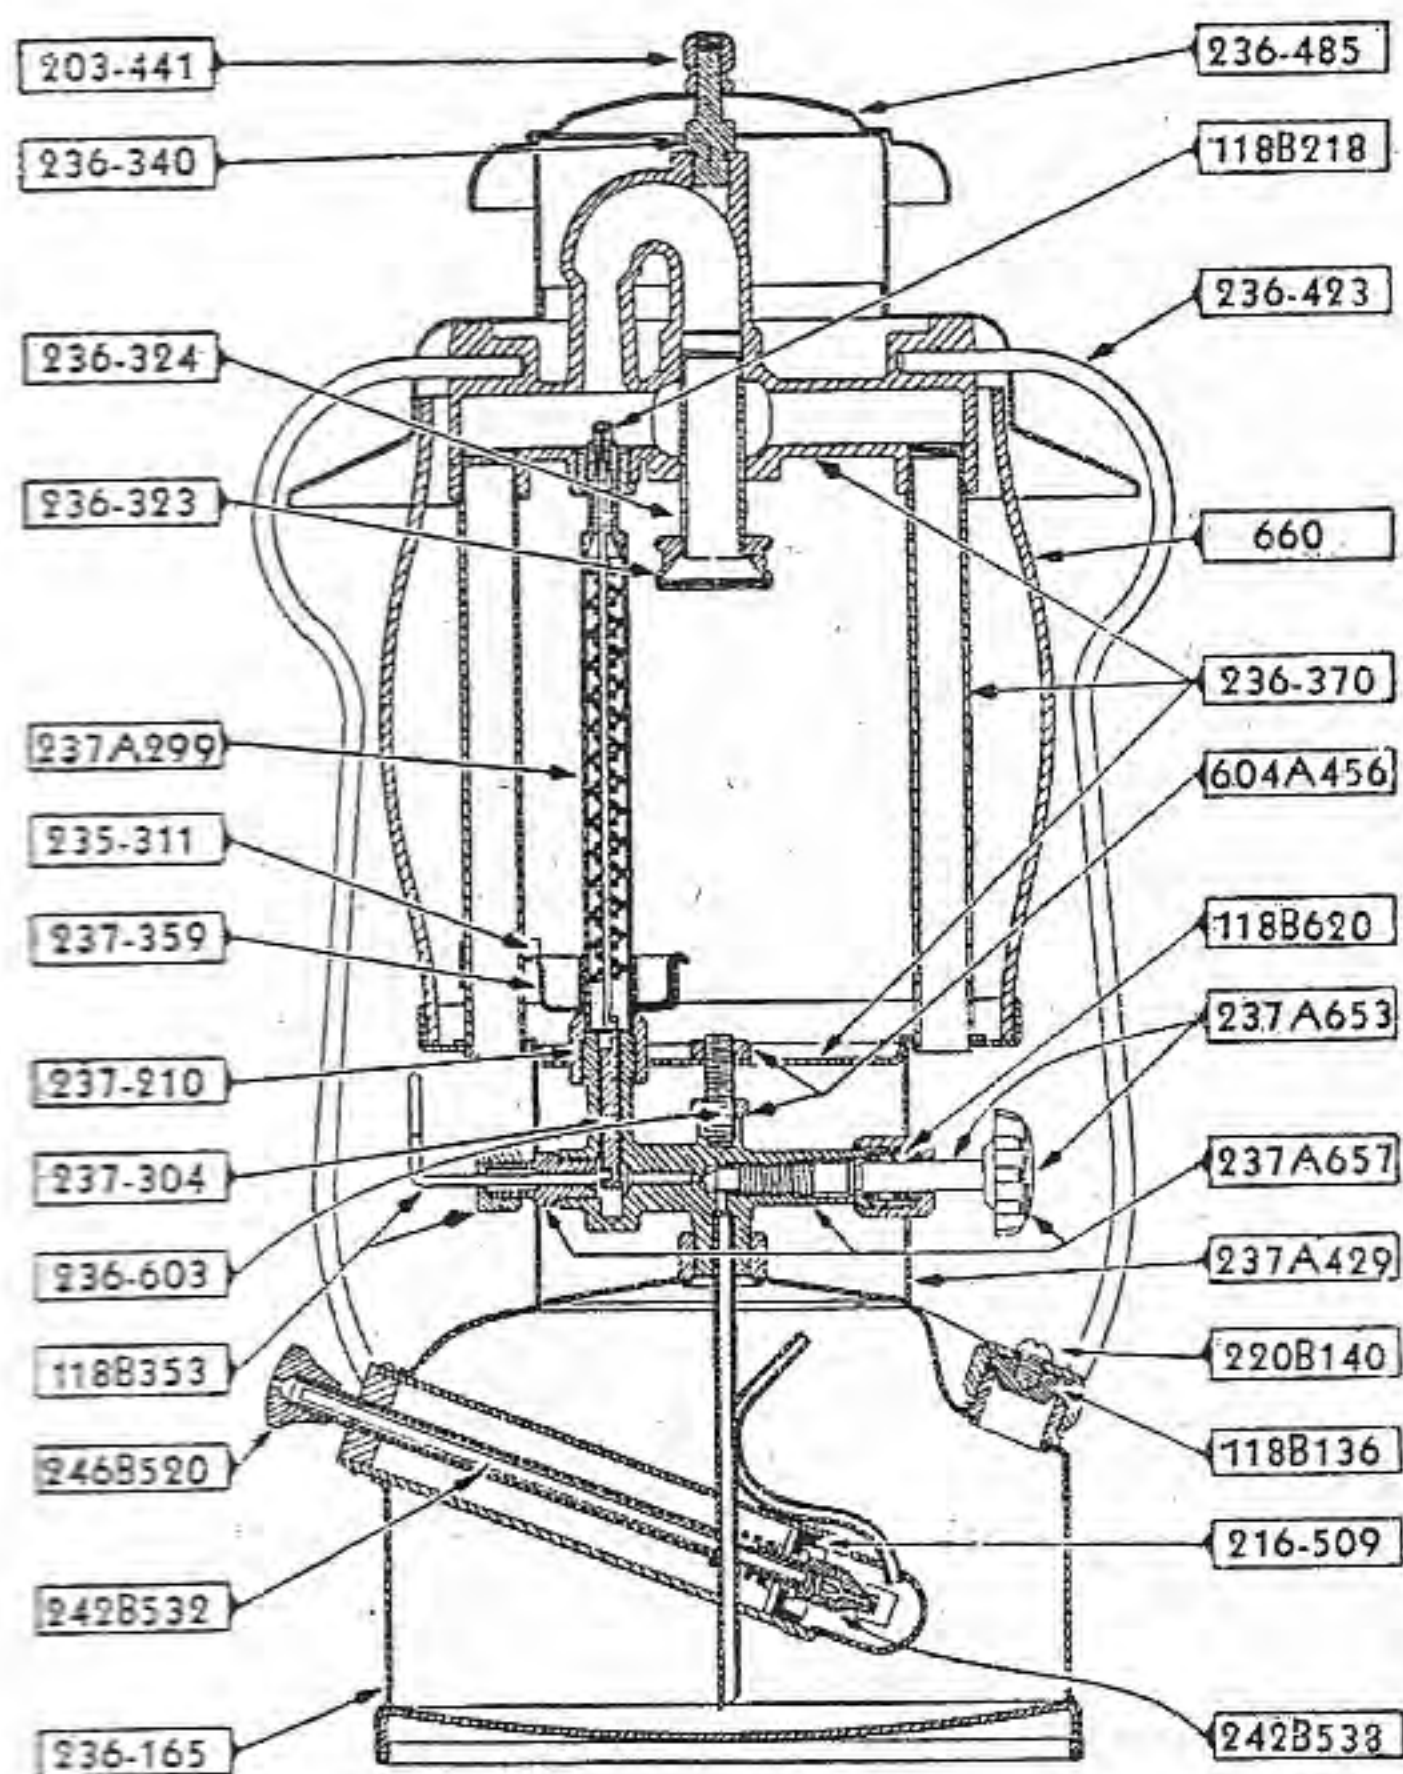

KEROSENE MANTLE LANTERNS
Model Nos. 237A and 237B


Order by Number	Part Name	Net Retail Price
118B136	Filler Plug Gasket. Model Nos. 237A and 237B.....	\$.03
118B218	Gas Tip (Marked "V"). Model Nos. 237A and 237B....	.09
118B353	Tip Cleaner Stem. Model Nos. 237A and 237B.....	.48
118B620	Valve Stem Packing. Model Nos. 237A and 237B.....	.03
203-441	Ventilator Bail Nut. Model Nos. 237A and 237B.....	.15
216-509	Pump Leather. Model Nos. 237A and 237B.....	.06
216-520	Pump Plunger Complete. Model No. 237B.....	.81
	SUPPLY 242B520 on 237A.....	.27
216-532	Air Stem. Model No. 237B.....	.27
	SUPPLY 242B532 on 237A.....	.27
216-538	Check Valve. Model No. 237B.....	.27
	SUPPLY 242B538 on 237A.....	.27
220B140	Filler Plug Complete. Model Nos. 237A and 237B.....	.69
220B165	Fount Complete. Model 237B.....	6.00
	SUPPLY 236-165 on 237A.....	6.00
235-311	Spring Clip. Model Nos. 237A and 237B.....	.09
236-325	Burner Cap. Model Nos. 237A and 237B.....	.42
236-324	Burner Tube. Model Nos. 237A and 237B.....	.21
236-340	Ventilator Rod. Model Nos. 237A and 237B.....	.21
236-370	Frame & Burner Complete. Model Nos. 237A and 237B.	4.05
236-423	Bail. Models 237A and 237B.....	.21
236-485	Ventilator. Model Nos. 237A and 237B.....	1.95
236-603	Frame & Valve Connection Stud. Model Nos. 237A and 237B	.09
237-210	Jamb Nut. Model Nos. 237A and 237B.....	.15
237-304	Tip Cleaner Eccentric Block. Model Nos. 237A and 237B	.09
237-359	Preheater Cup Complete With Wick. Model Nos. 237A and 237B	.21
237A299	Generator Complete with Gas Tip (Marked "V"), Model Nos. 237A and 237B.....	.70
237A653	Valve Stem Complete. Model Nos. 237A and 237B....	.48
237A657	Valve Complete. Model Nos. 237A and 237B.....	2.70
237B429	Globe Base Rest. Model No. 237B.....	.21
	SUPPLY 237A429 on 237A.....	.21
242K910	Alcohol Generating Can. Model Nos. 237A and 237B..	.42
604A456	Hexagon Nut (1/4-20). Model Nos. 237A and 237B.....	.03

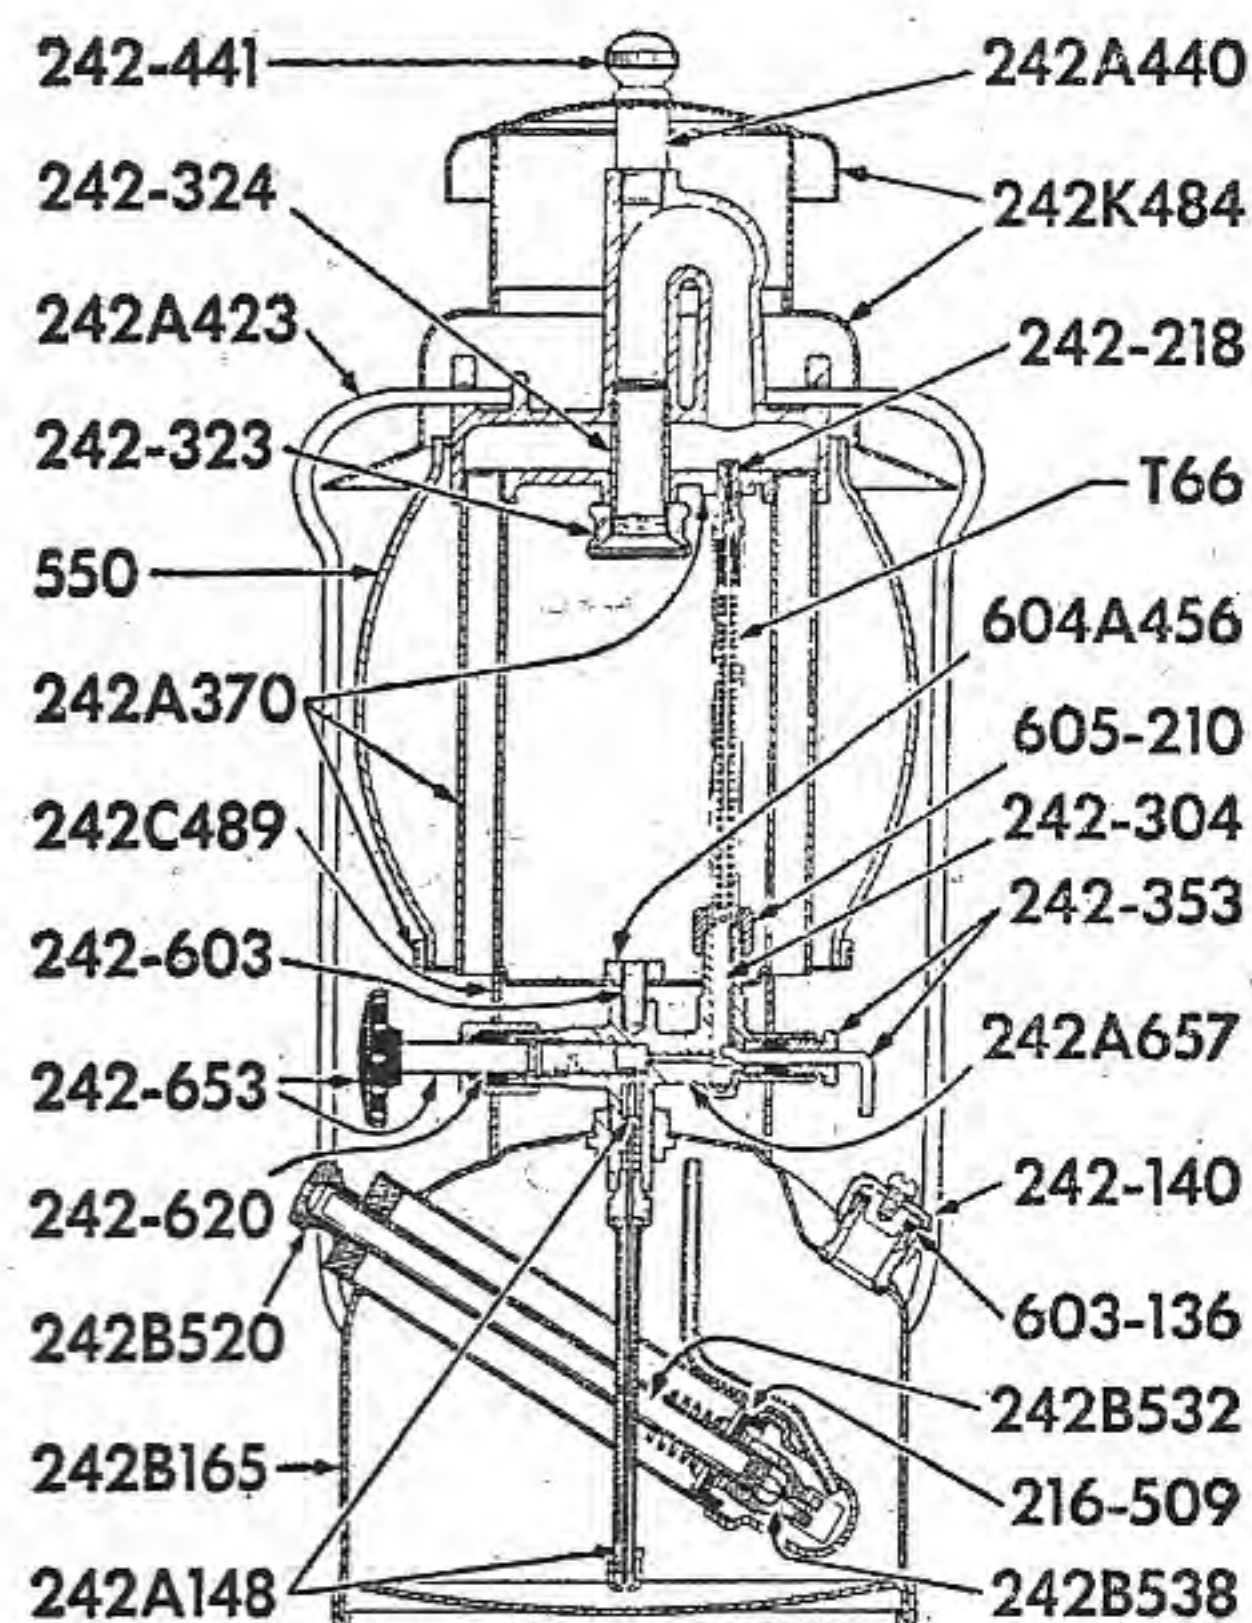

INSTANT-LITE LANTERNS
Model Nos. 242A, 242B and 242C


Order by Number	Part Name	Net Retail Price
T66	Generator (Gas Tip Marked "6") (242A299). Model Nos. 242A and 242B.....	\$.60
216-509	Pump Leather. Model No. 242B.....	.06
	SUPPLY 242-518 on 242A.....	.21
242-140	Filler Plug Complete. Model Nos. 242A and 242B.....	.42
242-218	Gas Tip (Marked "6"). Model Nos. 242A and 242B....	.09
242-304	Tip Cleaner Eccentric Block. Model Nos. 242A and 242B	.09
242-323	Burner Cap & Screen. Model Nos. 242A and 242B....	.42
242-324	Burner Tube. Model Nos. 242A and 242B.....	.21
242-353	Tip Cleaner Stem Complete. Model Nos. 242A and 242B	.21
242A148	Fuel & Air Wire Complete (Fuel Tip Marked "L"). Model Nos. 242A and 242B.....	.48
242A370	Frame & Burner Complete. Model Nos. 242A and 242B.	1.95
242A423	Bail. Model Nos. 242A and 242B.....	.27
242A440	Ventilator Rod. Model Nos. 242A and 242B.....	.15
242A657	Fuel Valve Complete. Model Nos. 242A and 242B.....	1.65
242B165	Fount Complete. Model Nos. 242A and 242B.....	4.80
242B489	Globe Base Rest. Model Nos. 242A and 242B.....	.21
242B520	Pump Plunger Complete (Less Air Stem). Model No. 242B	.60
	SUPPLY 242-520 on 242A.	
242B532	Pump Air Stem. Model 242B.....	.27
242B538	Check Valve. Model No. 242B.....	.27
	SUPPLY 223-538 on 242A.....	.42
242K484	Ventilator. Model Nos. 242A and 242B.....	.99
603-136	Filler Plug Gasket. Model Nos. 242A and 242B.....	.03
604A456	Hexagon Brass Nut (1/4-20). Model Nos. 242A and 242B.	.03
605-210	Jamb Nut. Model Nos. 242A and 242B.....	.03

COLEMAN LANTERN PARTS ILLUSTRATIONS

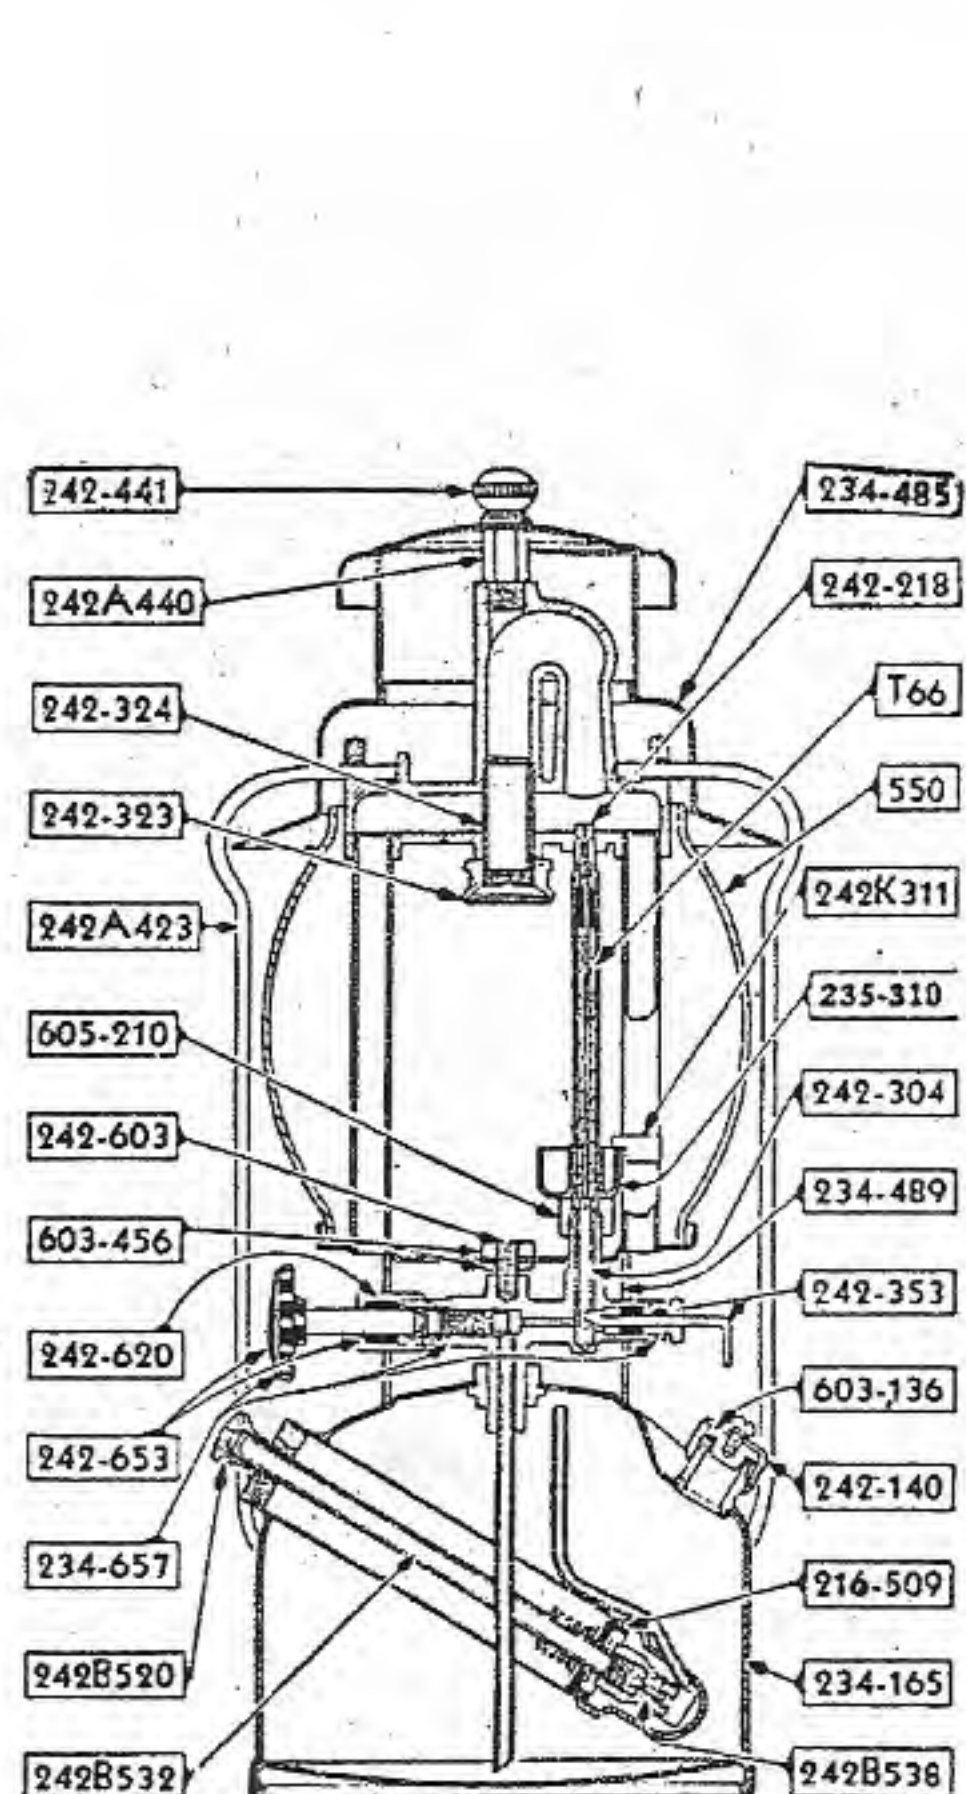


KEROSENE SINGLE MANTLE LANTERN

Model No. 234
Alcohol-Generating

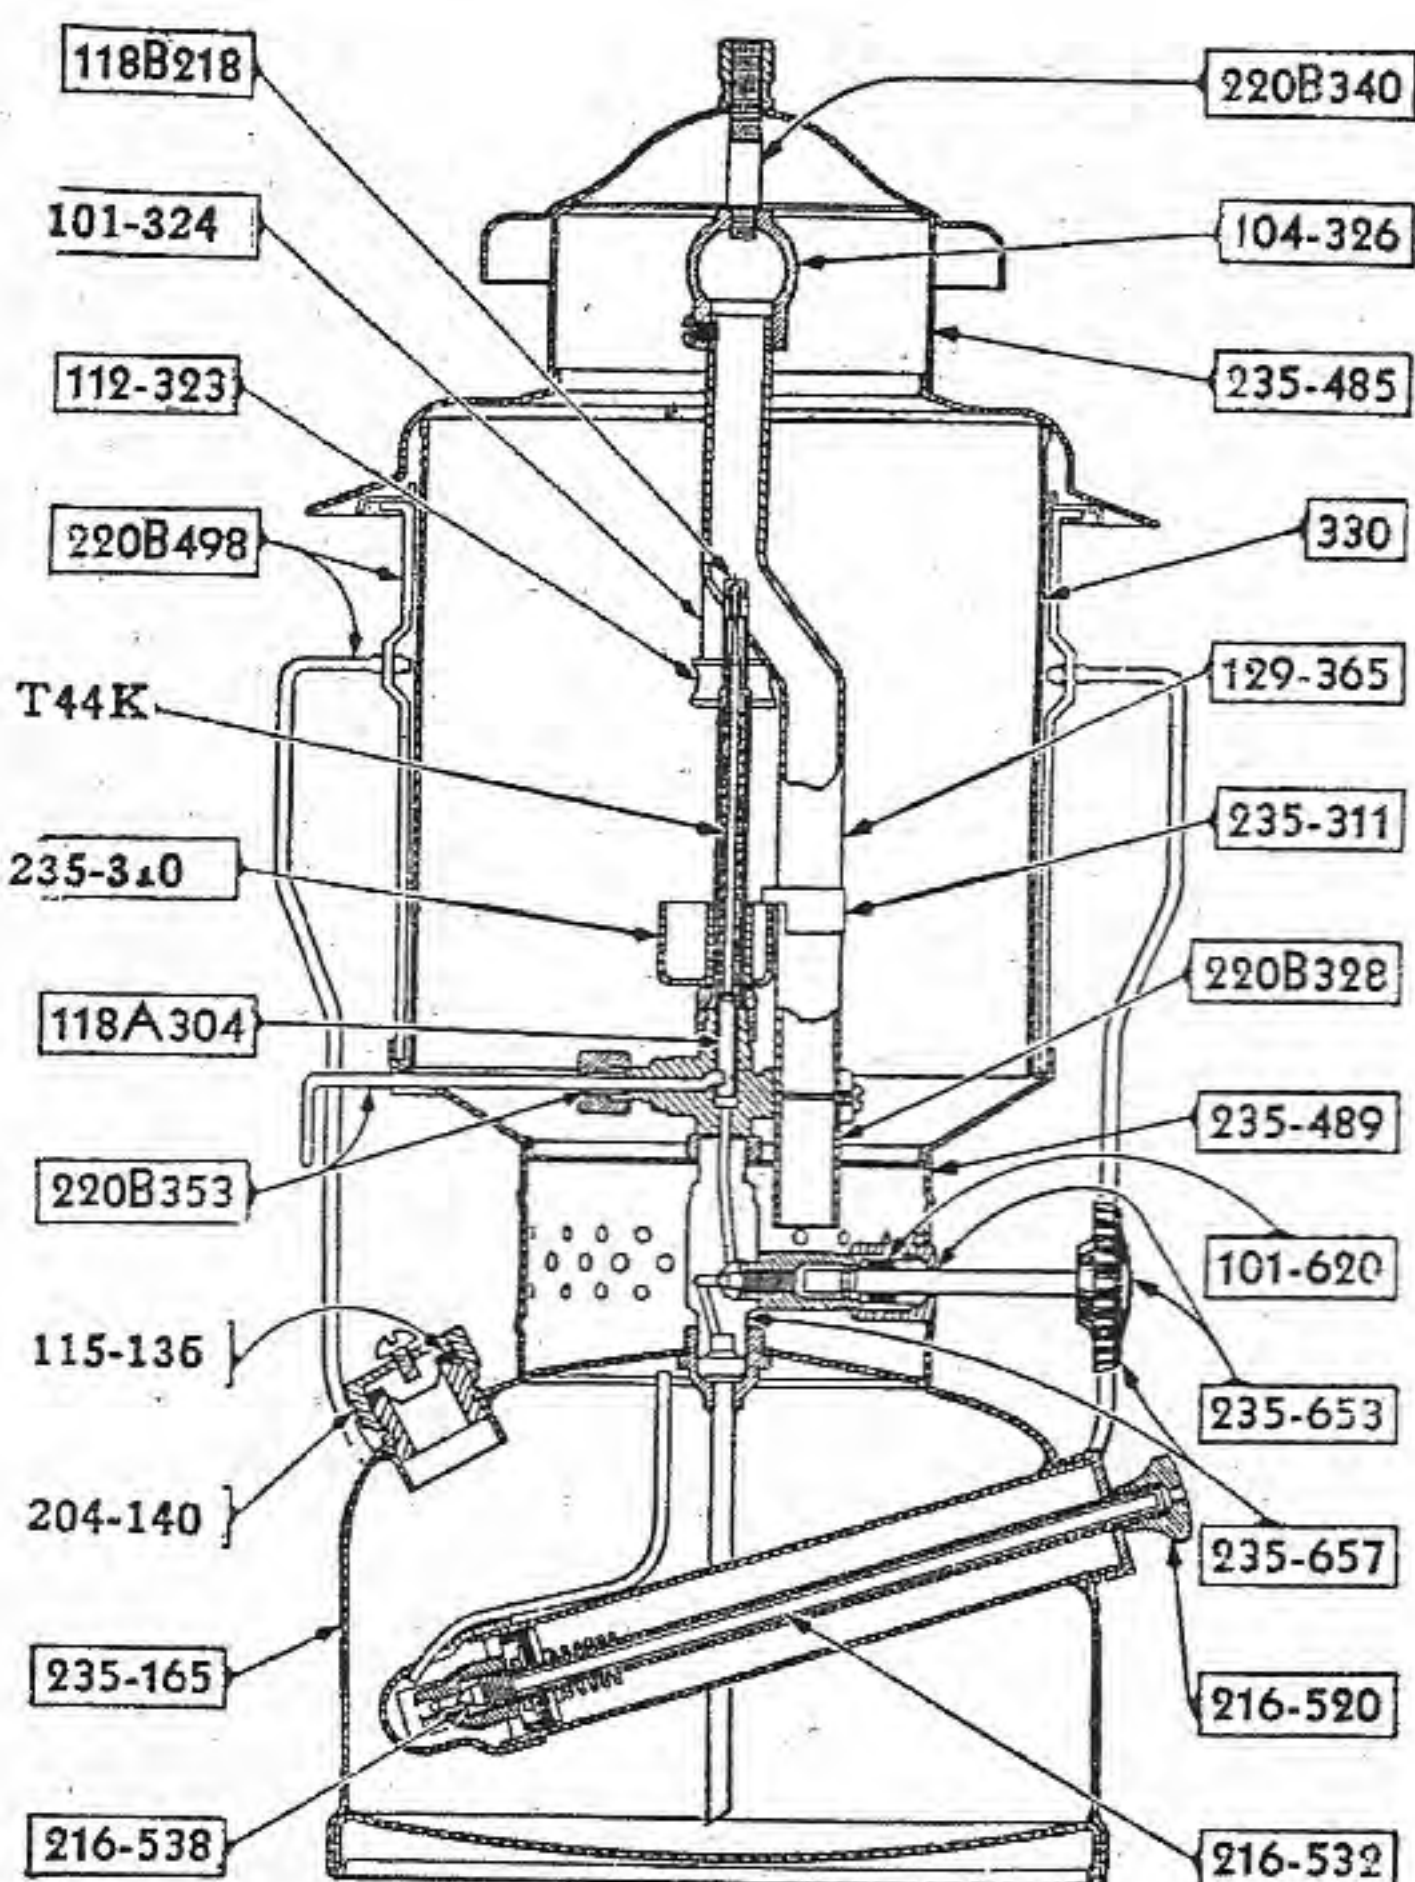

KEROSENE DOUBLE MANTLE LANTERN


Model No. 235
Alcohol-Generating

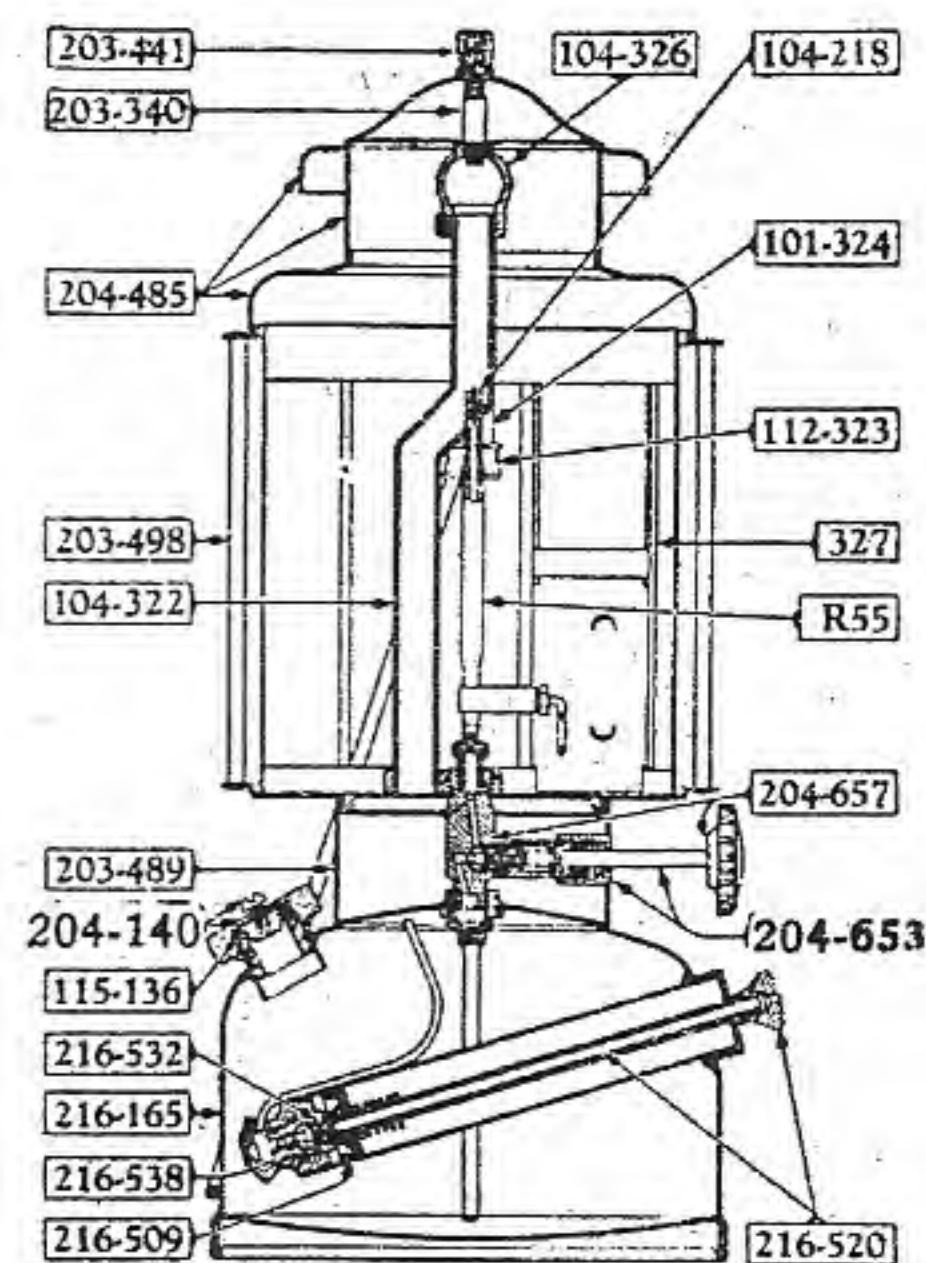

Match-Generating LANTERN


Model No. L427

Burner Parts Interchangeable
Old Style Nos. L227, L427

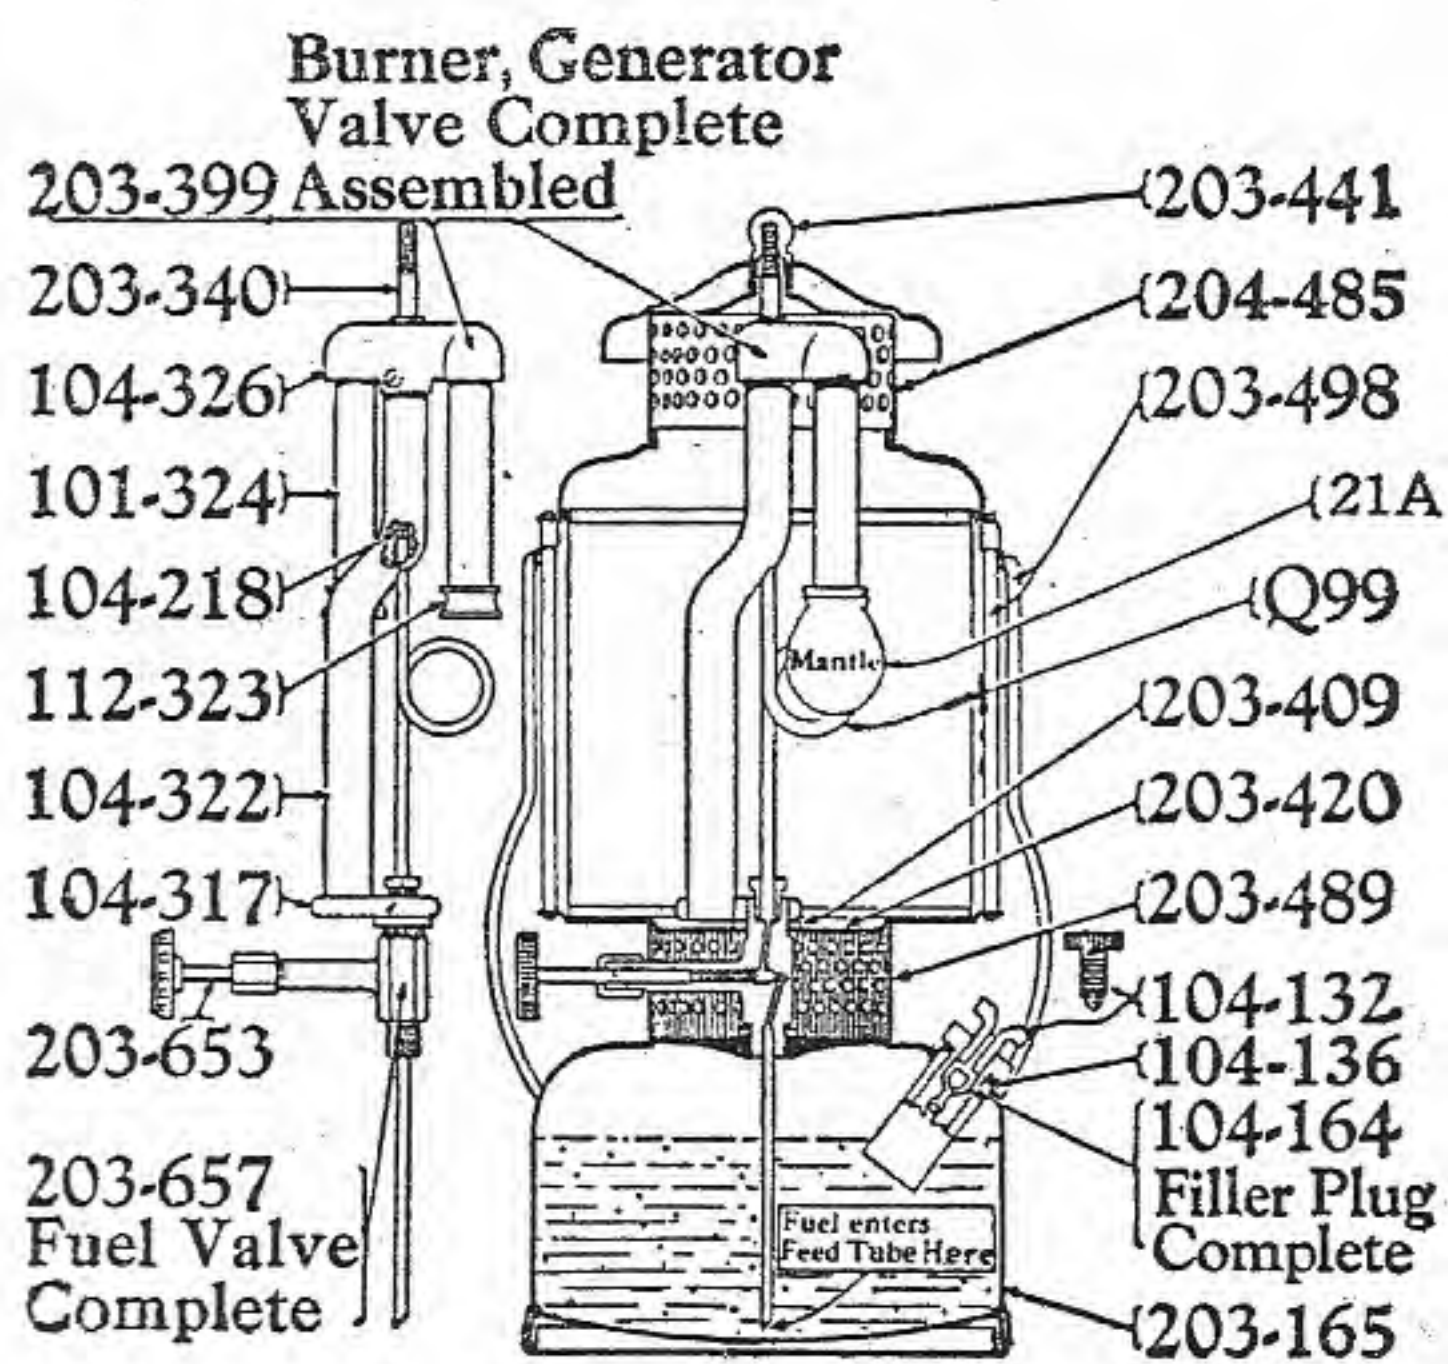

Match-Generating QUICK-LITE LANTERN

Model No. L327
(with separate pump)

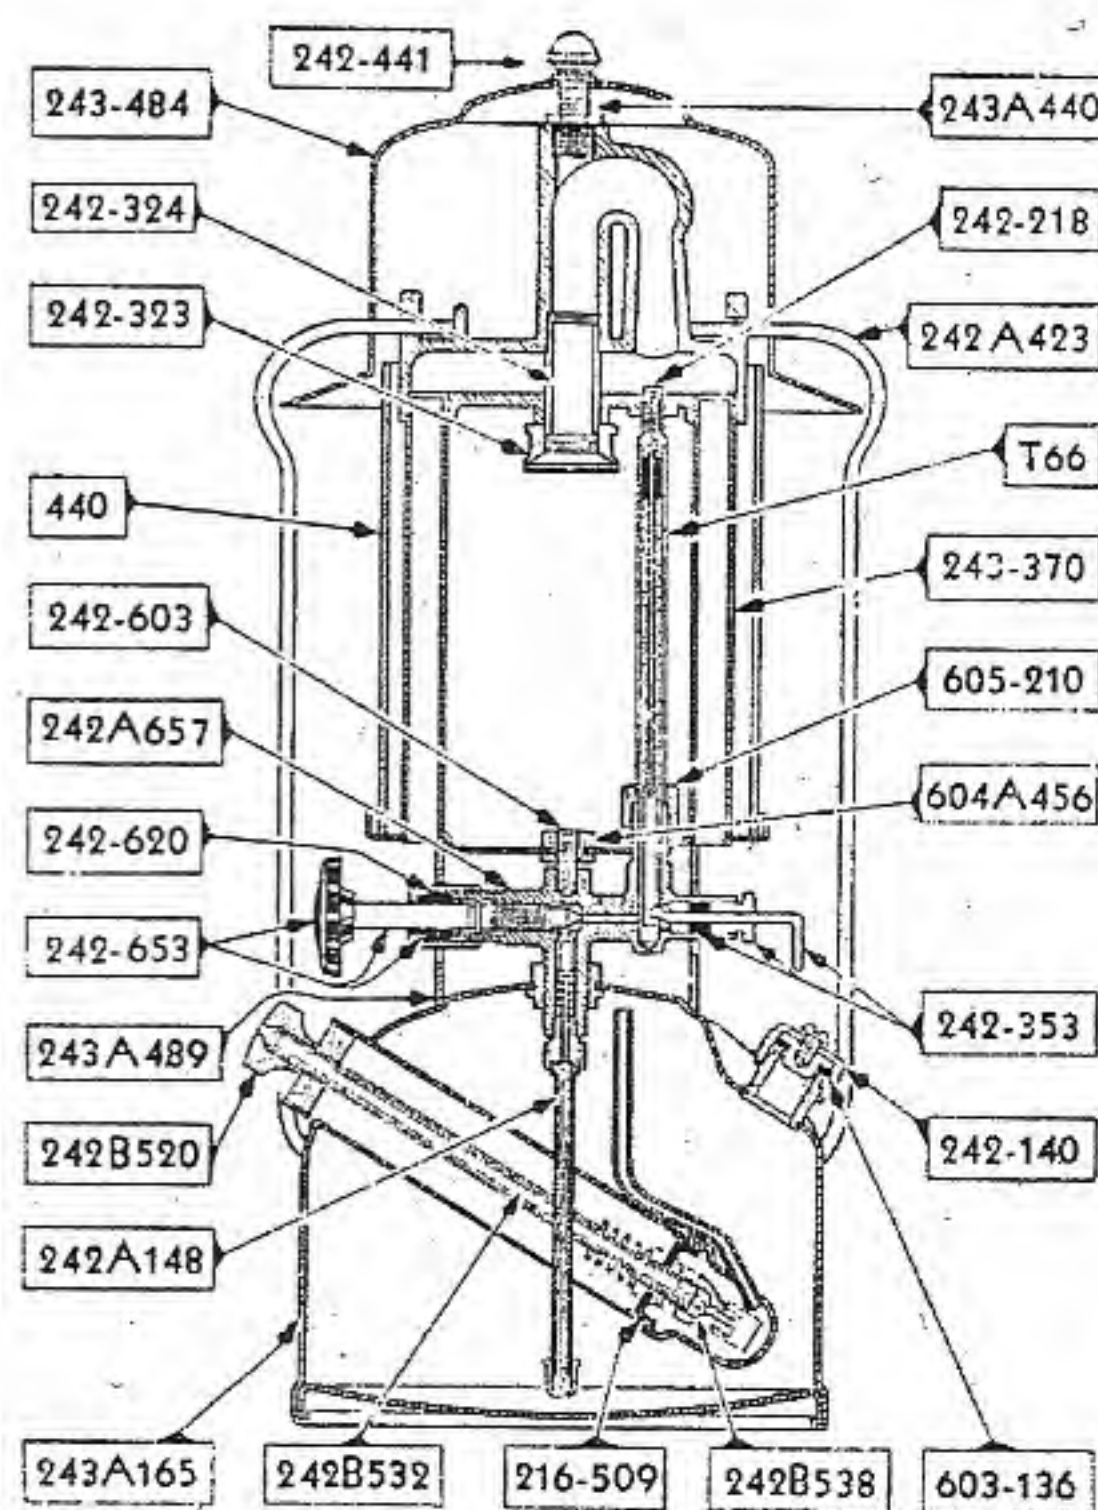


INSTANT-LITE LANTERN


Model No. 243A

Refer to Numerical Listings for Parts, Description and Prices


COLEMAN SELF-HEATING IRON PARTS

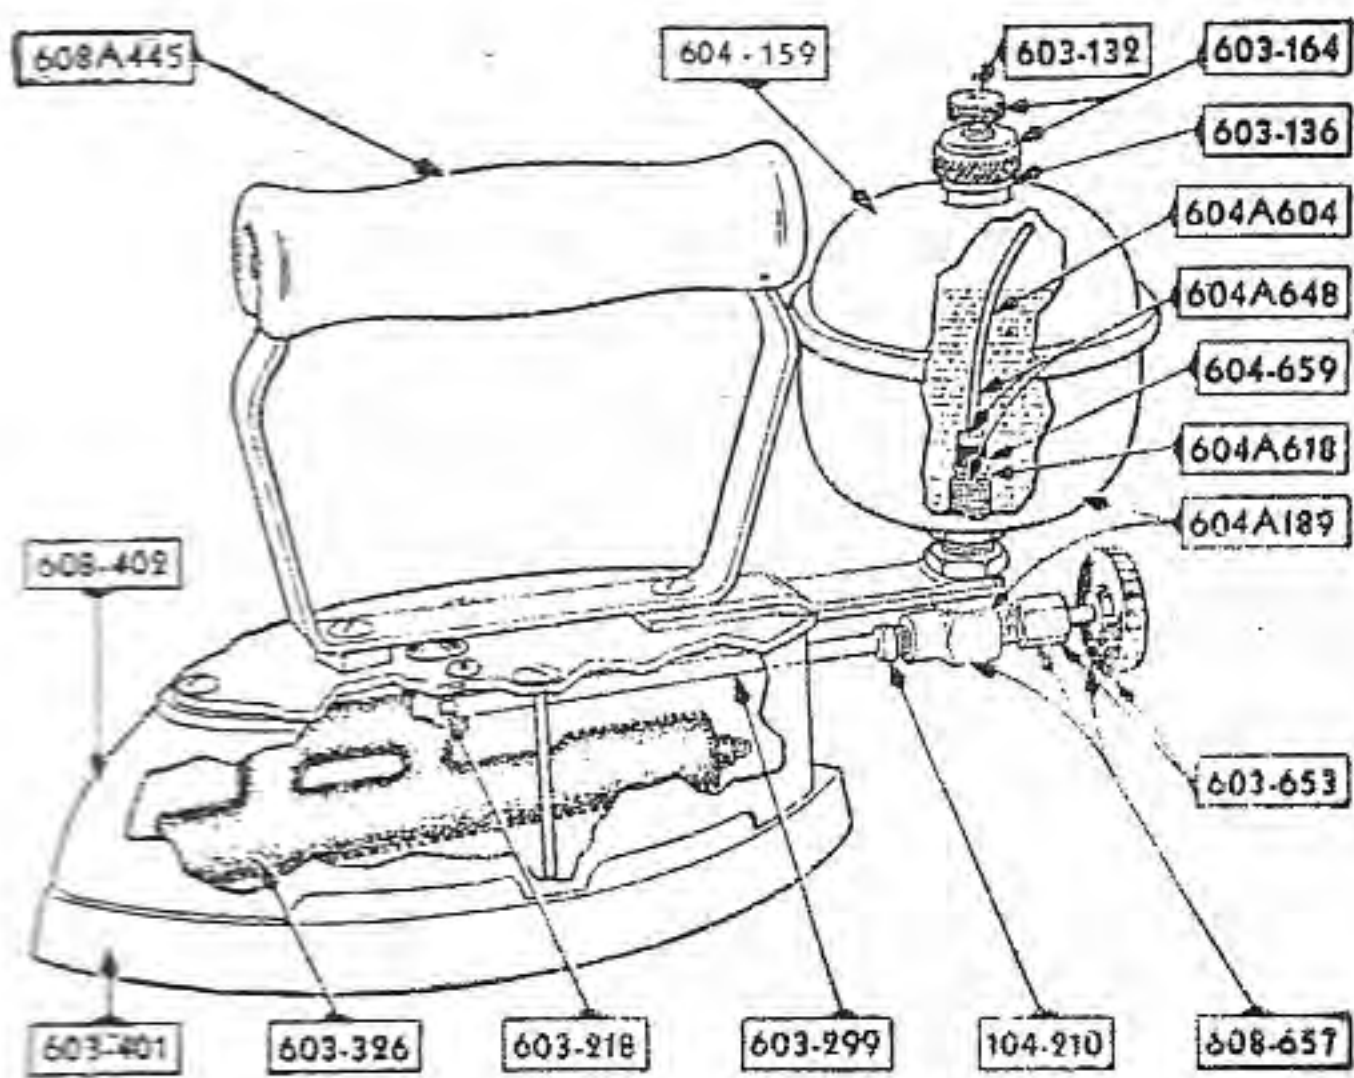

INSTANT-LIGHTING IRON
Model Nos. 8, 8A and 12
Use Generator No. 603-299

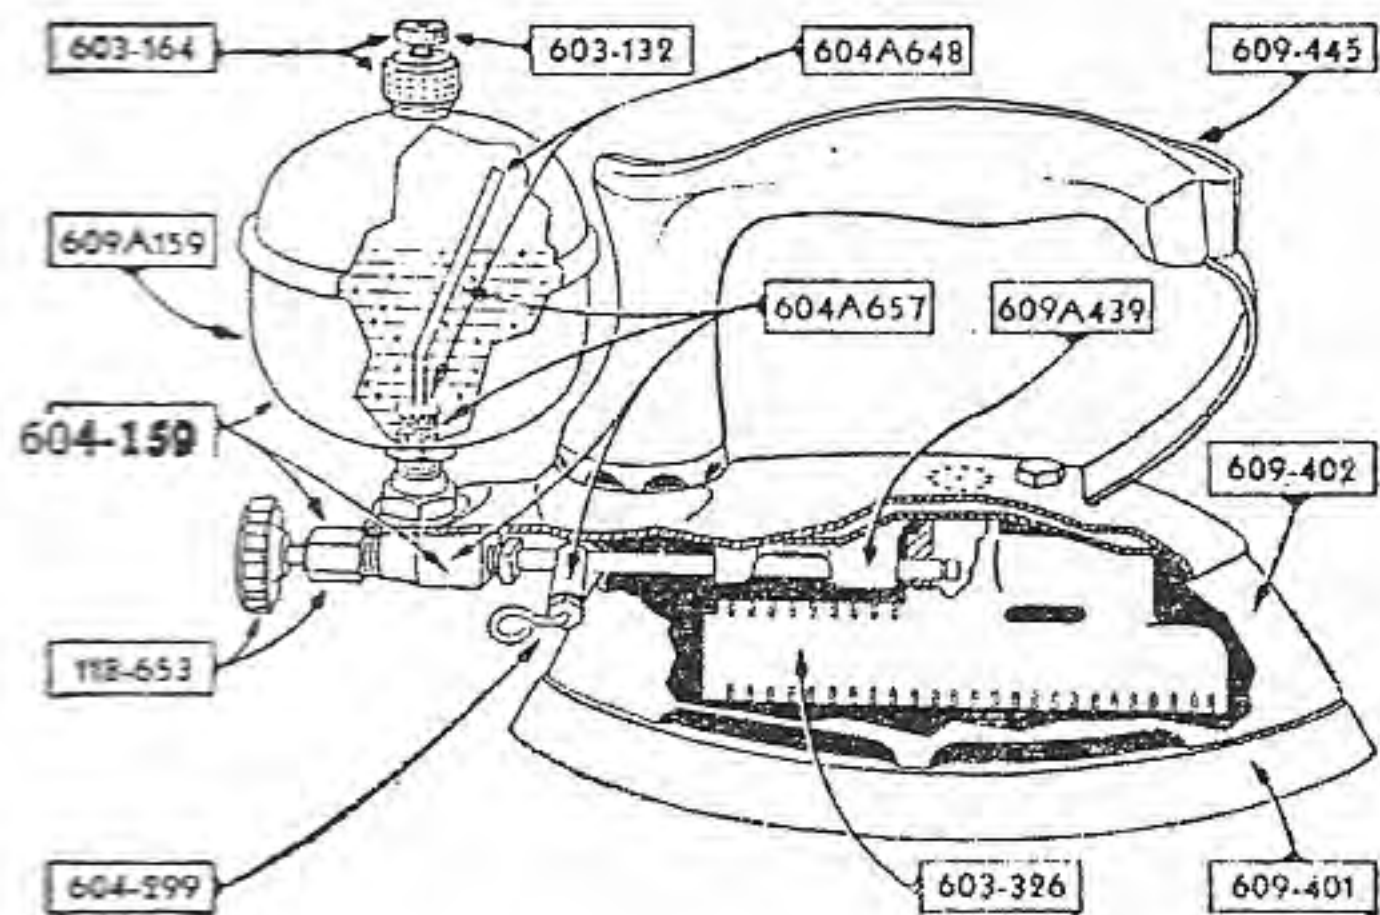

INSTANT-LIGHTING GASOLINE IRON
Model Nos. 609 and 609A
Use Generator No. 604-299

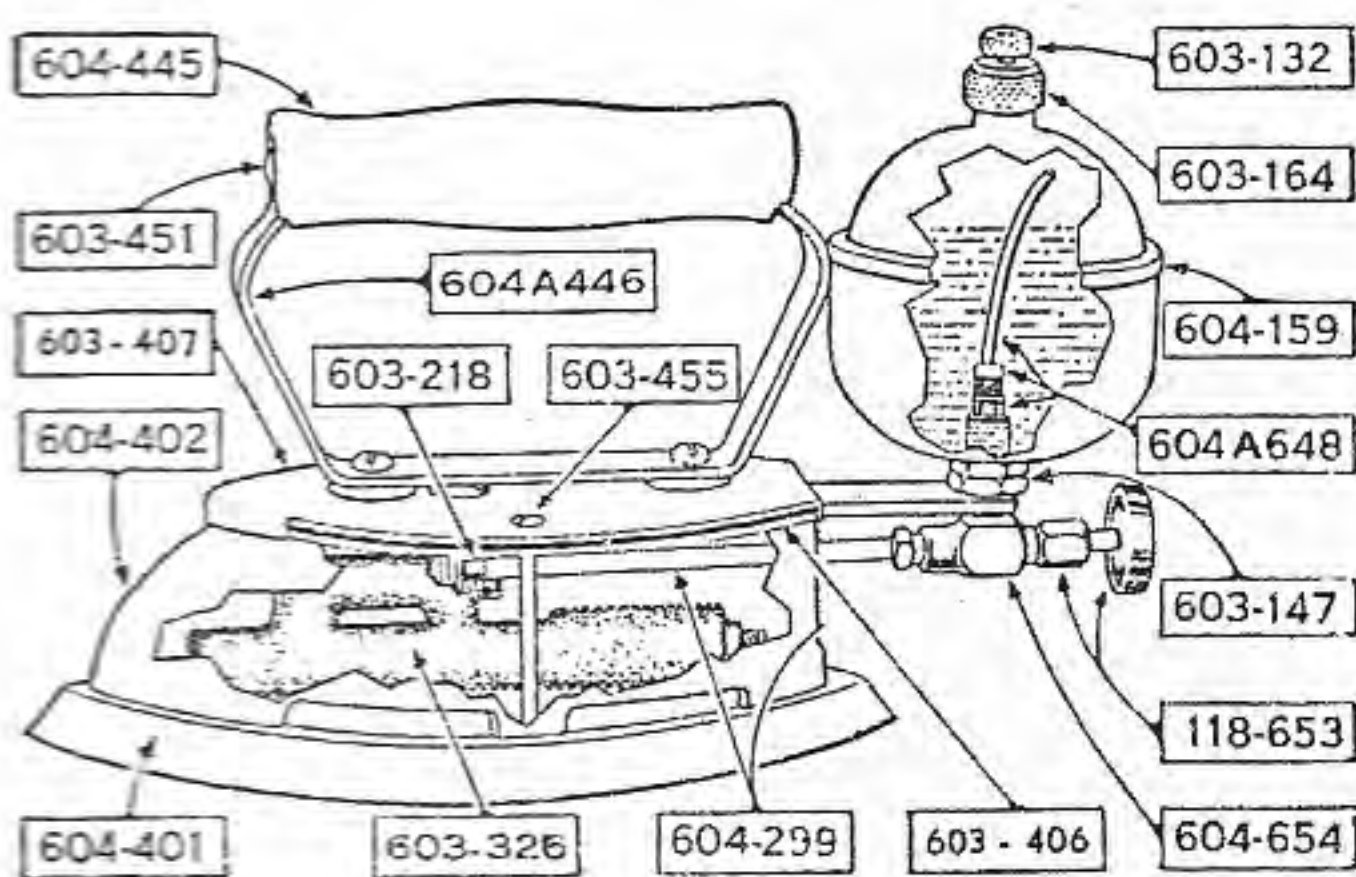


INSTANT-LIGHTING IRON
Model Nos. 4 and 4A
Use Generator No. 604-299

604A189—Fount, Valve and Generator Complete Assembled.
604A657—Generator, Valve, Fuel Intake and Air Wire Complete Assembled.

Order by Number	Part Name	Net Retail Price
104-210	Jamb Nut. Model Nos. 4, 8, 8A.....	\$.03
118-653	Valve Stem Complete. Model Nos. 609, 609A.....	.45
216-509	Pump Leather. All Models.....	.06
216-620	Valve Stem Packing. All Models.....	.03
362-950	Wrench. All Models.....	.21
410-585	Pump. All Models.....	.75
603-132	Filler Plug Air Stem. All Models.....	.27
603-136	Filler Plug Gasket. All Models.....	.03
603-139	Filler Plug Core & Gasket. All Models.....	.27
603-147	Lock Nut. All Models.....	.09
603-164	Filler Plug Complete. All Models.....	.48
603-218	Gas Tip. All Models.....	.09
603-299	Generator, Cleaning Needle, and Holder (Gas Tip Marked "I"). All Models.....	.60
603-326	Burner Manifold & Plug. All Models.....	.99
603-406	Lid Plate, Lower.....	.48
603-407	Lid Plate, Upper.....	.60
603-451	Handle Bolt & Nut. Model Nos. 4, 4A, 8, 8A.....	.09
603-455	Lid Plate to Base Screw. Model Nos. 4, 4A.....	.09
603-653	Generator Valve Stem & Pack Nut (Less Needle and Holder). Model Nos. 4, 4A, 8, 8A.....	.45
604-159	Fount (less Filler Plug). Model Nos. 4, 4A, 8, 8A, 609, 609A.....	1.80
604-299	Roto-Type Generator (Gas Tip Marked "I"). Model Nos. 4A, 609, 609A.....	.70
604-401	Base. Model No. 4A.....	1.65
604-402	Body (Blue Porcelain). Model Nos. 4, 4A.....	1.20
604-440	Stand. Model Nos. 4, 8, 8A.....	.33
604-445	Iron Handle. Model Nos. 4, 4A.....	.33
604-654	Valve Body. Model Nos. 4, 4A, 8, 8A, 609A.....	.75
604-920	Fuel Measuring Can. All Models.....	.33
604A189	Fount, Valve & Generator. Model Nos. 4, 4A, 8, 8A, 609, 609A.....	4.05
604A446	Handle Bracket. Model Nos. 4, 4A, 609.....	.27
604A604	Air Wire. Model Nos. 4, 4A, 8, 8A.....	.09
604A618	Fuel Intake (Marked "AY"). Model Nos. 4A, 8, 8A....	.15
604A648	Fuel Intake and Air Wire (Fuel Intake Marked "AY") Model Nos. 4, 4A, 8, 8A, 609A.....	.42
	SUPPLY 609-648 on 609.....	.42
604A657	Generator, Valve, Fuel Tip and Air Wire Complete Model Nos. 4, 4A, 609A.....	1.95
	SUPPLY 609-657 on 609.....	1.95
608-402	Body Casting. Model 8, 8A.....	.66
608-451	Lid Plate to Base Screw. Model Nos. 8, 8A.....	.06
608A445	Handle. Model Nos. 8, 8A.....	.33
609-401	Base. Model Nos. 609, 609A—Obsolete—Supply 604-401	
609-402	Body (Porcelain). Model Nos. 609, 609A.....	.99
609-444	Stand. Model Nos. 604A, 609, 609A.....	.42
609-445	Handle. Model Nos. 609, 609A.....	1.20
609-659	Fuel Intake Protector & Screen. Model Nos. 4, 4A, 8, 8A, 609A.....	.21
609A159	Fount (less Filler Plug)—Discontinued. SUPPLY 604-159.	
609A189	Fount, Valve & Generator—Discontinued. SUPPLY 604A189.	
609A439	Flame Baffle. Model Nos. 4, 4A, 8A, 609, 609A.....	.15


COLEMAN RADIANT HEATER PARTS ILLUSTRATIONS

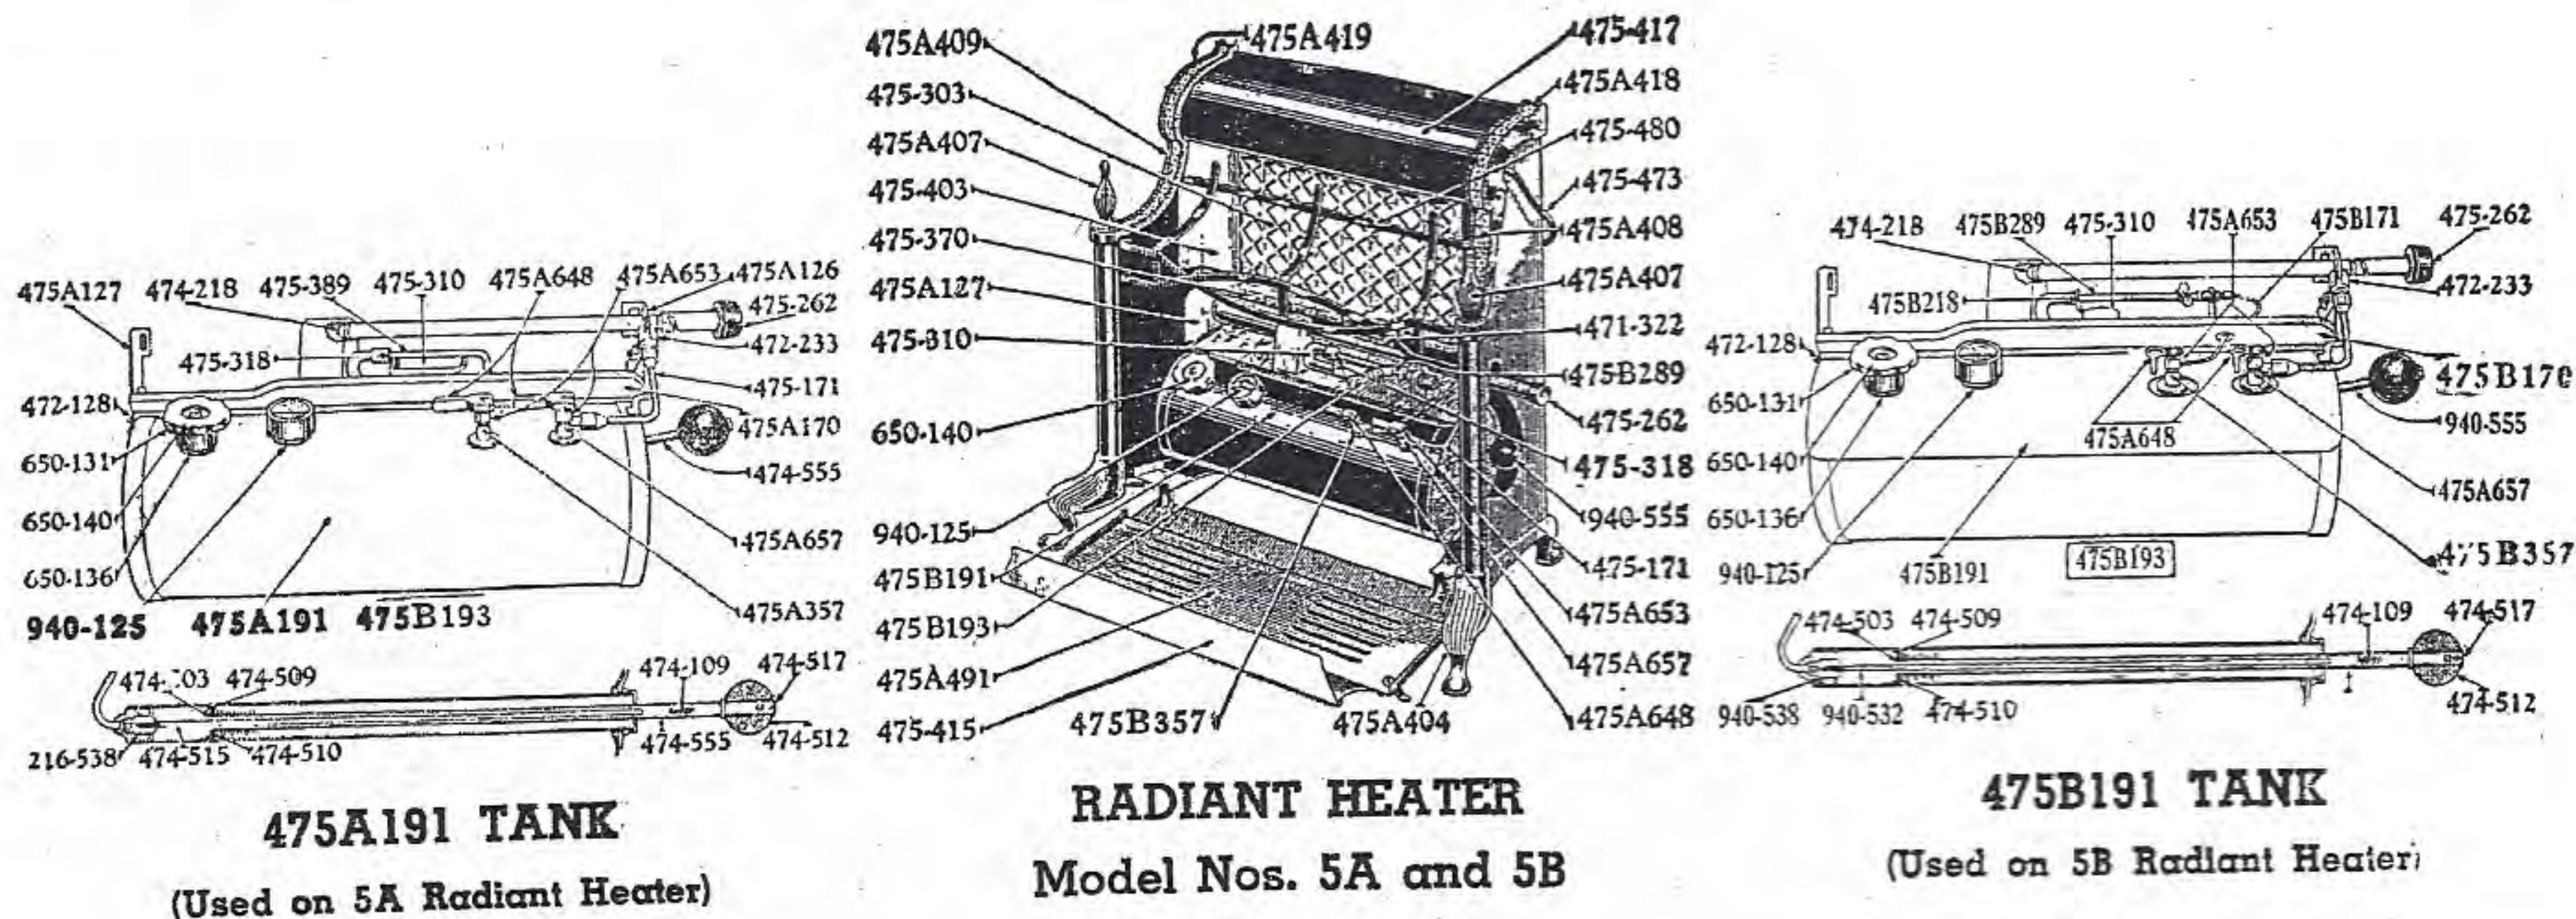

Order by Number	Part Name	Net Retail Price
216-538	Check Valve. Model No. 5A.....	\$.27
324-303	Connection (Preheater Fuel Tube to Preheater Generator). Model 5B.....	.21
471-322	Sub-flame Burner Cap (5/8"). Model Nos. 5A, 5B.....	.09
472-436	Top Tie Rod Nut. Model Nos. 5A, 5B.....	.03
474-109	Air Stem Spring. Model Nos. 5A, 5B.....	.06
474-218	Gas Tip (Marked "4H"). Model Nos. 5A, 5B.....	.18
474-509	Pump Leather. Model Nos. 5A, 5B.....	.09
474-510	Pump Plunger Lower Washer. Model Nos. 5A, 5B.....	.06
474-512	Pump Handle. Model Nos. 5A, 5B.....	.15
474-517	Handle Nut. Model Nos. 5A, 5B.....	.09
474-515	Air Stem. Model No. 5A.....	.42
474-555	Pump Plunger Complete (Less Air Stem). Model No. 5A.	1.65
475-171	Fuel Tube (33/8" Long). Model Nos. 5A, 5B.....	.39
475-262	Thermo-Safety Generator (Gas Tip Marked "4H"). Model Nos. 5A, 5B.....	4.80
475-303	Radiant. Model Nos. 5A, 5B.....	.42
475-310	Preheater Pan. Model Nos. 5A, 5B.....	.60
475-318	Preheater Gas Tip (Marked "S"). Model Nos. 5A, 5B..	.09
475-323	Main Burner Cap (7/8"). Model Nos. 5A, 5B.....	.09
475-370	Burner Manifold (With Main and Sub-flame Caps). Model Nos. 5A, 5B.....	4.05
475-389	Preheater Generator (Gas Tip Marked "S"). Model No. 5A	.42
475-415	Door Trim. Model Nos. 5A and 5B.....	.81
475-417	Top (Porcelain). Model Nos. 5A and 5B—Obsolete	
475-473	Bail. Model Nos. 5A and 5B—Obsolete	
475-480	Guard. Model Nos. 5A and 5B.....	1.20


Order by Number	Part Name	Net Retail Price
475A357	Preheater Tank Valve Complete (Fuel Tip Marked "E"). Model No. 5A.....	\$1.65
475A170	Drip Pan. Model No. 5A.....	.99
475A404	Foot (Right). Model Nos. 5A and 5B.....	.99
475A405	Foot (Left). Model Nos. 5A and 5B.....	.99
475A407	Post Top. Model Nos. 5A and 5B.....	.42
475A408	Frame Trim (Right). Model Nos. 5A and 5B.....	.48
475A409	Frame Trim (Left). Model Nos. 5A and 5B.....	.48
475A418	Top Trim (Right). Model Nos. 5A and 5B.....	.48
475A419	Top Trim (Left). Model Nos. 5A and 5B.....	.48
475A491	Door Complete. Model Nos. 5A and 5B.....	2.70
475A653	Valve Stem (Less Indicator Handle and Screw). Model Nos. 5A and 5B.....	.42
475A657	Tank Fuel Valve Complete. Model Nos. 5A and 5B....	1.20
475B171	Preheater Fuel Tube (5 1/2" Long). Model No. 5B.....	.39
475B193	Tank, Drip Pan and Generator Complete Assembled. Model Nos. 5A and 5B—Obsolete—Supply 475B191	
475B289	Preheater Generator (Rotary Type) (Gas Tip Marked "S"). Model No. 5B.....	.70
475B357	Preheater Tank Valve Complete. (Fuel Tip Marked "E"). Model No. 5B.....	1.20
650-136	Filler Plug Gasket. Model Nos. 5A and 5B.....	.06
650-140	Filler Plug Complete. Model Nos. 5A and 5B.....	.99
605-950	Wrench. Model Nos. 5A and 5B.....	.21
740-125	Combination Fuel and Air Gauge. Model Nos. 5A and 5B	3.95
940-532	Air Stem. Model No. 5B.....	.60
940-538	Check Valve. Model No. 5B.....	.60
940-555	Pump Plunger Complete (Less Air Stem). Model No. 5B (Thermo-Safety Generator No. 475-262 used on Model Nos. 5A and 5B Heaters require special tools for servicing. Return to factory to be reconditioned.)	1.65

COLEMAN RADIANT HEATER PARTS ILLUSTRATIONS

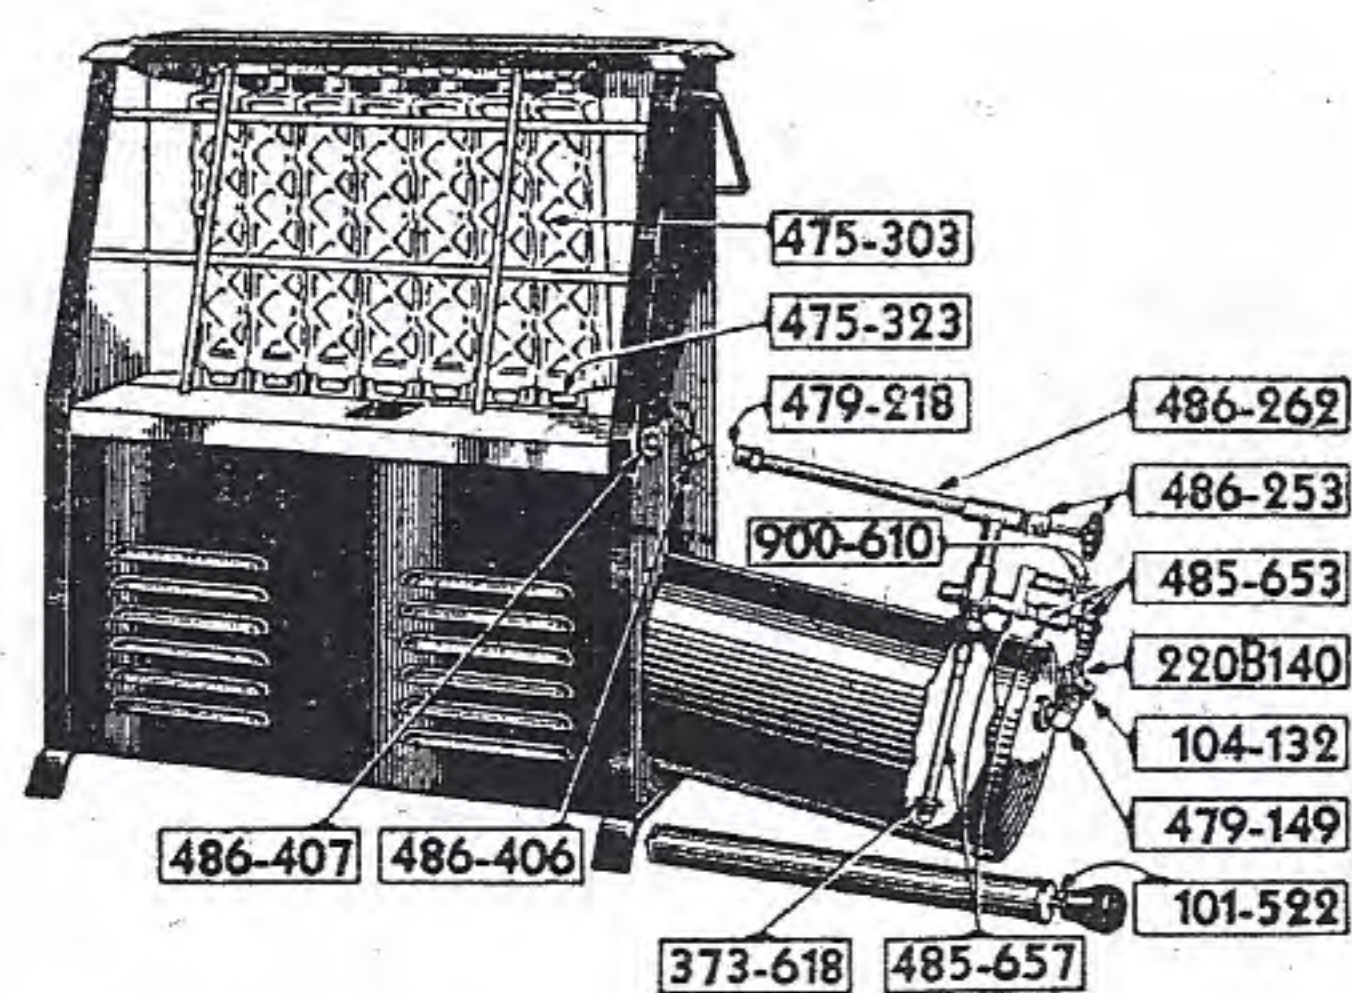


INSTANT LIGHTING RADIANT HEATER
Model No. 16

Order by Number	Part Name	Net Retail Price
101-522	Pump	\$1.05
104-132	Air Stem	.27
118B136	Filler Plug Gasket.....	.03
216-509	Pump Leather	.06
220B140	Filler Plug Complete.....	.69
373-618	Fuel Tip (Marked "AD").....	.15
475-303	Radiant	.42
475-323	Main Burner Cap (7/8").....	.09
479-149	Air Valve Complete.....	.60
479-218	Generator Gas Tip (Marked "W").....	.18
479-219	Generator Filler Coil.....	.21
486-253	Generator Valve Stem Complete.....	.60
479-308	Drain Cap	.09
485-653	Instant-Gas Valve Stem Complete.....	.60
485-657	Instant-Gas Valve Complete.....	2.40
486-191	Tank & Fittings (Less Generator).....	9.90
486-193	Tank, Valve & Generator Assembled.....	11.60
486-212	Generator Tube	.99
486-262	Generator Complete (Gas Tip Marked "W").....	2.70
486-310	Sub-flame Burner Casting.....	.60
486-370	Burner Manifold (With Main Burner Caps).....	3.75
486-406	Valve Catch	.15
486-407	Valve Latch	.15
900-610	Instant-Gas Valve Safety Lock.....	.15

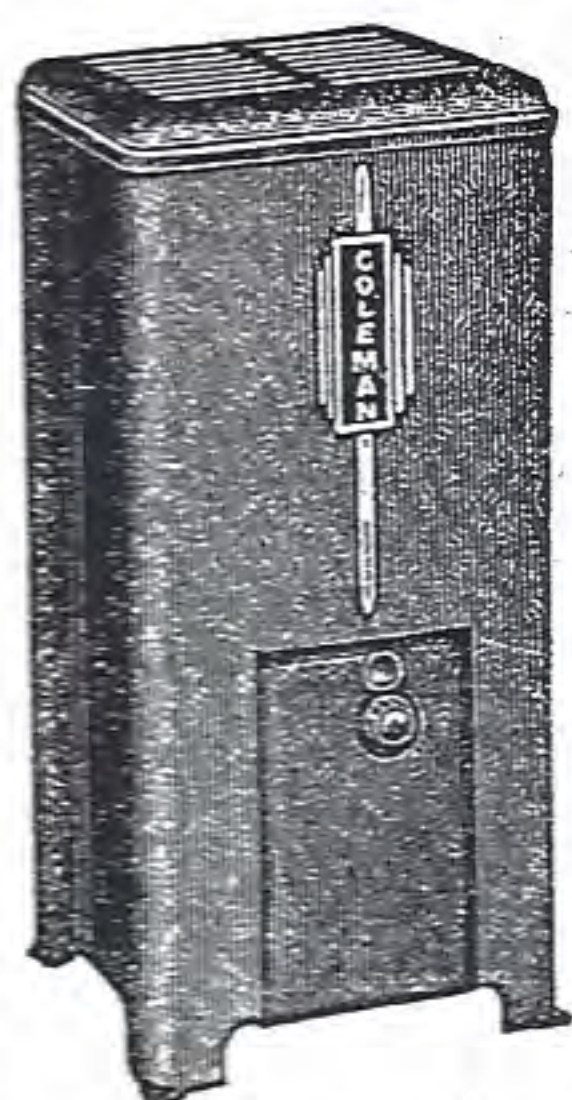

GASOLINE HEATER

Model Nos. 490 and 490A


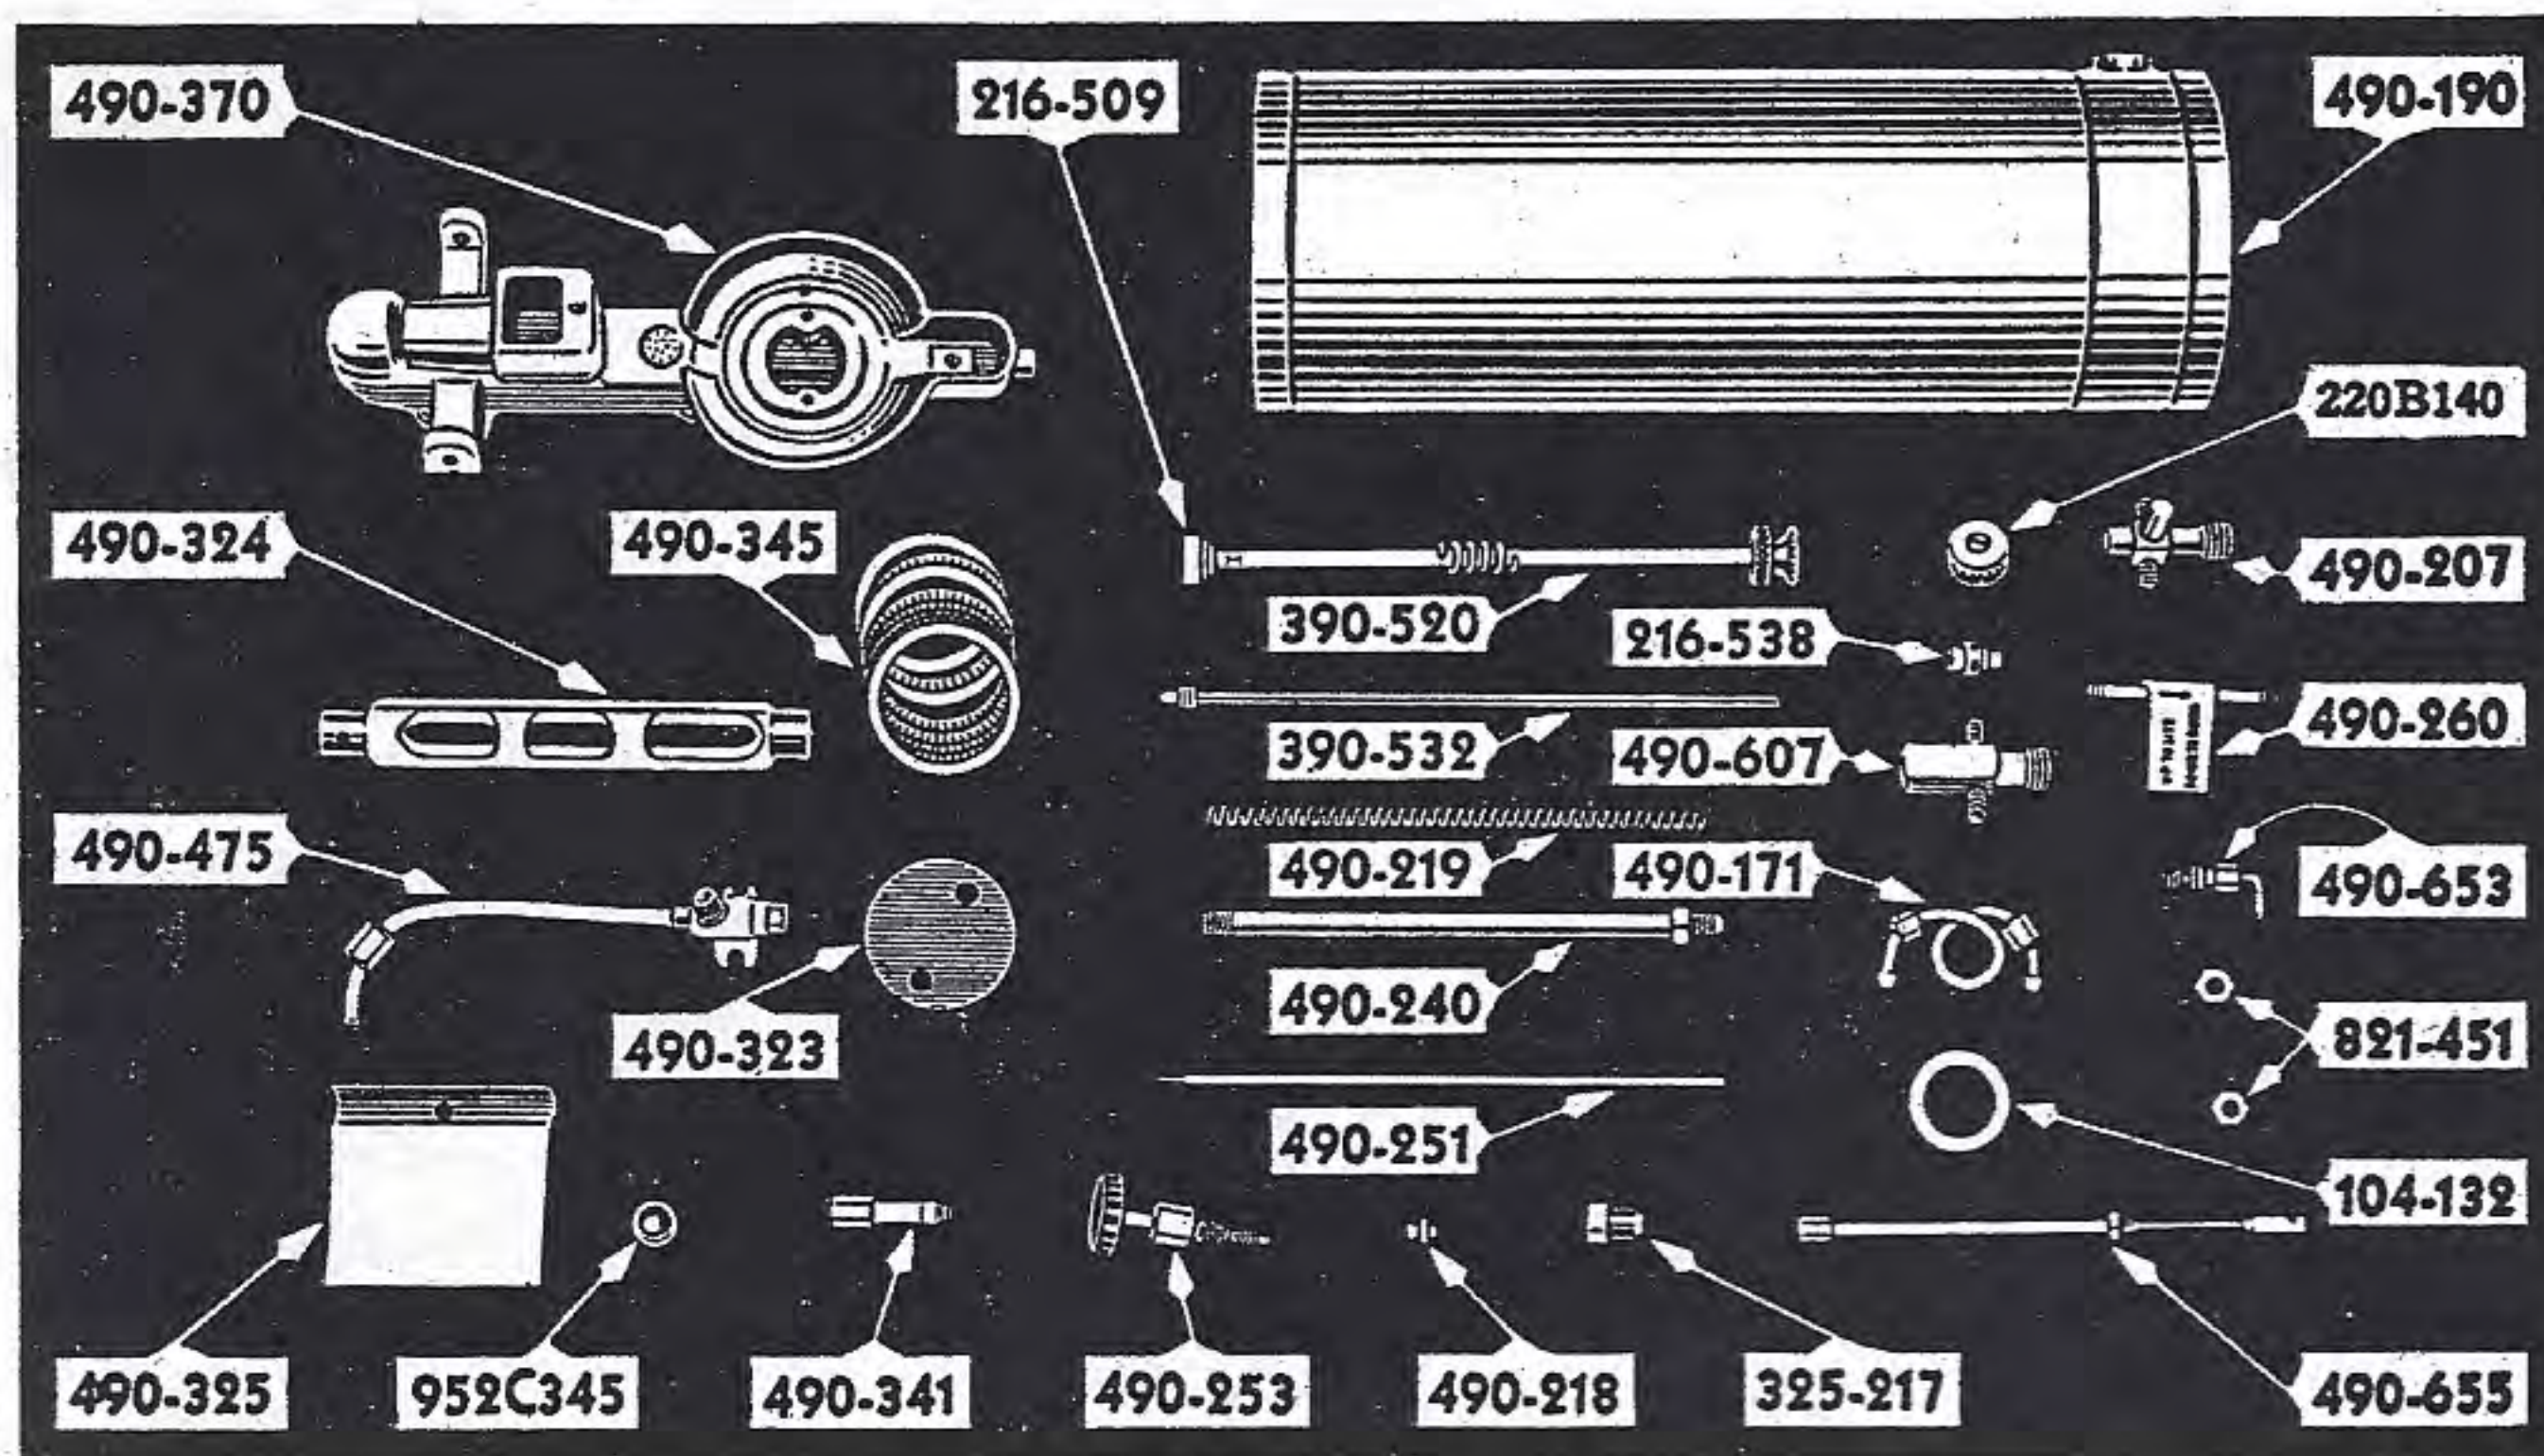


GASOLINE HEATER


Use Generator No. 490-262 on 490 and No. 490A262 on 490A

Refer to Numerical Listings for Parts, Description and Prices


COLEMAN RADIANT HEATER AND BURNER PARTS ILLUSTRATIONS

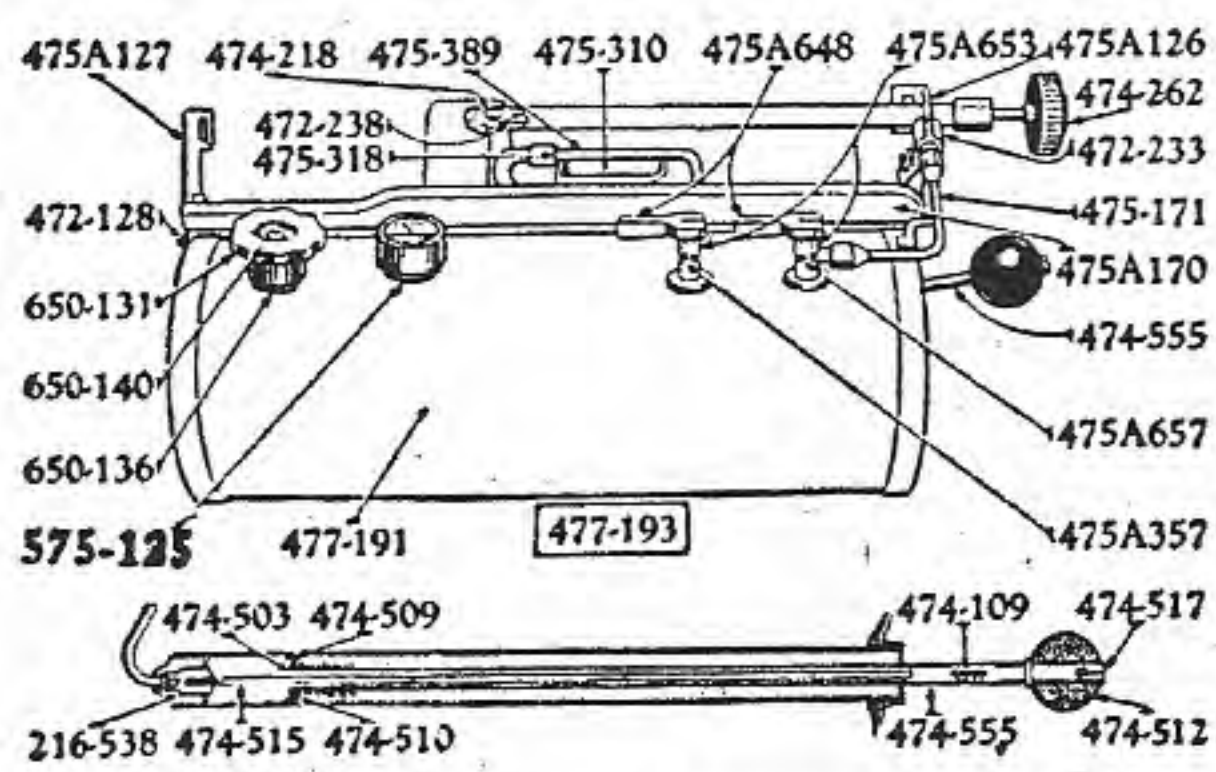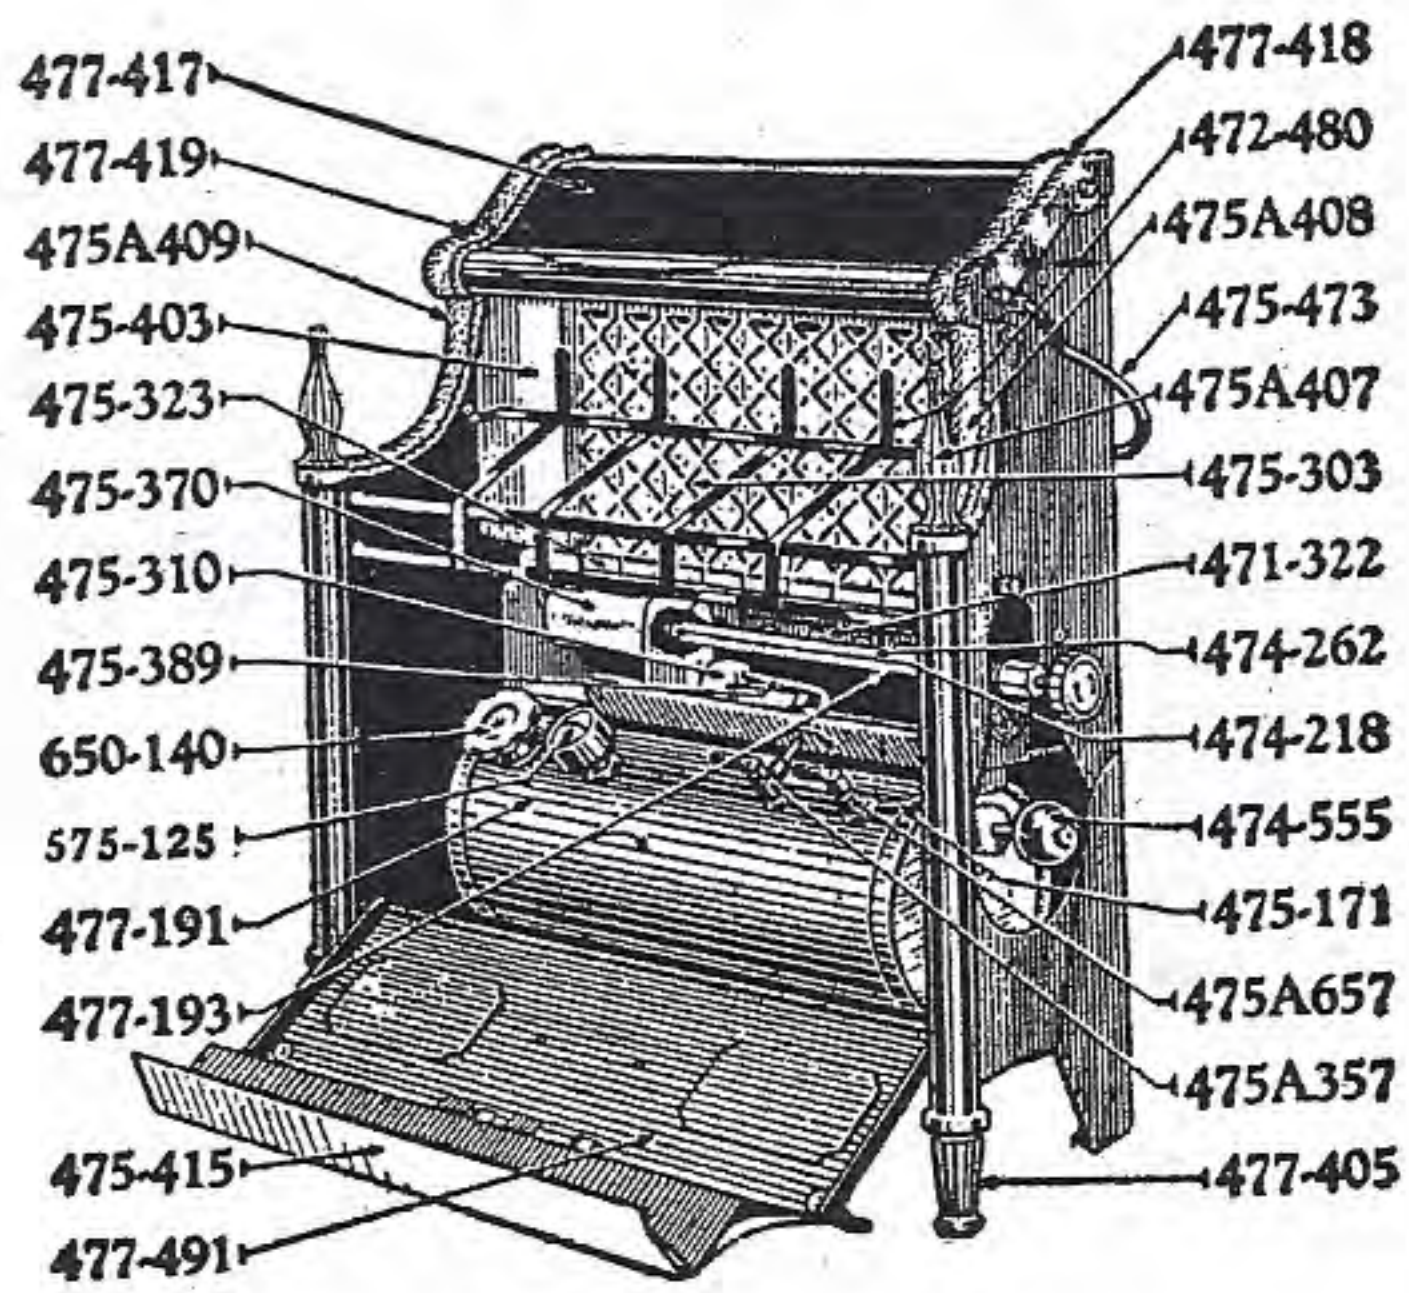


RADIANT HEATER No. 7

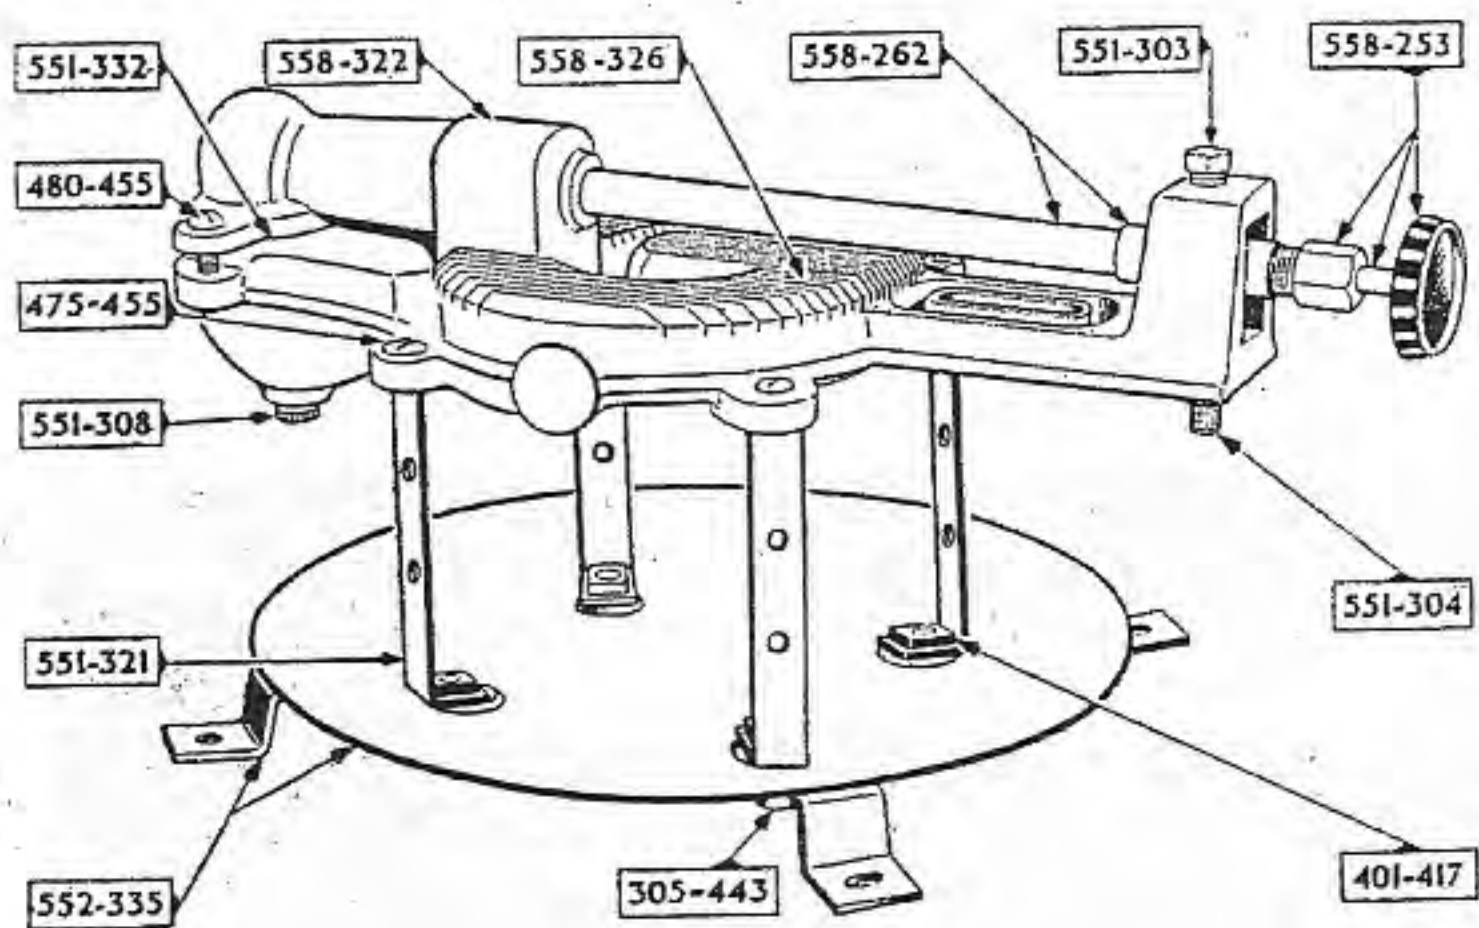


BURNER No. 558

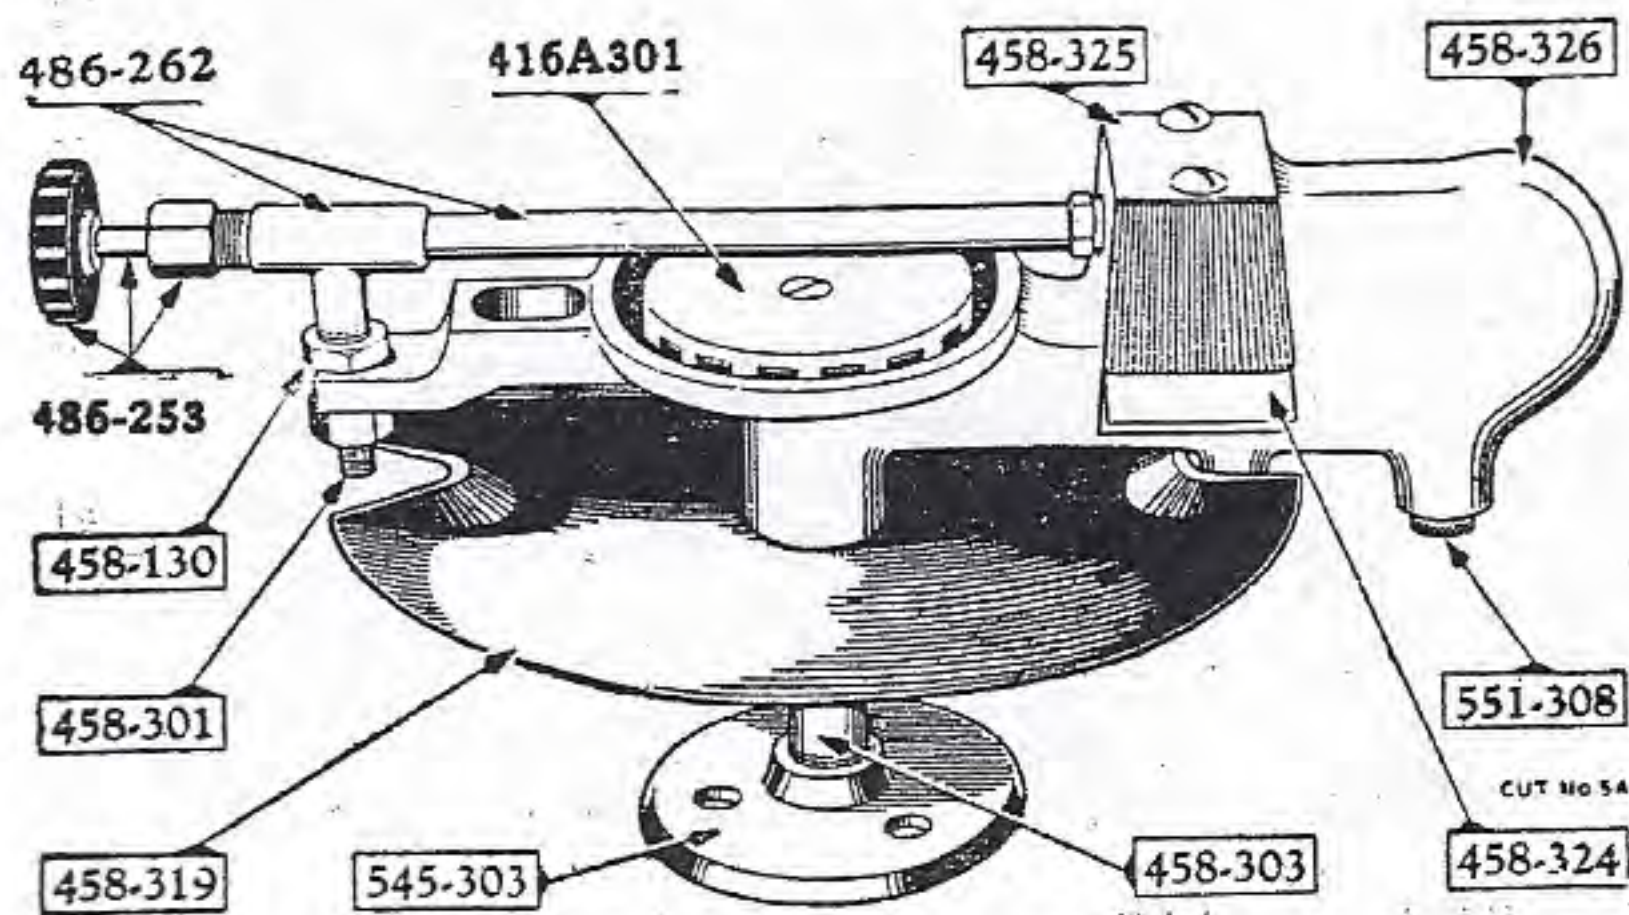


BURNER No. 556

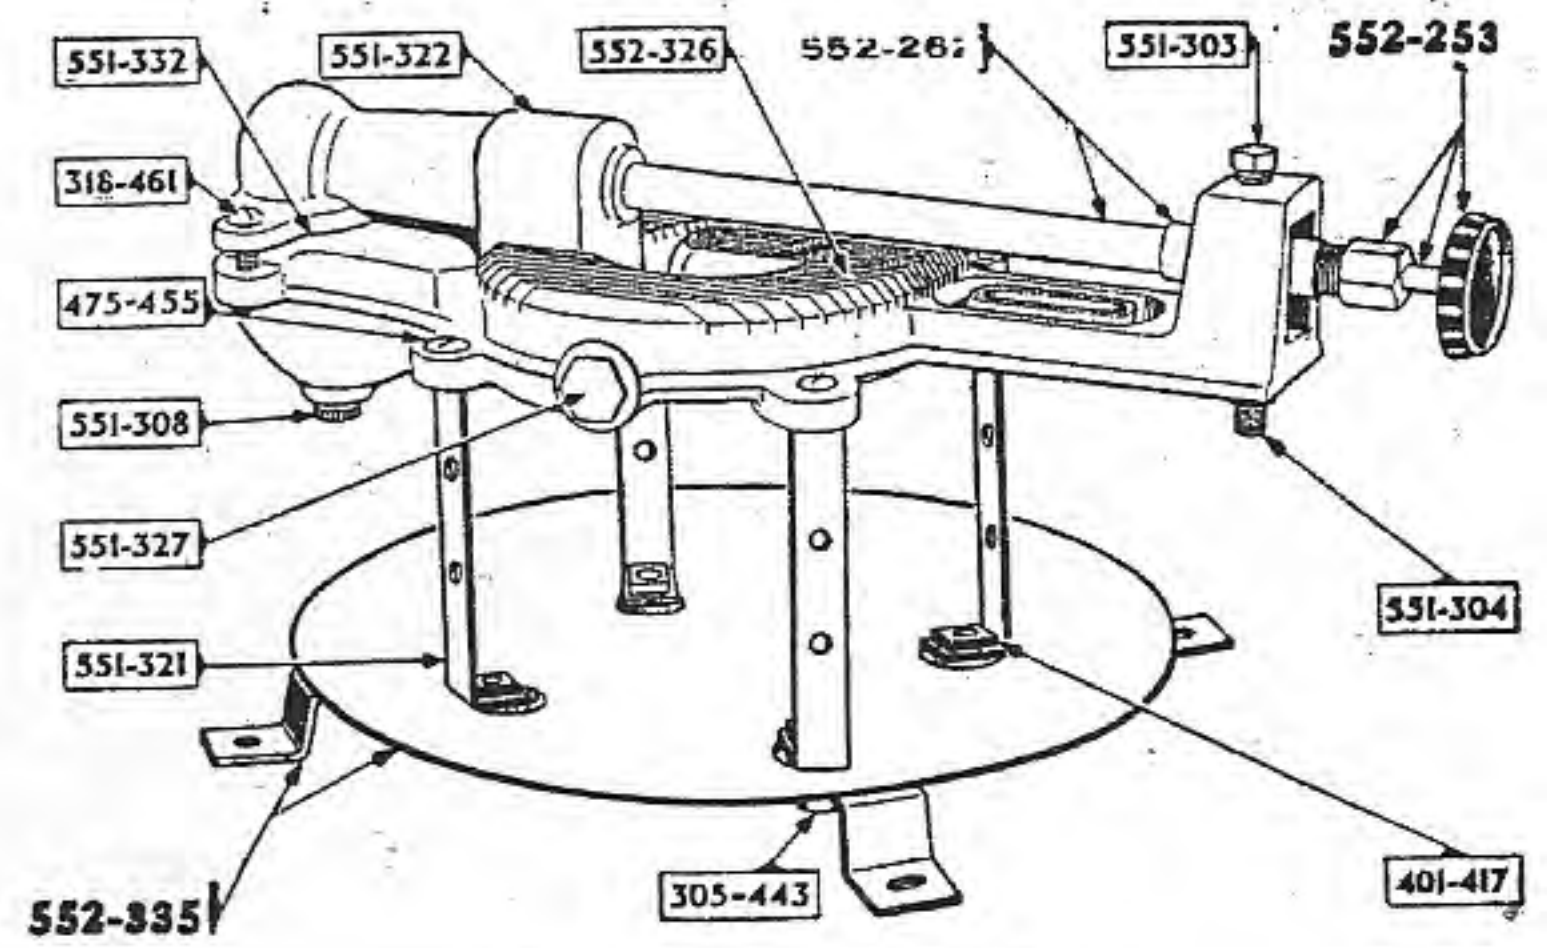


BURNER No. 752

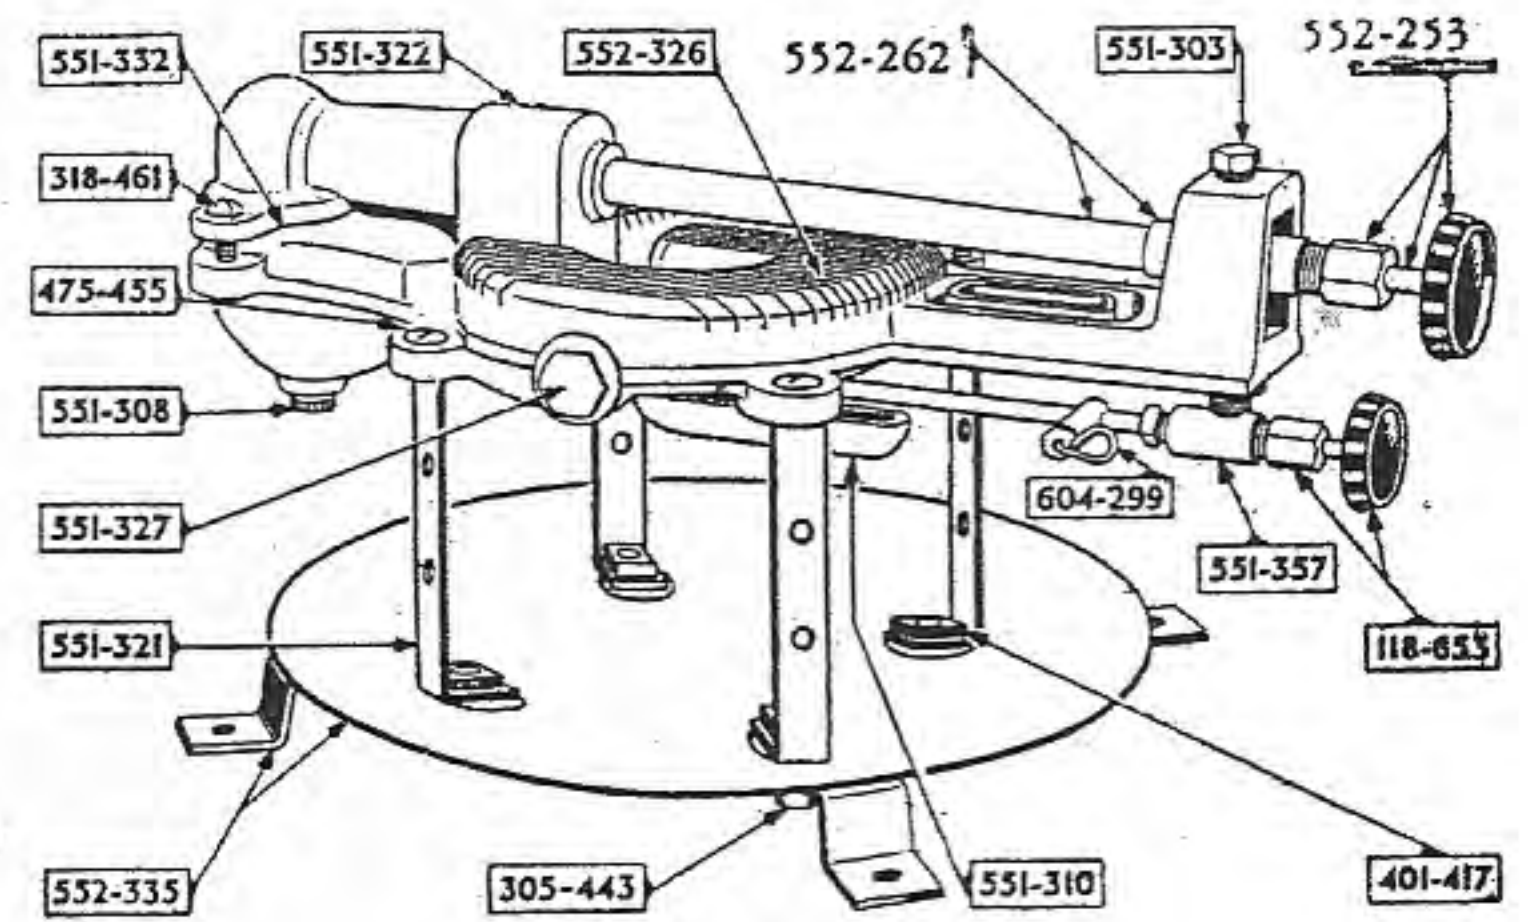

BURNER No. 751

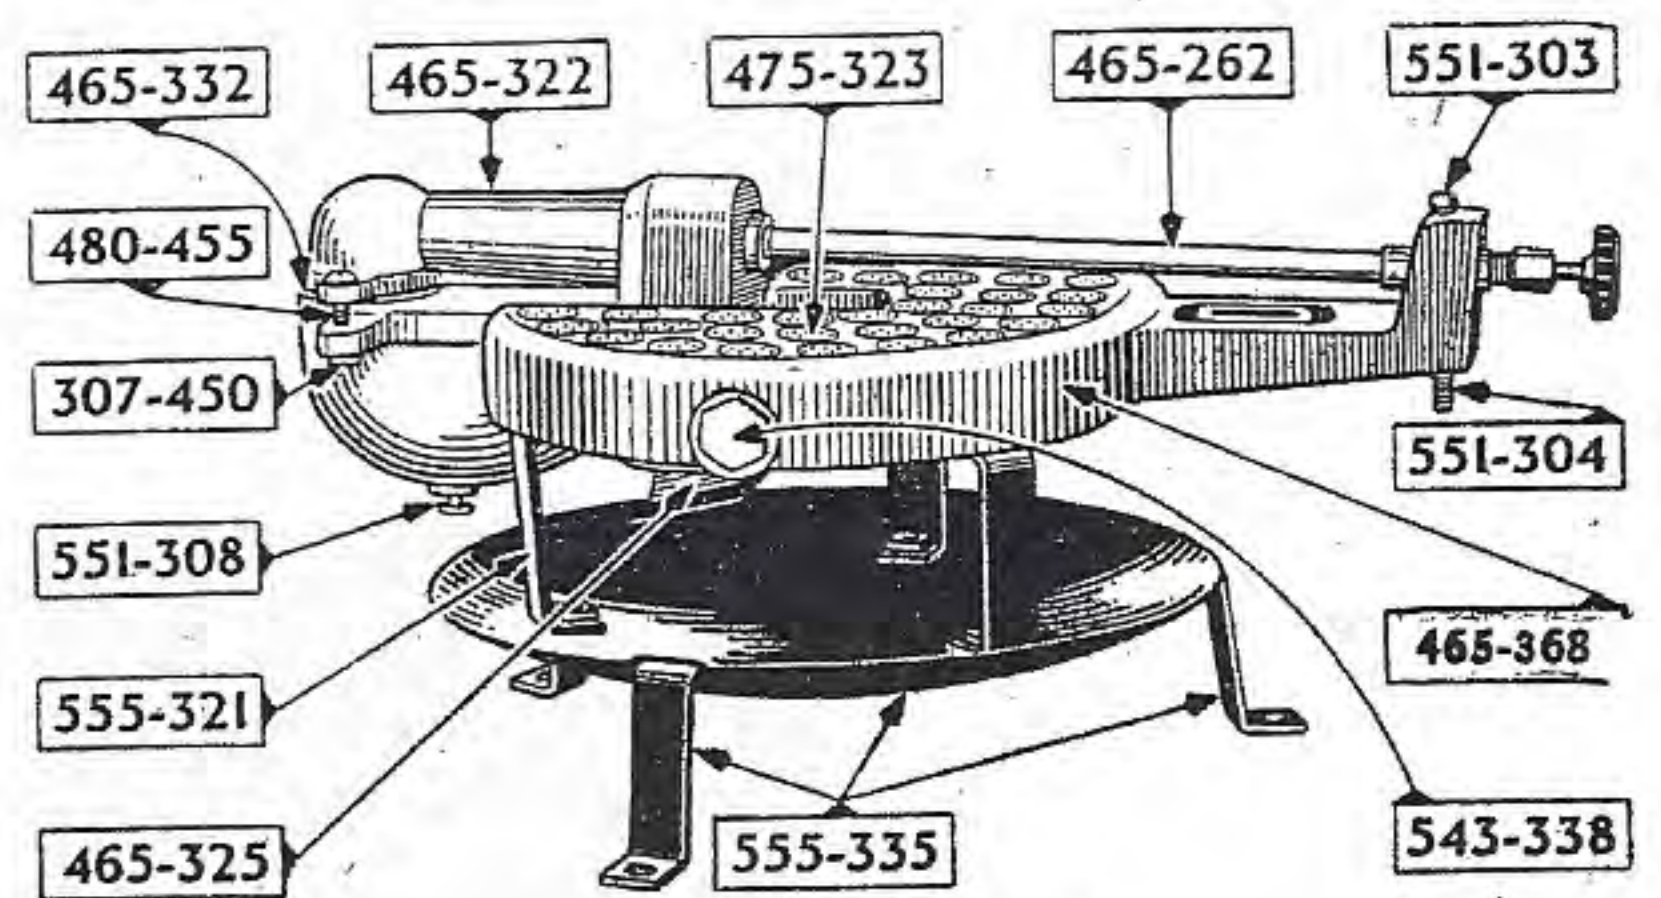


BURNER No. 555

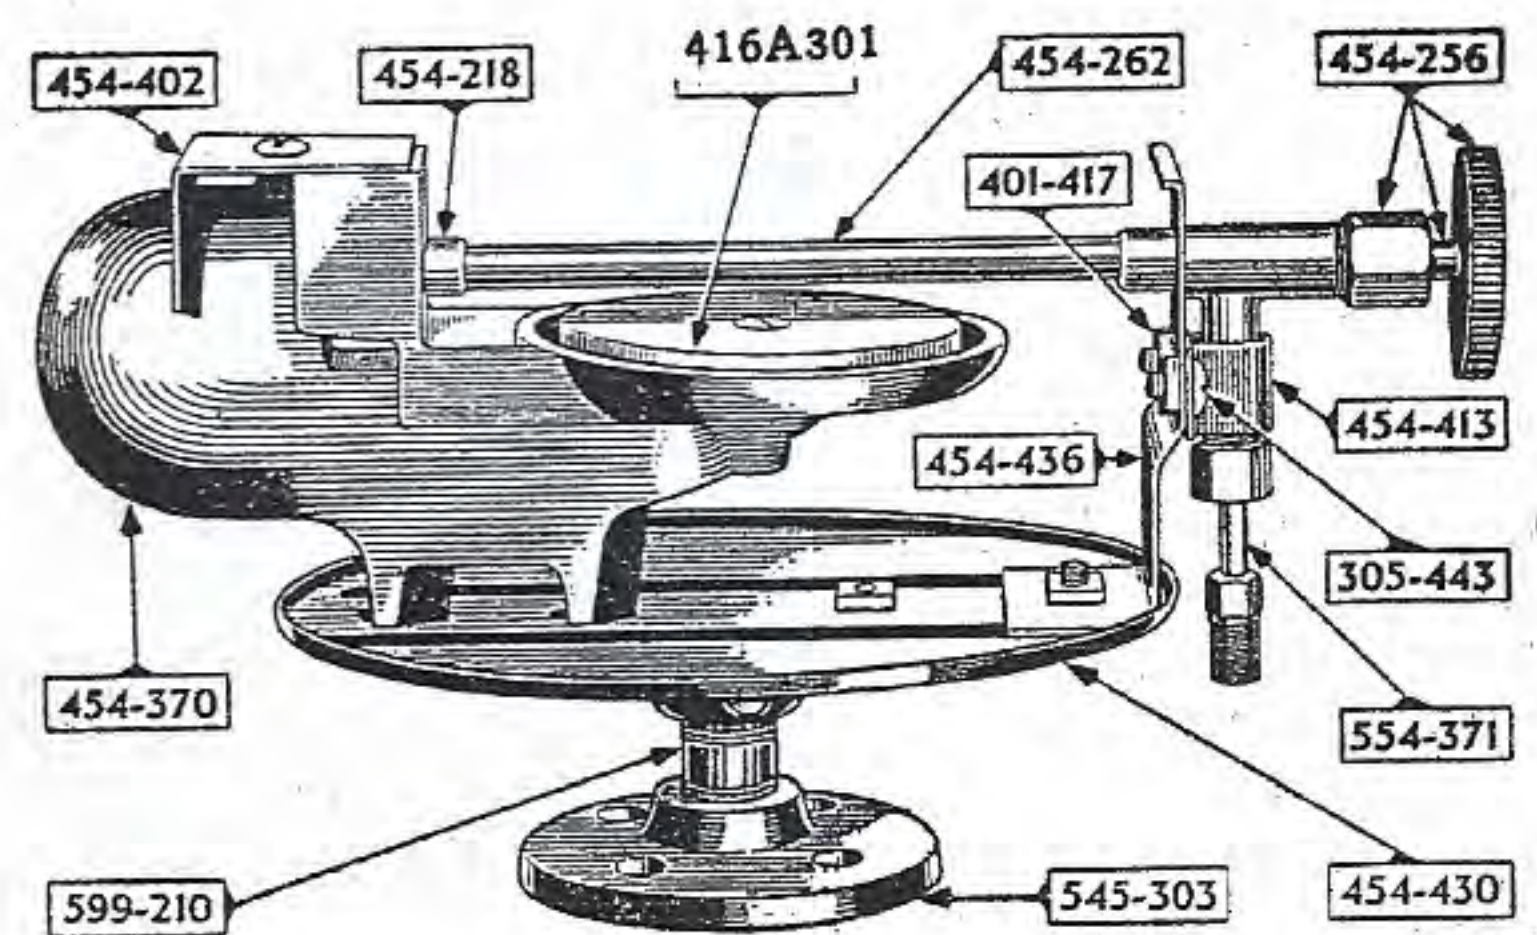

BURNER No. 554


Refer to Numerical Listings for Parts, Description and Prices

BURNER, TANK AND HANDY GAS PLANT PARTS ILLUSTRATIONS

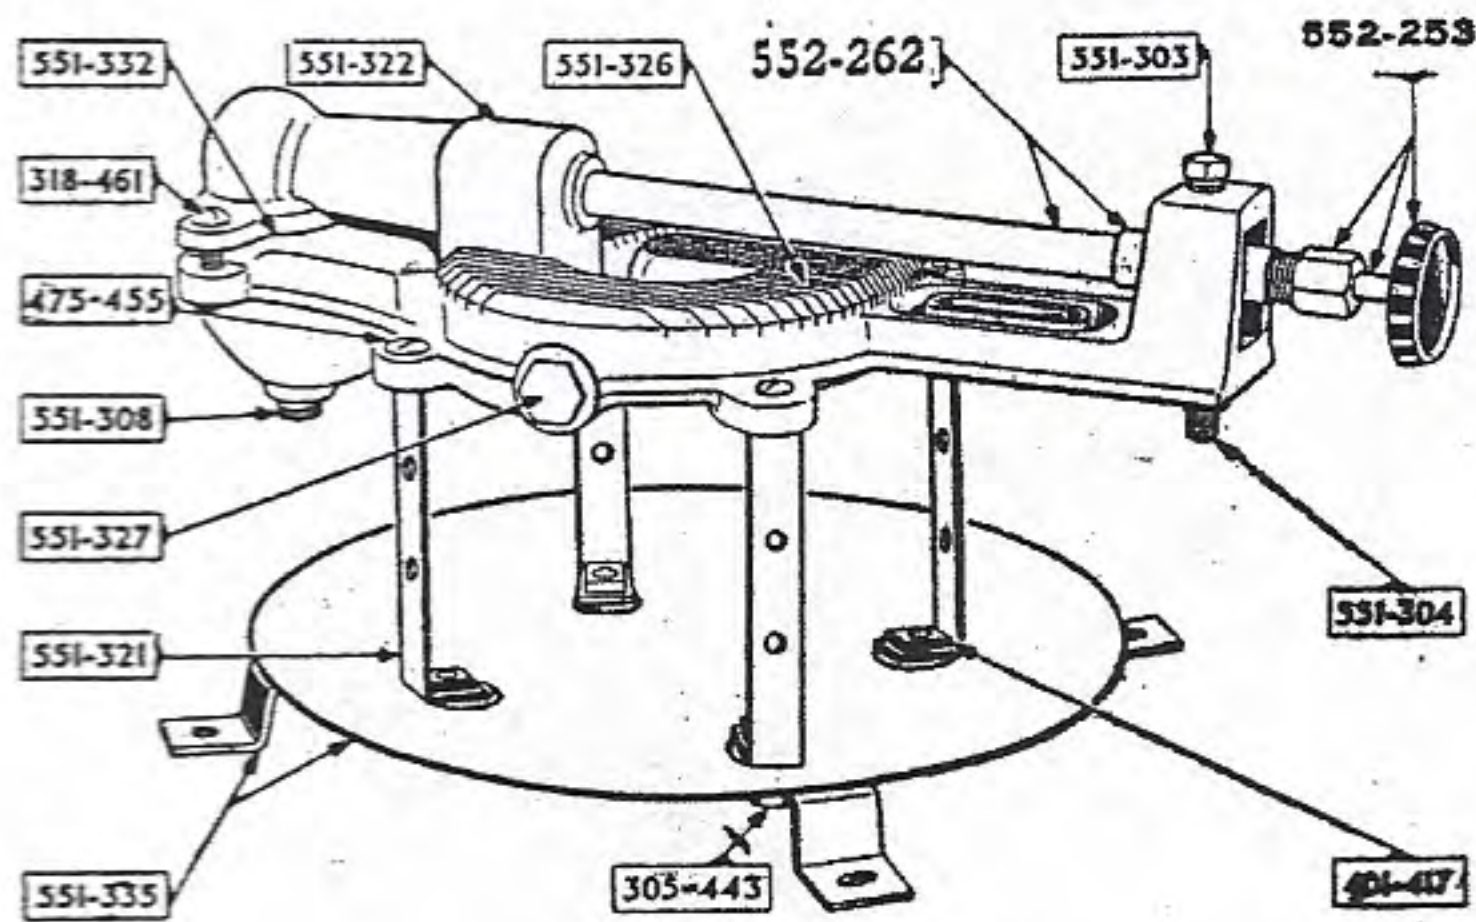


BURNER No. 502

Burner Parts Interchangeable with
463G Water Heater Burner

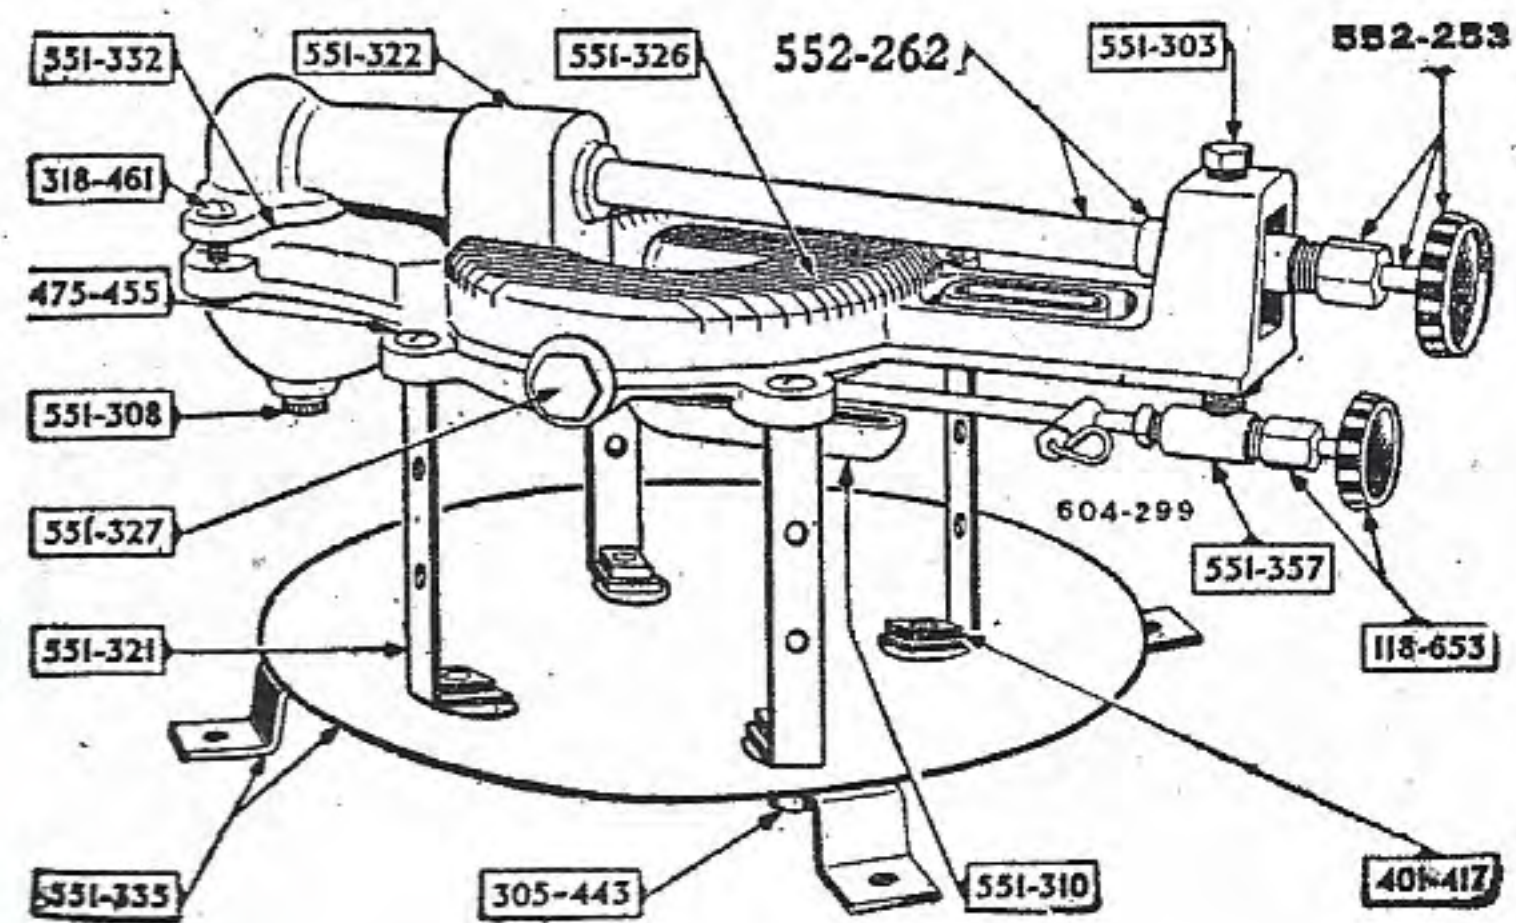

BURNER No. 501

Burner Parts Interchangeable with
463T Water Heater Burner

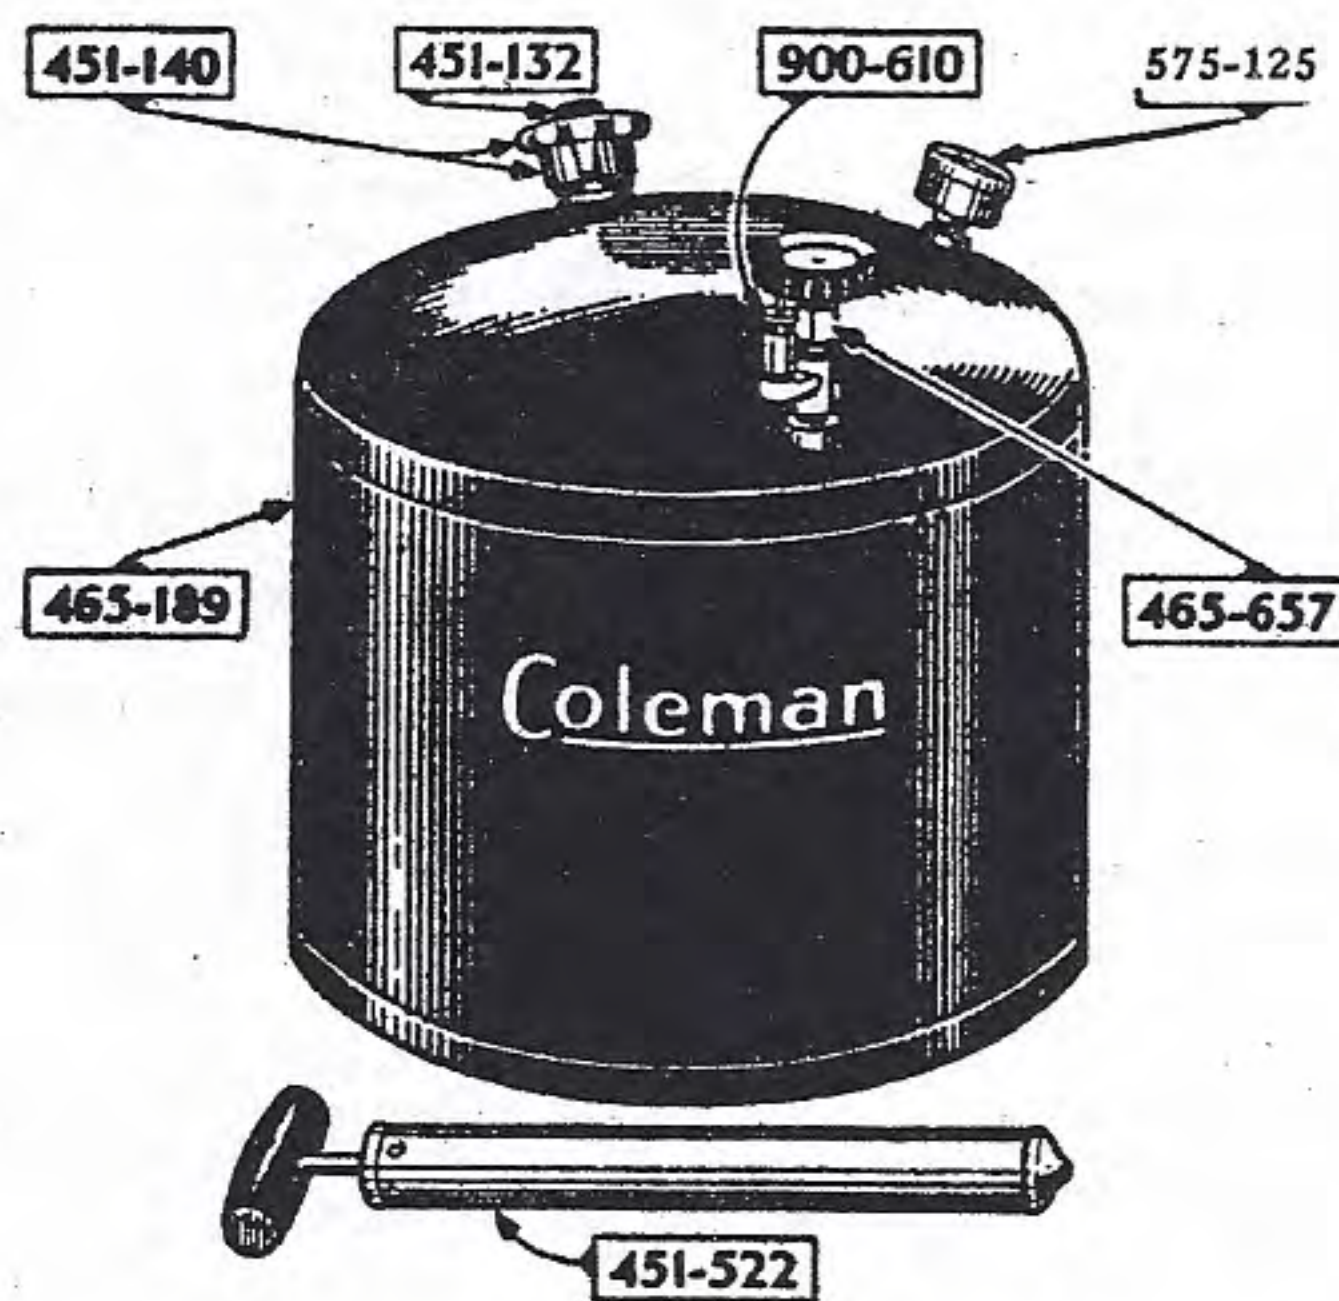


TANK, PUMP AND WIRE
Model No. 465-199

Refer to Numerical Listings for Parts, Description and Prices

BURNER, TANK AND HANDY GAS PLANT PARTS ILLUSTRATIONS




Pump No. 101-522

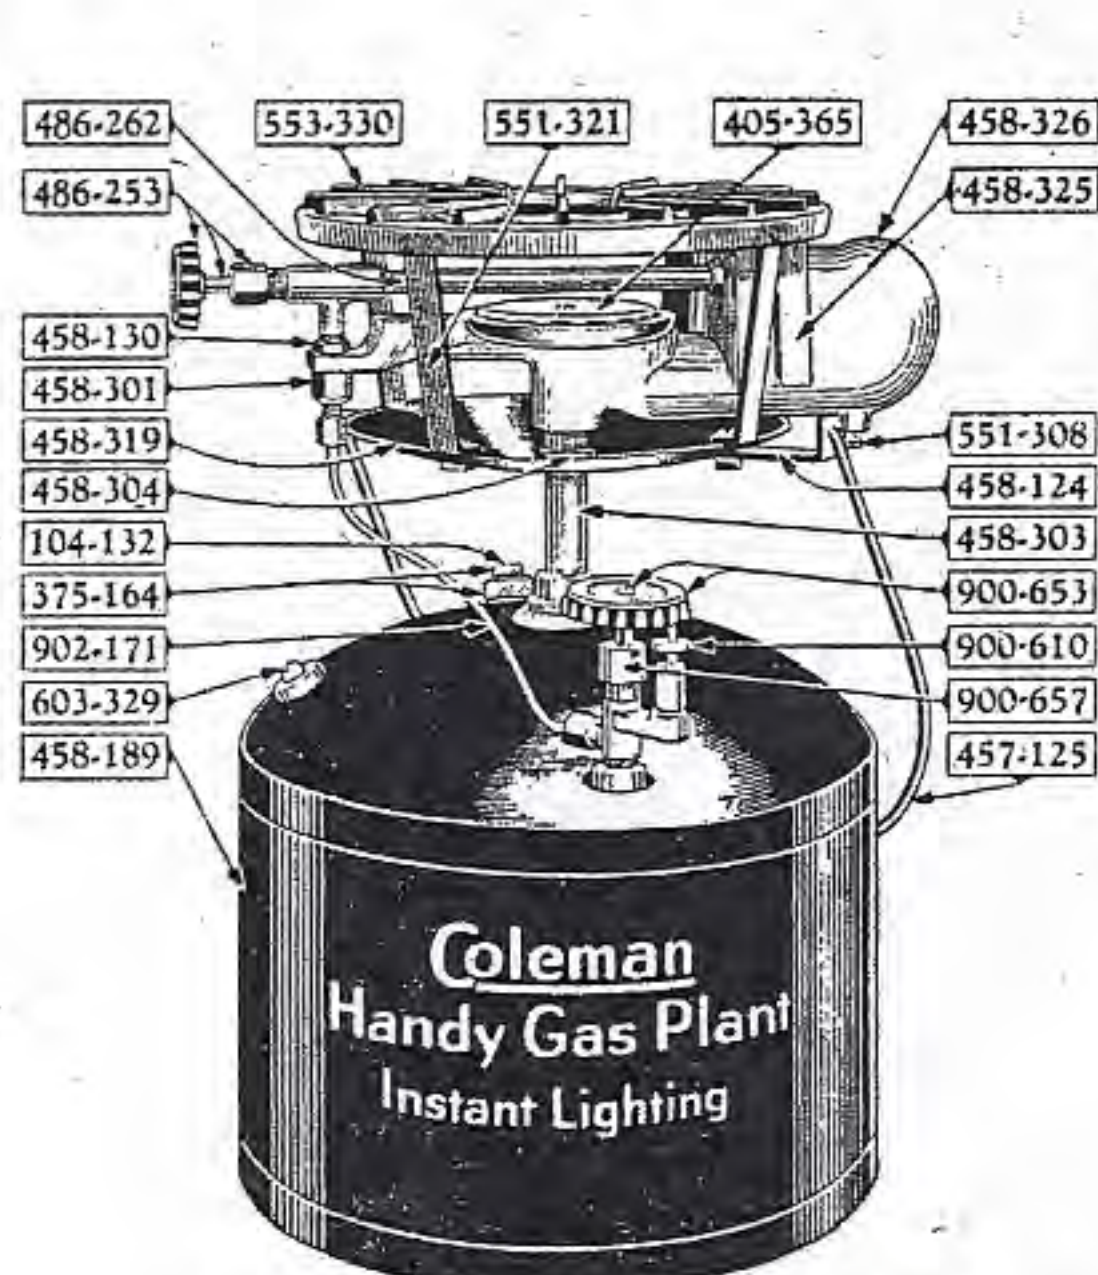


HANDY GAS PLANT
Model Nos. 458, 458G


Appliance Obsolete
Repair Parts Available

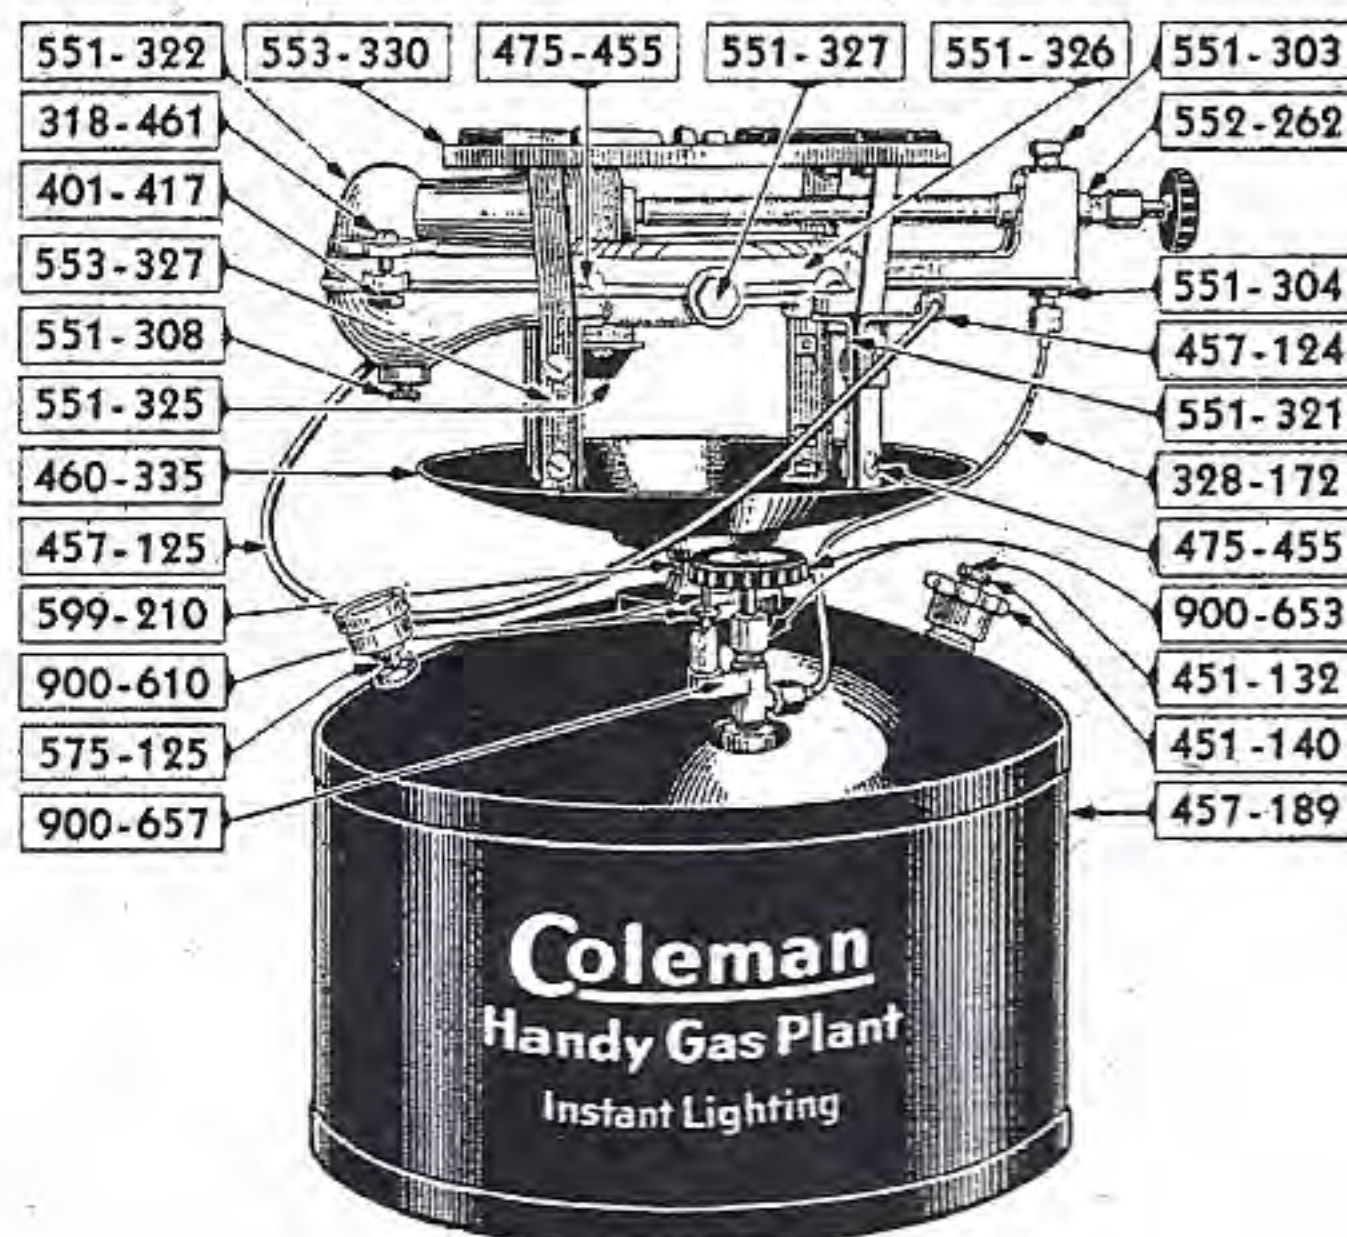

HANDY GAS PLANT
Model Nos. 457, 457G, 575

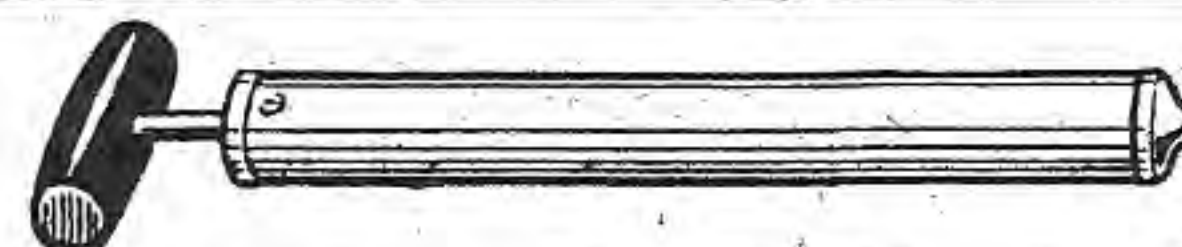

Pump No. 451-522

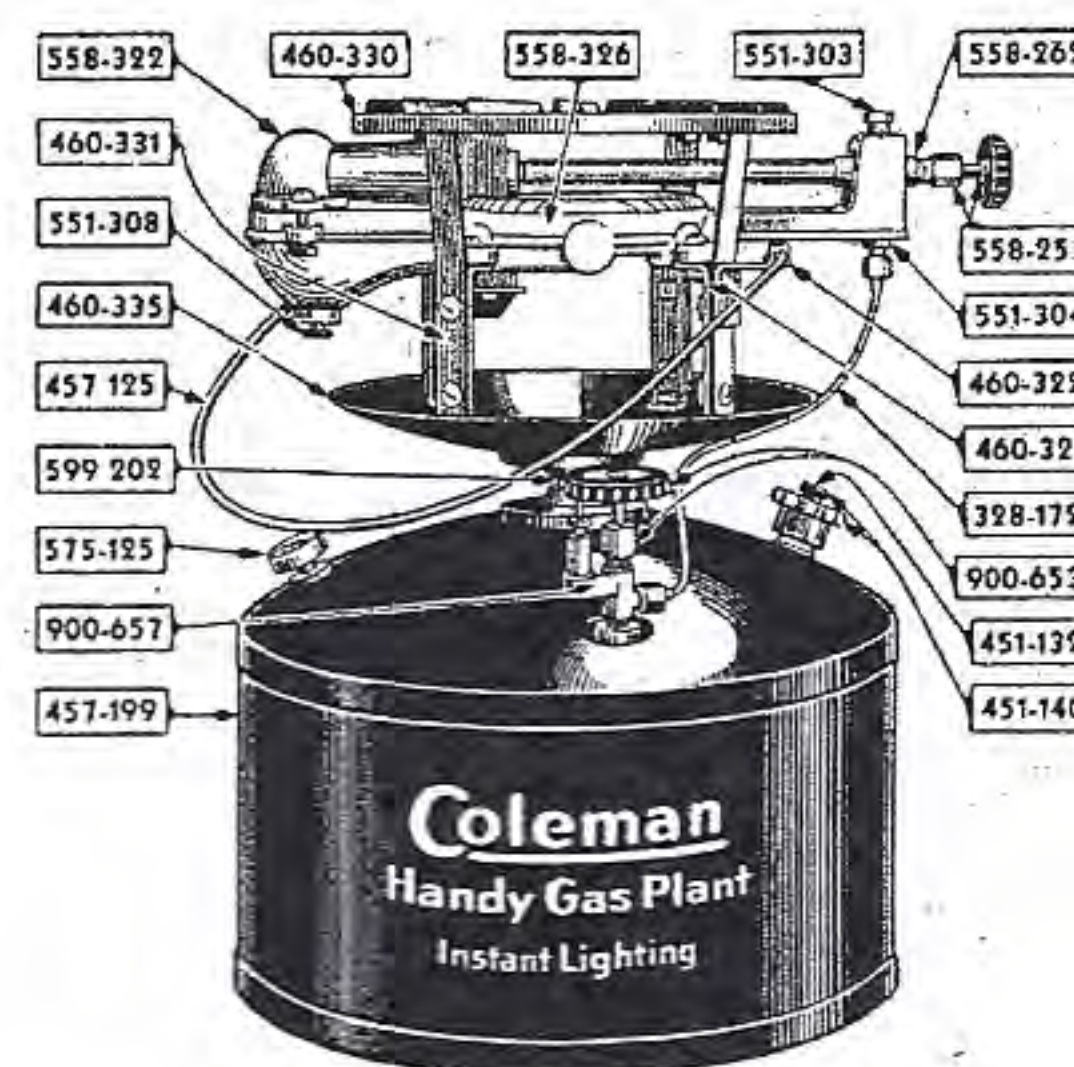


HANDY GAS PLANT
Model Nos. 460, 460G

Order by Number	Part Name	Net Retail Price
101-522	Pump. Model Nos. 458, 458G.....	\$1.05
104-132	Filler Plug Air Stem. Model Nos. 458, 458G.....	.27
118B136	Filler Plug Gasket. Model Nos. 458, 458G.....	.03
118B620	Valve Stem Packing. Model Nos. 457, 457G, 458, 458G, 460, 460G, 575.....	.03
216-509	Pump Leather. Model Nos. 458, 458G.....	.06
308-238	Cleaning Needle & Holder. Model Nos. 457, 457G.....	.09
318-461	R. H. Machine Screw (1/4x1"). Model Nos. 457, 457G.....	.03
325-217	Gas Tip Bushing. Model Nos. 457, 457G, 460, 460G, 575.....	.15
325-418	Gas Tip (Marked "4"). Model Nos. 457, 457G, 575.....	.18
328-172	Fuel Tube (12" Long). Model Nos. 457, 457G, 460, 460G, 575.....	.48
375-164	Filler Plug Complete. Model Nos. 458, 458G.....	.81
401-417	Machine Screw Nut. Model Nos. 457, 457G, 458, 458G, 575.....	.03
416A301	Burner Cap Cover. Nos. 458, 458G, 554, 556.....	.15
451-132	Filler Plug Air Stem. Model Nos. 457, 457G, 460, 470G, 575.....	.27
451-140	Filler Plug Complete. Model Nos. 457, 457G, 460, 470G, 575.....	.99
451-509	Pump Leather. Model Nos. 457, 457G, 460, 470G, 575.....	.09
451-522	Jumbo Pump. Model Nos. 457, 457G, 460, 460G.....	1.80
457-124	Bail Bracket. Model Nos. 457, 457G.....	.21
457-125	Bail. Model Nos. 457, 457G, 458, 458G, 460, 460G.....	.48
457-199	Tank Complete. Model Nos. 457, 457G, 460, 460G.....	10.95
458-124	Bail Bracket. Model Nos. 458, 458G.....	.09
458-130	Lock Nut. Model Nos. 458, 458G.....	.06
458-189	Tank Complete. Model Nos. 458, 458G, 575—Obsolete	
458-301	Connection (Fuel Tube to Gen.) Model Nos. 458, 458G.....	.27
458-303	Iron Pipe Nipple (3/8x3"). Model Nos. 458, 458G.....	.42
458-304	Lock Nut. Model Nos. 458, 458G.....	.15
458-305	Baffle Washer. Model Nos. 458, 458G.....	.09
458-319	Baffle. Model Nos. 458, 458G.....	.60
458-324	Air Intake Adjuster. Model Nos. 458, 458G.....	.06
458-325	Mixing Chamber Shield. Model Nos. 458, 458G—Obsolete	
458-326	Burner Manifold. Model Nos. 458, 458G—Obsolete	
472-238	Cleaning Needle & Holder. Model Nos. 458, 458G.....	.09
475-455	R. H. Machine Screw (10-24x5/8). Model Nos. 457, 457G, 458, 458G, 575.....	.03
460-321	Burner Support. Model Nos. 460, 460G.....	.12
460-322	Bail Support. Model Nos. 460, 460G.....	.12
460-330	Grate. Model Nos. 460, 460G.....	.99
460-331	Grate Bracket. Model Nos. 460, 460G.....	.15
460-335	Drip Pan Complete. Model Nos. 460, 460G.....	1.95
479-217	Needle Protector. Model Nos. 458, 458G.....	.15

Order by Number	Part Name	Net Retail Price
479-218	Generator Gas Tip (Marked "W"). Model Nos. 458, 458G.....	.18
486-212	Generator Tube. Model Nos. 458, 458G.....	.99
486-253	Generator Valve Stem Complete. Model Nos. 458, 458G.....	.60
486-262	Generator Complete (Gas Tip Marked "W"). Model Nos. 458, 458G.....	2.70
551-240	Generator Valve Body & Fuel Nipple. Model Nos. 457, 457G, 460, 460G, 575.....	.69
551-303	Set Screw. Model Nos. 457, 457G, 460, 460G, 575.....	.15
551-304	Feed Wire Nipple. Model Nos. 457, 457G, 460, 460G, 575.....	.21
551-308	Drain Plug. Model Nos. 457, 457G, 460, 460G, 458, 458G, 575.....	.15
551-321	Leg. Model Nos. 457, 457G, 458, 458G, 575.....	.21
551-322	Mixing Chamber. Model Nos. 457, 457G, 575.....	.99
551-325	Air Intake Adjuster. Model Nos. 457, 457G, 575.....	.15
551-326	Burner Casting. Model Nos. 457, 457G, 575.....	2.70
551-332	Asbestos Gasket. Model Nos. 457, 457G, 460, 460G, 575.....	.06
552-212	Generator Tube. Model Nos. 457, 457G, 460, 460G, 575.....	1.20
552-219	Generator Filler Coil. Model Nos. 457, 457G, 460, 460G, 575.....	.21
552-253	Generator Valve Stem (less Cleaning Needle and Holder). Model Nos. 457, 457G, 575.....	.81
552-262	Chrome Alloy Generator. (Gas Tip Marked "4"). Model Nos. 457, 457G, 575.....	3.00
553-327	Grate Bracket. Model Nos. 457, 457G, 575.....	.21
553-330	Grate. Model Nos. 457, 457G, 458, 458G, 575.....	.99
553-335	Baffle & Flange Assembled. Model Nos. 457, 457G, 575.....	1.95
558-218	Gas Tip (Marked "J"). Model Nos. 460, 460G.....	.18
558-238	Cleaning Needle & Holder. Model Nos. 460, 460G.....	.09
558-253	Generator Valve Stem (Less Cleaning Needle & Holder). Model Nos. 460, 460G.....	.99
558-262	Generator. (Gas Tip Marked "J"). Model Nos. 460, 460G.....	3.00
558-322	Mixing Chamber. Model Nos. 460, 460G.....	.99
558-326	Burner (Casting Only). Model Nos. 460, 460G.....	3.75
575-125	Pressure Gage. Model Nos. 457, 457G, 458, 458G, 575.....	1.65
599-202	Close Nipple. Model Nos. 460, 460G.....	.21
599-210	3/8" Close Nipple. Model Nos. 457, 457G, 575.....	.15
603-329	1/8" IPS Plug. Model Nos. 457, 457G, 458, 458G, 575.....	.09
650-136	Filler Plug Gasket. Model Nos. 457, 457G, 460, 460G, 575.....	.06
900-118	Fuel Tip (Marked "AX"). Model Nos. 457, 457G, 458, 458G, 575.....	.18
900-610	Inst. Gas Valve Safety Lock. Model Nos. 457, 457G, 458, 458G, 575.....	.15
900-653	Inst. Gas Valve Stem Complete. Model Nos. 457, 457G, 458, 458G, 460, 460G, 575.....	.81
900-657	Inst. Gas Valve Complete. Model Nos. 457, 457G, 458, 458G, 460, 460G, 575.....	2.40
902-171	Fuel Tube (6 1/2" Long). Model Nos. 458, 458G.....	.38


COLEMAN CAMP STOVE PARTS ILLUSTRATIONS

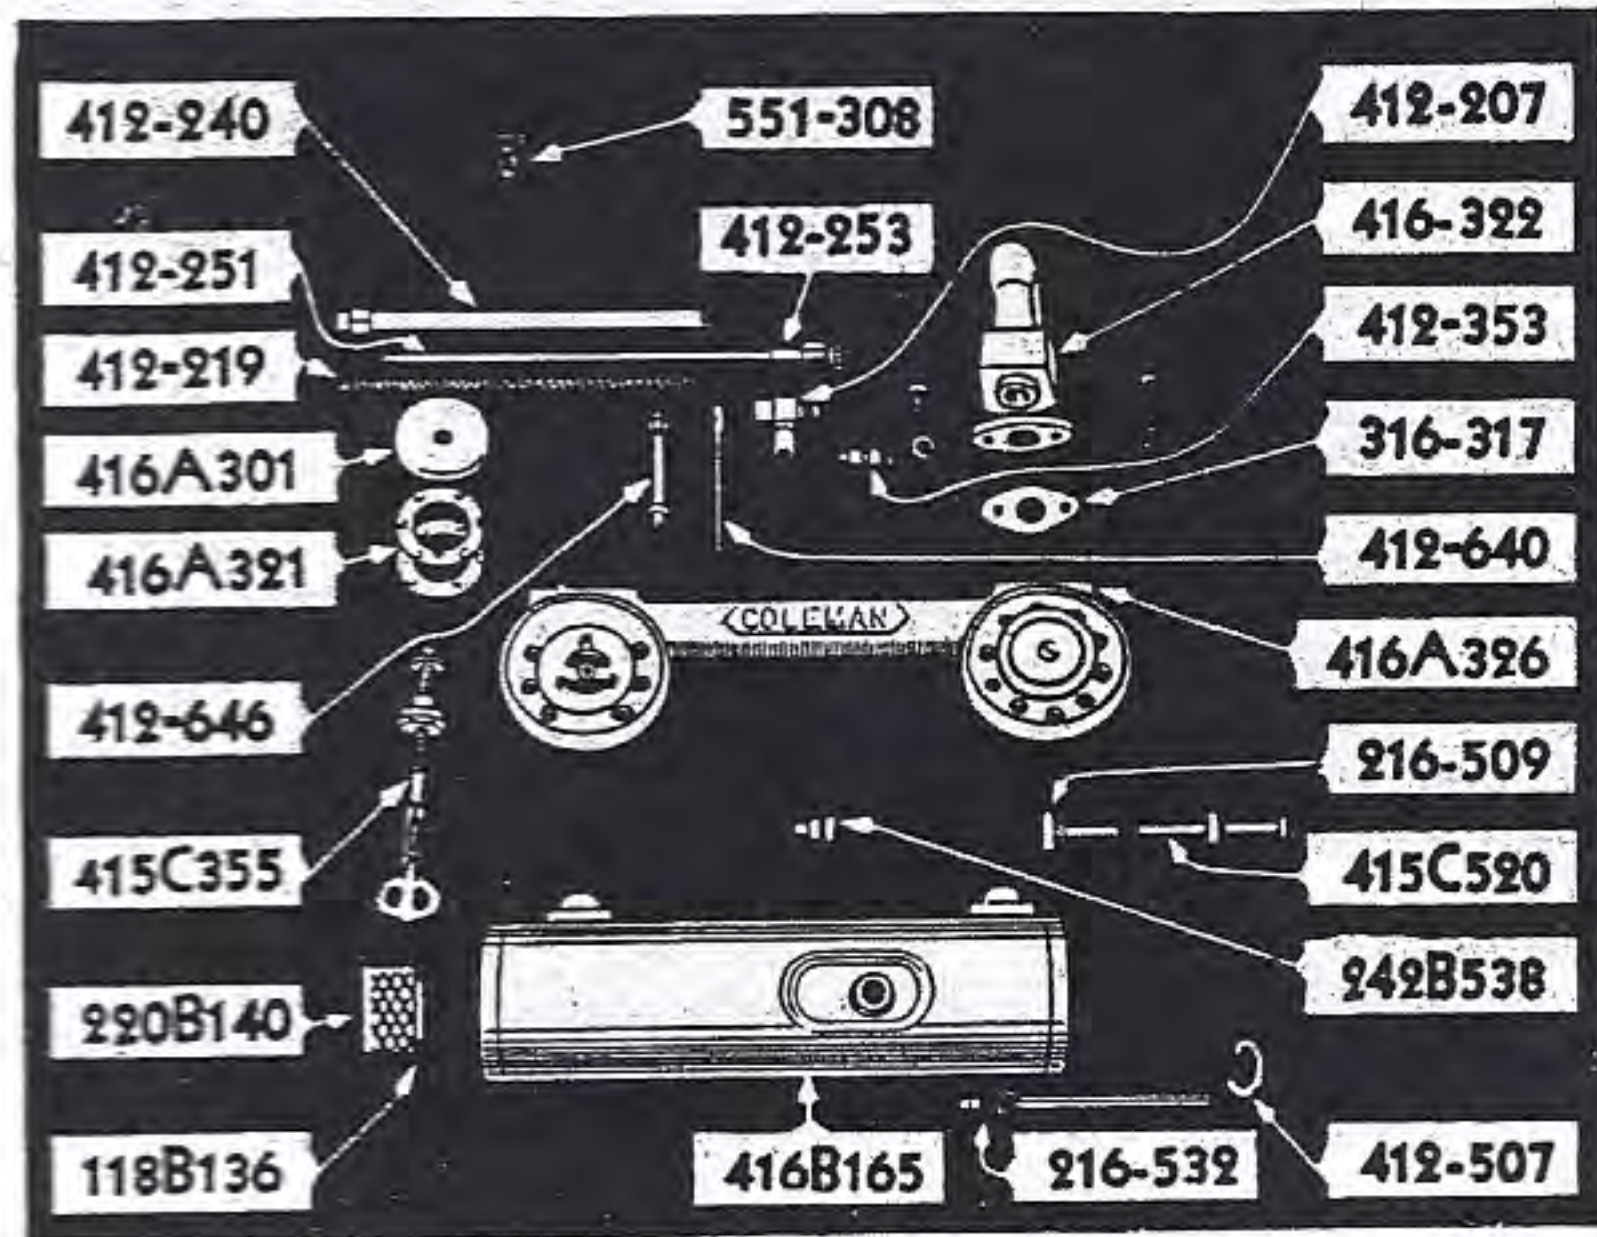

CAMP STOVE PARTS

Model Nos. 415C, 416B, 416C, 2G, 9G, 2H, 9H, 2B, 9A and 9B


Order by Number	Part Name	Net Retail Price
118B136	Filler Plug Gasket. Model Nos. 415C, 416B, 416C, (Supply 104-136 all other models).....	\$.03
216-509	Pump Leather. Model Nos. 415C, 416B, 416C.....	.06
216-532	Air Stem. Model Nos. 2B, 9A, 9B, 415C, 416B and 416C only	.27
216-620	Packing. All Models.....	.03
220B140	Filler Plug Complete. Model Nos. 415C, 416B, 416C... (Supply 401-164 all other models).....	.69
242B538	Check Valve. Model Nos. 2B, 9A, 9B, 415C, 416B and 416C	.27
316-317	Gasket. All Models.....	.09
412-207	Valve Body. All Models.....	.81
412-218	Gas Tip (Marked "AK"). All Models.....	.18
412-219	Generator Filler Coil. All Models.....	.15
412-240	Generator Tube & Bushing. All Models.....	.81
412-251	Cleaner Rod & Needle. All Models.....	.33
412-253S	Valve Stem (less Cleaning Needle). All Models.....	.48
412-262	Complete Set of Generator Renewal Parts including Tube, Gas Tip, Bushing, Coil, Needle & Holder (Gas Tip Marked "AK"). All Models.....	1.20
412-353	Tip Cleaner Stem Complete. All Models.....	.21
412-507	Pump Cap Clip. All Models.....	.03
412-640	Eccentric Block & Needle. All Models.....	.15
412-646	Fuel & Air Tube with Fuel Tip. All Models.....	.33
412-655	Instant Lighting Valve Complete. All Models.....	1.50
412-660	Valve and Generator Assembly. All Models.....	2.70
415C520	Pump Plunger Complete. Model Nos. 2B, 9A, 9B, 415C, 416B, and 416C.....	.60
415C355	Auxiliary Valve Complete. Model Nos. 415C and 416C (Supply 416-355 all other models).....	.81
416-322	Burner Mixing Chamber. All Models.....	.60
416A301	Burner Cap Cover. Model Nos. 2B, 9A, 9B, 2H, 9H, 415C, 416B and 416C.....	.15
416A321	Spacer (2 per burner). Model Nos. 415C, 416B and 416C, 2B, 9A, 9B, 2H, and 9H.....	.15
416A326	Burner Manifold (Casting only). Model Nos. 2B, 9A, 9B, 415C, 416B, 416C, 2H and 9H.....	1.65
416B165	Tank Complete. All Models.....	4.05
551-308	Drain Plug. Model Nos. 415C, 416B and 416C only....	.15

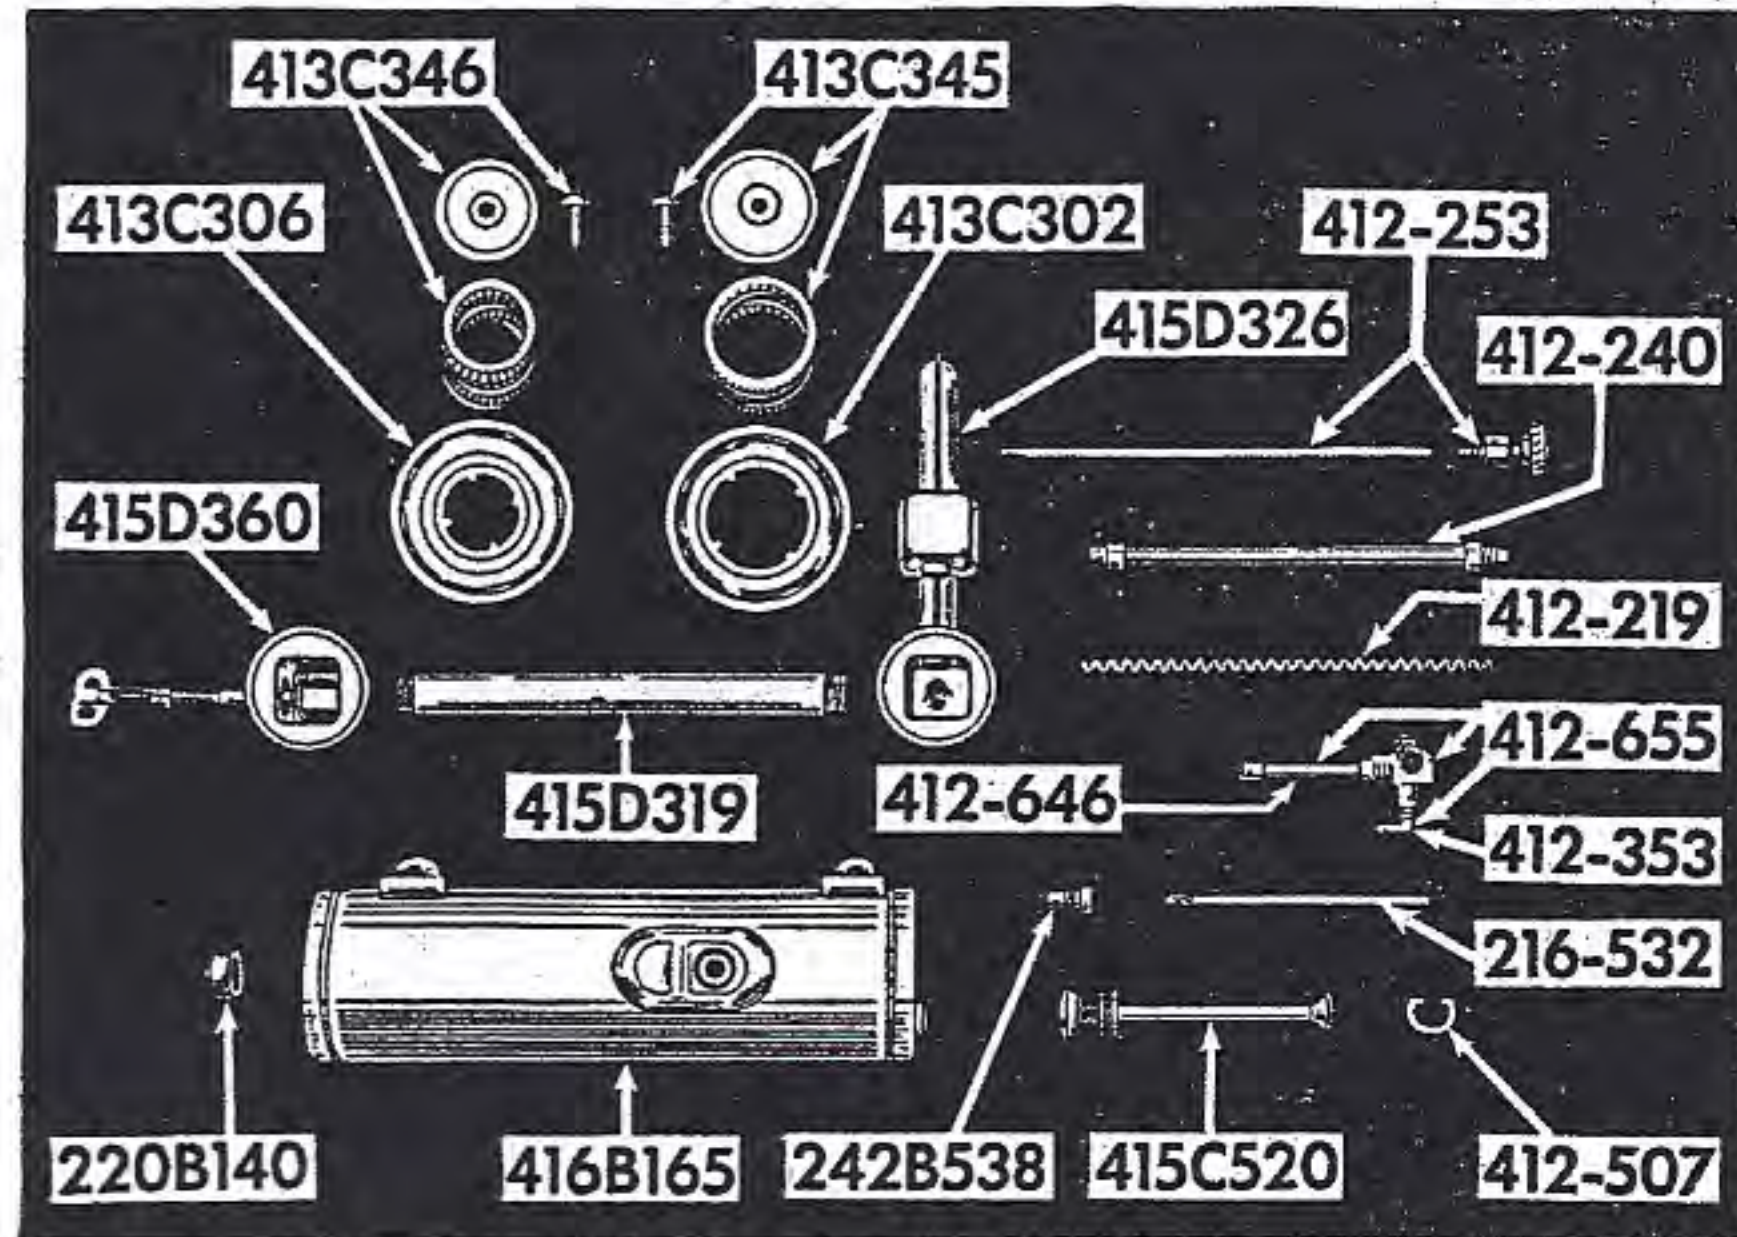

COLEMAN CAMP STOVE MODEL No. 415D


Order by Number	Part Name	Net Retail Price
118B136	Filler Plug Gasket.....	\$.03
216-509	Pump Leather	.06
216-532	Air Stem	.27
216-620	Packing	.03
220B140	Filler Plug Complete.....	.69
242B538	Check Valve	.27
412-207	Valve Body	.81
412-218	Gas Tip (Marked "AK").....	.18
412-219	Generator Filler Coil.....	.15
412-240	Generator Tube and Bushing.....	.81
412-251	Cleaner Rod and Needle.....	.33
412-253	Valve Stem (Less Cleaning Needle).....	.48
412-262	Complete Set of Generator Renewal Parts including Tube, Gas Tip, Bushing, Coil, Needle and Holder (Gas Tip Marked "AK").....	1.20
412-353	Tip Cleaner Stem Complete.....	.21
412-507	Pump Cap Clip.....	.03
412-640	Eccentric Block and Needle.....	.15
412-646	Fuel and Air Tube with Fuel Tip (Marked "O").....	.33
412-655	Instant Lighting Valve Complete (Less Generator and Valve Stem).....	1.50
412-660	Valve and Generator Assembly Complete.....	2.70
413C302	Master Burner Bowl.....	.45
413C306	Auxiliary Burner Bowl.....	.45
413C345	Master Cap and Fillers.....	.75
413C346	Auxiliary Cap and Fillers.....	.75
415C520	Pump Plunger Complete	.60
415D319	Manifold Pipe	.90
415D326	Master Burner Manifold and Bunsen Assembly.....	1.95
415D360	Auxiliary Burner Manifold with Valve Stem.....	1.50
416B165	Tank Complete (With Fittings) (Less Valve and Generator)	4.05

COLEMAN STOVE PARTS ILLUSTRATIONS

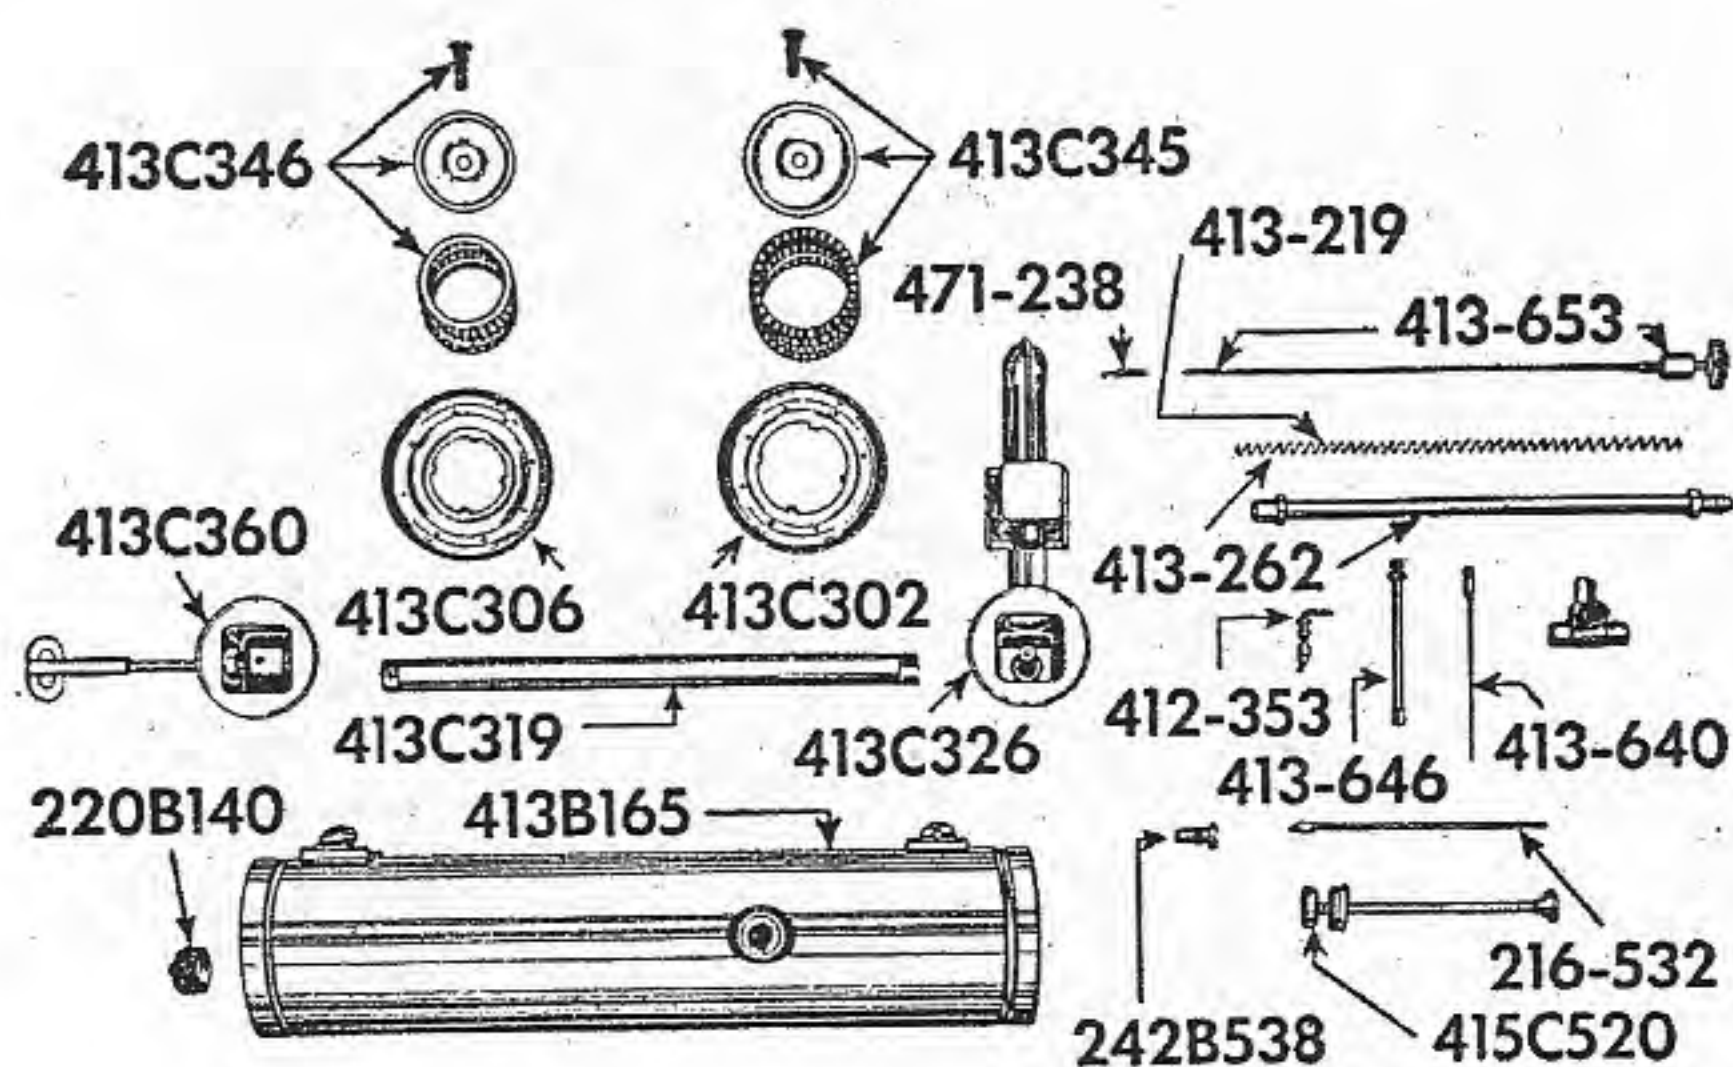


COLEMAN CAMP STOVE MODEL No. 413C

Order by Number	Part Name	Net Retail Price
118B136	Filler Plug Gasket.....	\$.03
216-509	Pump Leather	.06
216-532	Pump Air Stem	.27
220B140	Filler Plug Complete.....	.69
242B538	Check Valve	.27
242-620	Valve Stem Packing.....	.03
401-218	Gas Tip (Marked "B").....	.18
412-353	Tip Cleaner Stem Complete.....	.21
413B165	Tank Complete (With Fittings) (Less Valve and Generator)	4.80
413-219	Generator Filler Coil.....	.15
413-262	Generator Complete (Gas Tip Marked "B").....	1.20
413C302	Master Burner Bowl.....	.45
413C306	Auxiliary Burner Bowl.....	.45
413C319	Manifold Pipe	.90
413C326	Master Burner Manifold and Bunsen Assembly.....	1.95
413C345	Master Cap and Filler.....	.75
413C346	Auxiliary Cap and Fillers.....	.75
413C360	Auxiliary Burner Manifold with Valve Stem.....	1.50
413-640	Eccentric Block and Fuel Needle.....	.15
413-646	Fuel and Air Tube with Fuel Tip (Marked "AD").....	.60
413-653	Valve Stem Complete (Less Needle and Holder).....	.81
413-660	Valve and Generator Complete.....	3.00
415C520	Pump Plunger Complete (Less Air Stem).....	.60
471-238	Cleaning Needle and Holder.....	.09
479-217	Needle Protector	.15

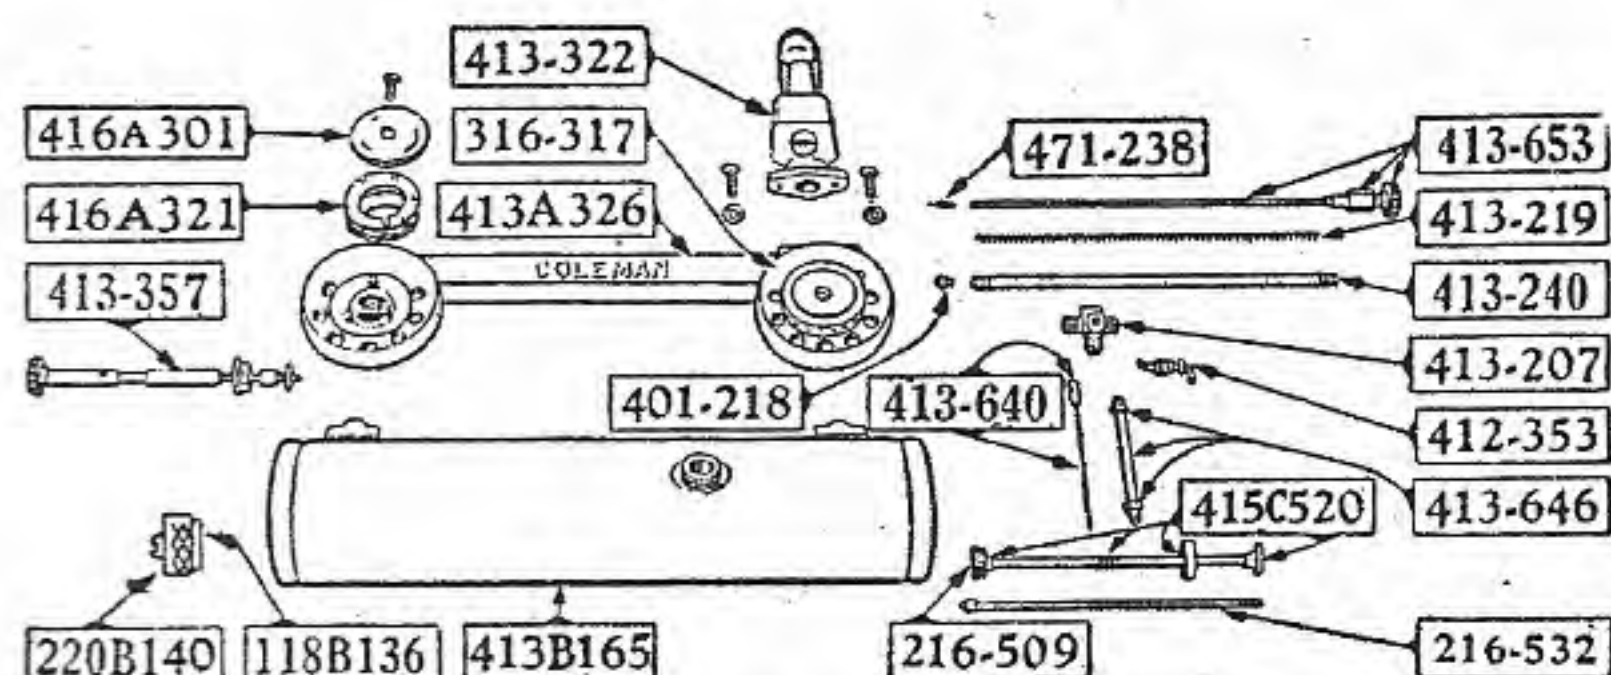


COLEMAN CAMP STOVE
Model Nos. 3F, 3H, and 413B

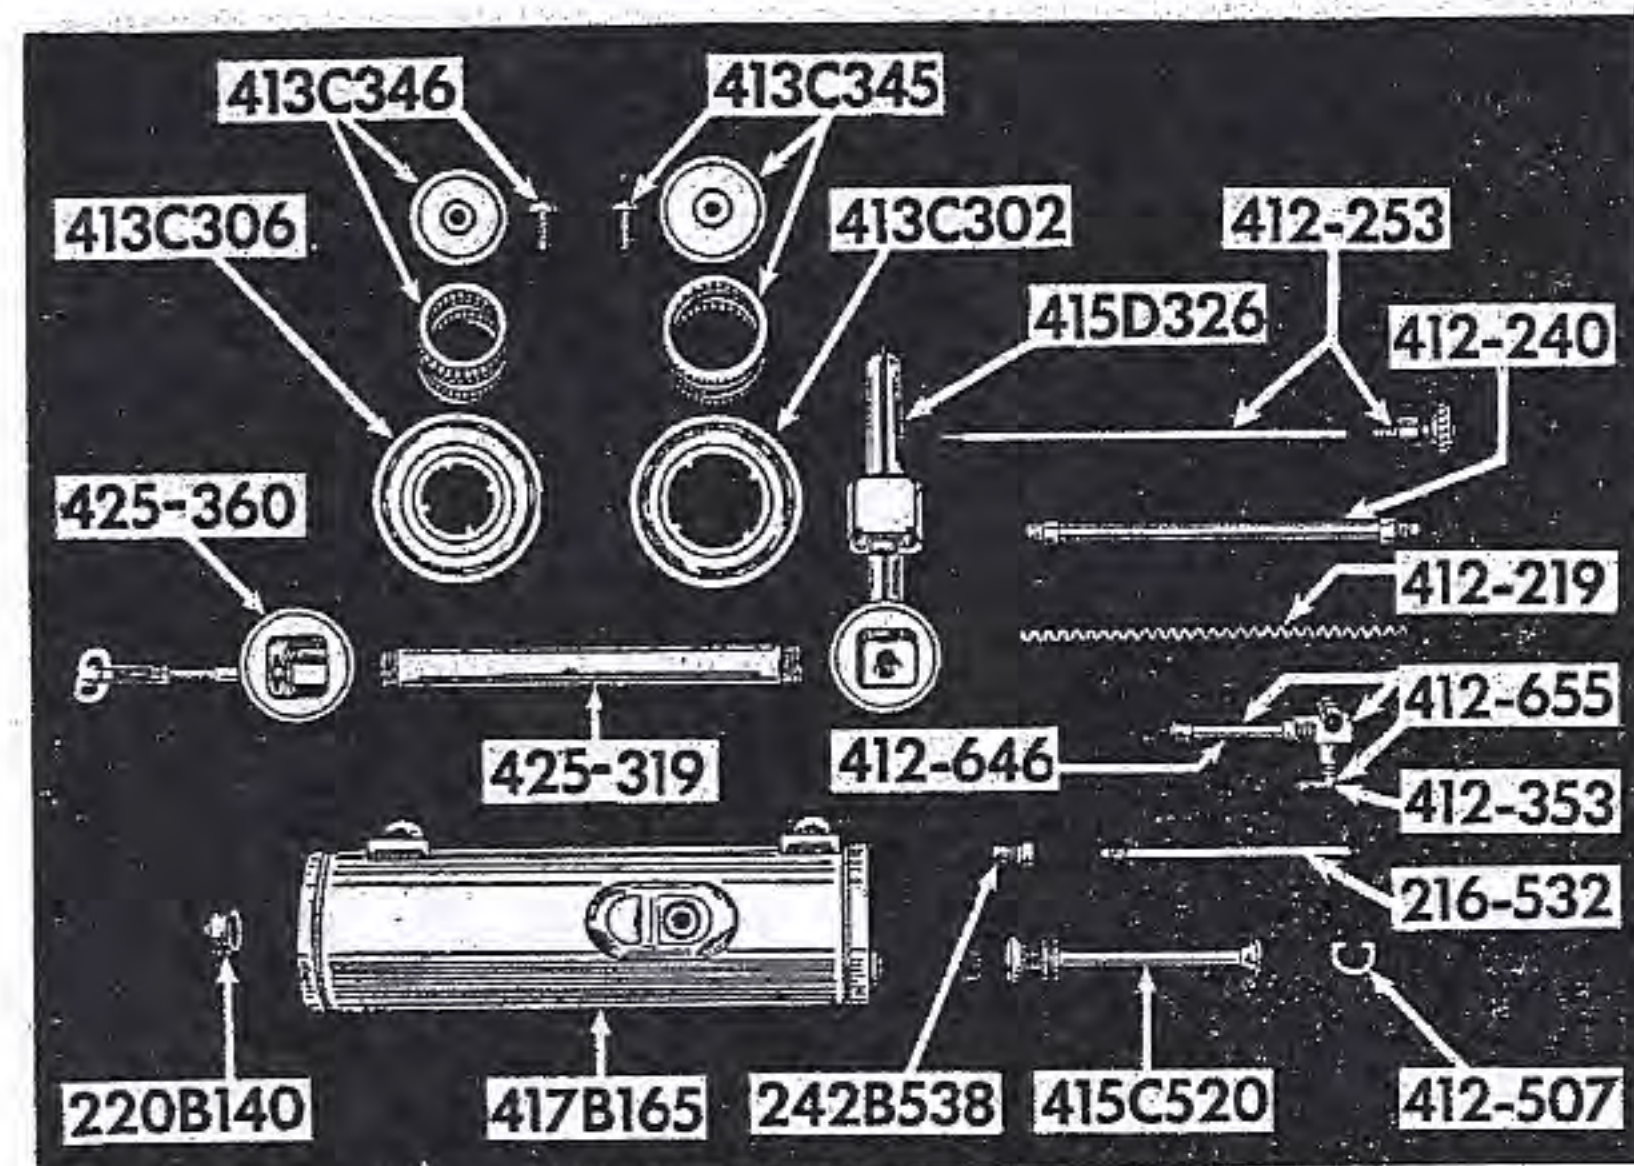

COLEMAN CAMP STOVE
Model No. 425


Order by Number	Part Name	Net Retail Price
118B136	Filler Plug Gasket.....	\$.03
216-509	Pump Leather	.06
216-532	Air Stem	.27
216-620	Packing	.03
220B140	Filler Plug Complete.....	.69
242B538	Check Valve	.27
412-207	Valve Body	.81
412-218	Gas Tip (Marked "AK").....	.18
412-219	Generator Filler Coil	.15
412-240	Generator Tube and Bushing.....	.81
412-251	Cleaner Rod and Needle.....	.33
412-253	Valve Stem (Less Cleaning Needle).....	.48
412-262	Complete Set of Generator Renewal Parts Including Tube, Gas Tip, Bushing, Coil, Needle and Holder (Gas Tip Marked "AK").....	1.20
412-353	Tip Cleaner Stem Complete.....	.21
412-507	Pump Cap Clip.....	.03
412-640	Eccentric Block and Needle.....	.15
412-646	Fuel and Air Tube with Fuel Tip (Marked "O").....	.33
412-655	Instant Lighting Valve Complete (Less Generator and Valve Stem).....	1.50
412-660	Valve and Generator Assembly Complete.....	2.70
413C302	Master Burner Bowl.....	.45
413C306	Auxiliary Burner Bowl.....	.45
413C345	Master Cap and Fillers.....	.75
413C346	Auxiliary Cap and Fillers.....	.75
415C520	Pump Plunger Complete.....	.60
425-319	Manifold Pipe	.75
415D326	Master Burner Manifold and Bunsen Assembly.....	1.95
425-360	Auxiliary Burner Manifold with Valve Stem.....	1.50
417B165	Tank Complete (With Fittings) (Less Valve and Generator)	3.00

Complements of the Old Town Coleman Center

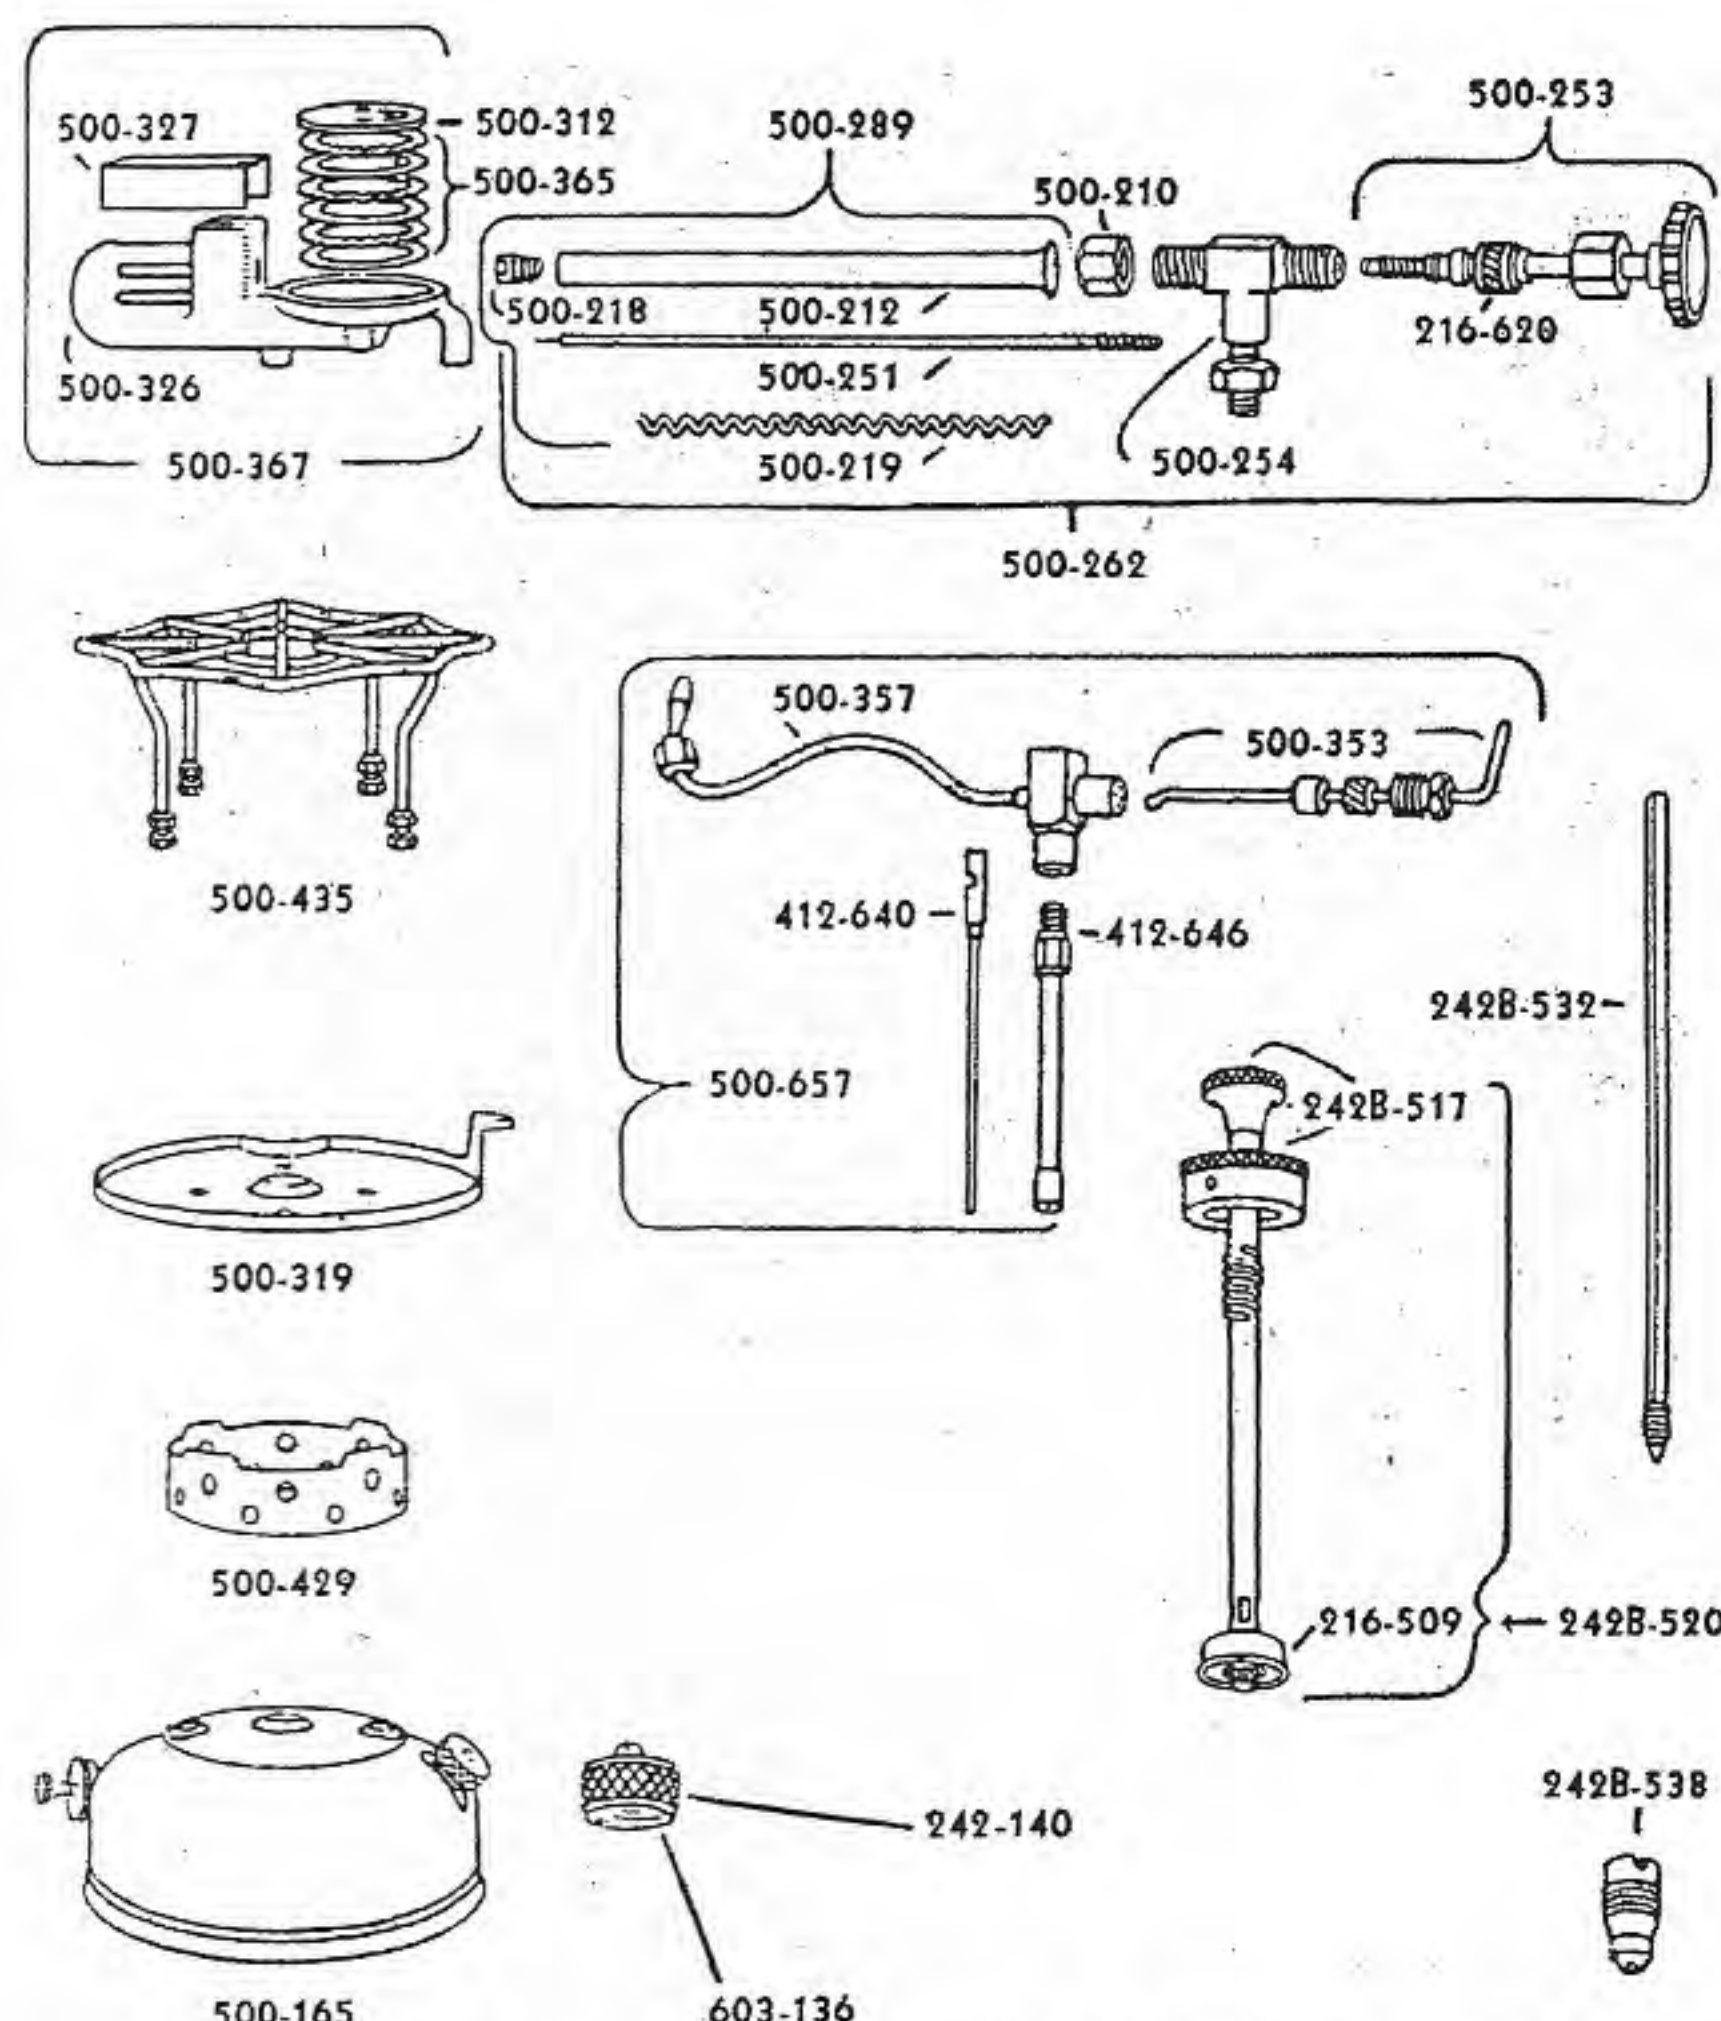

SPEEDMASTER STOVE MODEL No. 500

500-262—Valve and Generator Complete
500-289—Generator Renewal Parts (Less Valve)
500-657—Fuel Valve Body Complete

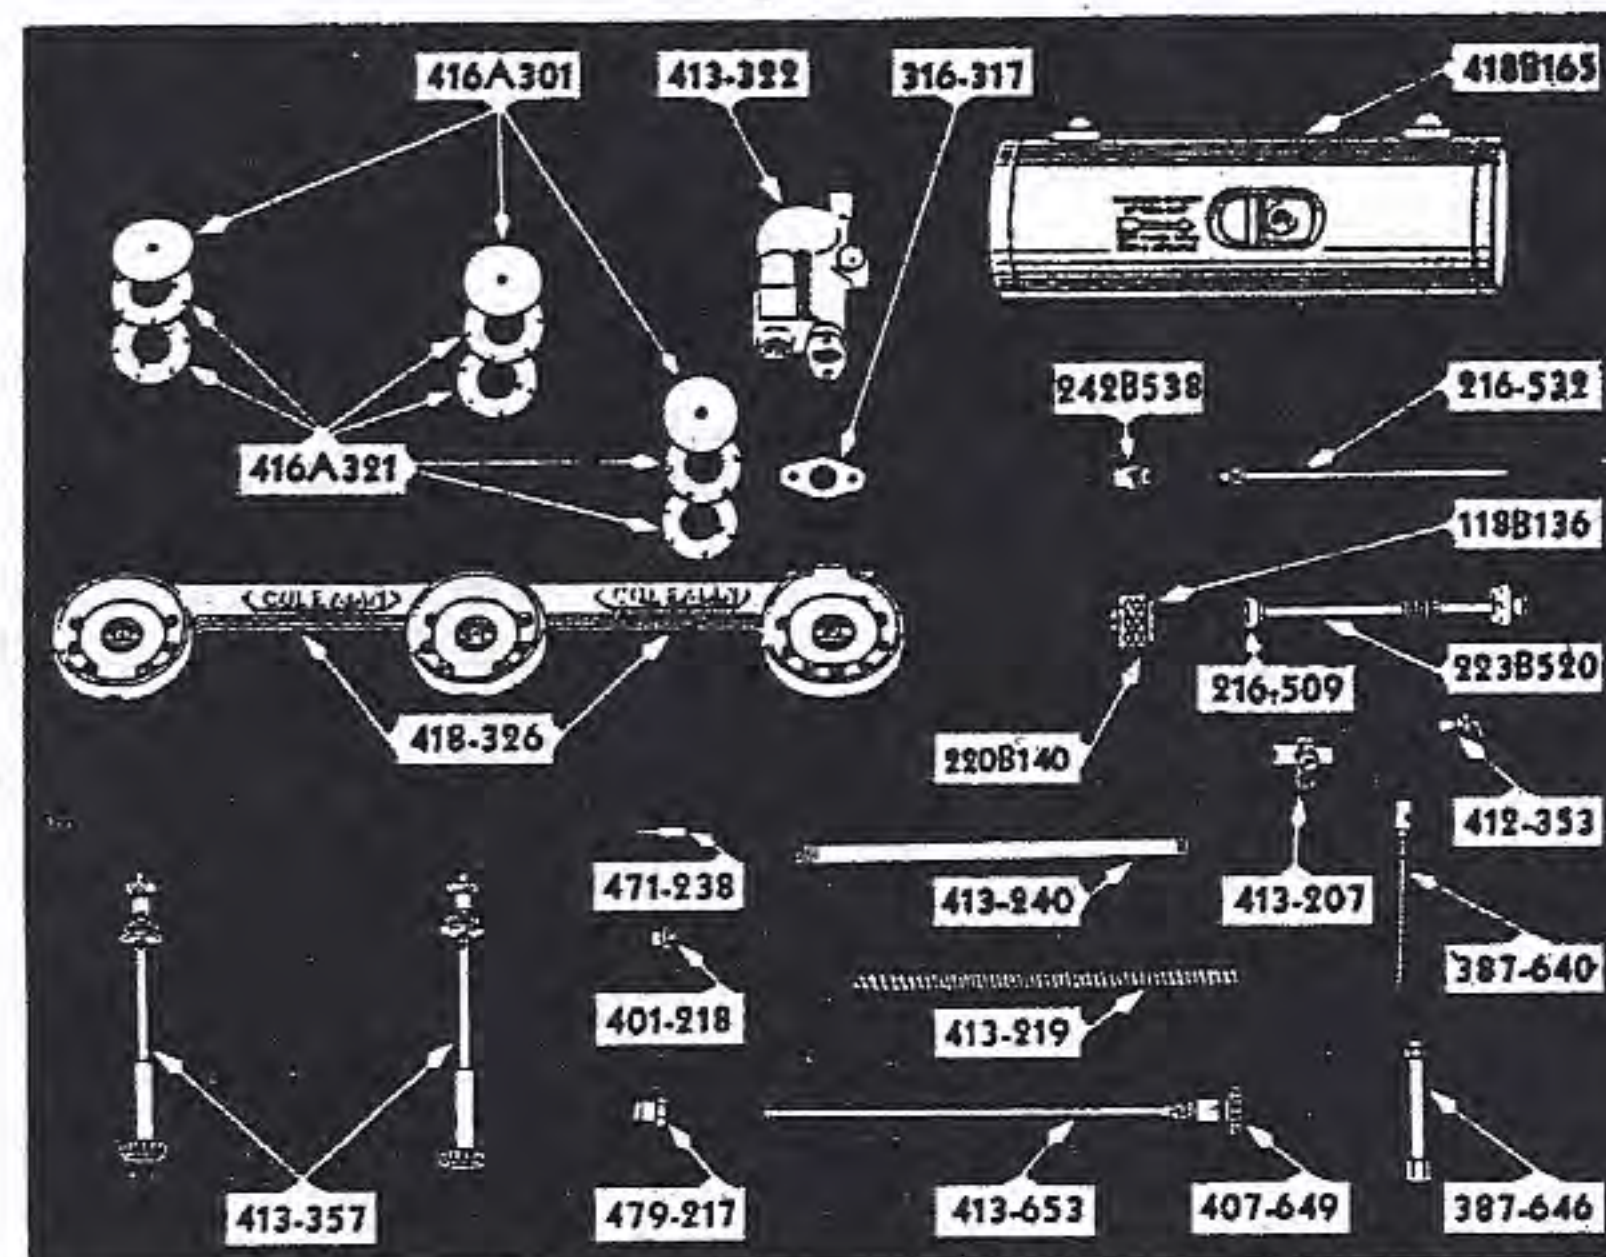


COLEMAN CAMP STOVE
Model Nos. 418, 418B and 420

Diagram illustrating the exploded view of a Coleman 412-326 water pump assembly. The main components and their associated part numbers are:

- 412-365**: Flange/cover plate (top left)
- 412-322**: Motor assembly (top center)
- 551-308**: Gasket/O-ring (top center)
- 412-219**: Drive shaft (top right)
- 412-251**: Drive shaft (top right)
- 412-240**: Drive shaft (top right)
- 412-253**: Drive shaft (top right)
- 412-207**: Drive shaft (top right)
- 412-353**: Drive shaft (top right)
- 412-640**: Drive shaft (top right)
- 412-646**: Drive shaft (top right)
- 412-507**: Drive shaft (top right)
- 412-326**: Main pump body (center)
- 412-218**: Drive shaft (center right)
- 242B538**: Drive shaft (center right)
- 216-532**: Drive shaft (center right)
- 417B355**: Bolt (left)
- 220B140**: Bolt (bottom left)
- 118B-136**: Bolt (bottom left)
- 417B165**: Bolt (bottom center)
- 216-509**: Bolt (bottom center)
- 415C520**: Bolt (bottom right)


—23—

COLEMAN UTILITY STOVE PARTS ILLUSTRATIONS

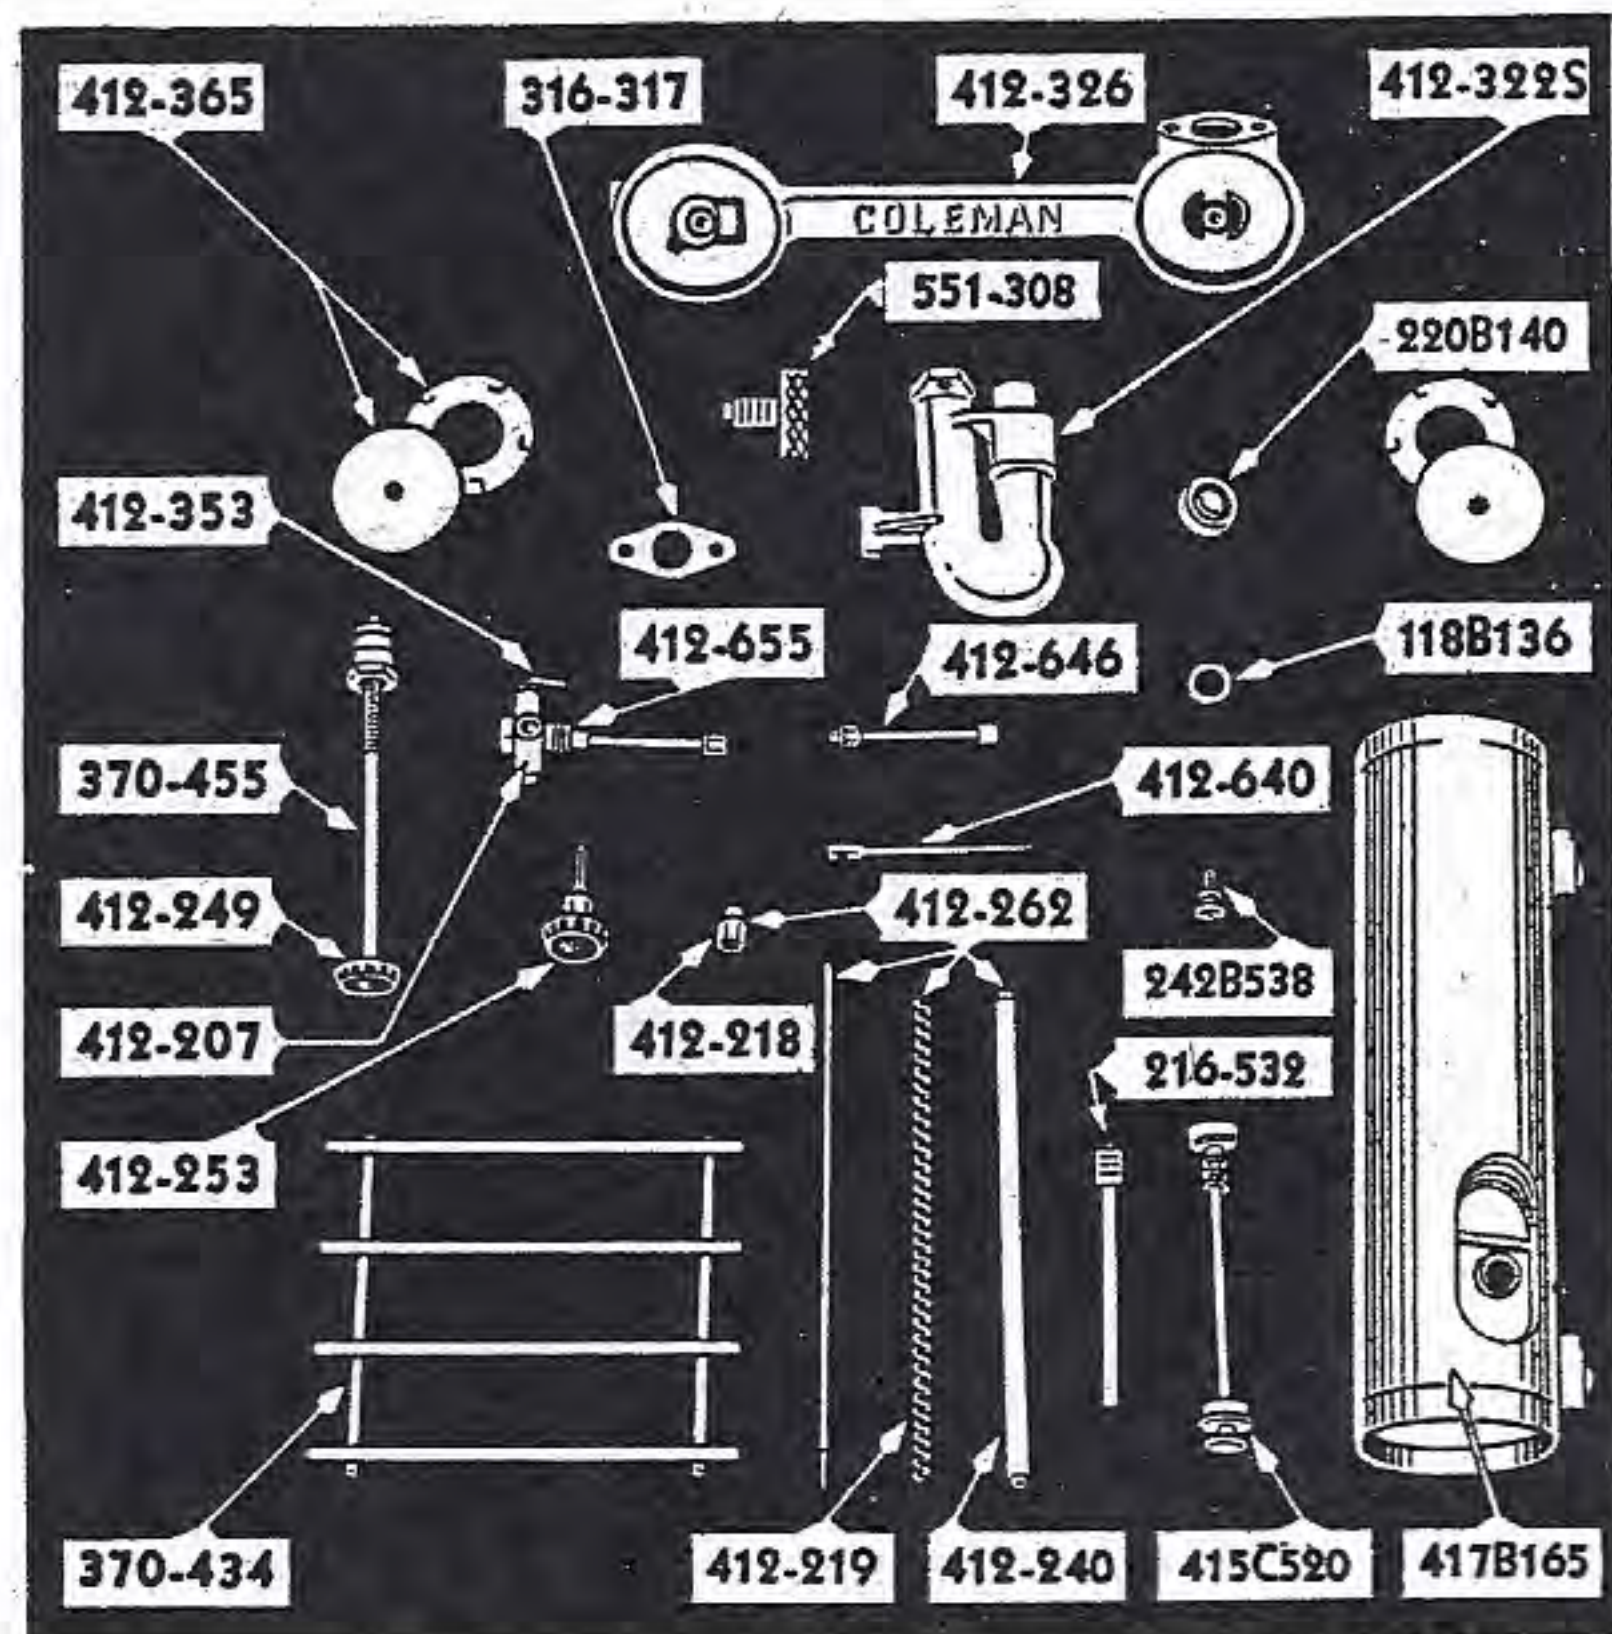

COLEMAN HOT PLATE
Model Nos. 370A and 370B


Order by Number	Part Name	Net Retail Price
118B136	Filler Plug Gasket. Nos. 370A, 370B.....	\$.03
216-509	Pump Leather. Model Nos. 370A, 370B.....	.06
216-532	Air Stem. Model No. 370B only.....	.27
220B140	Filler Plug Complete. Model Nos. 370A, 370B.....	.69
242B538	Check Valve. Model No. 370B.....	.27
	SUPPLY 223-538 on 370A.....	.27
316-317	Gasket. Model Nos. 370A, 370B.....	.09
370-434	Grate. Model Nos. 370A, 370B.....	.48
370-455	Auxiliary Valve Complete. Model Nos. 370A, 370B...	.60
386-935	Grate Clips and Bolts. Model Nos. 370A, 370B.....	.21
412-207	Valve Body. Model Nos. 370A, 370B.....	.81
412-218	Gas Tip (Marked "AK"). Model Nos. 370A, 370B.....	.18
412-219	Generator Filler Coil. Model Nos. 370A, 370B.....	.15
412-240	Generator Tube and Bushing. Model Nos. 370A, 370B..	.81
412-249	Wheel and Bushing. Model Nos. 370A, 370B.....	.21
412-251	Cleaner Rod and Needle. Model Nos. 370A, 370B.....	.33
412-253S	Valve Stem (Less Cleaning Needle). Model Nos. 370A, 370B.....	.48
412-262	Complete Set of Generator Renewal Parts including Tube, Gas Tip, Bushing, Coil, Needle and Holder (Gas Tip Marked "AK"). Model Nos. 370A, 370B.....	1.20
412-322S	Burner Mixing Chamber and Drain Plug. Model Nos. 370A, 370B.....	.60
412-326S	Burner Manifold (Casting only). Model Nos. 370A, 370B	1.20
412-353	Tip Cleaner Stem Complete. Model Nos. 370A, 370B..	.21
412-365	Burner Cap Complete. Model Nos. 370A, 370B.....	.42
412-640	Eccentric Block and Needle. Model Nos. 370A, 370B..	.15
412-646	Fuel and Air Tube with Fuel Tip (Marked "O"). Model Nos. 370A, 370B.....	.33
412-655	Instant Lighting Valve Complete (less Generator and Valve Stem). Model Nos. 370A, 370B.....	1.50
412-660	Valve and Generator Assembly Complete. Model Nos. 370A, 370B.....	2.70
415C520	Pump Plunger Complete. Model No. 370B.....	.60
	SUPPLY 412-520 on 370A	
417B165	Tank Complete (less Valve and Generator). Model Nos. 370A, 370B.....	3.75
551-308	Drain Plug. Model No. 370B only.....	.15

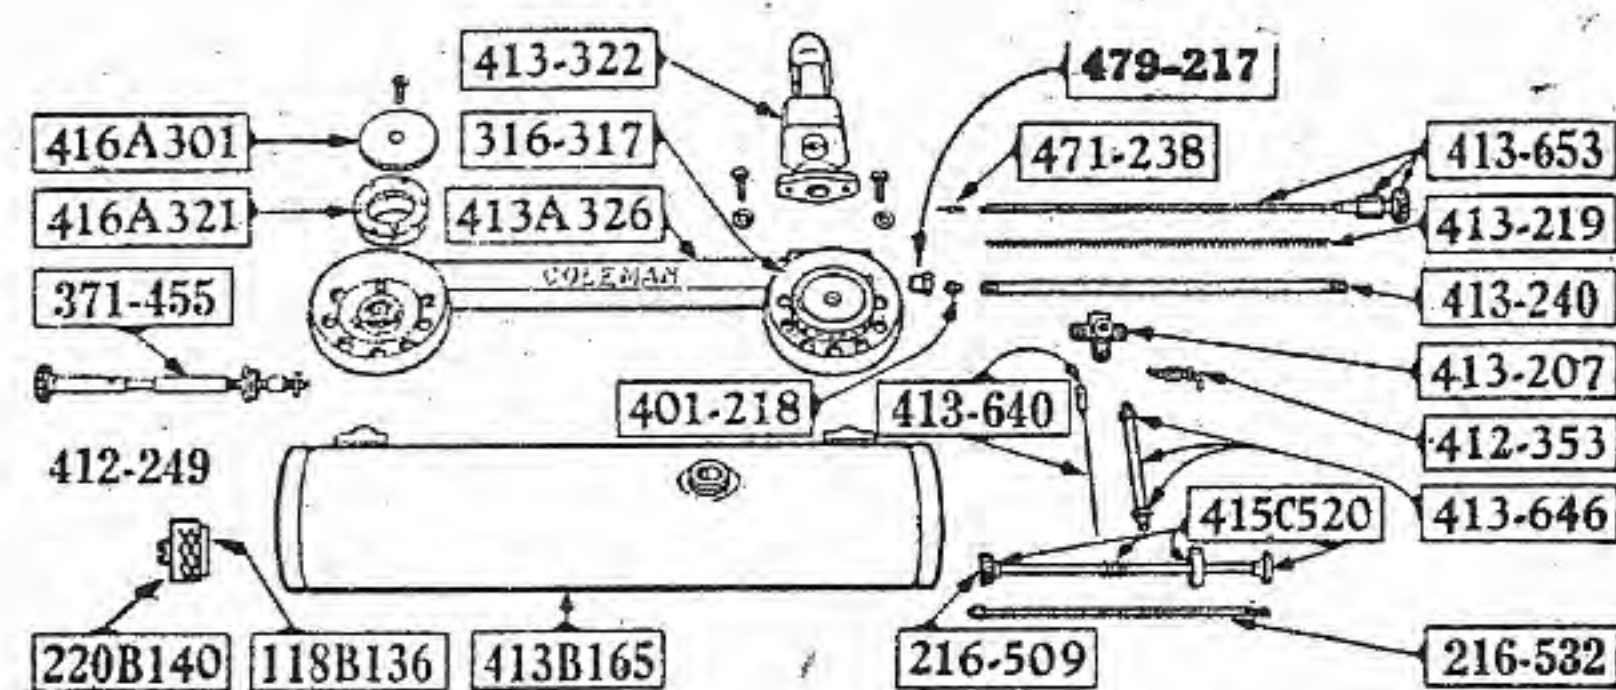

COLEMAN HOT PLATE
Model Nos. 371 and 371A

Order by Number	Part Name	Net Retail Price
118B136	Filler Plug Gasket. Model No. 371A.....	\$.03
	SUPPLY 104-136 on 371	
216-509	Pump Leather. Model Nos. 371, 371A.....	.06
216-532	Air Stem. Model No. 371A only.....	.27
220B140	Filler Plug Complete. Model No. 371A.....	.69
	SUPPLY 401-164 on 371	
242-620	Valve Stem Packing. Model Nos. 371, 371A.....	.03
242B538	Check Valve. Model No. 371A.....	.27
	SUPPLY 216-538 on 371	
316-317	Gasket. Model Nos. 371, 371A.....	.09
371-434	Grate. Model Nos. 371, 371A—Obsolete—Supply 370-434	
371-455	Auxiliary Valve Complete. Model Nos. 371, 371A....	.60
401-218	Gas Tip (Marked "B"). Model Nos. 371, 371A.....	.18
412-249	Wheel and Bushing. Model Nos. 371, 371A.....	.21
412-353	Tip Cleaner Stem Complete. Model Nos. 371, 371A....	.21
413-207	Valve Body. Model Nos. 371, 371A.....	.81
413-240	Generator Tube Assembly. Model Nos. 371, 371A....	.81
413-262	Complete set of Generator Renewal Parts including Tube, Gas Tip, Bushing, Coil, Needle and Holder (Gas Tip Marked "B"). Model Nos. 371, 371A.....	1.20
413-322	Burner Mixing Chamber. Model Nos. 371, 371A.....	.75
413-532	Air Stem. Model No. 371.....	.27
413-640	Eccentric Block and Fuel Needle. Model Nos. 371, 371A	.15
413-646	Fuel and Air Tube with Fuel Tip (Marked "AD"). Model Nos. 371, 371A.....	.60
413-653	Valve Stem Complete. Model Nos. 371, 371A.....	.81
413-655	Valve Complete (less Generator and Valve Stem). Model Nos. 371, 371A.....	1.65
413-660	Valve and Generator Complete. Model Nos. 371, 371A	3.00
413A326	Burner Manifold (Casting Only). Model Nos. 371, 371A	1.95
413B165	Tank Complete (with Fittings) (Less Valve and Generator). Model Nos. 371, 371A.....	4.80
415C520	Pump Plunger Complete (Less Air Stem). Model No. 371A.....	.60
	SUPPLY 413-520 on 371	
416A301	Burner Cap Cover. Model Nos. 371, 371A.....	.15
416A321	Spacer (2 per Burner). Model Nos. 371, 371A.....	.15
471-238	Cleaning Needle and Holder. Model Nos. 371, 371A...	.09
479-217	Needle Protector. Model No. 371A only.....	.15
551-308	Drain Plug. Model Nos. 371, 371A.....	.15


COLEMAN UTILITY STOVE PARTS ILLUSTRATIONS

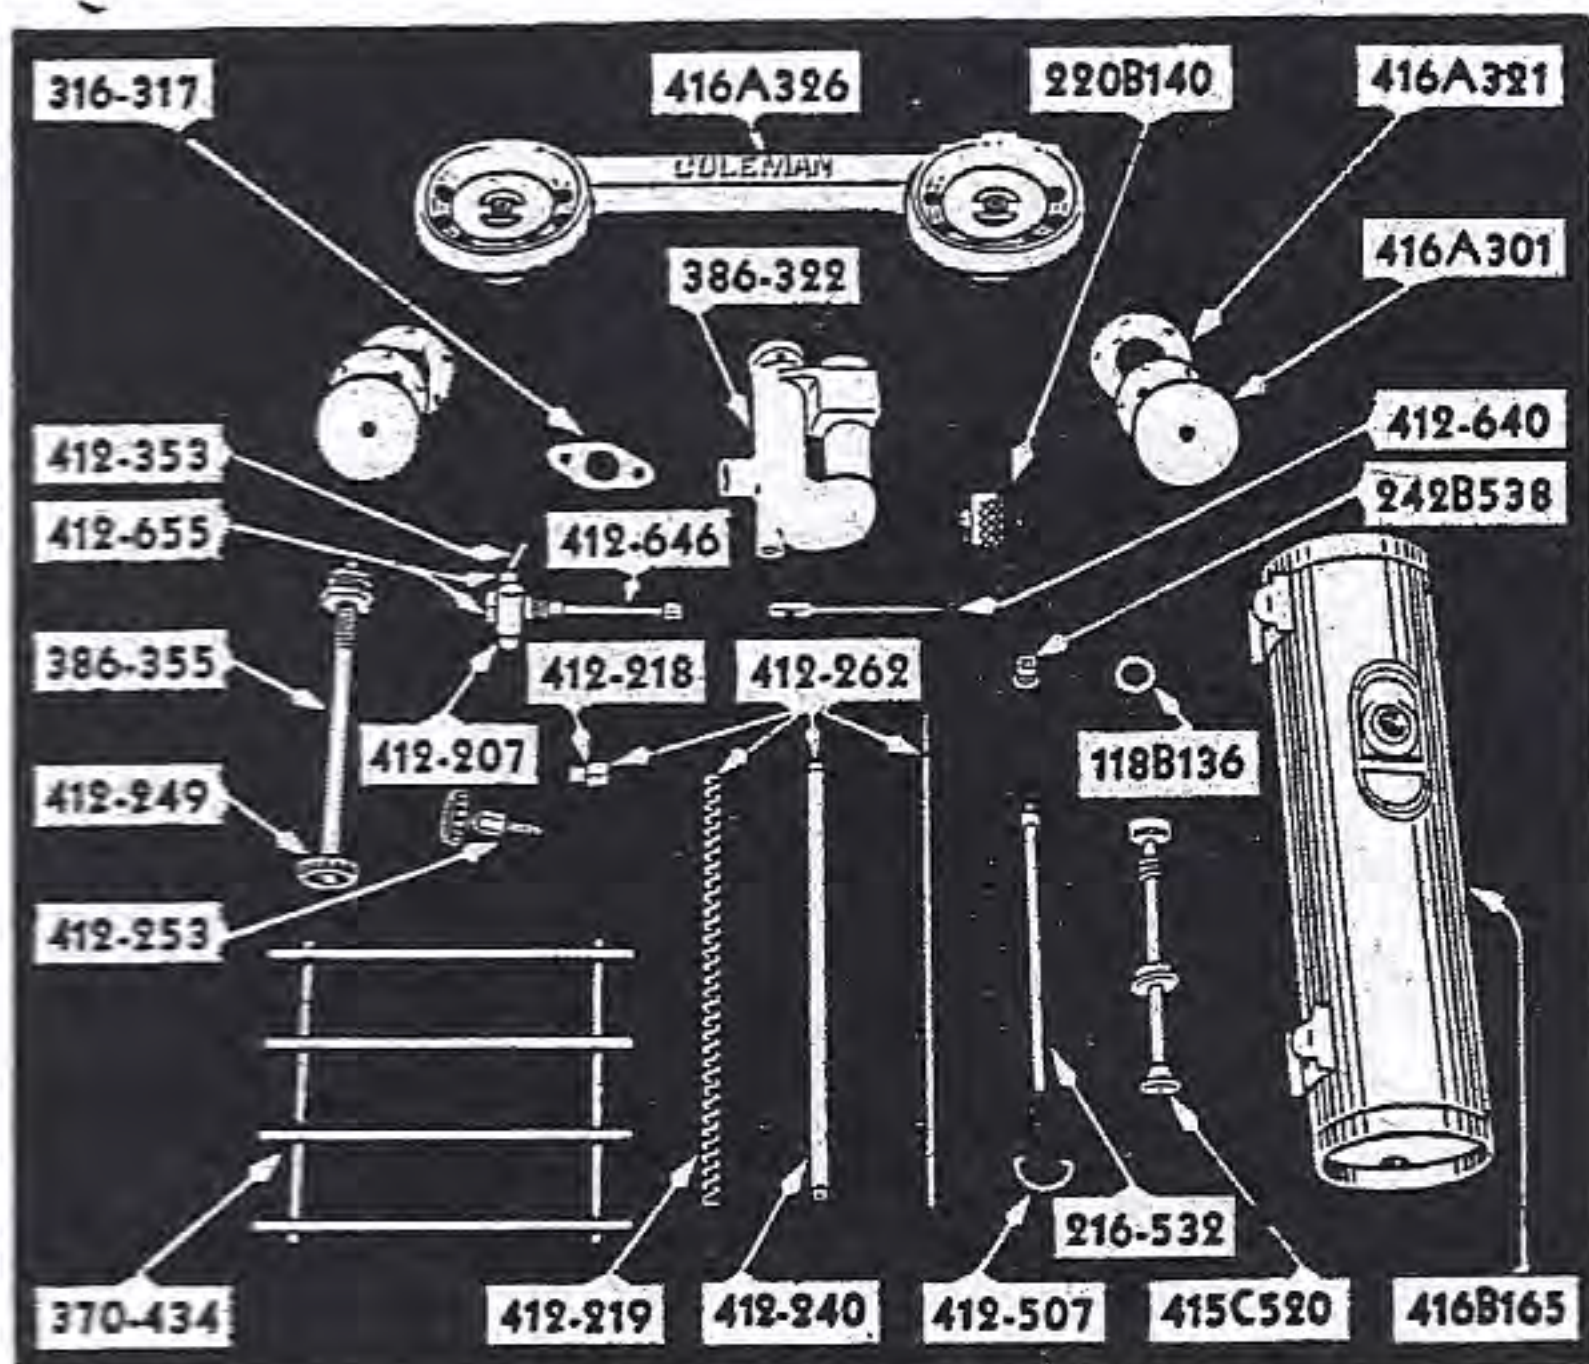

COLEMAN STANDARD AUTO TRAILER HOT PLATE

Model Nos. 386 and 386A

Order by Number	Part Name	Net Retail Price
118B136	Filler Plug Gasket. Model No. 386A..... SUPPLY 104-136 on 386	\$.03
216-509	Pump Leather	.06
216-532	Air Stem. Model Nos. 386, 386A.....	.27
220B140	Filler Plug Complete. Model No. 386A..... SUPPLY 401-164 on 386	.69
242B538	Check Valve. Model Nos. 386, 386A.....	.27
316-317	Gasket. Model Nos. 386, 386A.....	.09
370-434	Grate. Model Nos. 386, 386A.....	.48
371-434	Grate. Model Nos. 386, 386A.....	.99
386-322	Burner Mixing Chamber. Model Nos. 386, 386A.....	.60
386-355	Auxiliary Valve Complete. Model Nos. 386, 386A....	.48
412-207	Valve Body. Model Nos. 386, 386A.....	.81
412-218	Gas Tip (Marked "AK"). Model Nos. 386, 386A.....	.18
412-219	Generator Filler Coil. Model Nos. 386, 386A.....	.15
412-240	Generator Tube. Model Nos. 386, 386A.....	.81
412-249	Wheel and Bushing. Model Nos. 386, 386A.....	.21
412-253S	Valve Stem (less Cleaning Needle). Model Nos. 386, 386A.....	.48
412-262	Complete set of Generator Renewal Parts including Tube, Gas Tip, Bushing, Coil, Needle and Holder (Gas Tip Marked "AK"). Model Nos. 386, 386A.....	1.20
412-353	Tip Cleaner Stem Complete. Model Nos. 386, 386A....	.21
412-507	Pump Cap Clip. Model Nos. 386, 386A.....	.03
412-640	Eccentric Block and Needle. Model Nos. 386, 386A....	.15
412-646	Fuel and Air Tube (with Fuel Tip Marked "O"). Model Nos. 386, 386A.....	.33
412-655	Instant Lighting Valve Complete (less Generator and Valve Stem). Model Nos. 386, 386A.....	1.50
412-660	Valve and Generator Assembly Complete. Model Nos. 386, 386A.....	2.70
415C520	Pump Plunger Complete (Less Air Stem). Model Nos. 386, 386A.....	.60
416A301	Burner Cap Cover. Model Nos. 386, 386A.....	.15
416A321	Spacer (2 per Burner). Model Nos. 386, 386A.....	.15
416A326	Burner Manifold (Casting only). Models 386, 386A....	1.65
416B165	Tank Complete (With Fittings) (Less Valve and Generator). Model Nos. 386, 386A.....	4.05

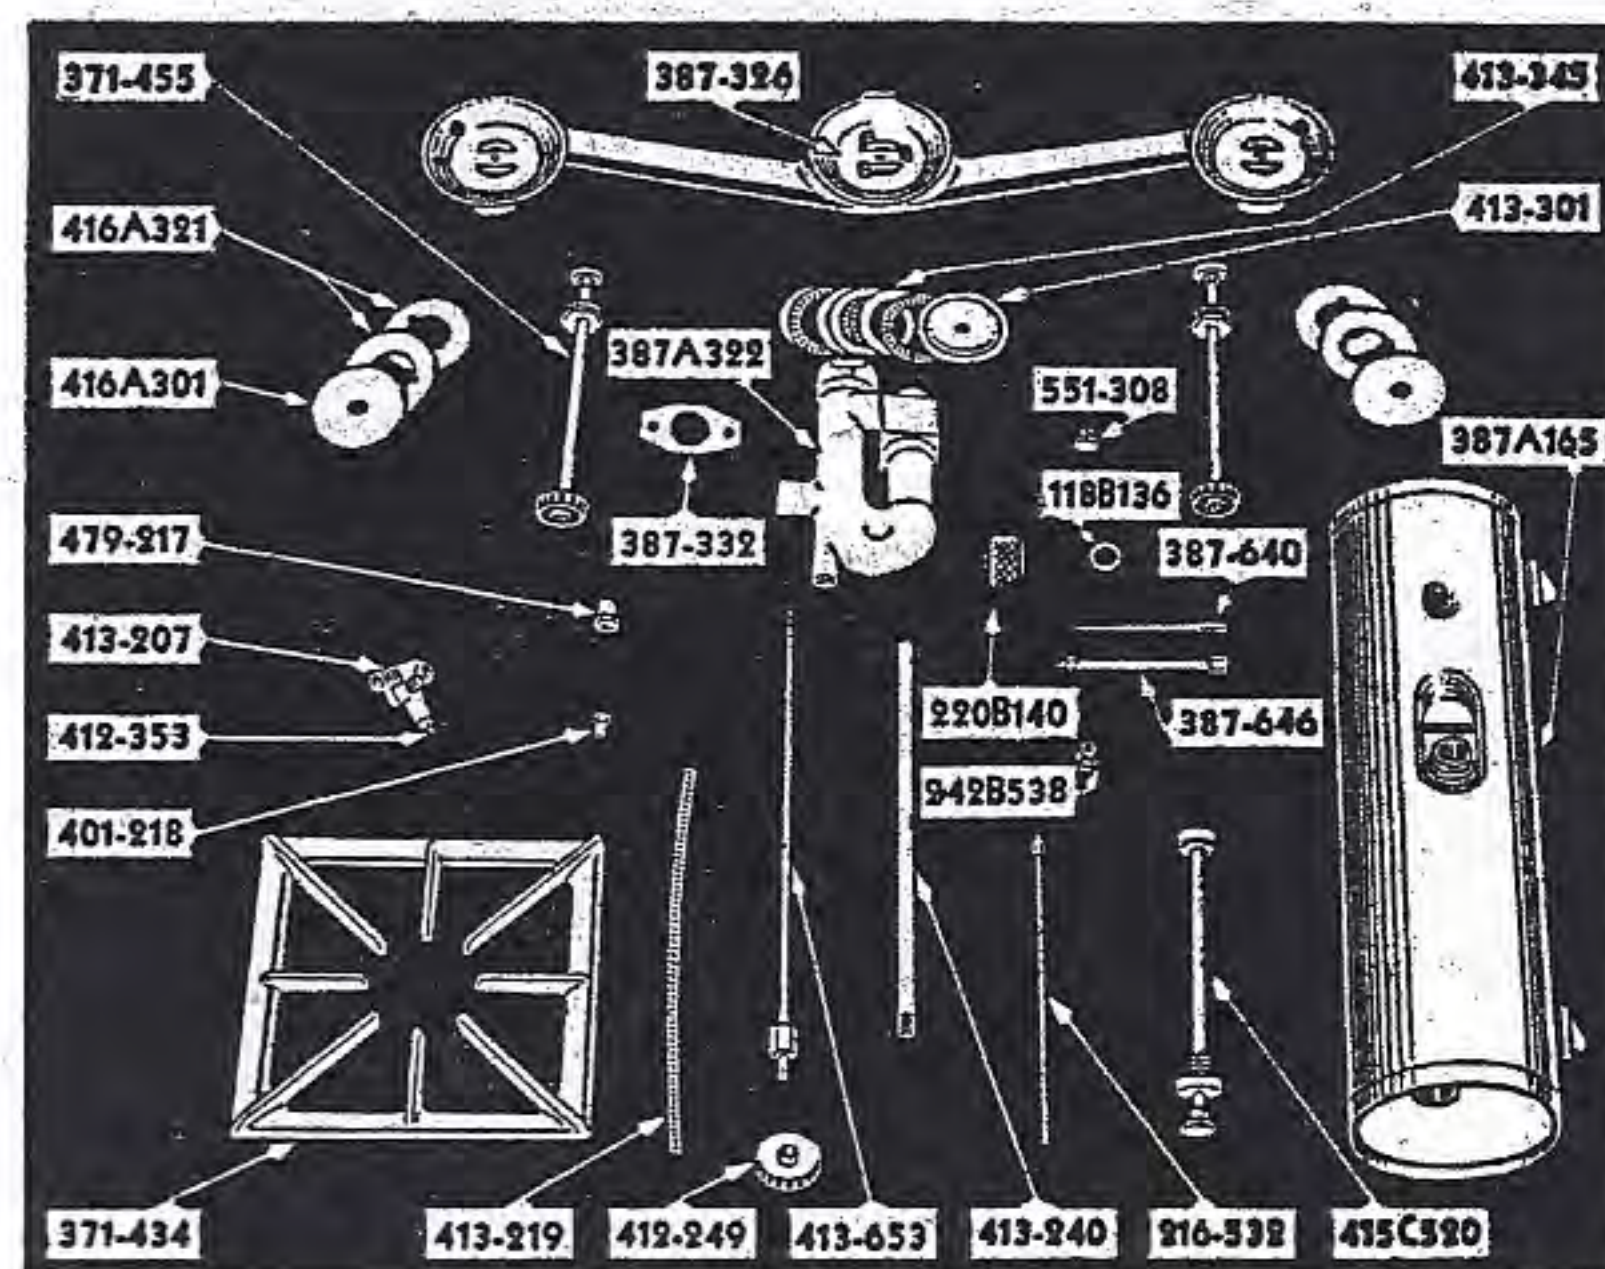


COLEMAN DELUXE AUTO TRAILER HOT PLATE

Model Nos. 387 and 387A


Order by Number	Part Name	Net Retail Price
104-136	Filler Plug Gasket. Model Nos. 387, 387A.....	\$.03
216-509	Pump Leather	.06
216-532	Air Stem. Model 387A..... SUPPLY 413-532 on 387	.27
242B538	Check Valve. Model No. 387A.....	.27
220B140	Filler Plug Complete. Model No. 387A..... SUPPLY 401-164 on 387	.69
371-434	Grate. Model Nos. 387, 387A—Obsolete—Supply 370-434	
371-455	Auxiliary Valve Complete. Model Nos. 387, 387A....	.60
371-935	Grate Clip and Bolts. Model Nos. 387, 387A.....	.21
387-322	Burner Mixing Chamber. Model Nos. 387, 387A— Obsolete—	
387-326	Burner Manifold (Casting only). Model Nos. 387, 387A	2.70
387-332	Burner Gasket. Model Nos. 387, 387A.....	.15
387-640	Eccentric Block and Fuel Needle. Model Nos. 387, 387A	.15
387-646	Fuel and Air Tube with Fuel Tip (Marked "AD"). Model Nos. 387, 387A.....	.60
387-653	Valve Stem Complete (less Needle and Holder). Model Nos. 387, 387A.....	.60
387-655	Valve Stem Complete (less Generator and Valve Stem). Model Nos. 387, 387A.....	1.65
387-660	Valve and Generator Assembly. Model Nos. 387, 387A	3.00
387A165	Tank Complete (less Valve and Generator). Model No. 387A.....	4.80
391-308	Drain Cap. Model Nos. 387, 387A.....	.15
391-325	Air Regulator. Model Nos. 387, 387A.....	.18
401-218	Gas Tip (Marked "B"). Model Nos. 387, 387A.....	.18
407-649	Valve Wheel. Model Nos. 387, 387A.....	.21
412-249	Wheel and Bushing. Model Nos. 387, 387A.....	.21
412-353	Tip Cleaner Stem Complete. Model Nos. 387, 387A....	.21
412-507	Pump Cap Clip. Model No. 387A.....	.03
413-207	Valve Body. Model Nos. 387, 387A.....	.81
413-219	Generator Filler Coil. Model Nos. 387, 387A.....	.15
413-240	Generator Tube Assembly. Model Nos. 387, 387A....	.81
413-262	Complete Set of Generator Renewal Parts including Tube, Gas Tip, Bushing, Coil, Needle and Holder (Gas Tip Marked "B"). Model Nos. 387, 387A.....	1.20
413-301	Burner Cap Cover. Model Nos. 387, 387A.....	.15
413-345	Burner Fillers. Model Nos. 387, 387A.....	.60
415C520	Pump Plunger Complete (Less Air Stem). Model No. 387A..... SUPPLY 413-520 on 387	.60
416A301	Burner Cap Cover. Model Nos. 387, 387A.....	.15
416A321	Spacer (2 per Burner). Model Nos. 387, 387A.....	.15
471-238	Cleaning Needle and Holder. Model No. 387.....	.09
479-217	Needle Protector. Model Nos. 387, 387A.....	.15
551-308	Drain Plug. Model Nos. 387, 387A.....	.15

COLEMAN UTILITY STOVE PARTS ILLUSTRATIONS

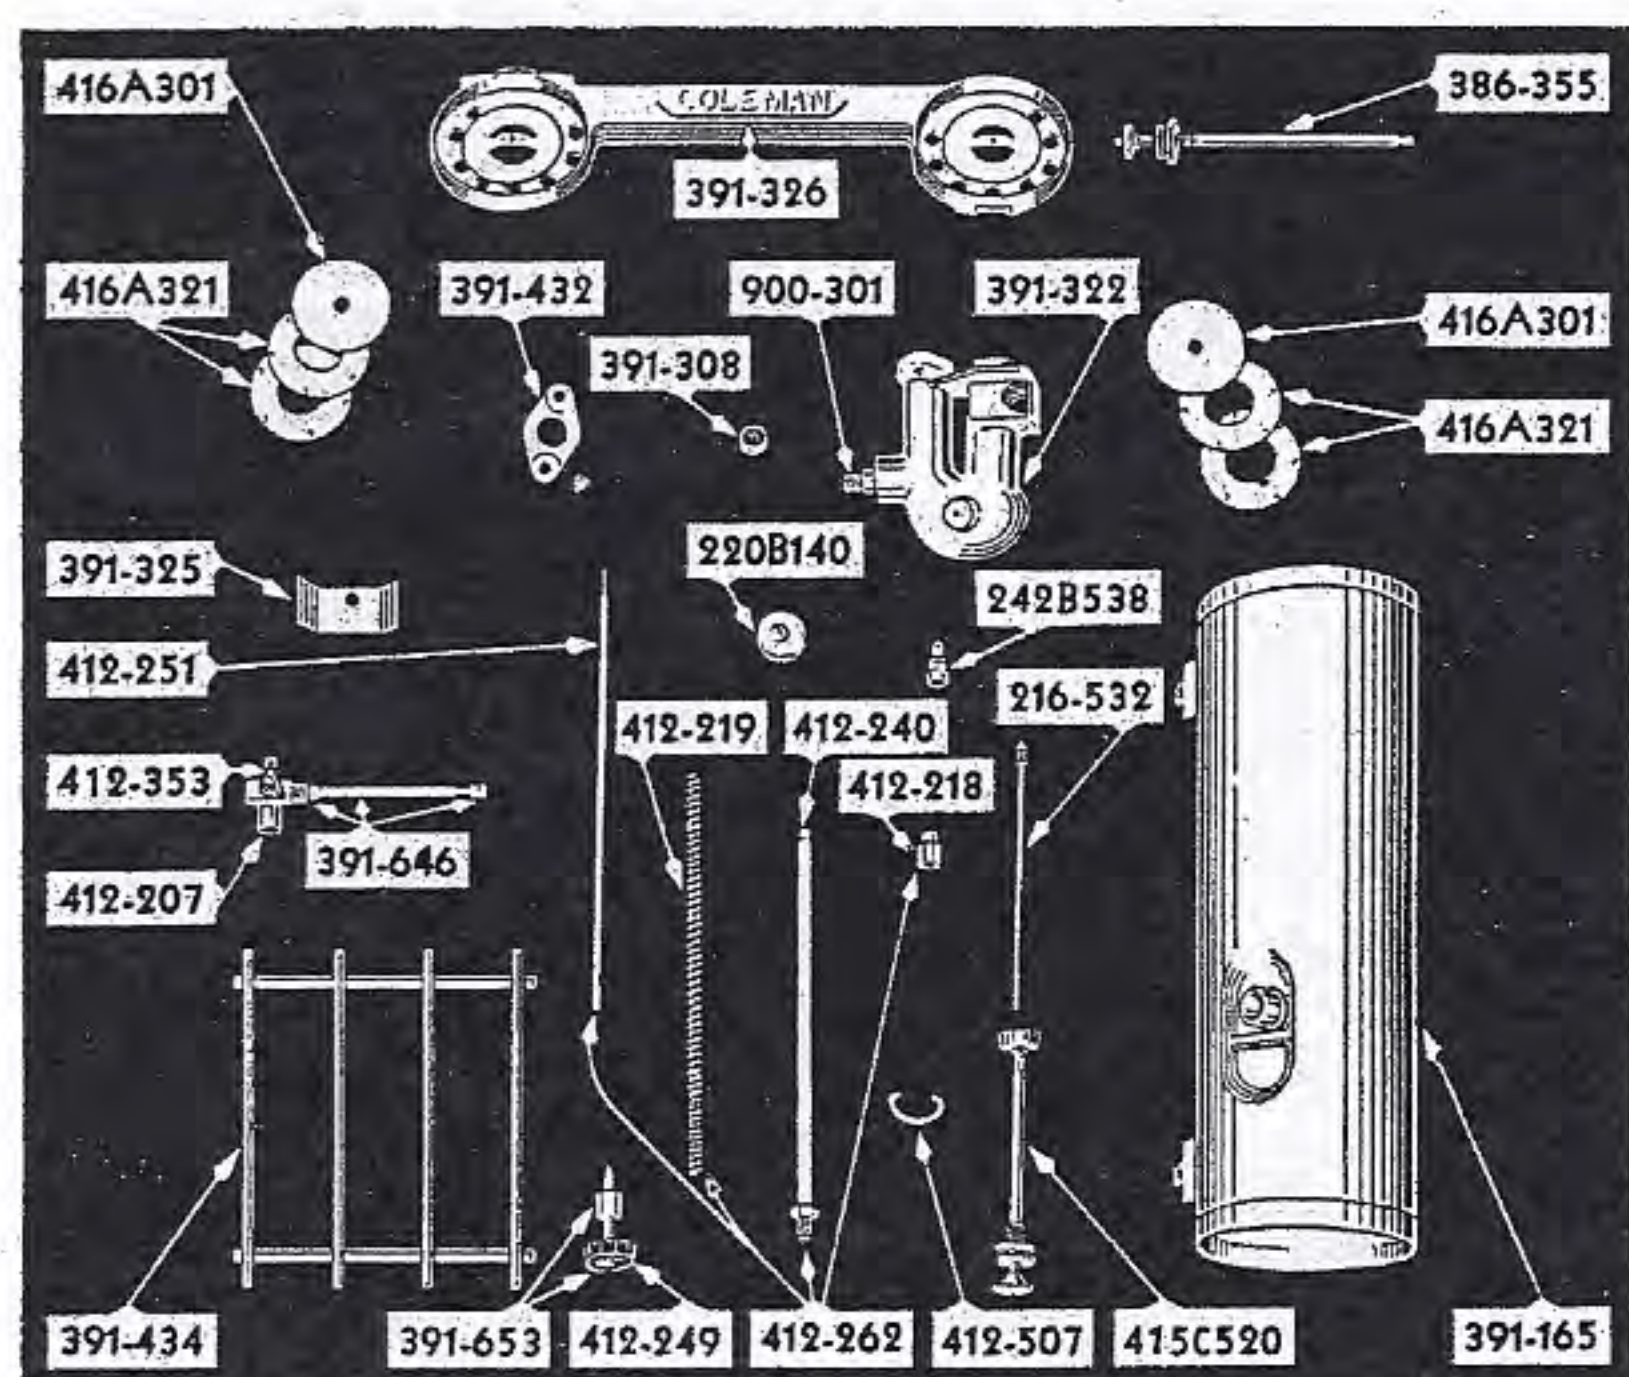

COLEMAN HOT PLATE
Model No. 391


Order by Number	Part Name	Net Retail Price
118B136	Filler Plug Gasket.....	\$.03
216-509	Pump Leather	.06
216-532	Air Stem	.27
216-620	Packing	.03
220B140	Filler Plug Complete.....	.69
242B538	Check Valve	.27
386-355	Auxiliary Valve Complete.....	.60
386-935	Grate Clips and Bolts.....	.21
387-640	Eccentric Block and Fuel Needle.....	.15
391-165	Tank Complete (Less Valve and Generator).....	5.10
391-308	Drain Cap	.15
391-322	Burner Mixing Chamber.....	1.20
391-325	Air Regulator	.18
391-326	Burner (Casting only).....	1.95
391-432	Gasket	.08
391-434	Grate	.42
391-646	Fuel and Air Wire Complete.....	.69
391-653	Valve Stem Complete.....	.48
391-655	Valve Complete (less Valve Stem and Generator).....	1.20
391-660	Fuel Valve and Generator Complete.....	2.70
412-207	Valve Body	.81
412-218	Gas Tip (Marked "AK").....	.18
412-219	Generator Filler Coil.....	.15
412-240	Generator Tube	.81
412-249	Wheel and Bushing.....	.21
412-251	Cleaner Rod and Needle.....	.33
412-262	Complete Set of Generator Renewal Parts including Tube, Gas Tip, Bushing, Coil, Needle and Holder (Gas Tip Marked "AK").....	1.20
412-353	Instant Lighting Lever.....	.21
412-507	Pump Cap Clip.....	.03
415C520	Pump Plunger Complete.....	.60
416A301	Burner Cap Cover.....	.15
416A321	Spacer (2 per Burner).....	.15
900-301	Drain Nipple	.27

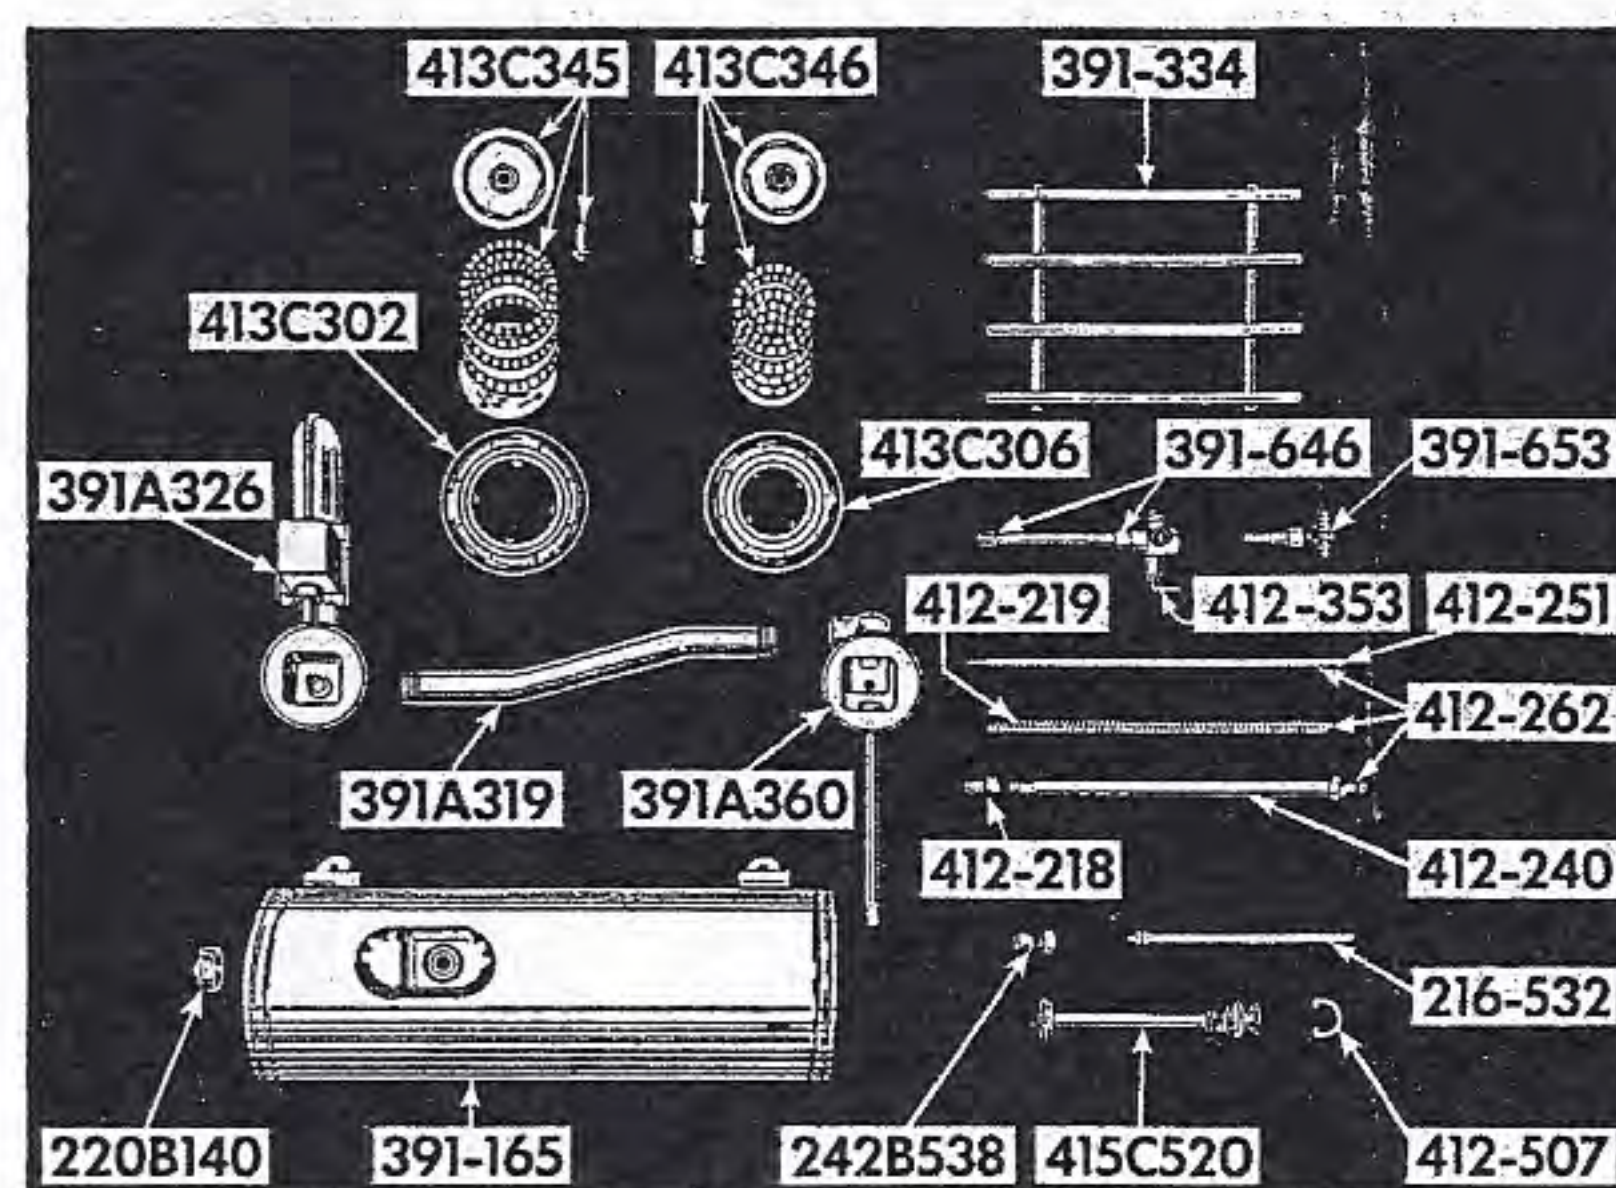

COLEMAN CABIN AND TRAILER STOVE
Model No. 391A

Order by Number	Part Name	Net Retail Price
118B136	Filler Plug Gasket.....	\$.03
216-532	Air Stem	.27
216-620	Packing	.03
220B140	Filler Plug Complete.....	.69
242B538	Check Valve	.27
386-935	Grate Clips and Bolts.....	.21
387-640	Eccentric Block and Fuel Needle.....	.15
391-165	Tank Complete (Less Valve and Generator).....	5.10
391-308	Drain Cap	.15
391A319	Manifold Pipe	1.05
391A326	Master Burner Body and Bunsen Assembly.....	2.70
391A360	Auxiliary Burner Body with Valve Complete.....	3.00
391-434	Grate	.42
391-646	Fuel and Air Wire Complete.....	.69
391-653	Valve Stem Complete.....	.48
391-660	Fuel Valve and Generator Complete.....	2.70
393-375	Drain Tube Assembly.....	.99
412-218	Gas Tip (Marked "AK").....	.18
412-219	Generator Filler Coil.....	.15
412-240	Generator Tube	.81
412-251	Cleaner Rod and Needle.....	.33
412-262	Complete Set of Generator Renewal Parts including Tube, Gas Tip, Bushing, Coil, Needle and Holder (Gas Tip Marked "AK").....	1.20
412-353	Instant Lighting Lever.....	.21
412-507	Pump Cap Clip.....	.03
413C302	Master Burner Bowl.....	.45
413C306	Auxiliary Burner Bowl.....	.45
413C345	Master Cap and Fillers.....	.75
413C346	Auxiliary Cap and Fillers.....	.75
415C520	Pump Plunger Complete (Less Air Stem).....	.60


COLEMAN UTILITY STOVE PARTS ILLUSTRATIONS

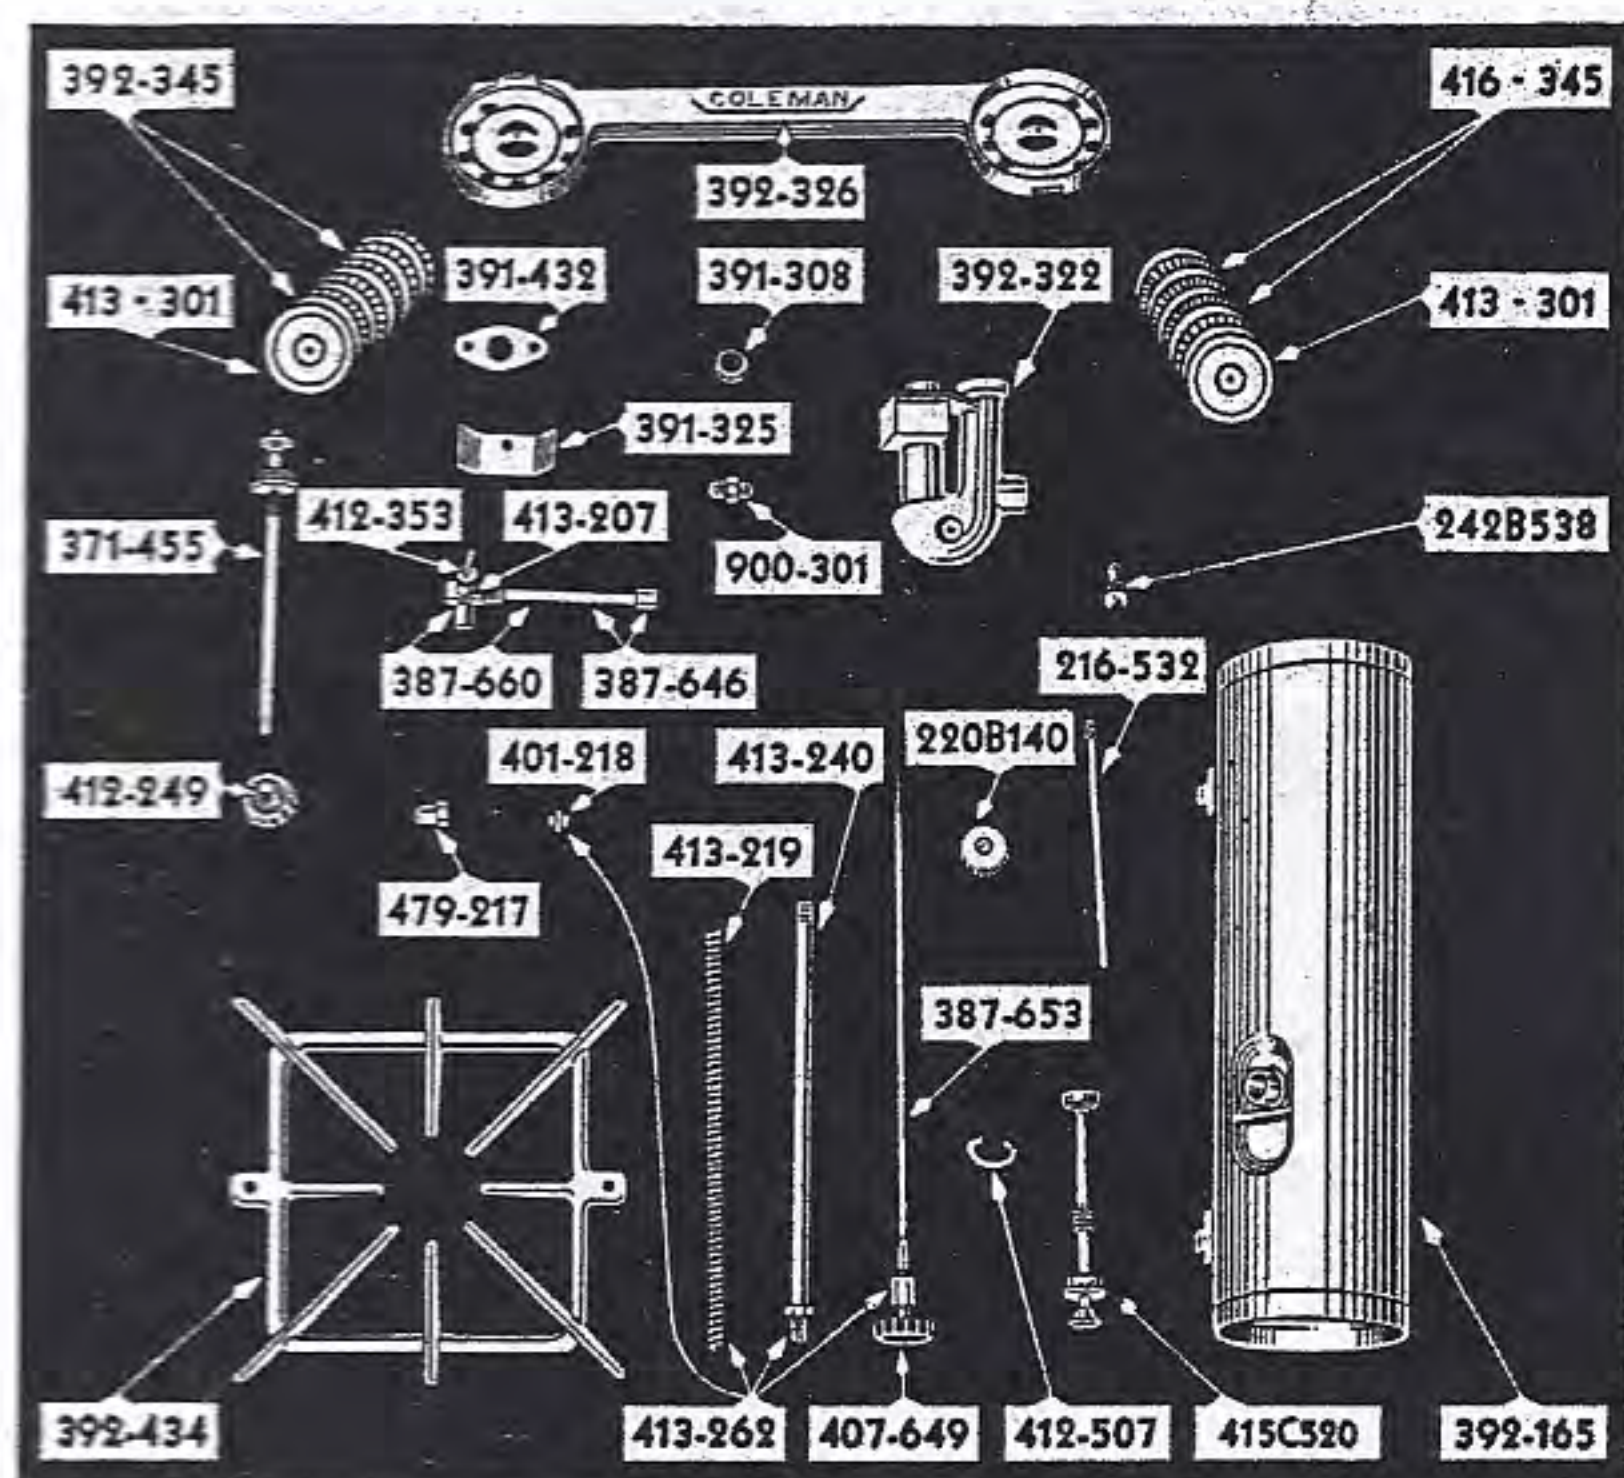

COLEMAN HOT PLATE

Model No. 392

Order by Number	Part Name	Net Retail Price
118B136	Filler Plug Gasket.....	\$.03
216-509	Pump Leather	.06
216-532	Air Stem	.27
220B140	Filler Plug Complete.....	.69
242B538	Check Valve	.27
371-455	Auxiliary Valve Complete.....	.60
387-640	Eccentric Block and Fuel Needle.....	.15
387-646	Fuel and Air Wire with Fuel Tip (Marked "AD").....	.60
387-653	Valve Stem Complete (Less Needle and Holder).....	.60
387-655	Valve Stem Complete.....	1.65
387-660	Valve and Generator Assembly.....	3.00
391-308	Drain Cap	.15
391-325	Air Regulator	.18
391-432	Gasket	.09
392-165	Tank Complete (less Valve and Generator).....	4.80
392-322	Burner Mixing Chamber.....	.81
392-326	Burner (Casting Only)—Obsolete	
392-345	Burner Fillers	.81
392-434	Grate	.81
413-219	Generator Filler Coil.....	.15
413-240	Generator Tube Assembly.....	.81
413-262	Complete Set of Generator Renewal Parts including Tube, Gas Tip, Bushing, Coil, Needle and Holder (Gas Tip Marked "B").....	1.20
413-301	Burner Cap Cover.....	.15
413-345	Burner Fillers	.60
415C520	Pump Plunger Complete (less Air Stem).....	.60
479-217	Needle Protector	.15
900-301	Drain Nipple	.27

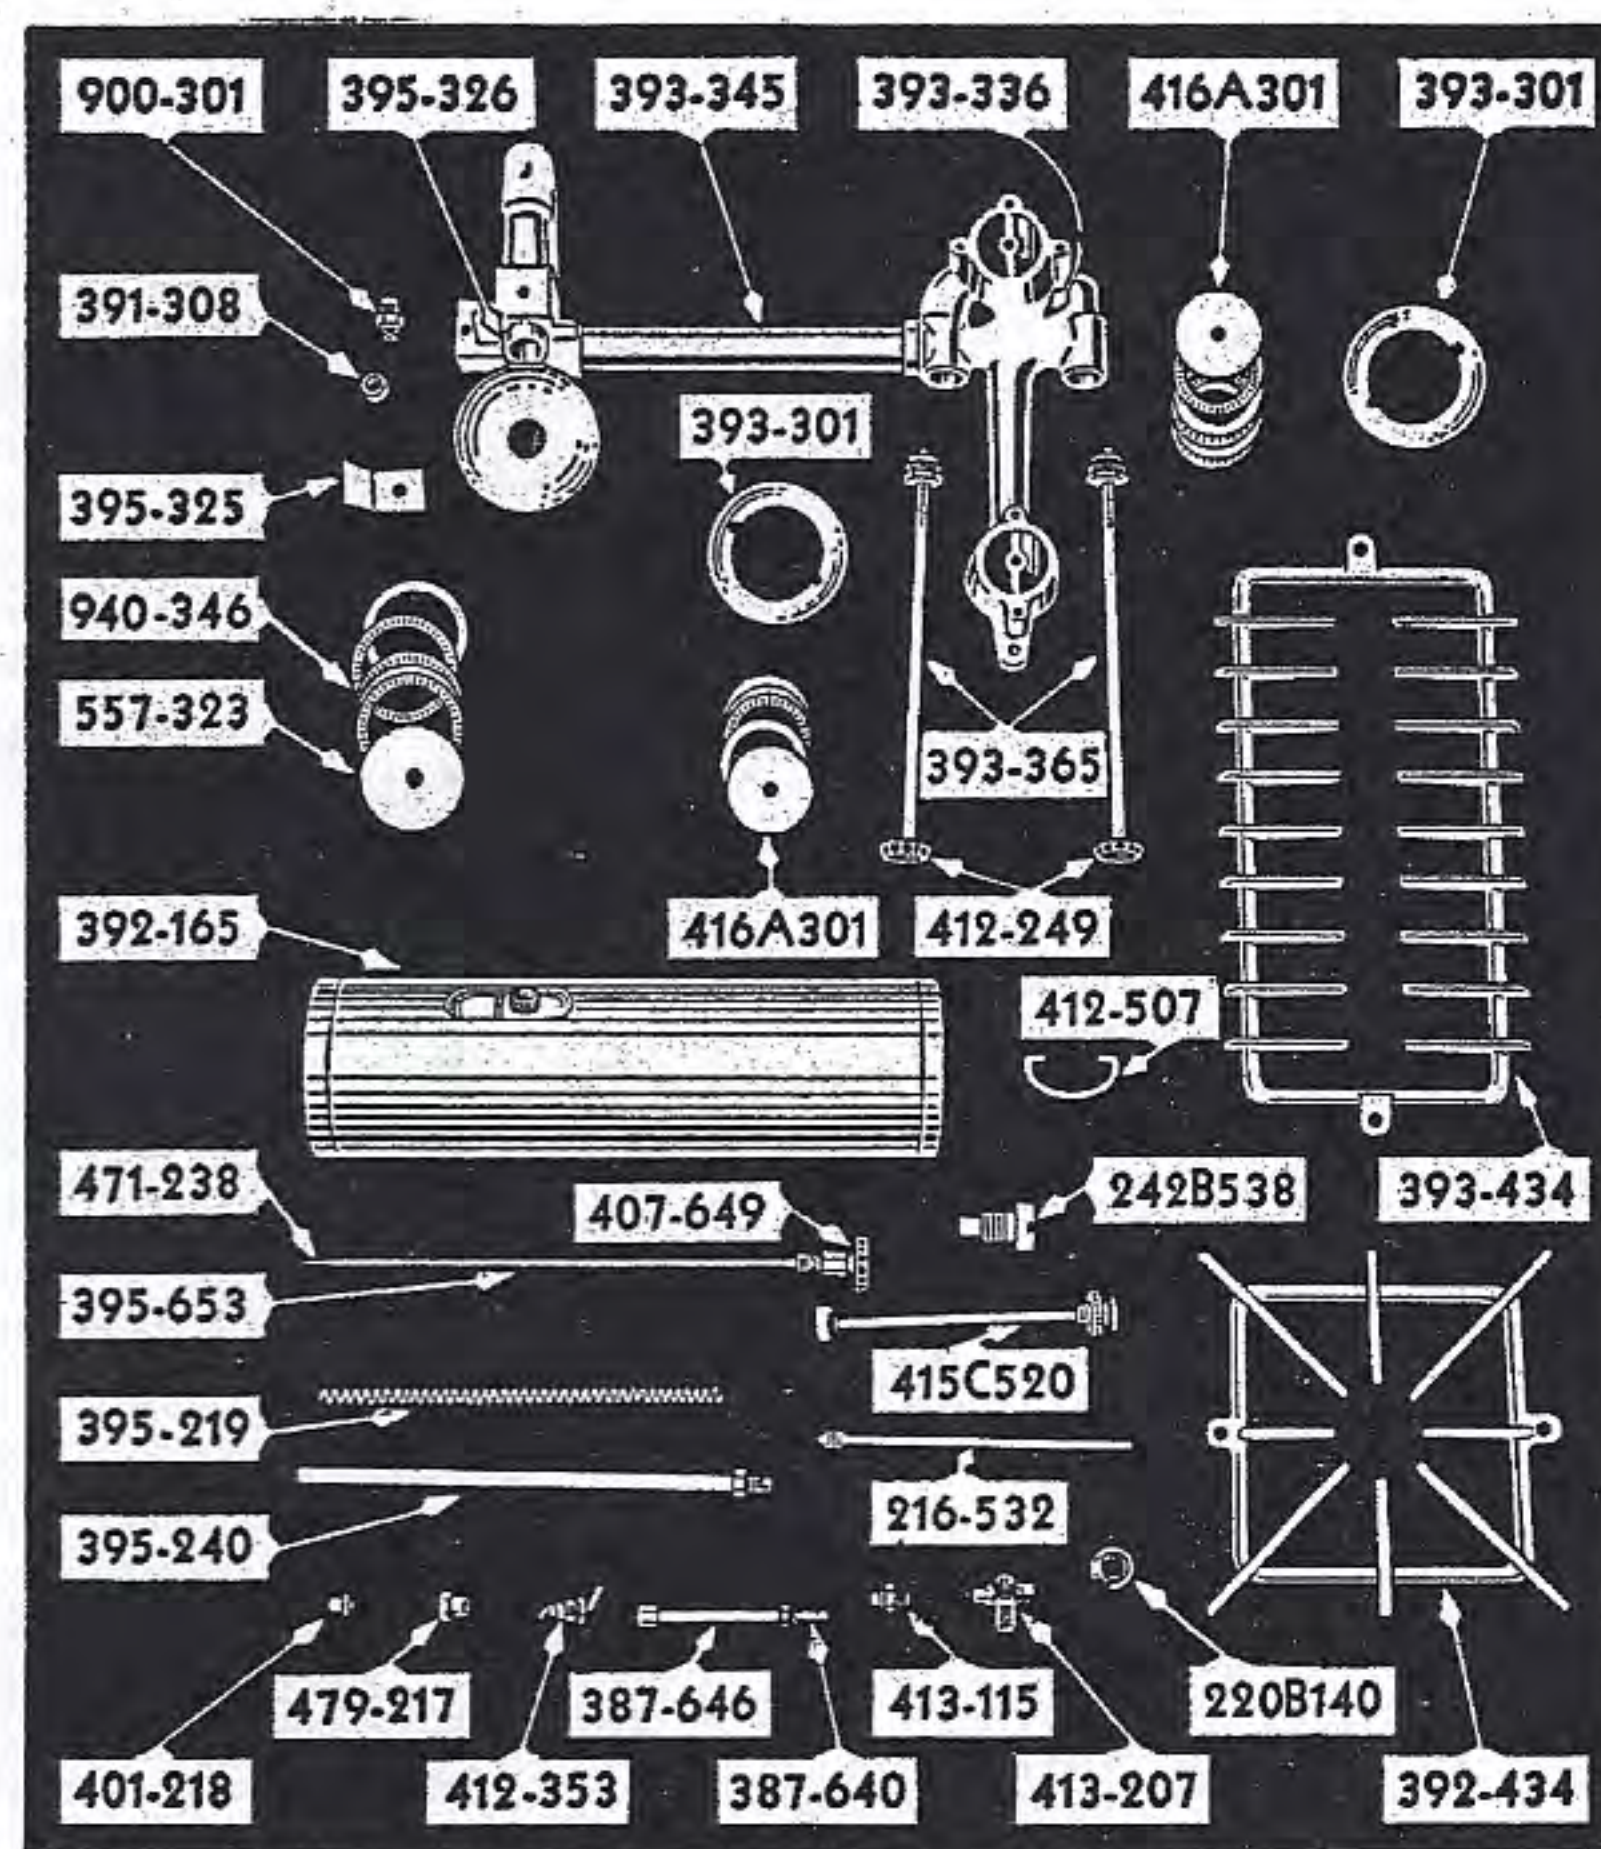


COLEMAN 3-BURNER HOT PLATE

Model No. 395


Order by Number	Part Name	Net Retail Price
118B136	Filler Plug Gasket.....	\$.03
216-509	Pump Leather	.06
216-532	Air Stem	.27
220B140	Filler Plug Complete.....	.69
242B538	Check Valve	.27
387-640	Eccentric Block and Fuel Needle.....	.15
387-646	Fuel and Air Tube with Fuel Tip (Marked "AD").....	.60
391-308	Drain Cap	.15
392-165	Tank Complete (less Valve and Generator).....	4.80
392-434	Grate	.81
393-301	Heat Bowl (Auxiliary).....	.21
393-336	Auxiliary Burner Manifold.....	1.65
393-345	Master to Auxiliary Burner Supply Pipe.....	.81
393-365	Auxiliary Valve Stem Complete.....	.81
393-434	Auxiliary Burner Grate.....	1.20
395-219	Generator Filler Coil.....	.15
395-240	Generator Tube and Bushing.....	.81
395-262	Complete Set of Generator Renewal Parts including Tube, Gas Tip, Bushing, Coil, Needle and Holder....	1.20
395-325	Air Regulator	.03
395-326	Master Burner (Casting only).....	2.40
395-653	Valve Stem (less Needle and Holder).....	.60
395-660	Valve and Generator Assembly.....	3.30
401-218	Gas Tip (Marked "B").....	.18
407-649	Valve Wheel	.21
412-249	Wheel and Bushing.....	.21
412-353	Tip Cleaner Stem Complete.....	.21
412-507	Pump Cap Clip.....	.03
413-115	Feed Tube Connection.....	.09
413-207	Valve Body	.81
415C520	Pump Plunger Complete (less Air Stem).....	.60
416A301	Burner Cap Cover.....	.15
471-238	Cleaning Needle and Holder.....	.09
479-217	Needle Protector	.15
557-323	Burner Cap	.21
900-301	Drain Nipple	.27
940-346	Burner Rings	1.20

Complements of the Old Town Coleman Center

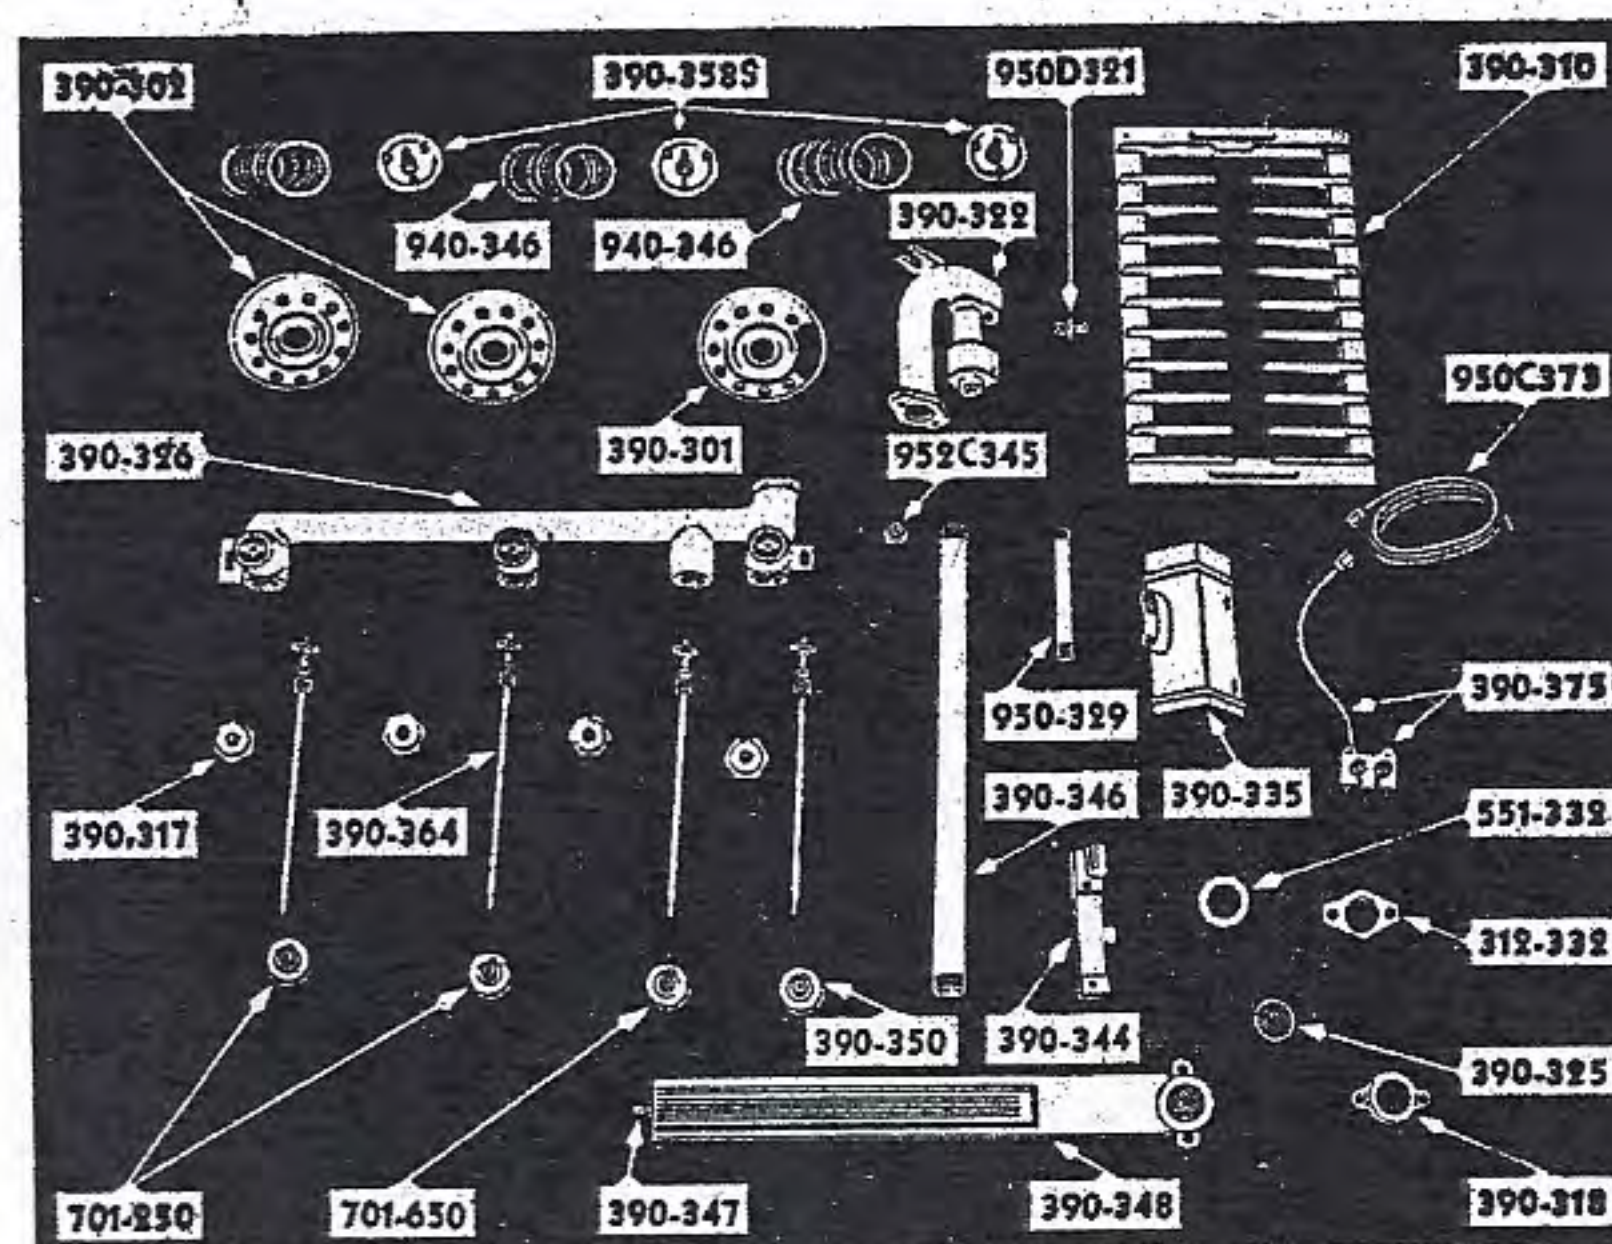

Model Nos. 390 and 390L


390-655—Valve Complete (Less Generator and Valve Stem)

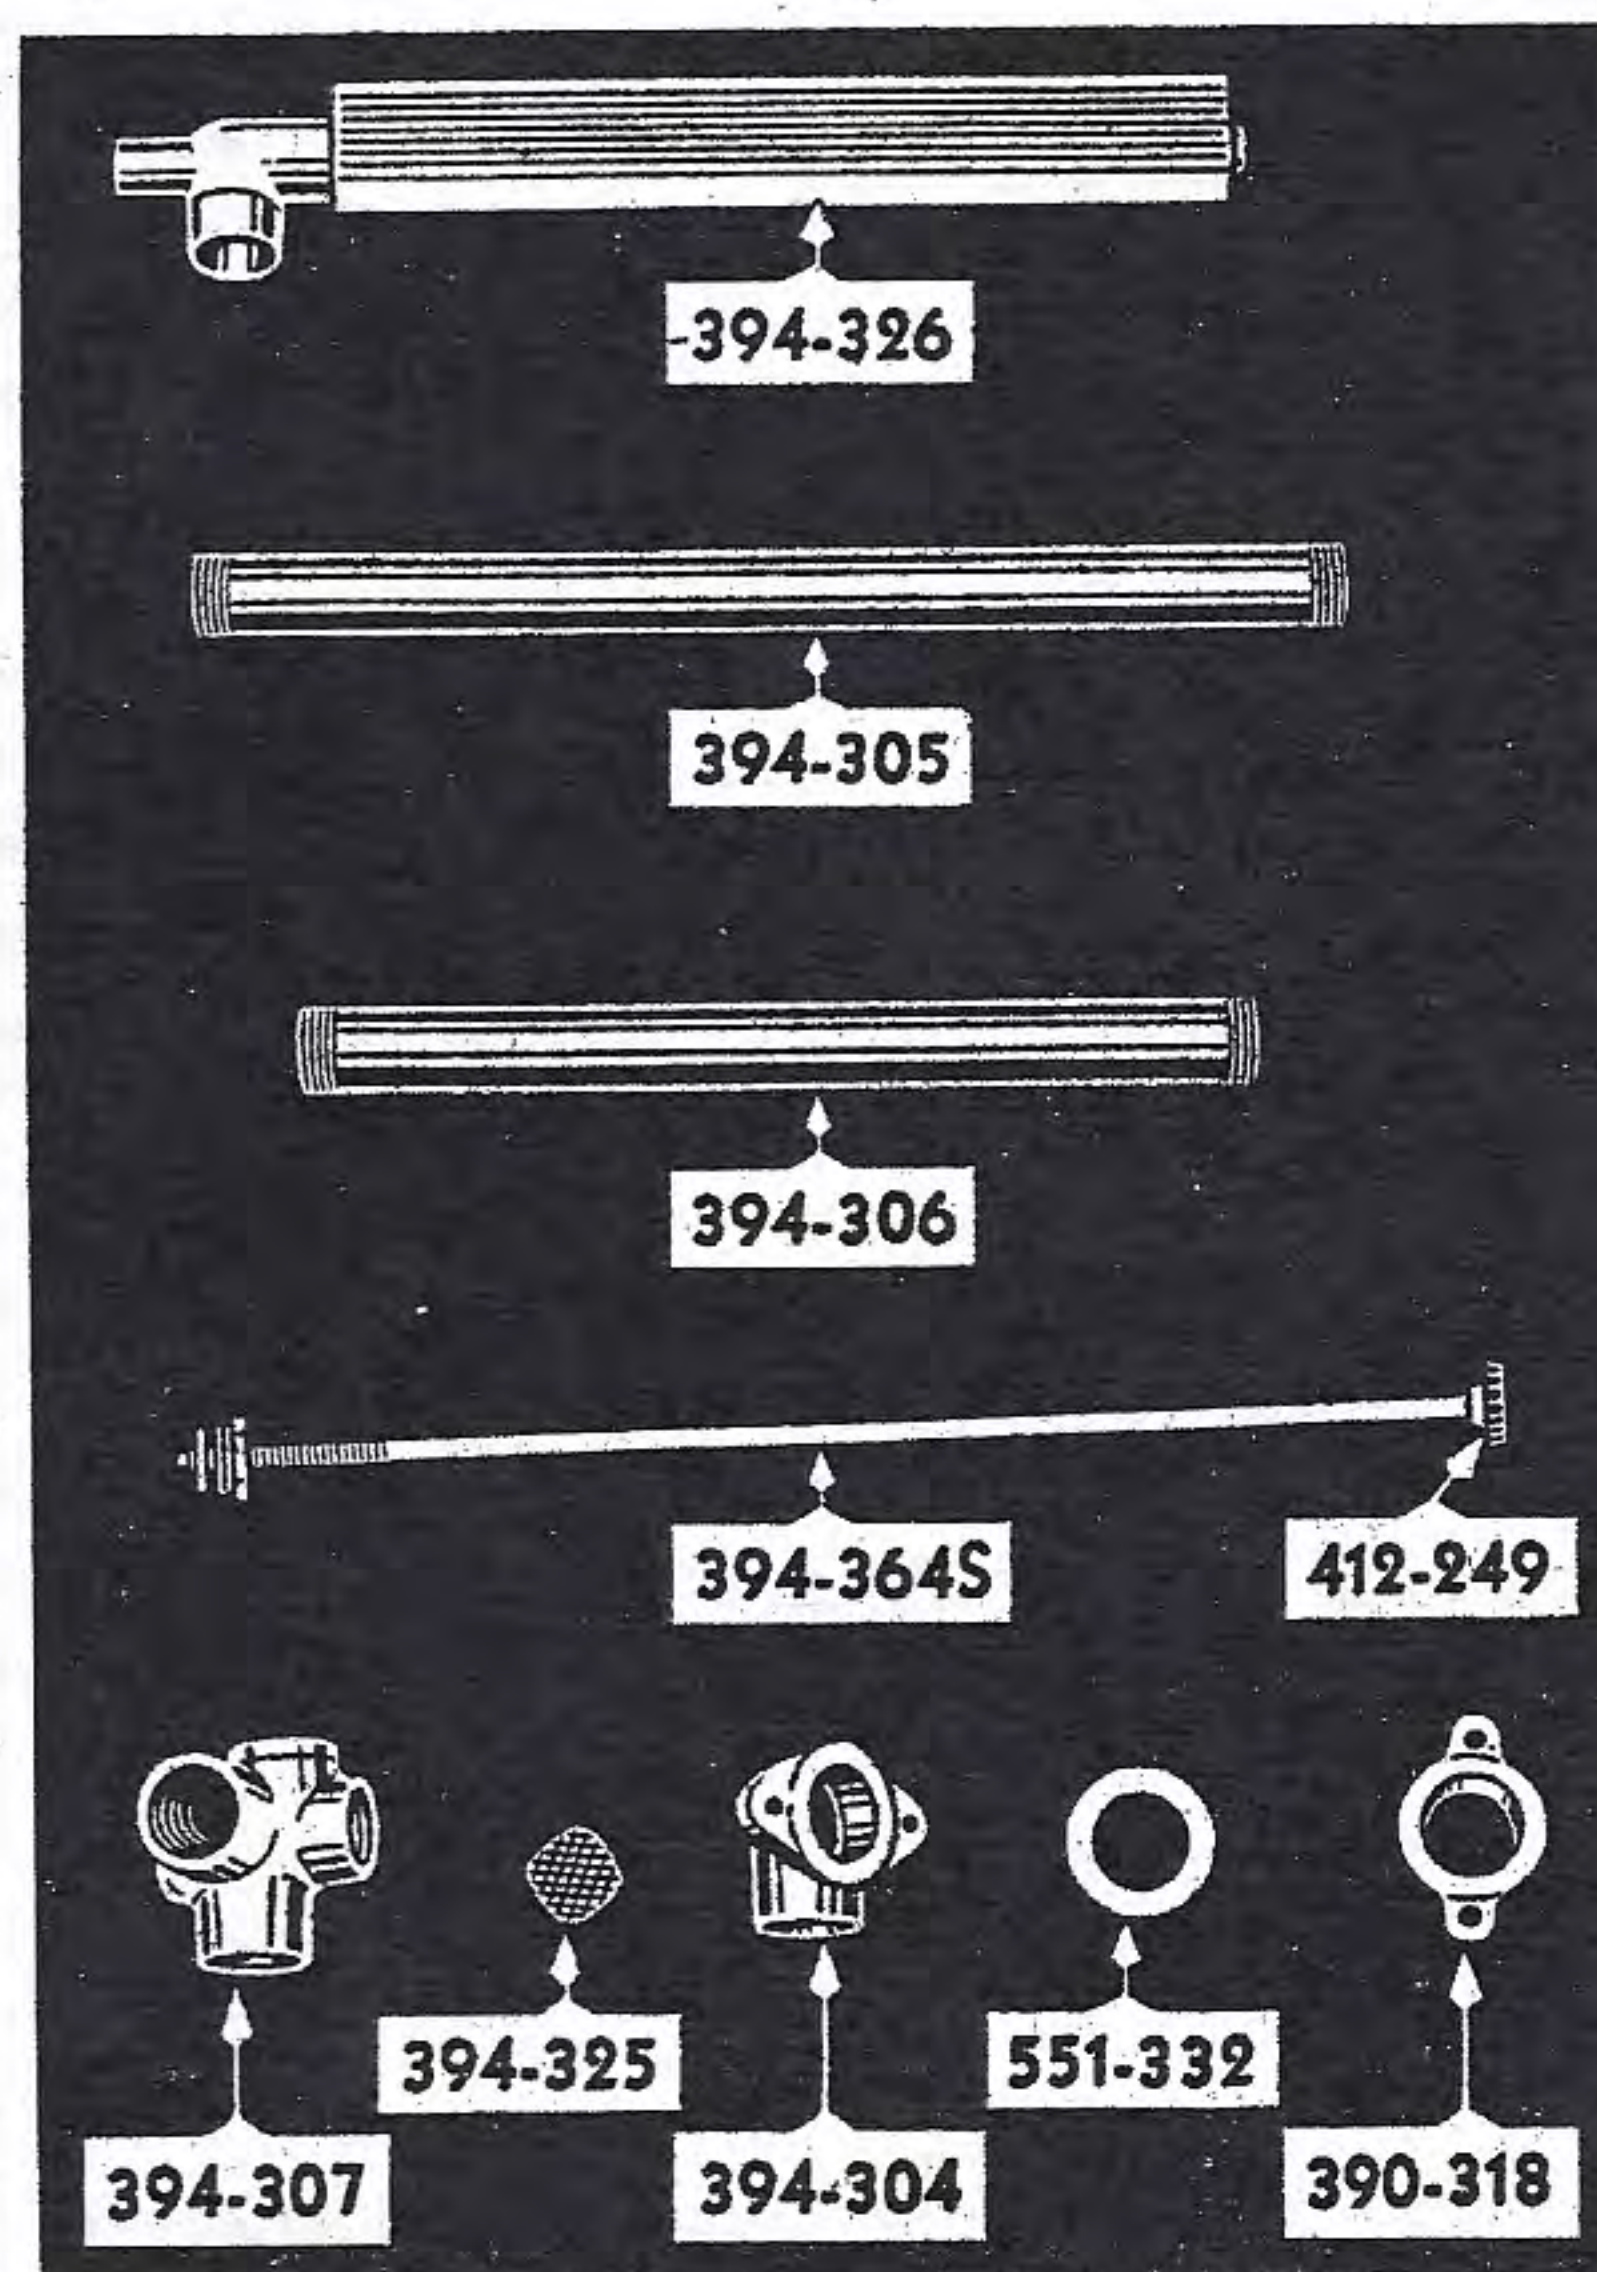

RANGE OVEN Model No. 394

—28—

COLEMAN CABIN AND TRAILER STOVE PARTS ILLUSTRATIONS

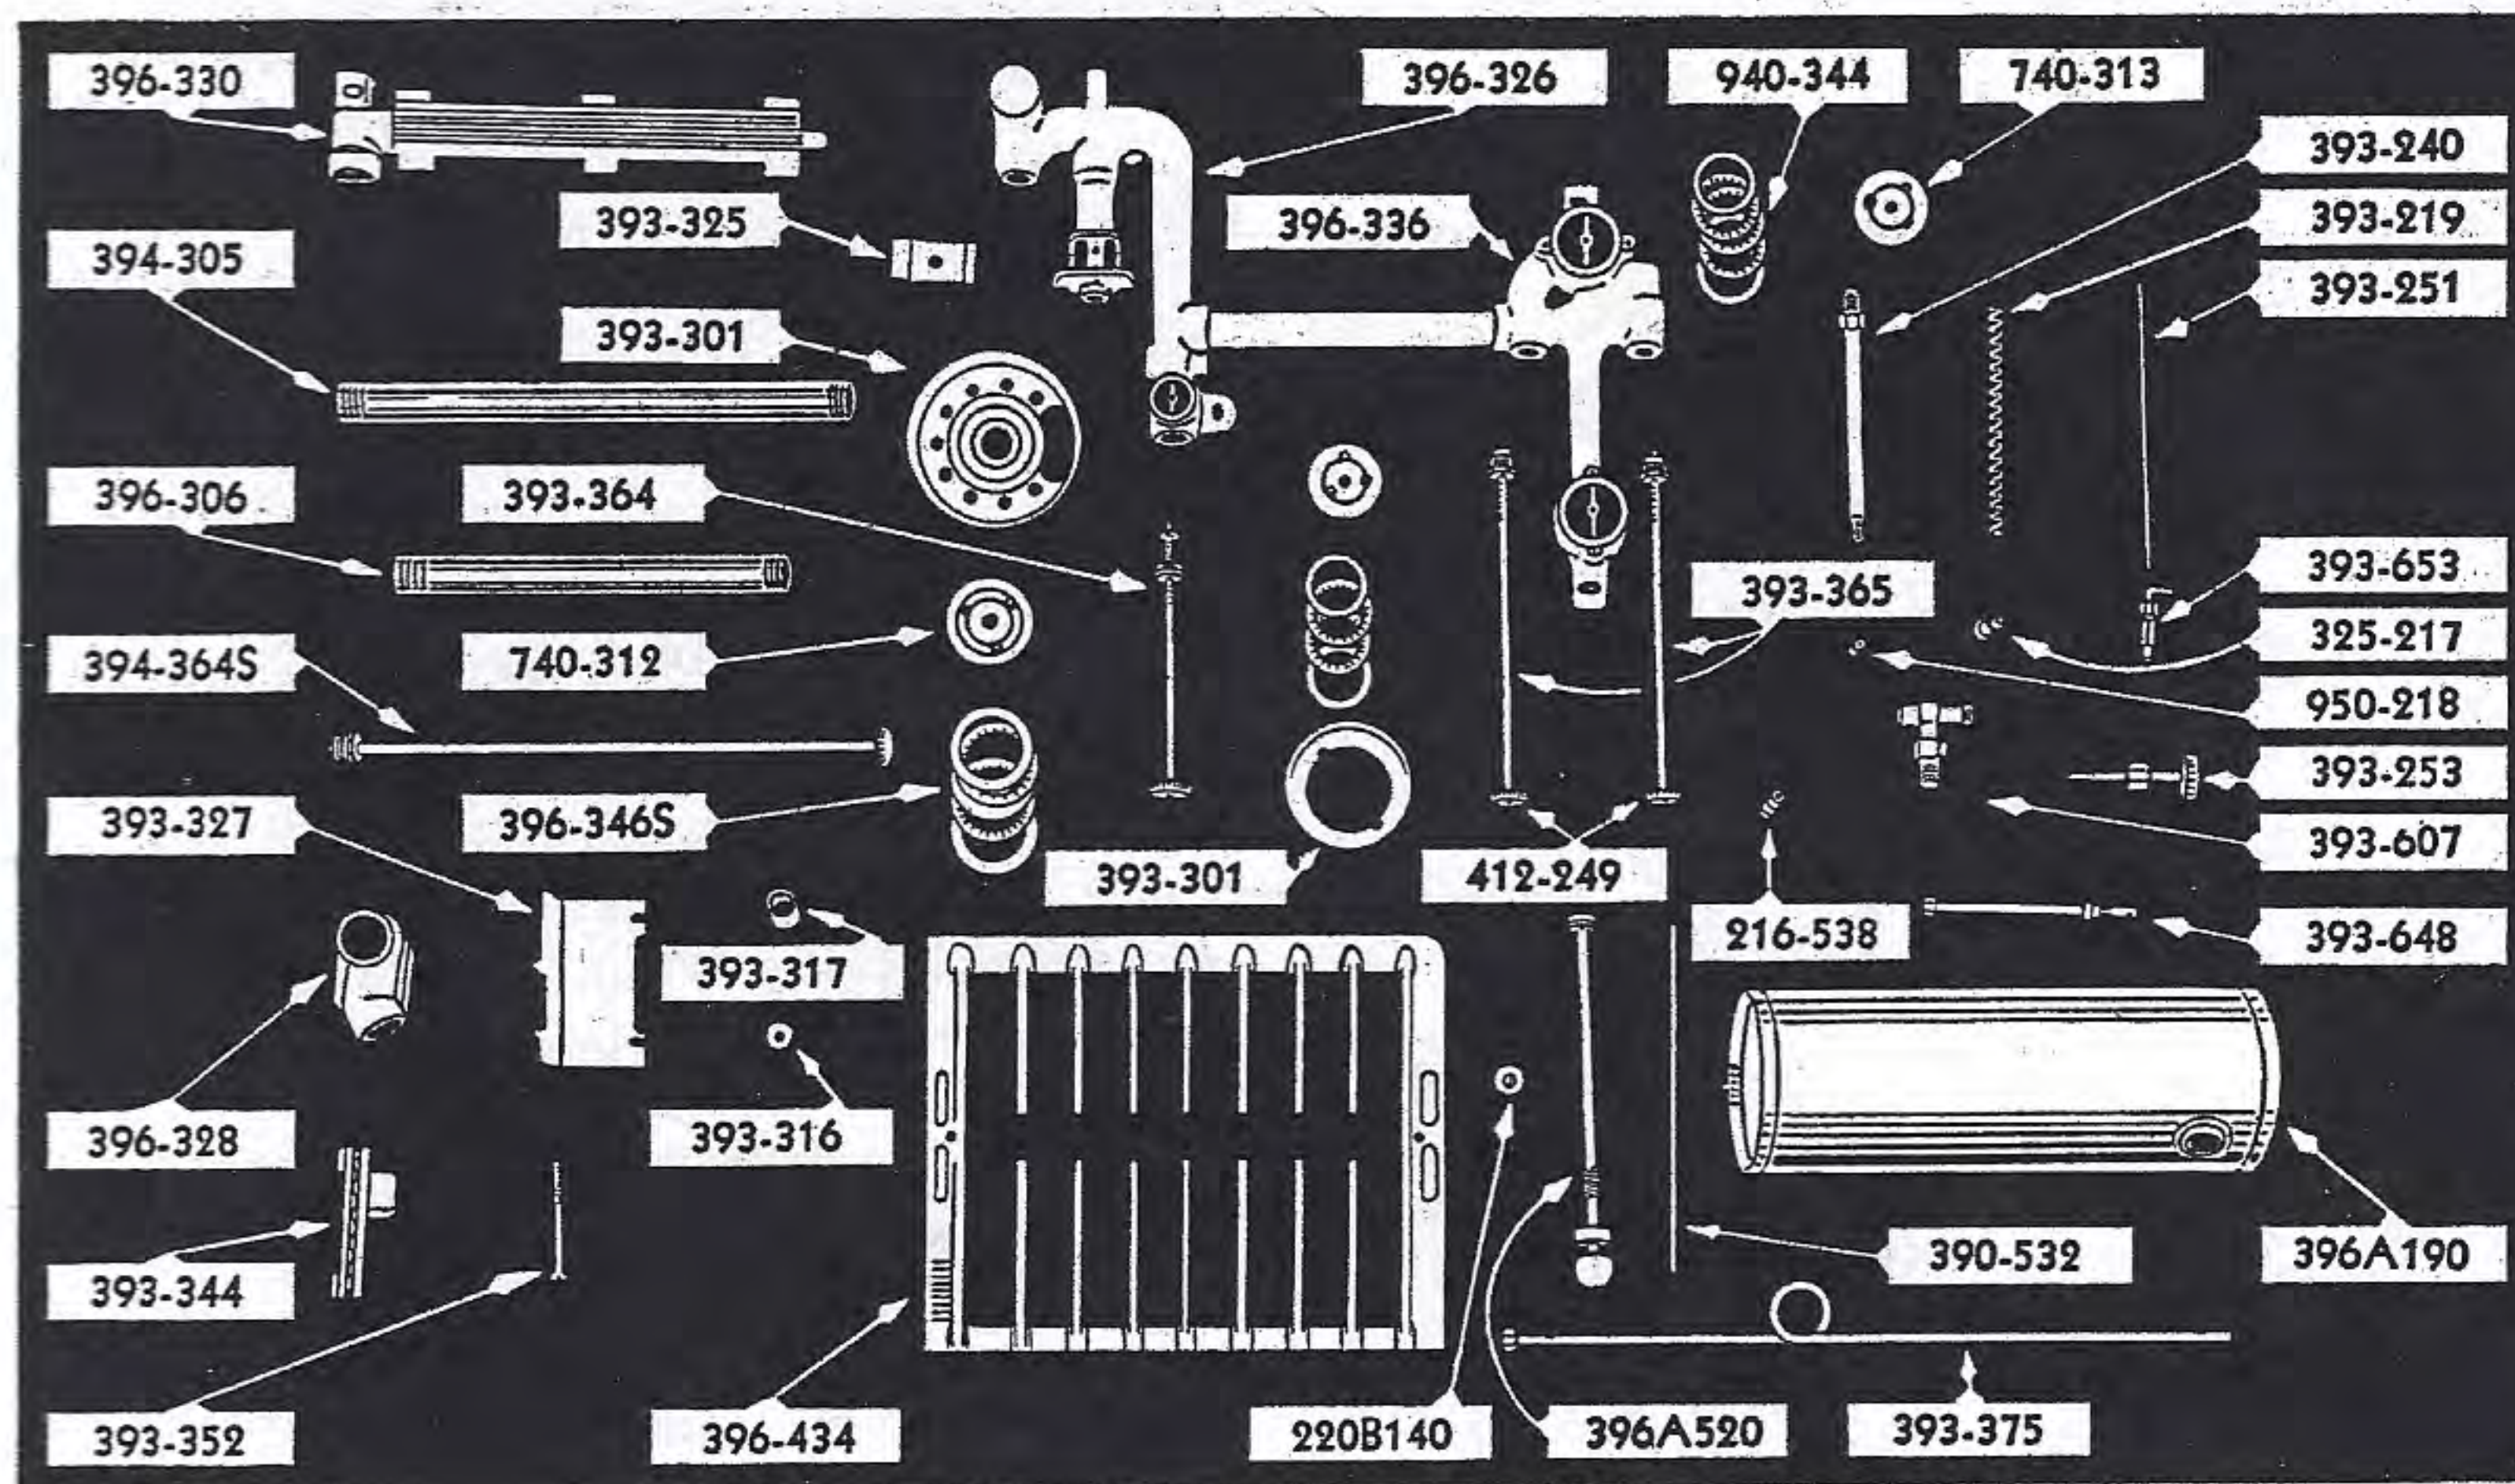

COLEMAN CABIN AND TRAILER RANGE



Model Nos. 396, 396A, 396B and 397

(LC Indicates Range Less Cover)

Order by Number	Part Name	Net Retail Price
216-538	Check Valve. All Models.....	\$.27
220B140	Filler Plug Complete. All Models.....	.69
325-217	Tip Protector. All Models.....	.15
390-301	Heat Bowl (Giant). All Models.....	.42
390-532	Air Stem. All Models.....	.48
393-219	Generator Filler Coil. All Models.....	.21
393-240	Generator Tube and Bushing. All Models.....	1.20
393-251	Cleaning Rod and Needle. All Models.....	.33
393-253	Valve Stem Complete (less Cleaner Rod and Needle). All Models.....	.48
393-262	Generator Renewal Parts, including Generator Tube, Coil, Tip, Tip Protector, Cleaner Rod and Needle (Gas Tip Marked "..."). All Models.....	1.50
393-316	Sub-Flame Gasket. All Models.....	.03
393-317	Sub-Flame Nipple. All Models.....	.15
393-325	Air Intake Adjuster. All Models.....	.15
393-327	Sub-Flame Baffle. All Models.....	.42
393-344	Sub-Flame Complete with Fillers. All Models.....	1.20
393-345	Master to Auxiliary Burner Supply Pipe. All Models...	.81
393-352	1/4-20x3 1/4 Flat Hd. Stl. M. Screw. All Models.....	.15
393-364S	Master Burner Valve Stem Complete. All Models.....	.81
393-365S	Auxiliary Valve Stem Complete. All Models.....	.81
393-375	Drain Wire Assembly. Model Nos. 396, 396A.....	.99
393-607	Valve Body. All Models.....	1.50
393-648	Fuel and Air Tube with Fuel Needle (Fuel Tip Marked "BN"). All Models.....	.42


Order by Number	Part Name	Net Retail Price
393-653	Lighting Lever Complete. All Models.....	\$.48
393-660	Valve and Generator Complete. All Models.....	3.60
394-305	Oven Feed Pipe (Down). All Models.....	.81
394-364S	Oven Valve Stem. All Models.....	.81
396-306	Feed Pipe. All Models.....	.60
396-326	Master Burner Manifold. All Models.....	2.40
396-328	Oven Connecting Ell. All Models.....	.81
396-330	Oven Burner Manifold. All Models.....	1.65
396-336	Auxiliary Burner Manifold. All Models.....	1.65
396-346S	Burner Fillers. All Models.....	1.20
396-434	Grate. All Models.....	1.65
396A190	Tank Complete (less Valve and Generator). Model No. 396A.....	9.00
396A191	Tank Complete (with Valve and Generator). Model No. 396A.....	12.60
396A520	Pump Plunger Complete. Model 396A.....	1.20
412-249	Wheel and Bushing. All Models.....	.21
740-312	Giant Burner Cap. All Models.....	.09
740-313	Standard Burner Cap. All Models.....	.09
900-301	Drain Nipple. All Models.....	.27
940-344	Burner Fillers. All Models.....	.81
950-218	Gas Tip (Marked "..."). All Models.....	.18

COLEMAN CABIN AND UTILITY STOVE PARTS ILLUSTRATIONS

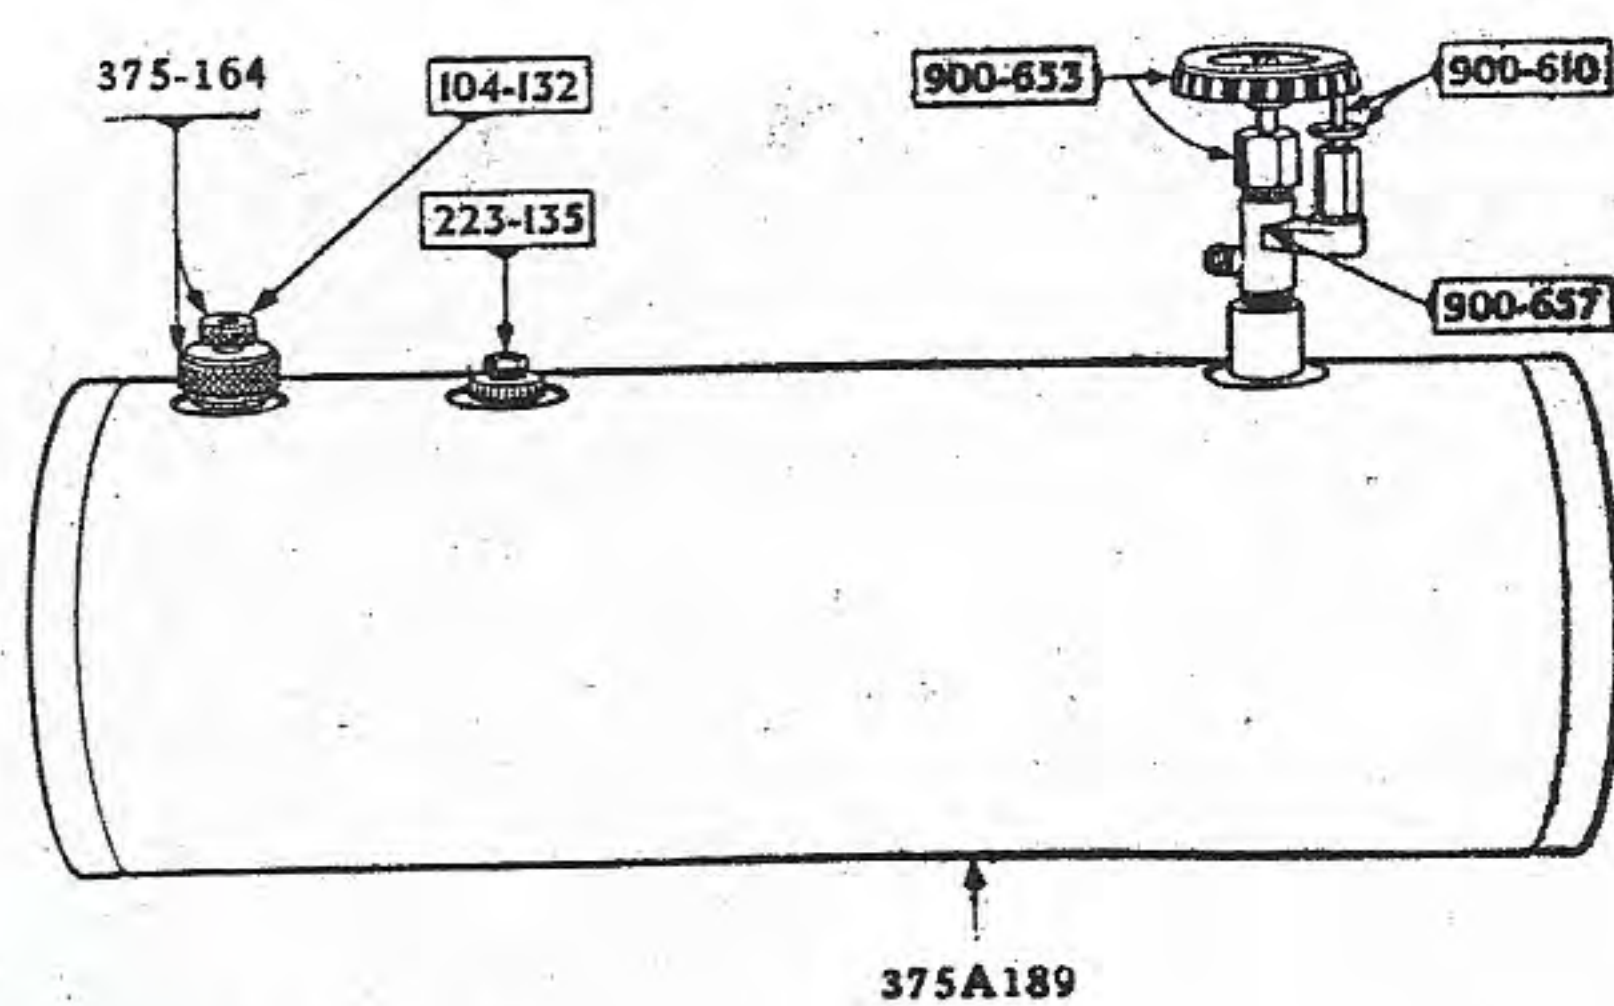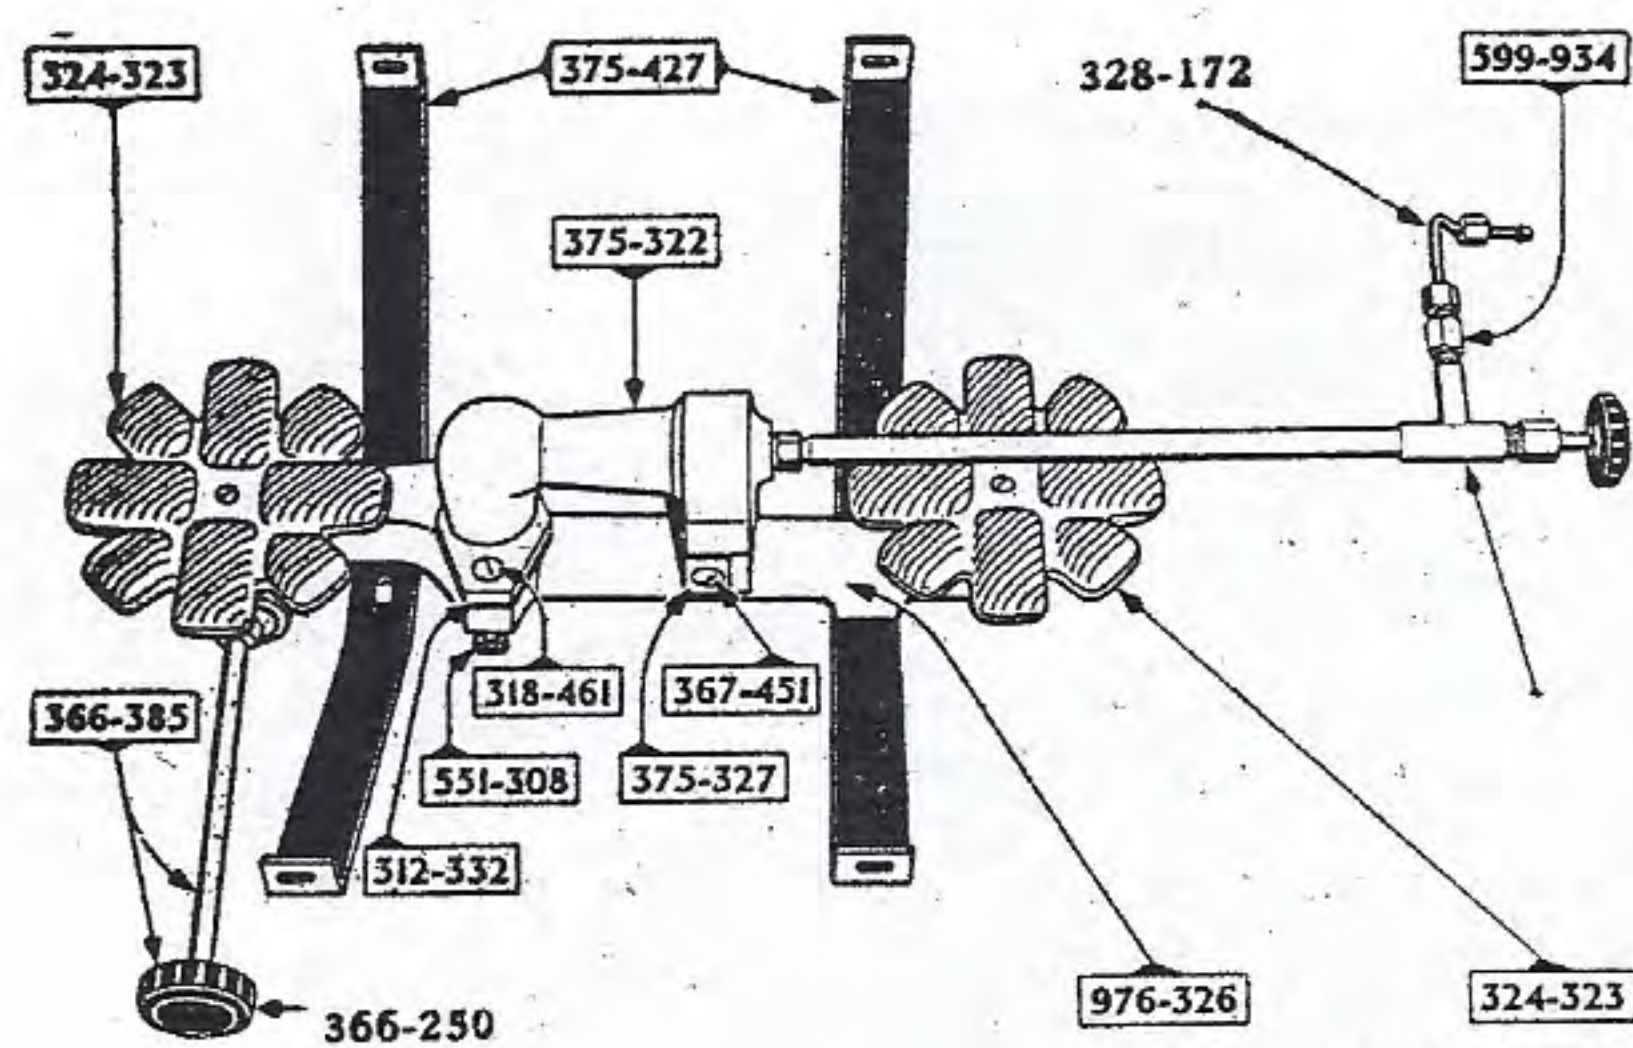




CABIN STOVE MODEL No. 376

Use Generator 940-262. Illustrated on Page 31

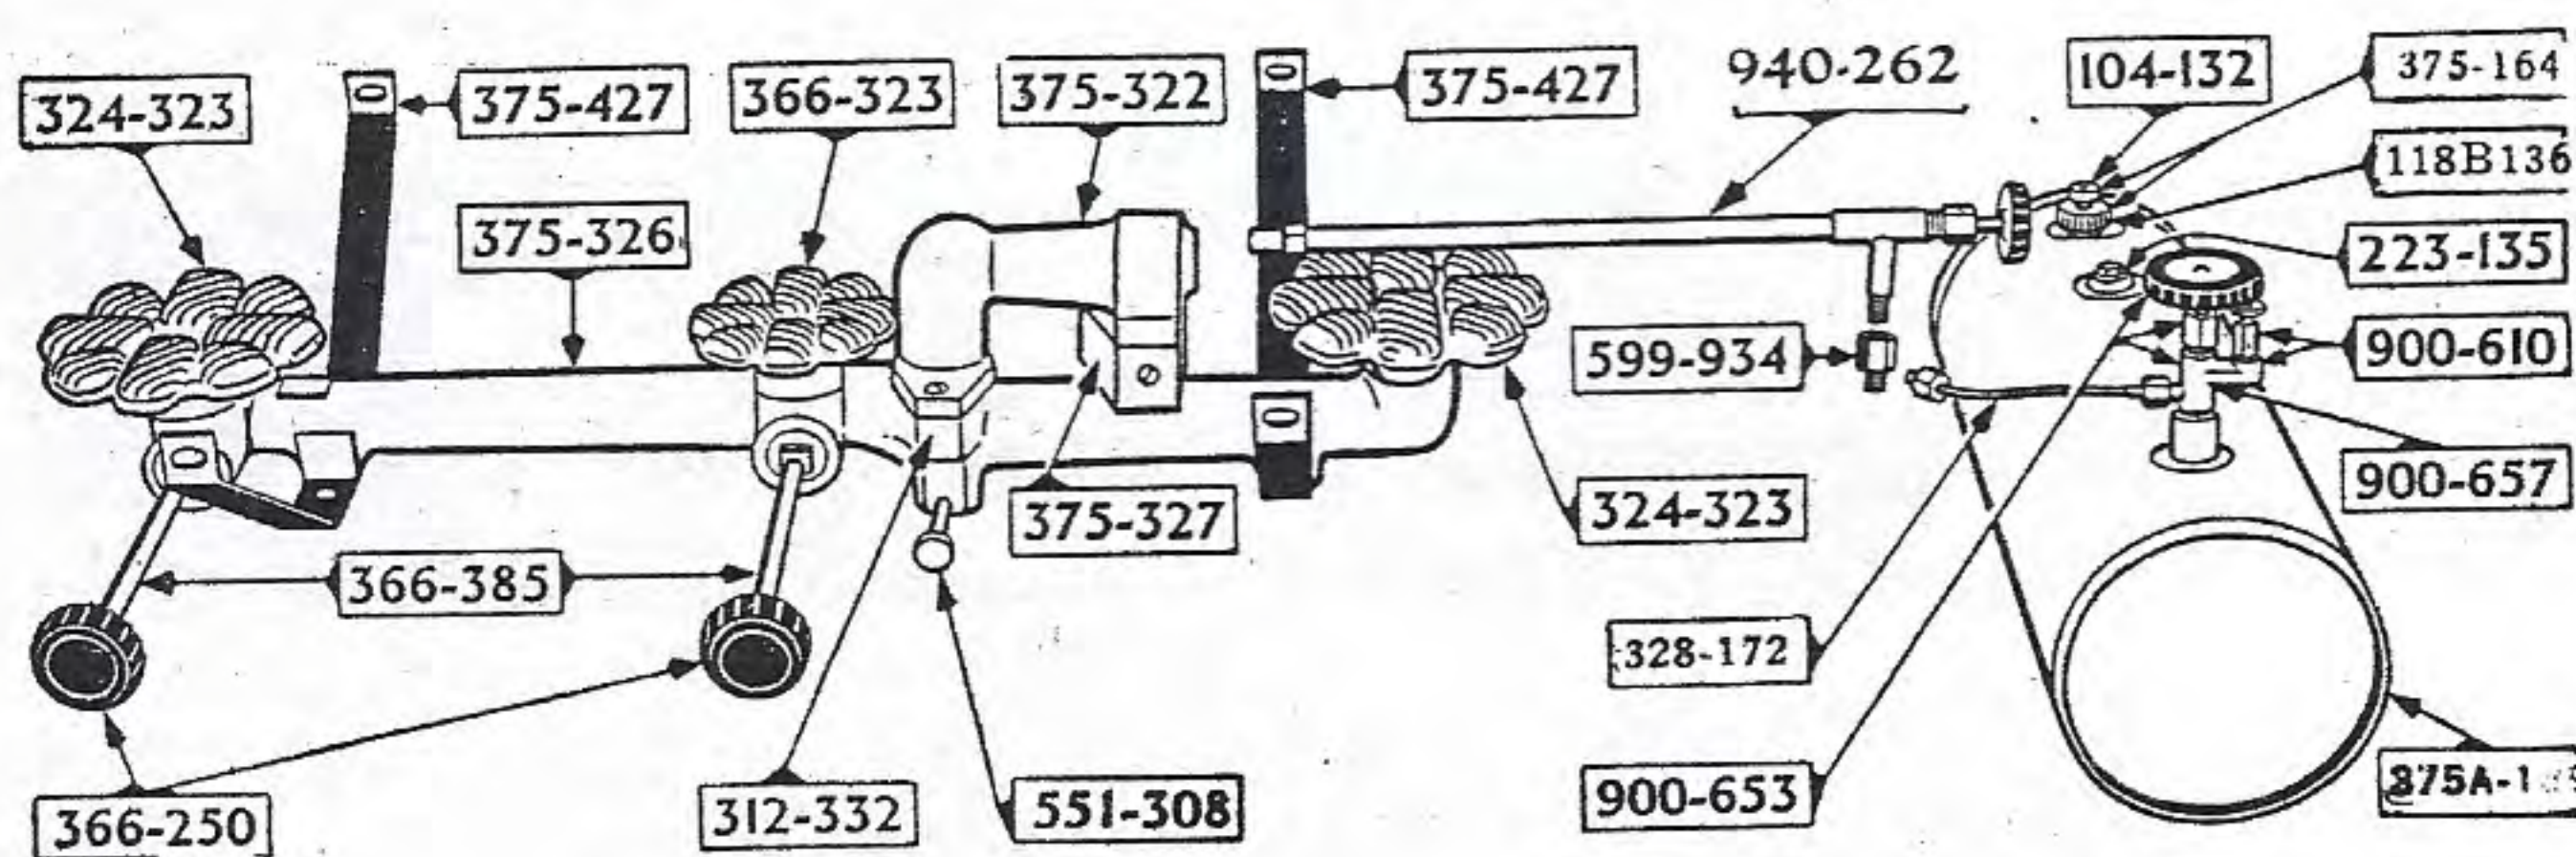

CABIN STOVE Model Nos. 375 and 375A

Use Generator 940-262. Illustrated on Page 31

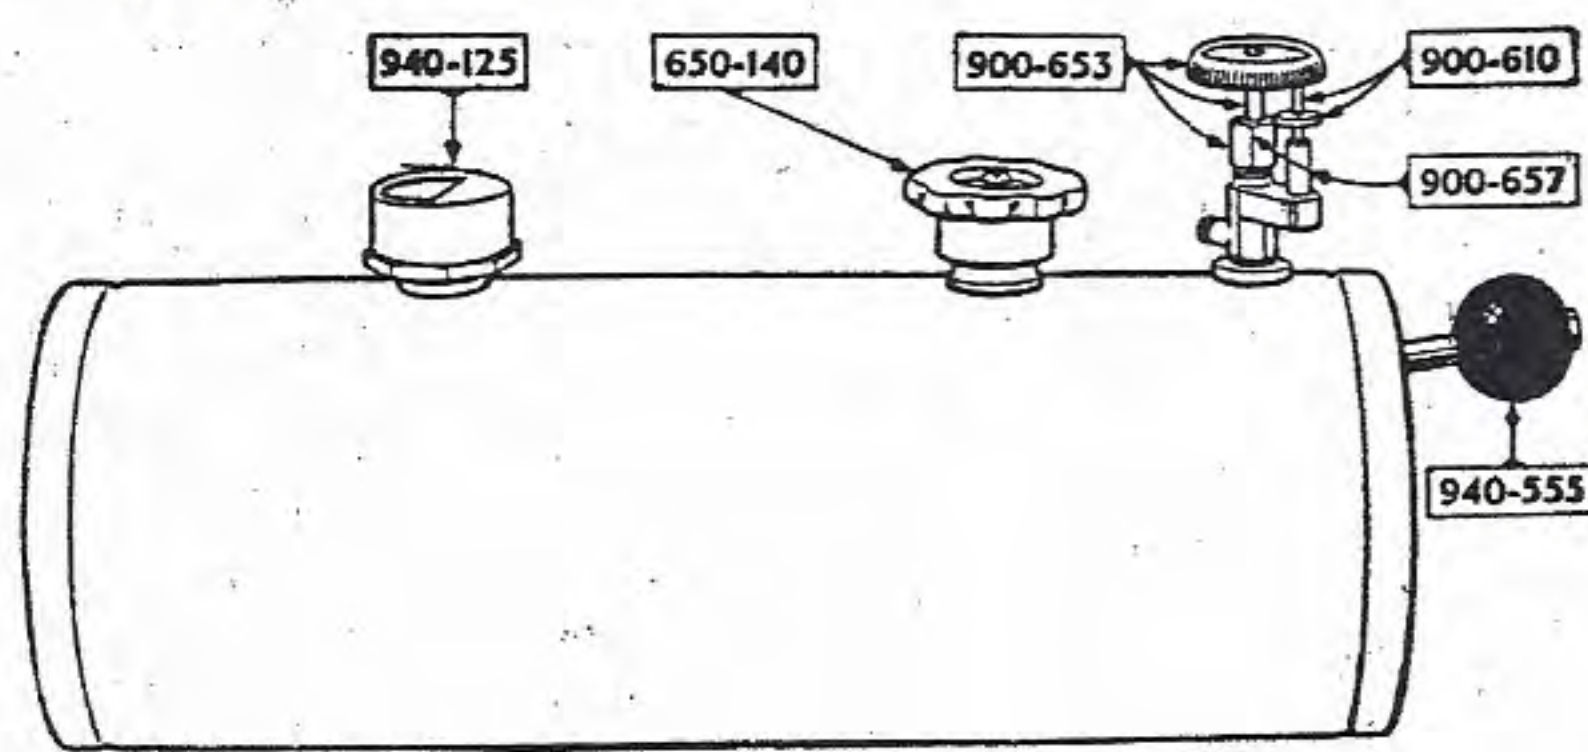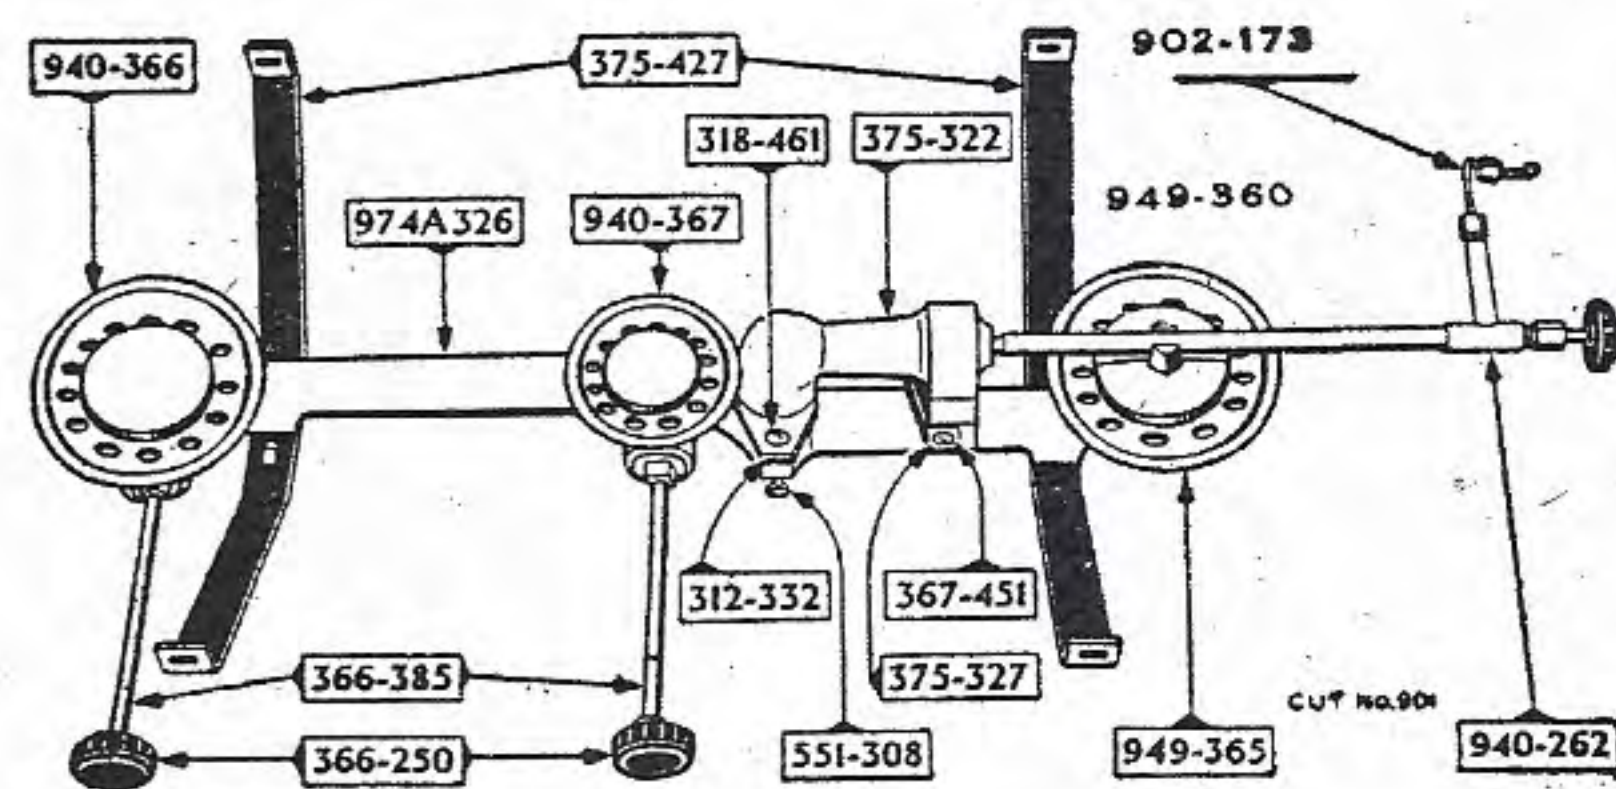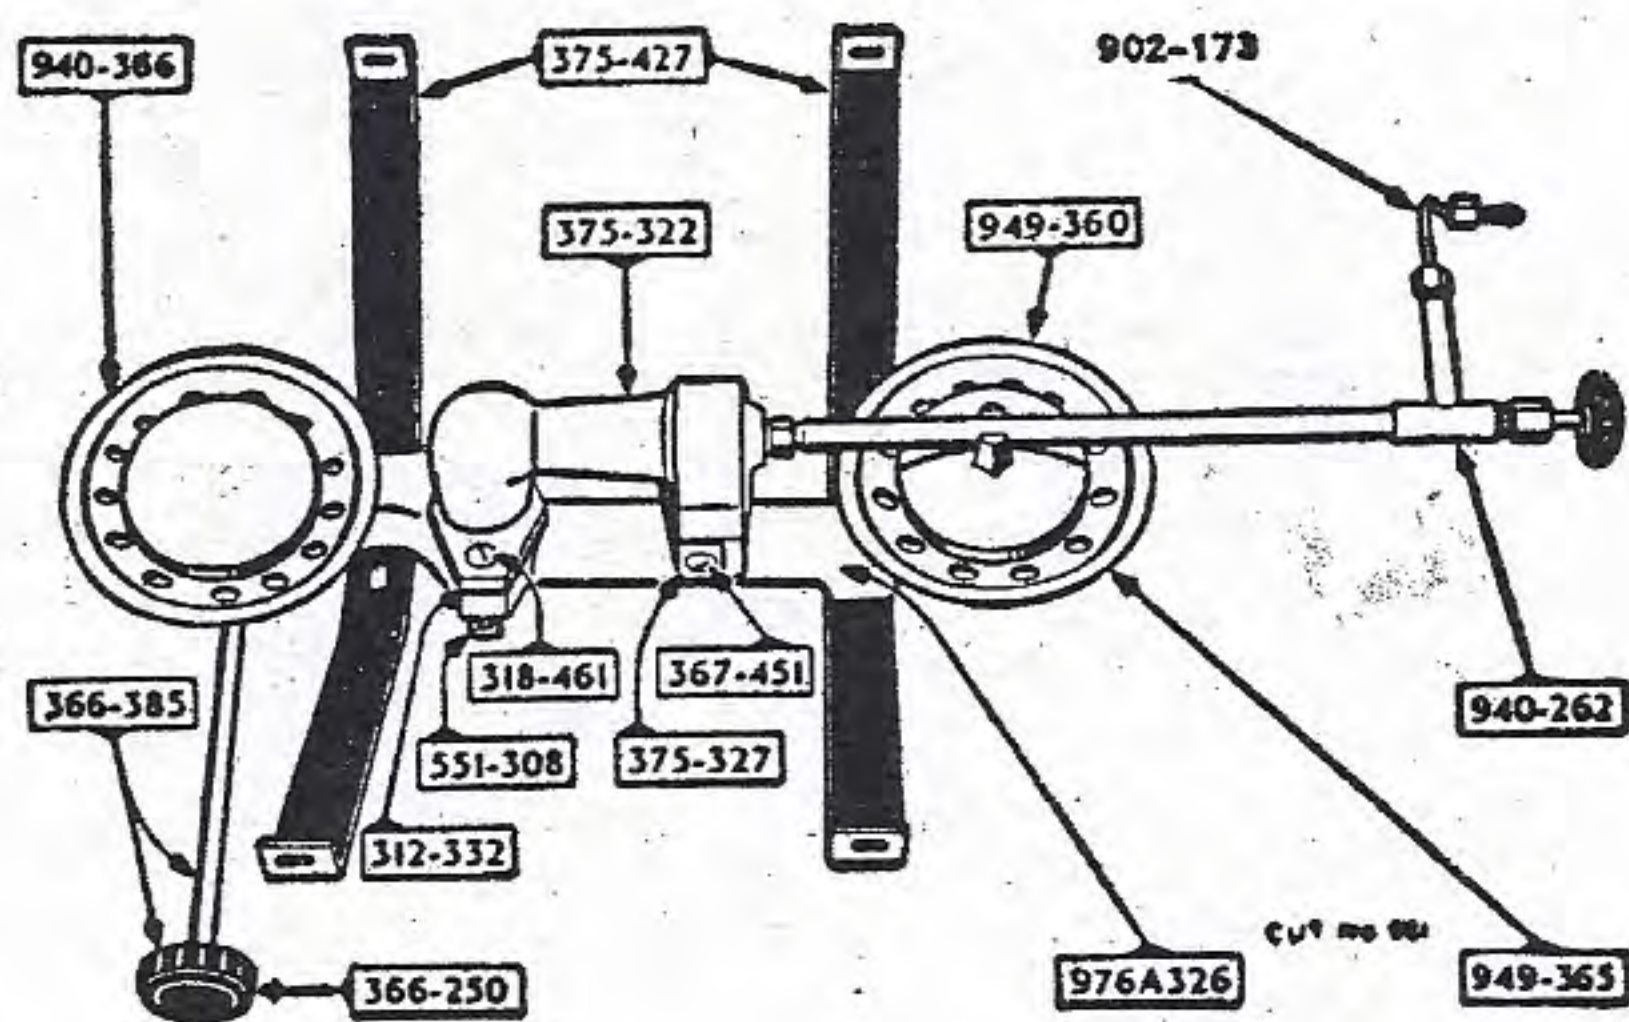

974-191


CABIN STOVE

Model Nos. 377, 377A, 378, 378A, 379 and 379A

Use Generator 940-262. Illustrated on Page 31


Refer to Numerical Listings for Parts, Description and Prices

COLEMAN STOVE AND BURNER GENERATOR PARTS ILLUSTRATIONS

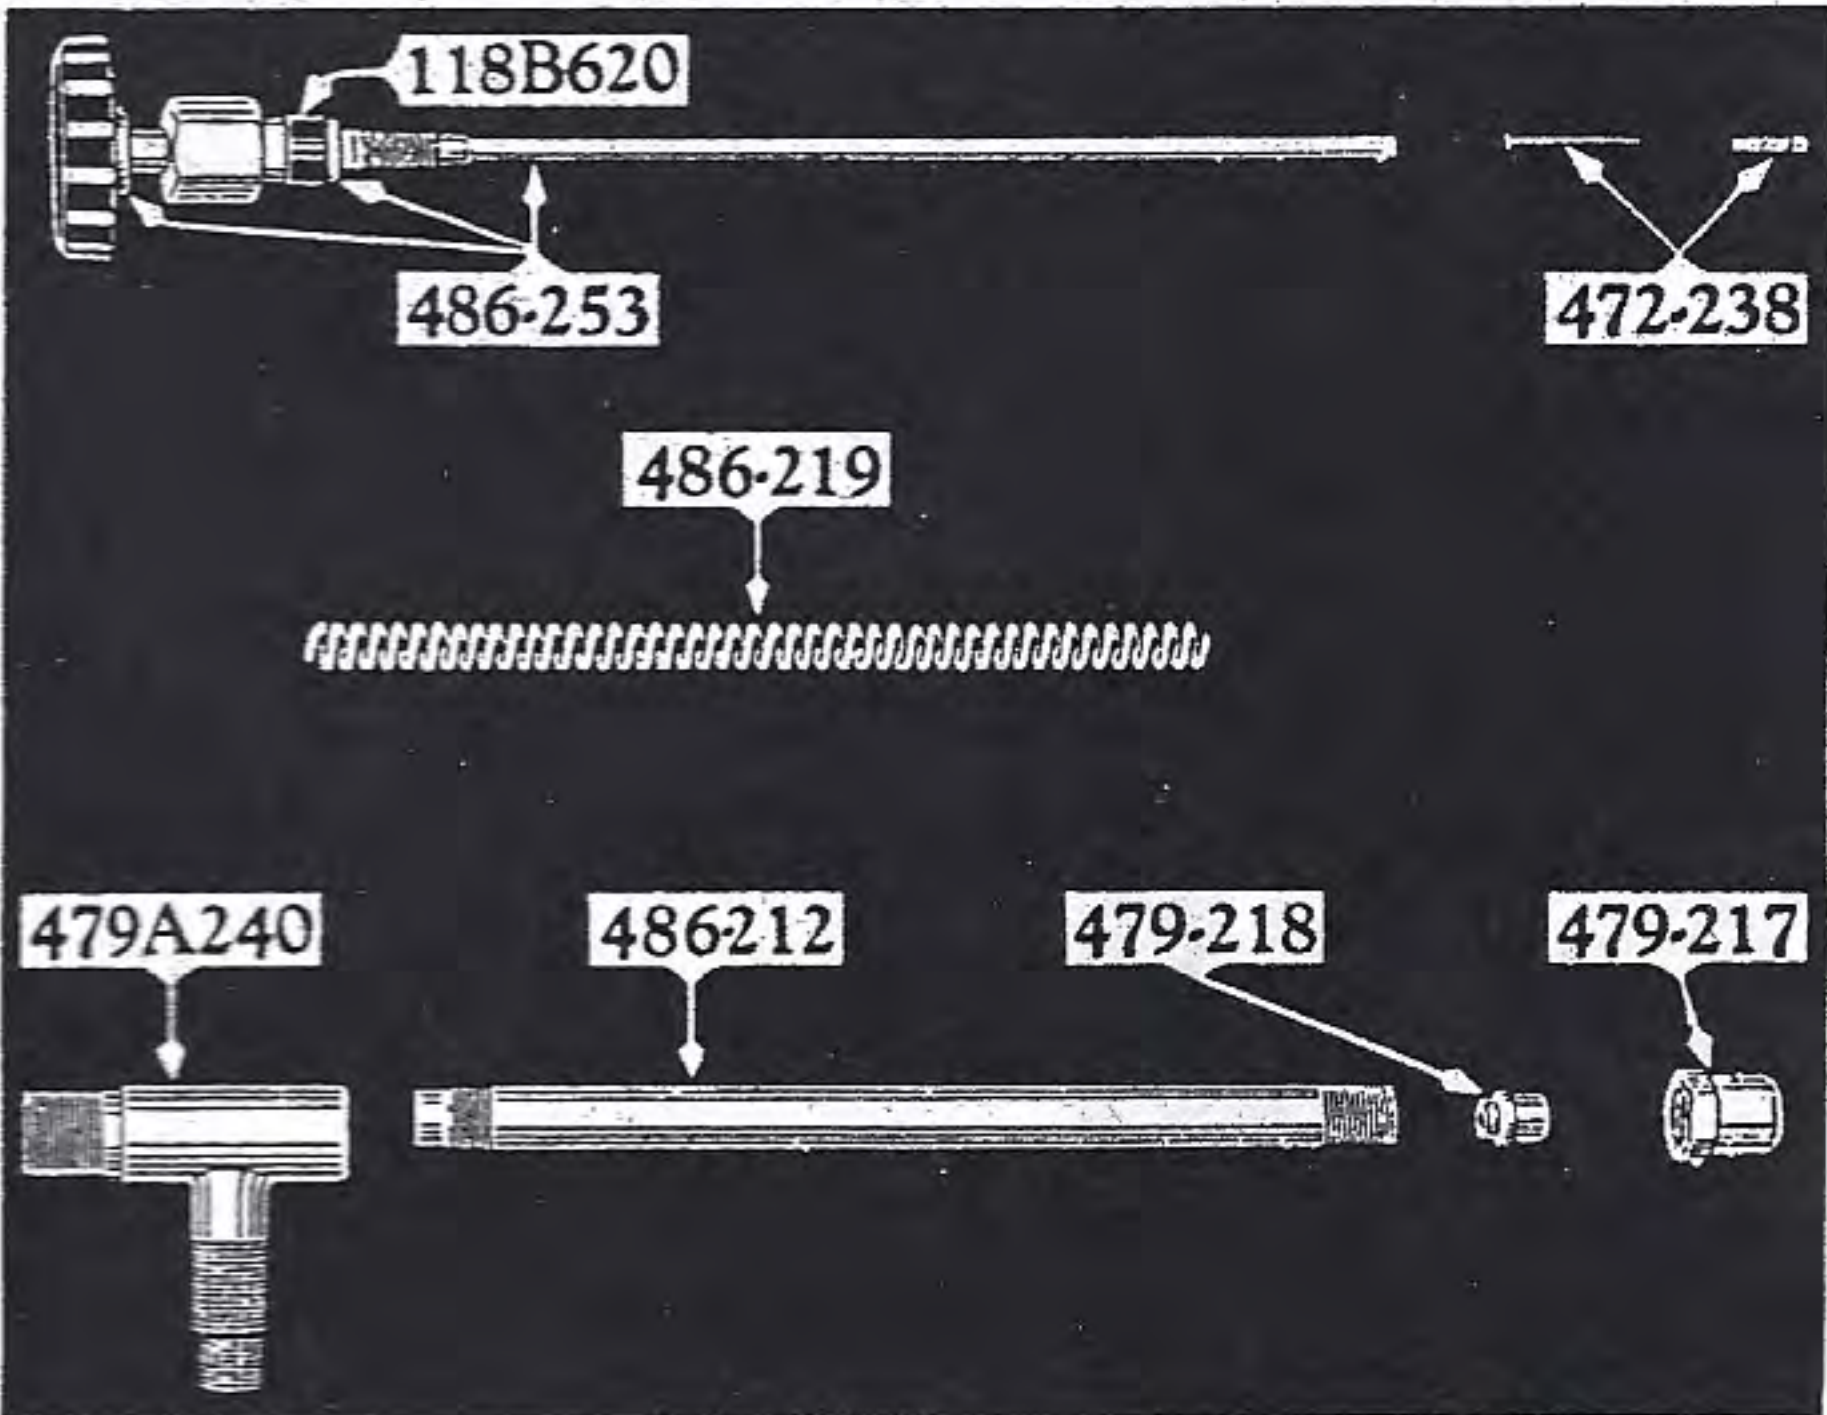


GENERATOR
No. 486-262

Order by Number	Part Name	Net Retail Price
118B620	Valve Stem Packing.....	\$.03
472-238	Needle and Holder.....	.09
479-217	Gas Tip Bushing.....	.15
479-218	Gas Tip (Marked "W").....	.18
479-219	Filler Coil	.21
479A240	Valve Body	.48
486-212	Generator Tube	.99
486-253	Valve Stem Complete (less Needle).....	.60
486-262	Generator with Valve and Stem.....	2.70

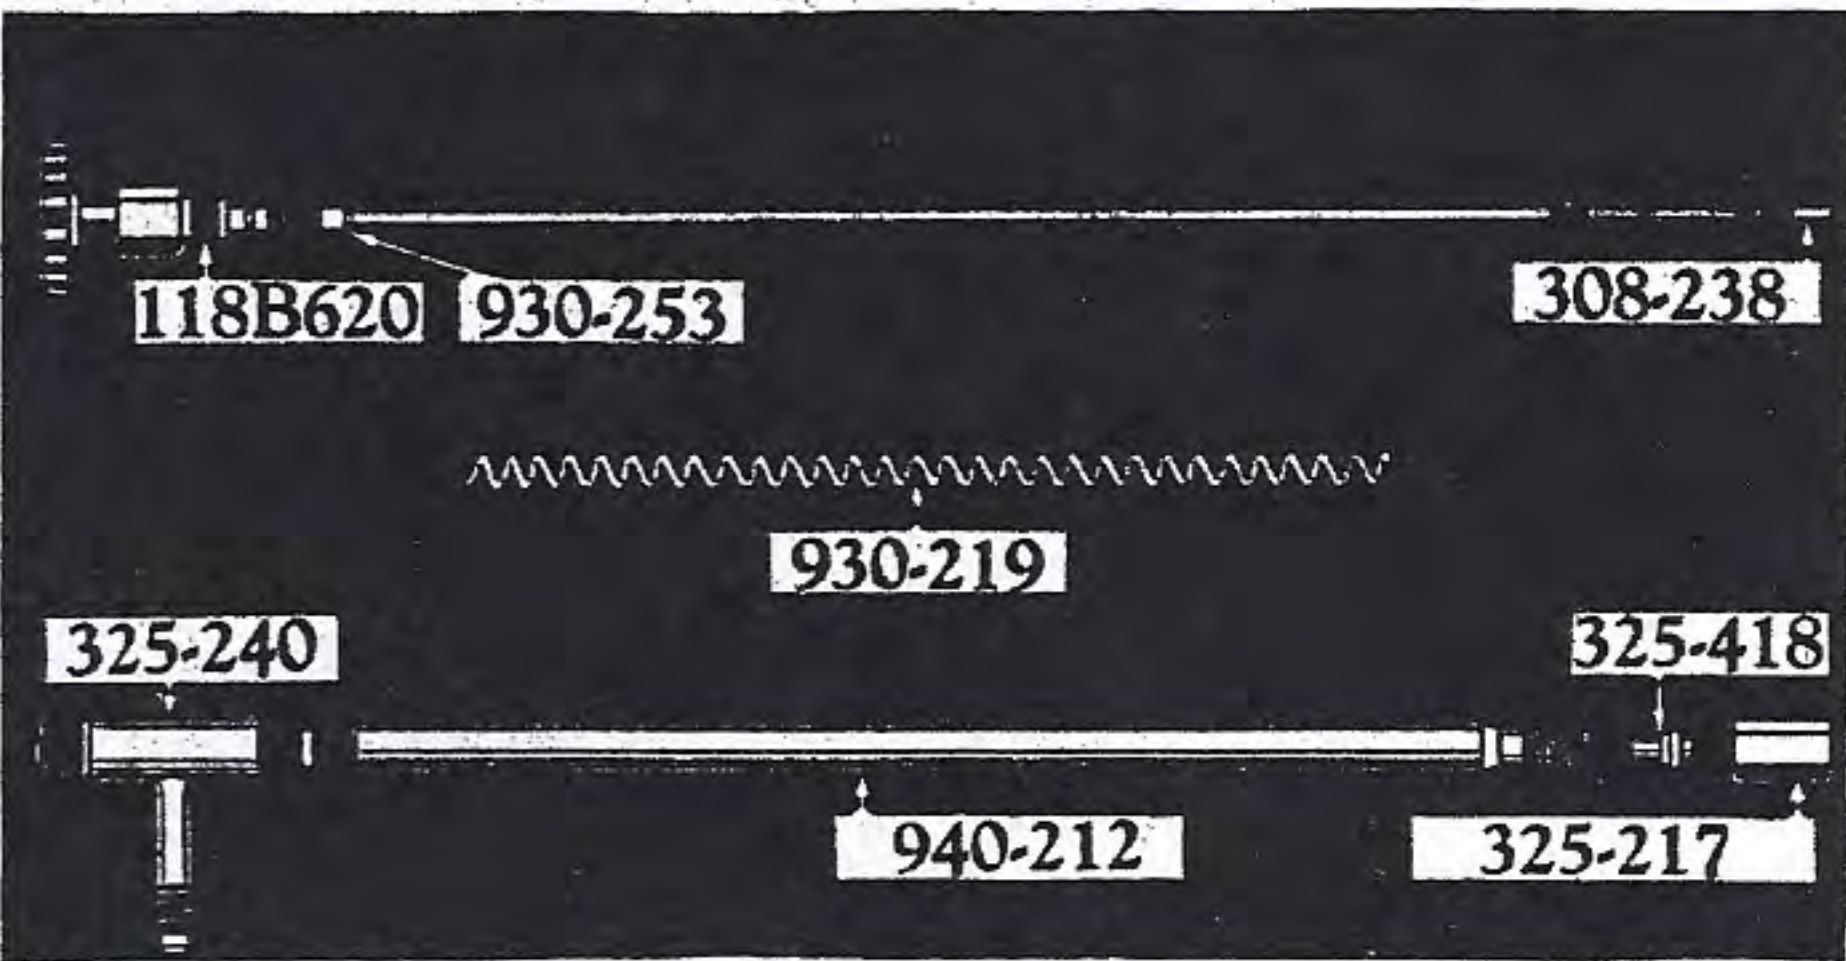


GENERATOR
No. 940-262

Order by Number	Part Name	Net Retail Price
118B620	Valve Stem Packing.....	\$.03
308-238	Needle and Holder.....	.09
325-217	Gas Tip Bushing.....	.15
325-240	Valve Body	.81
325-418	Gas Tip (Marked "4").....	.18
930-219	Filler Coil	.21
930-253	Valve Stem (less Needle).....	.99
940-212	Tube	1.50
940-262	Generator Complete	3.00

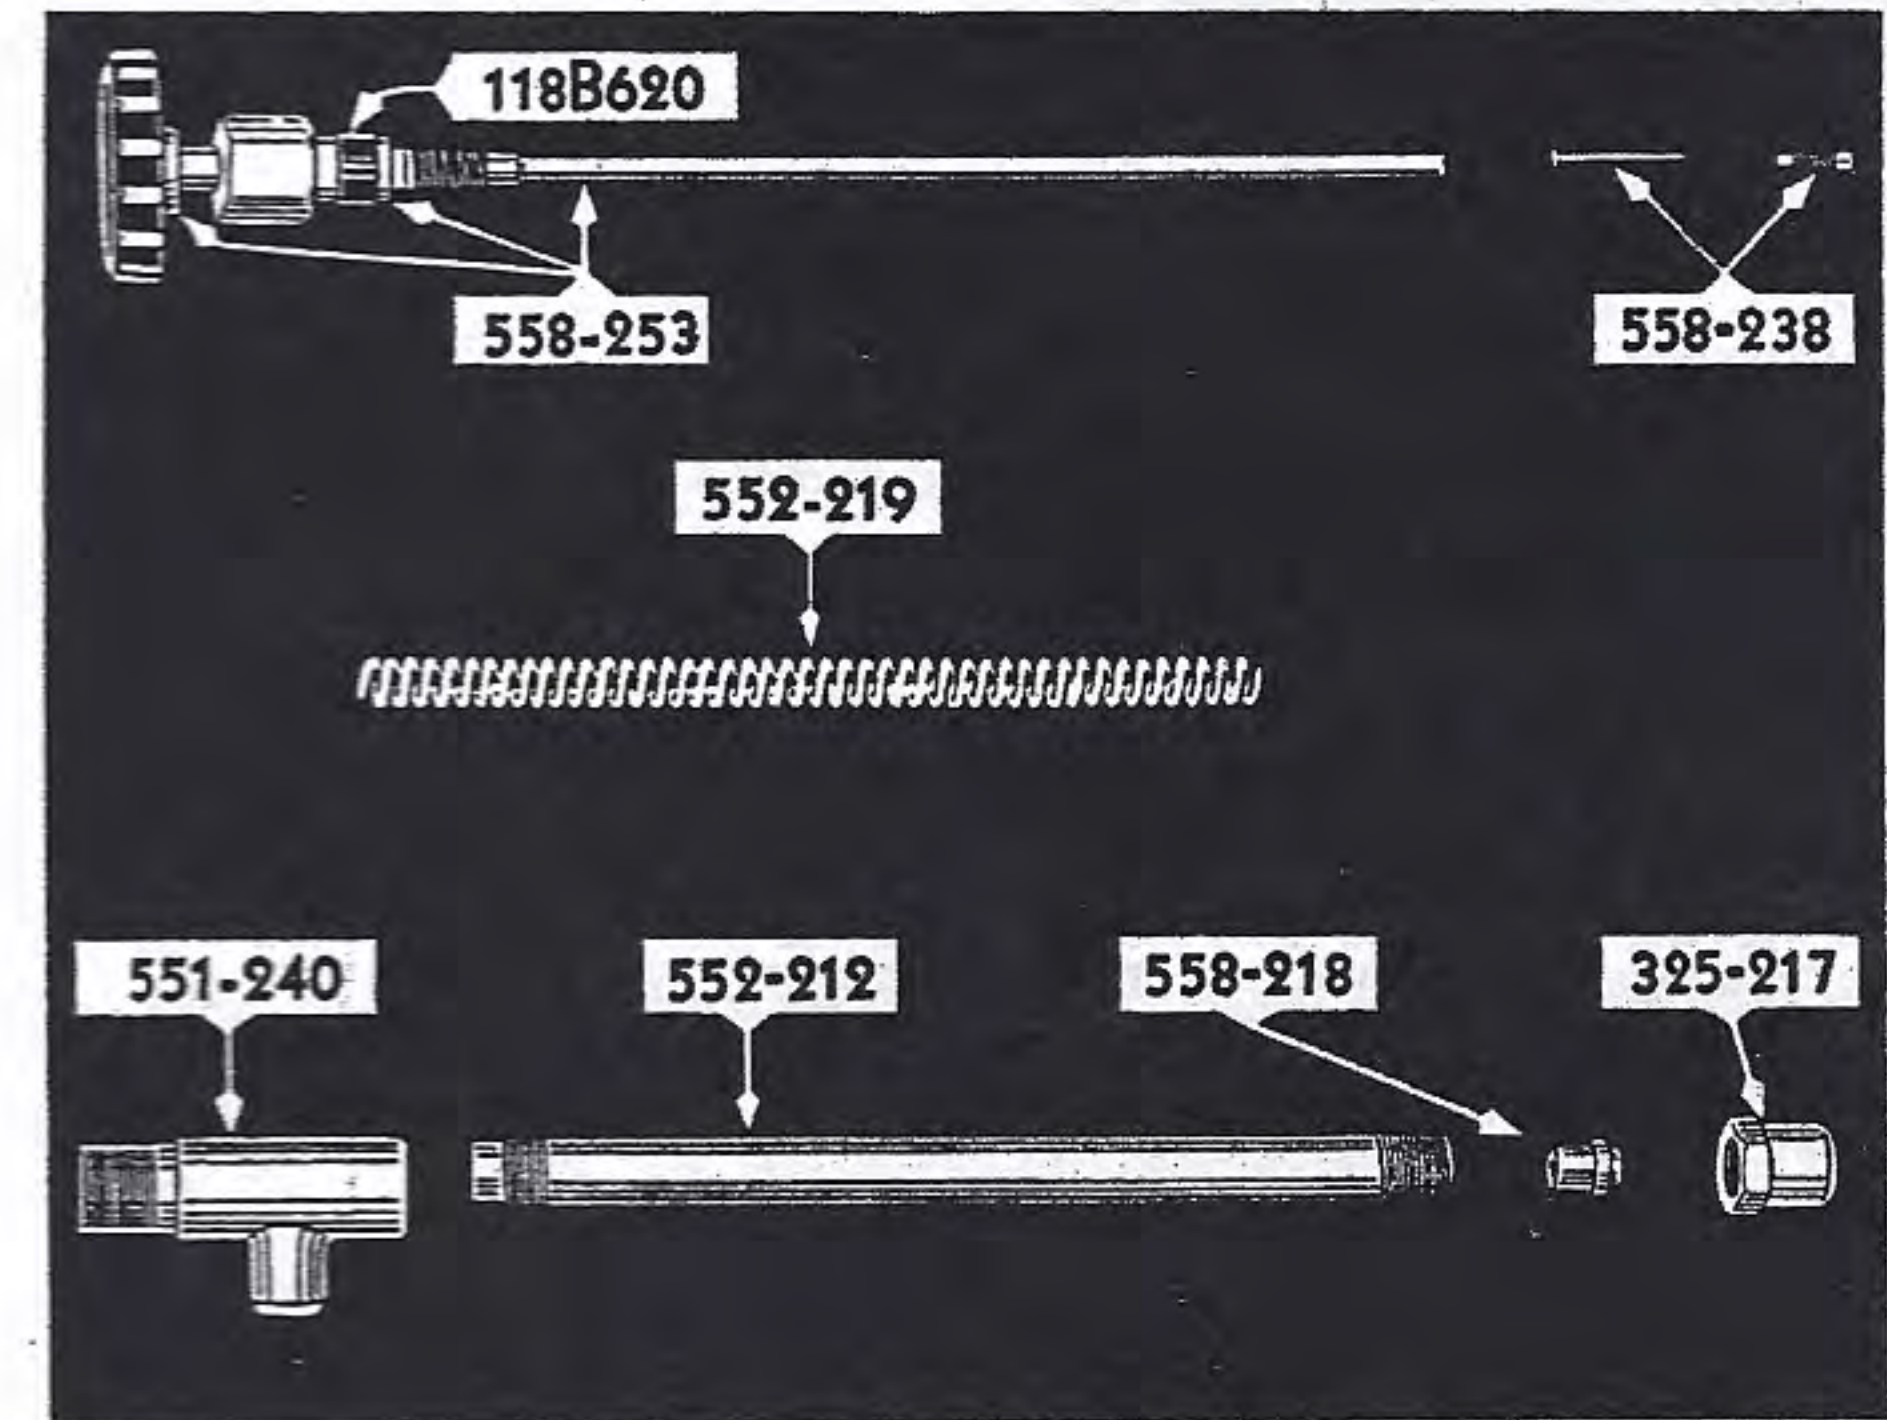

GENERATOR
No. 558-262


Order by Number	Part Name	Net Retail Price
118B620	Valve Stem Packing.....	\$.03
325-217	Gas Tip Bushing.....	.15
551-240	Valve Body	.69
552-212	Tube	1.20
552-219	Filler Coil	.21
558-218	Gas Tip (Marked "J").....	.18
558-238	Needle and Holder.....	.09
558-253	Valve Stem (less Needle).....	.99
558-262	Generator Complete	3.00

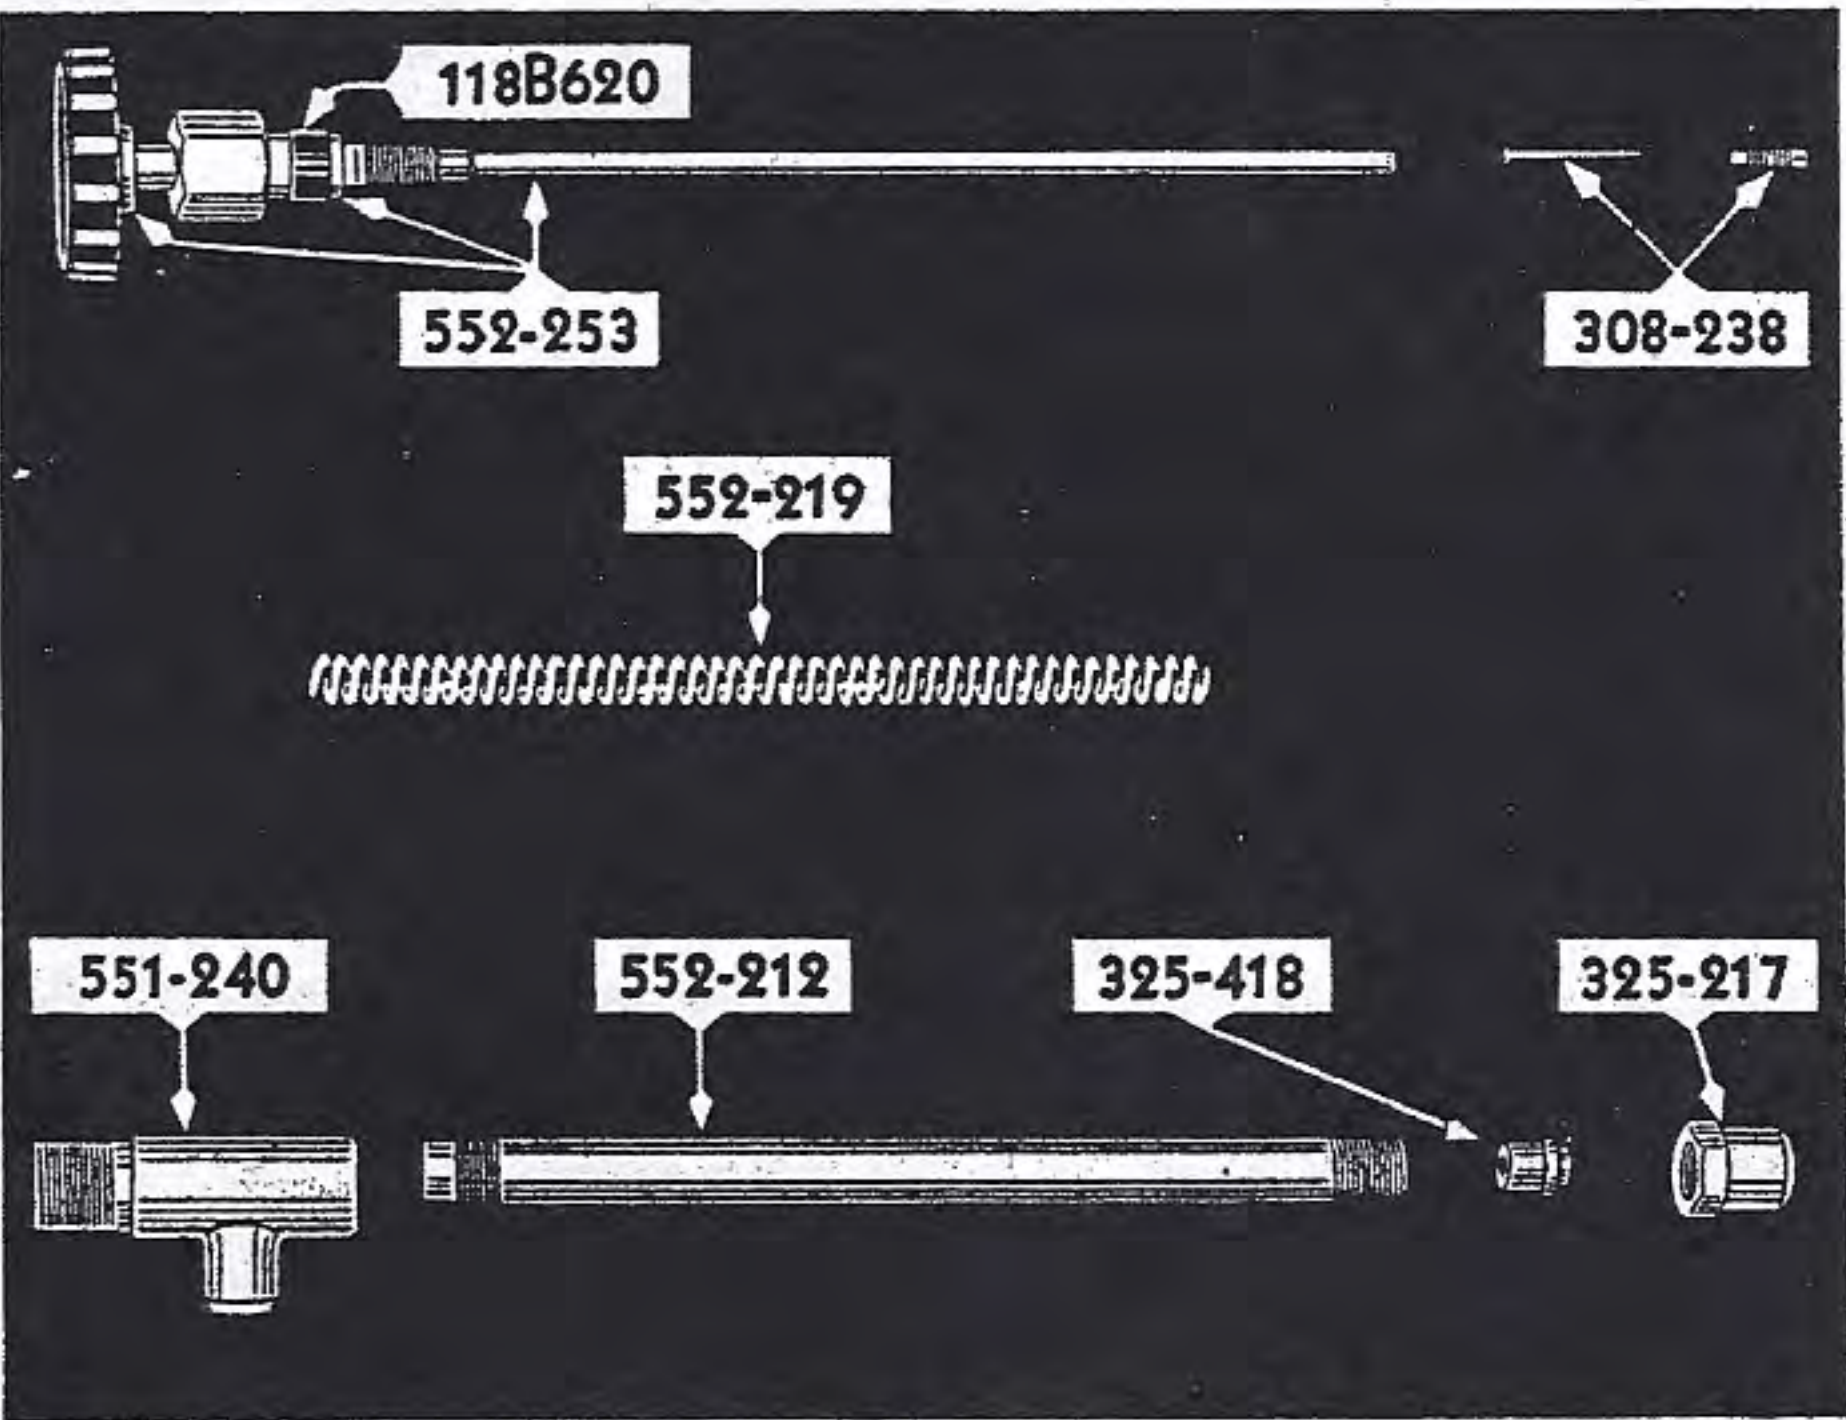

GENERATOR
No. 552-262

Order by Number	Part Name	Net Retail Price
118B620	Valve Stem Packing.....	\$.03
308-238	Cleaning Needle and Holder.....	.09
325-217	Gas Tip Bushing.....	.15
325-418	Gas Tip (Marked "4").....	.18
551-240	Generator Valve Body and Fuel Nipple.....	.69
552-212	Generator Tube	1.20
552-219	Generator Filler Coil.....	.21
552-253	Valve Stem (less Needle).....	.99
552-262	Generator Complete	3.00


COLEMAN STOVE BURNER AND TANK PARTS ILLUSTRATIONS

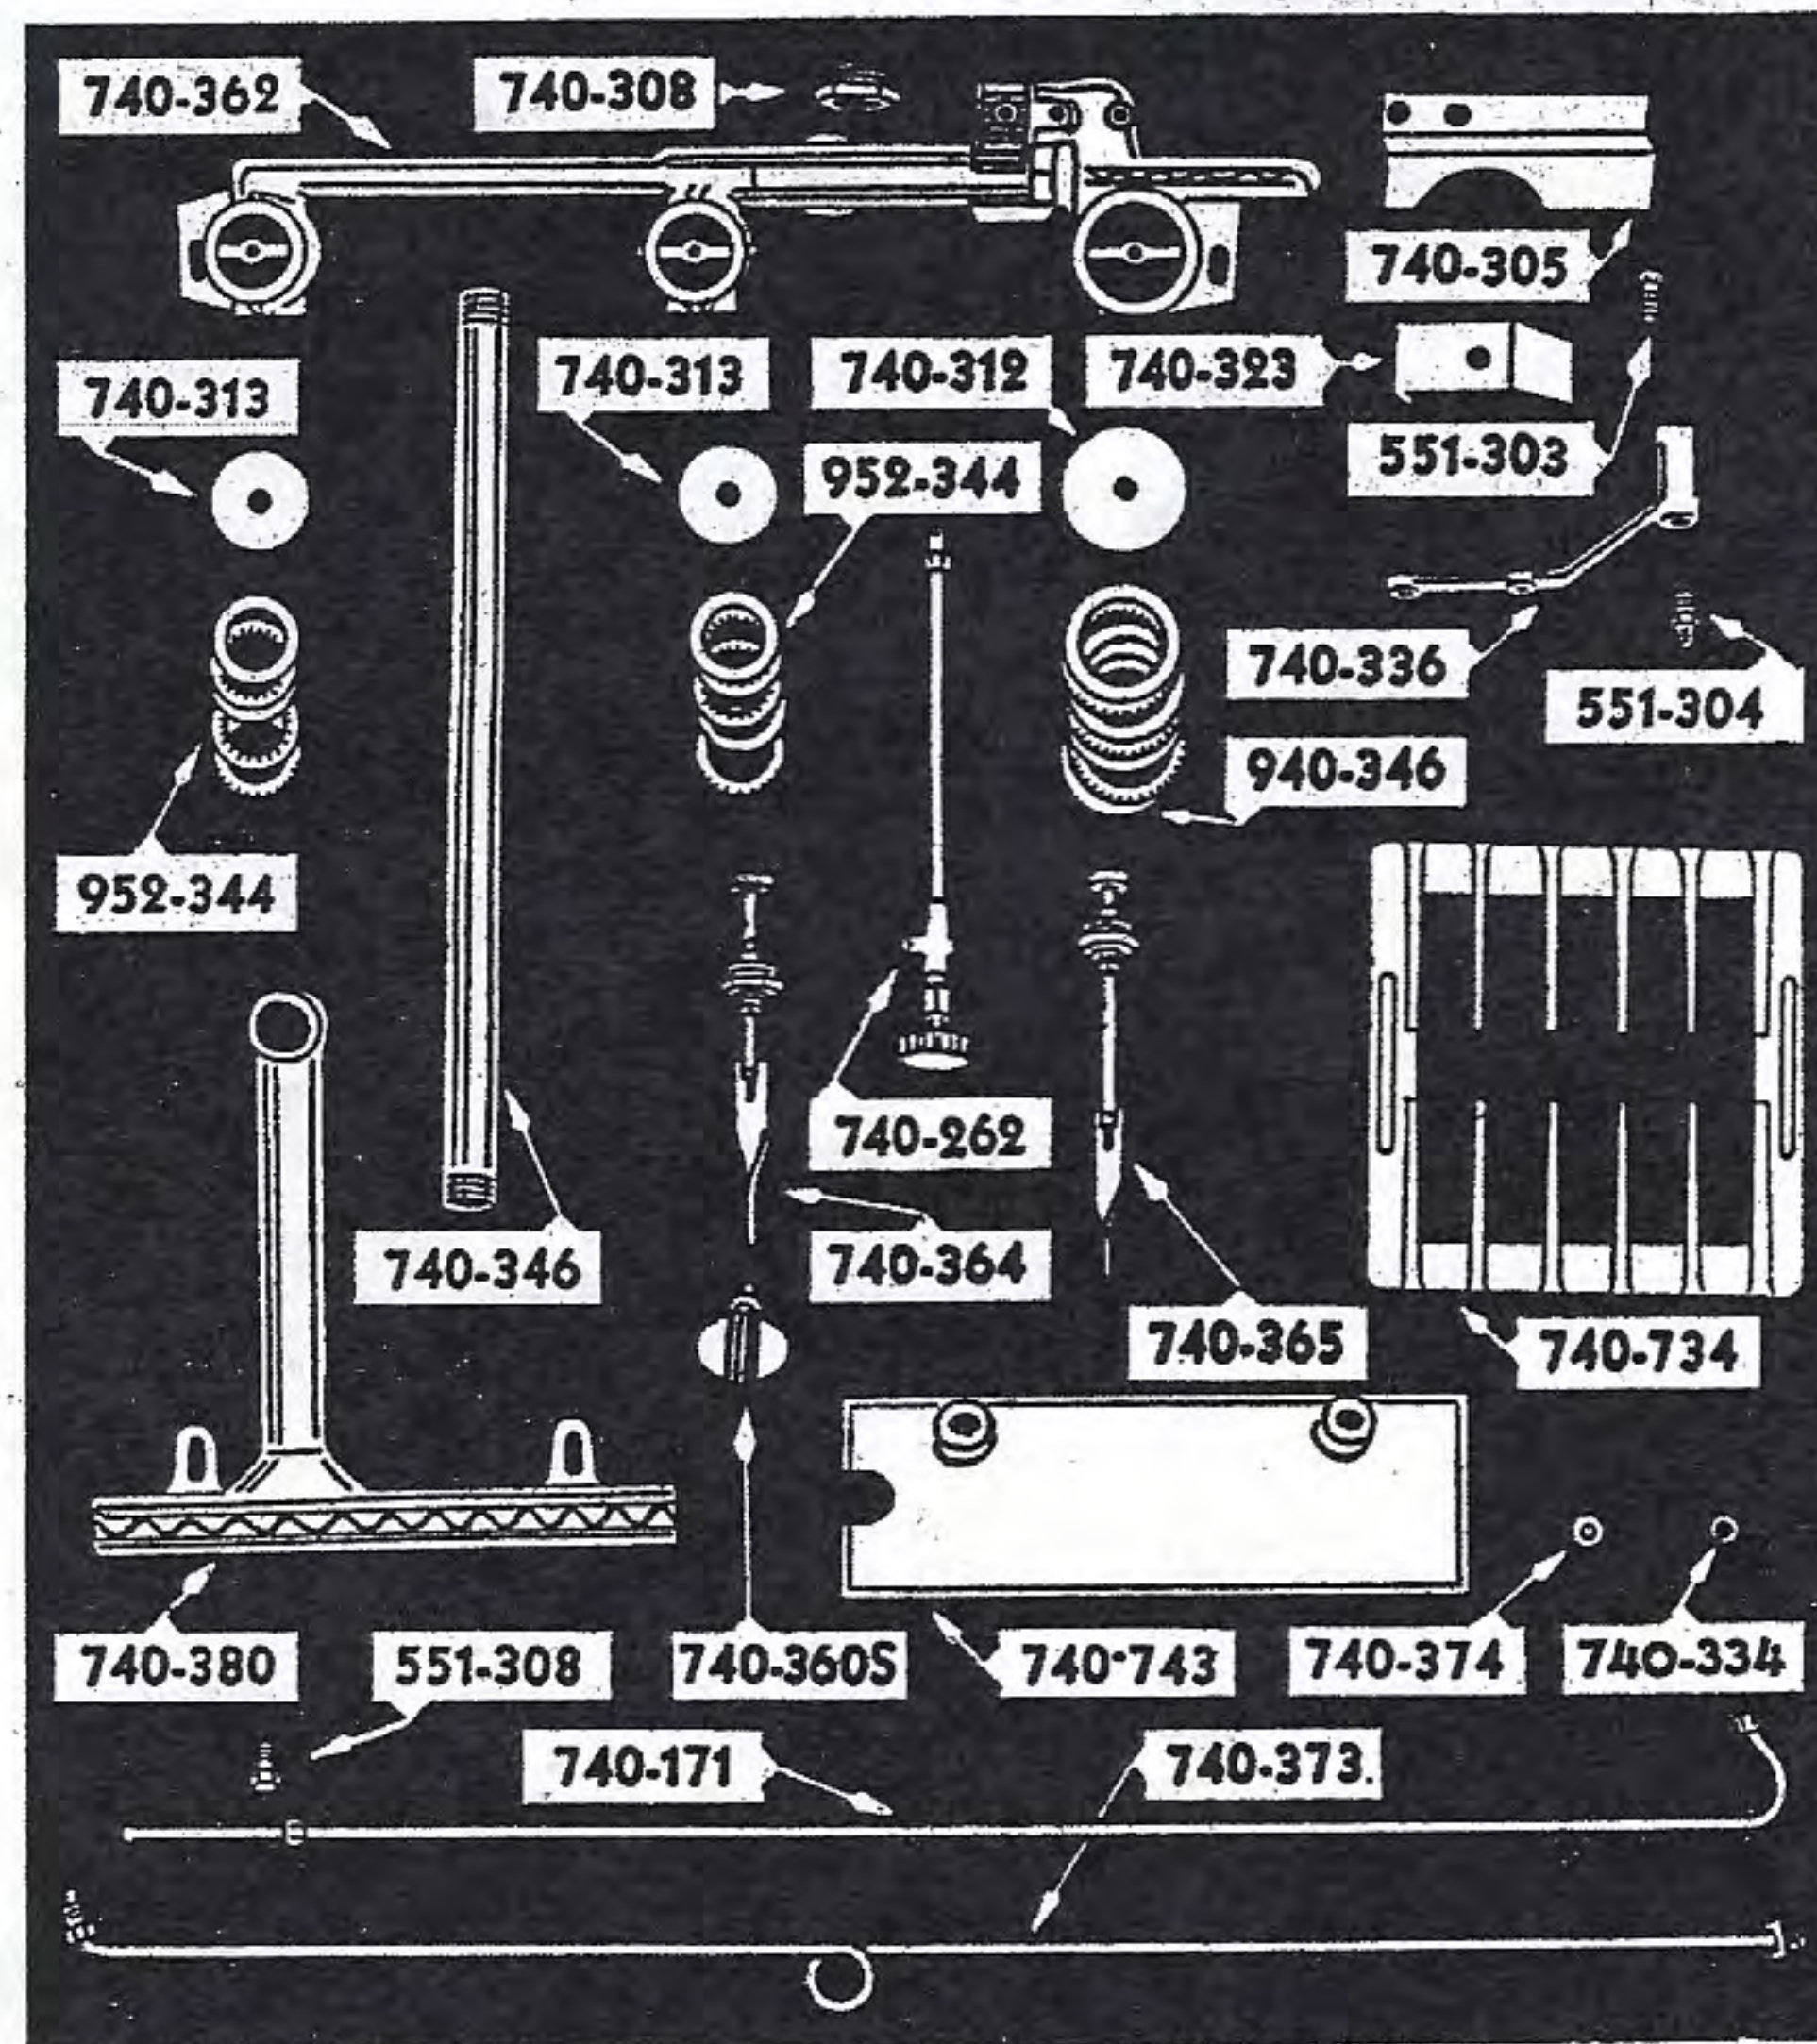


BURNER AND OVEN PARTS
For Range Model Nos. 740 and 740A

Use Generator 740-262. Illustrated on Page 47

Use Tank No. 740-191. (Illustrated Below)

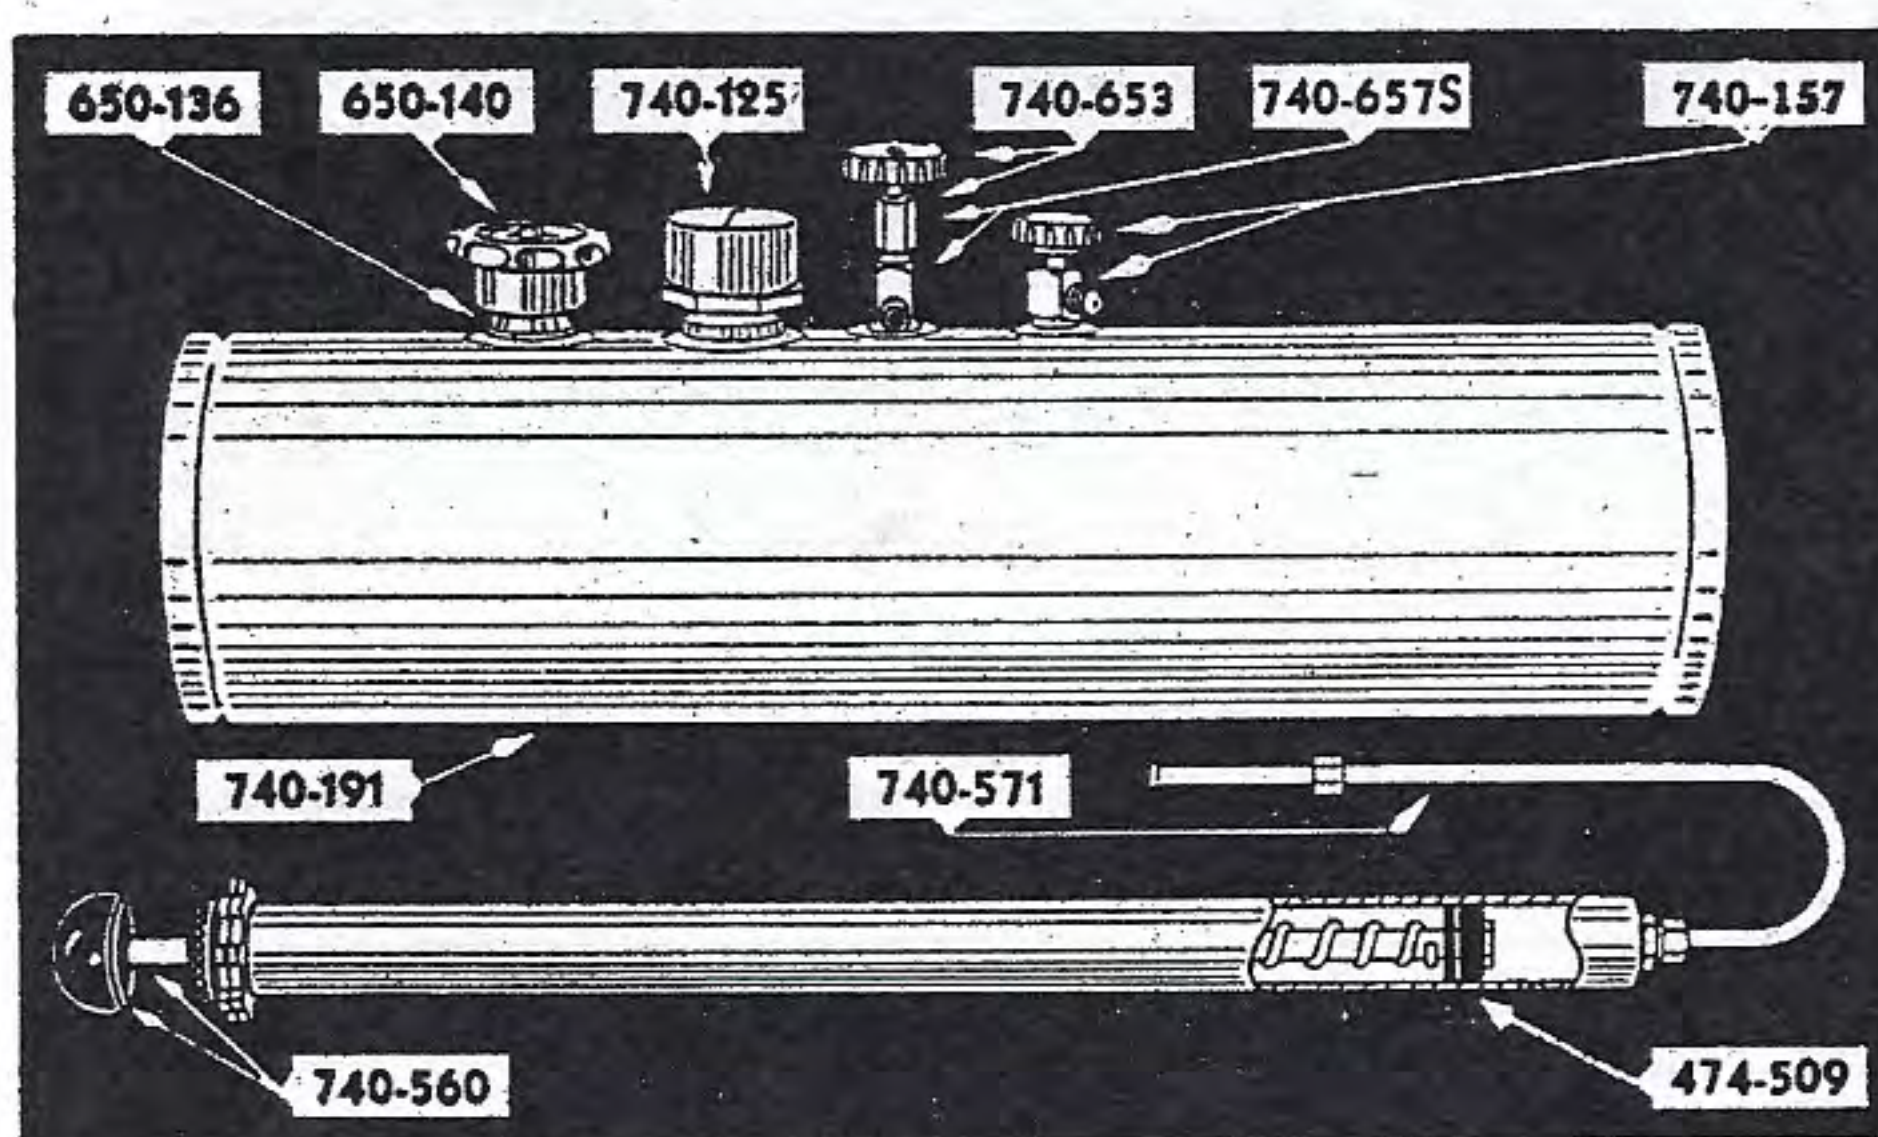

TANK No. 740-191
Used on Stoves Nos. 740, 740A

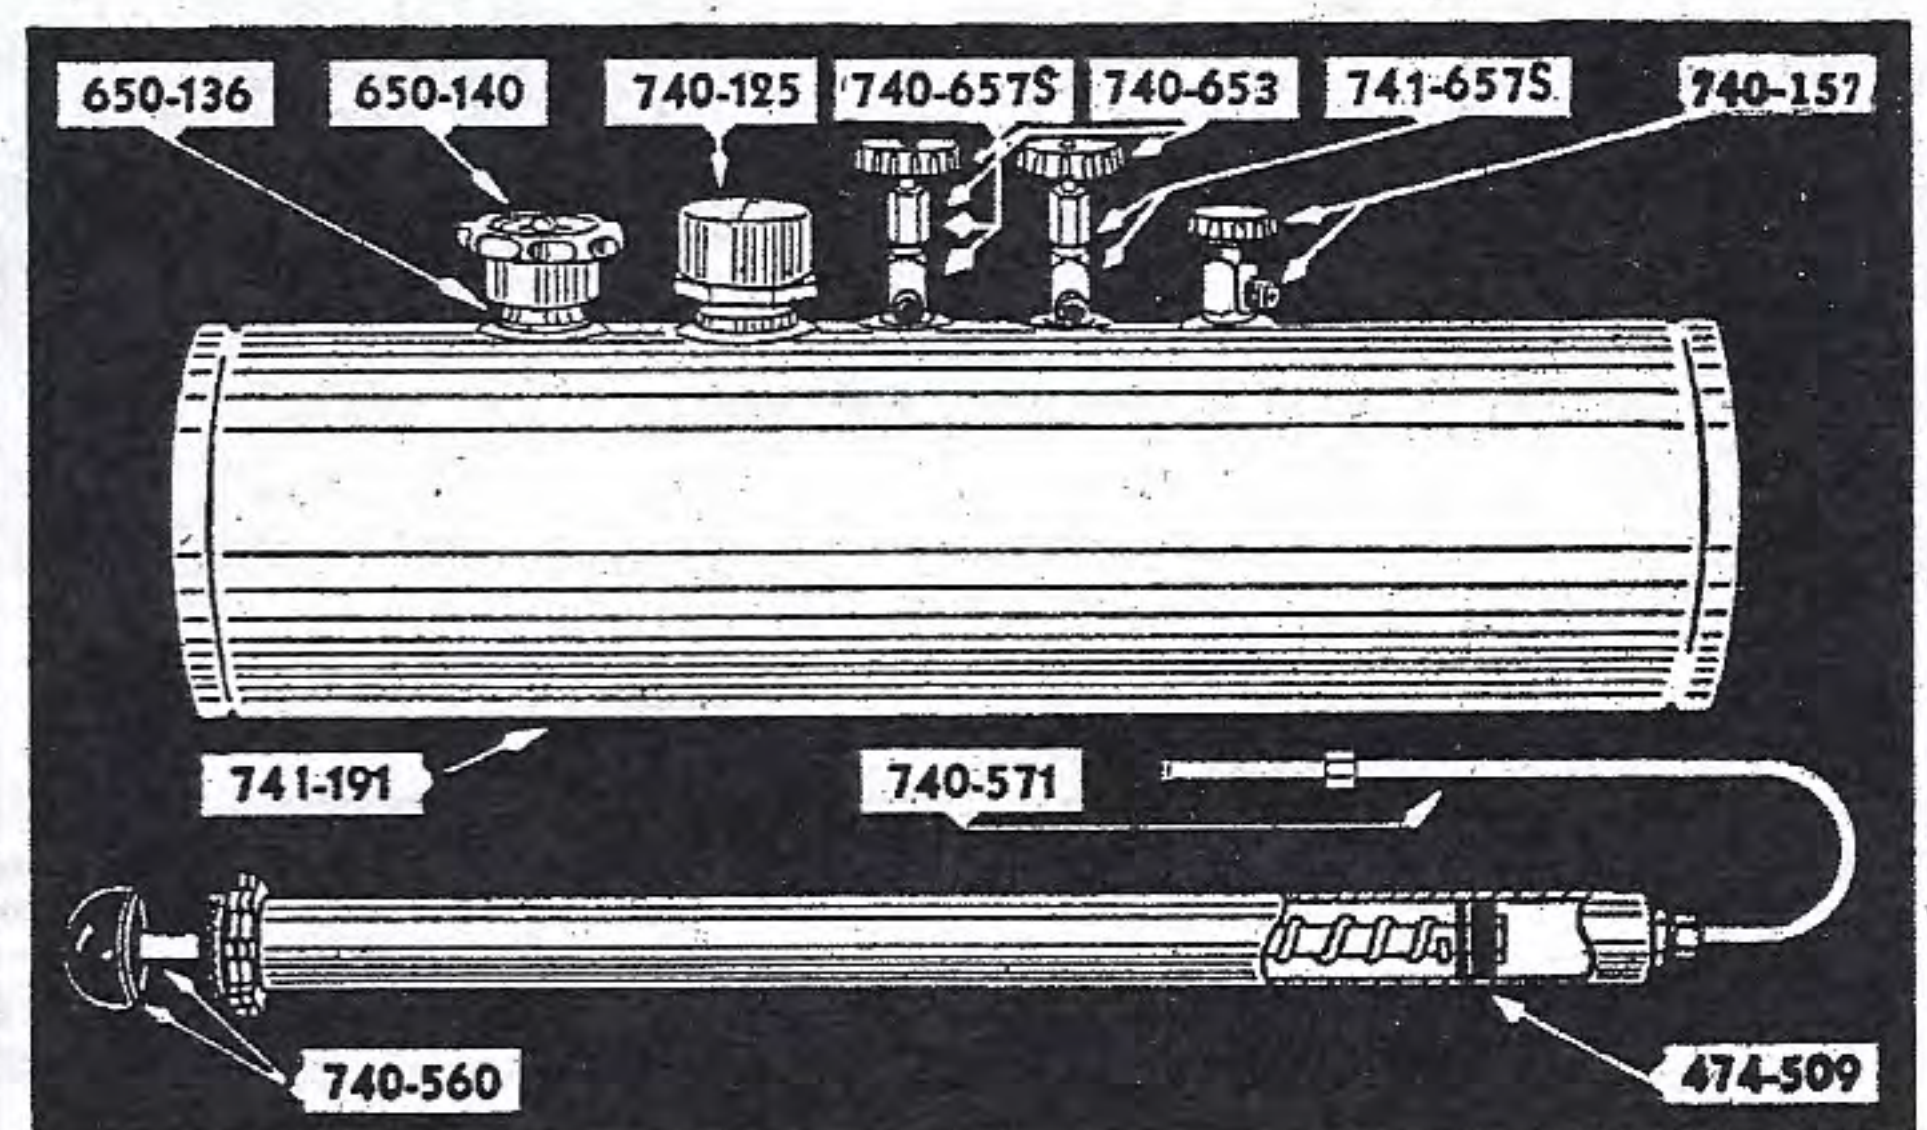

TANK No. 741-191
Used on Stoves Nos. 741, 741A, 742, 742A

Refer to Numerical Listings for Parts, Description and Prices

COLEMAN INSTANT GAS RANGE REPAIR PARTS 1934 TO 1943


Model No.	Year Produced	Model No.	Year Produced	Model No.	Year Produced
740	1939	941A	1935	951A	1936
740A	1940	941B	1935	951C	1937
741	1939	942	1935	952A	1936
741A	1940	943	1934	952B	1936
742	1939	944	1934	952C	1937
742A	1940	945	1934	952D	1937
754A	1936	946A	1935	953A	1936
754B	1936	947	1934	953C	1937
754C	1937	947A	1935	953D	1937
754D	1937	948	1934	955	1938
758	1936	948A	1935	974	1934
758D	1937	949	1934	974A	1935
759E	1938	949A	1934	975	1934
940	1934	950A	1936	975A	1935
940A	1935	950B	1936	976	1934
940B	1935	950C	1937	976A	1935
941	1934	950D	1937		

COLEMAN STOVES PRODUCED PRIOR TO 1934

Illustrations are not shown in this catalog. Please write nearest Coleman office for complete information on Parts for these stoves. Most of the part numbers are listed in Parts Listing of this catalog.

Model No.	Year Produced	Model No.	Year Produced	Model No.	Year Produced
6	1925	201	1927	601	1927
7	1925	202	1927	602	1927
8	1925	203	1927	620	1928
9	1925	204	1927	621	1928
10	1925	210	1927	622	1928
12	1928	211	1927	623	1928
12-3	1928	212	1927	624	1928
14	1925	213	1927	625	1928
16	1927	214	1927	900	1932
17	1927	224	1928	901	1932
17-0	1927	225	1928	902	1932
17-10	1927	322	1928	904	1932
18	1927	322	1929	905	1932
18-0	1927	324	1929	906	1932
18-10	1927	325	1929	907	1932
60	1926	326	1929	908	1932
74	1925	327	1929	909	1932
84	1925	328	1929	910	1932
86	1928	329	1929	911	1932
86-4	1928	330	1929	912	1932
94	1925	360	1929	913	1932
104	1925	361	1929	914	1932
106	1926	362	1929	915	1932
116	1927	363	1929	916	1932
120	1928	364	1929	920	1932
121	1927	364A	1930	930	1933
140	1925	365	1929	931	1933
160	1927	366	1930	932	1933
200	1927	600	1927		

COLEMAN STOVE BURNER PARTS ILLUSTRATIONS

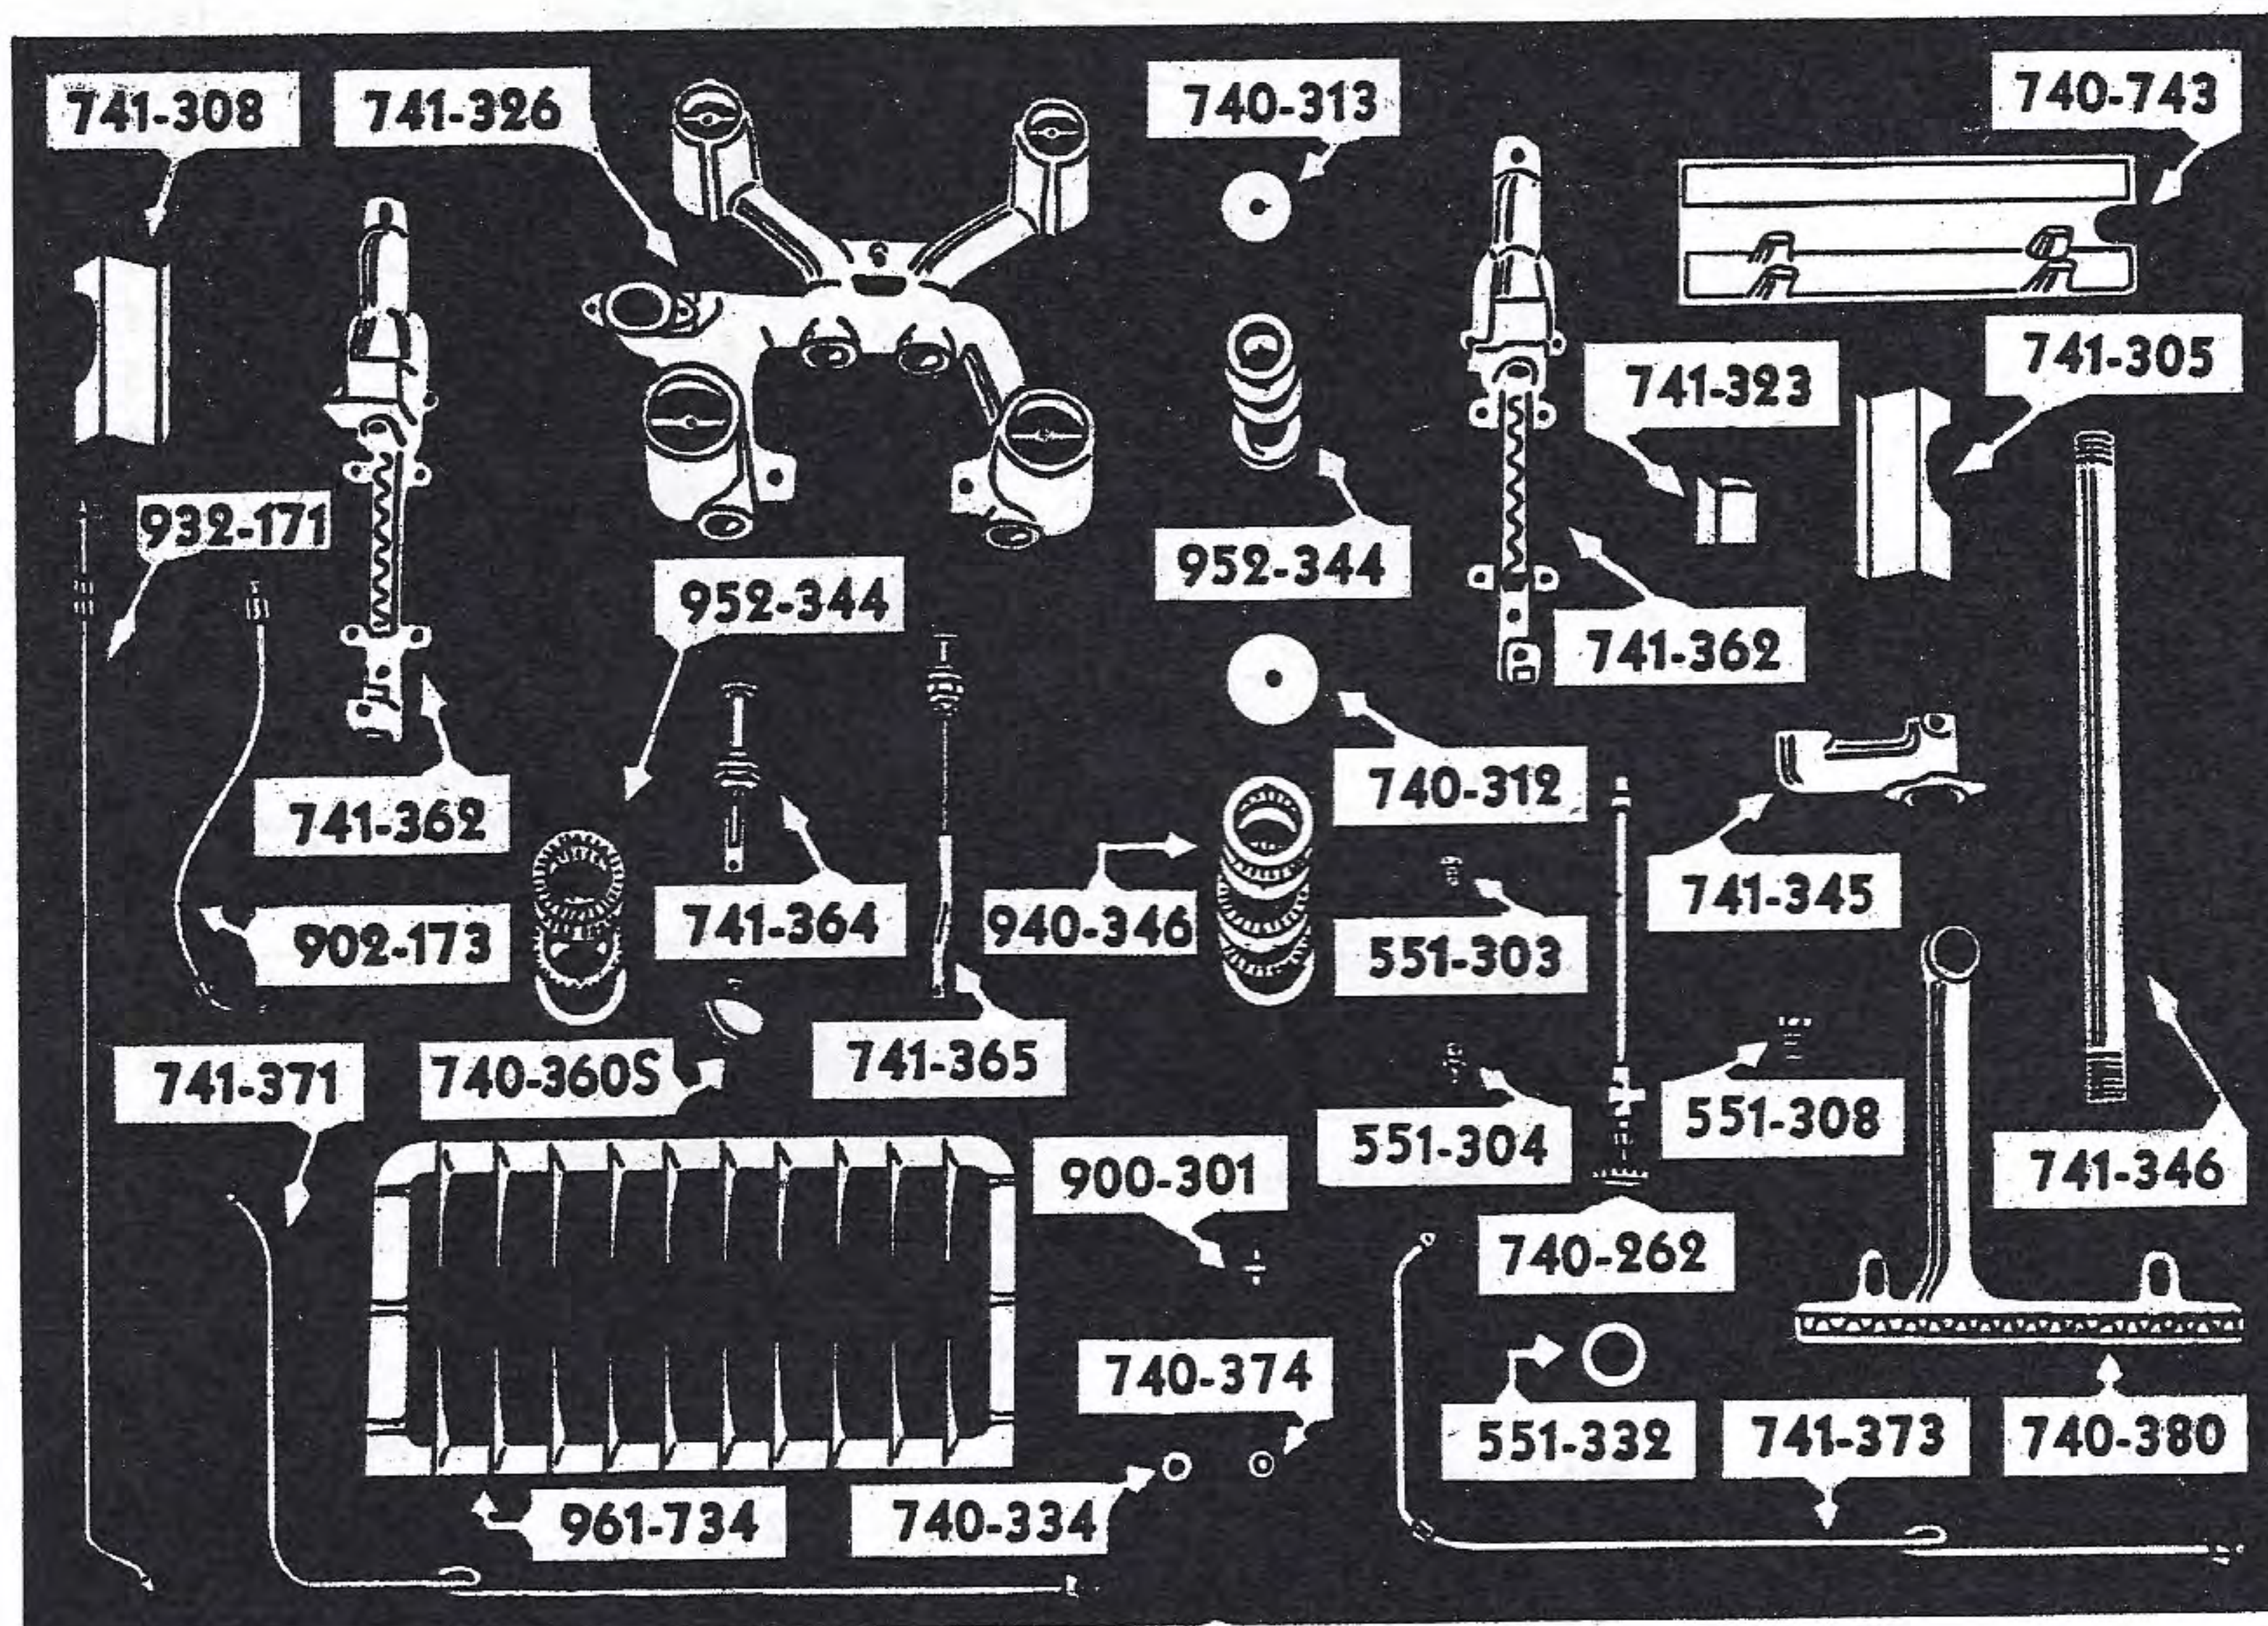

BURNER AND OVEN PARTS For Range Model Nos. 741, 741A, 742 and 742A


Use Generator No. 740-262. Illustrated on Page 47

Use Tank No. 741-191. Illustrated on Page 32

Use 742A360 Auxiliary Valve Handle on 742A

Refer to Numerical Listings for Parts, Description and Prices

COLEMAN STOVE BURNER PARTS ILLUSTRATIONS

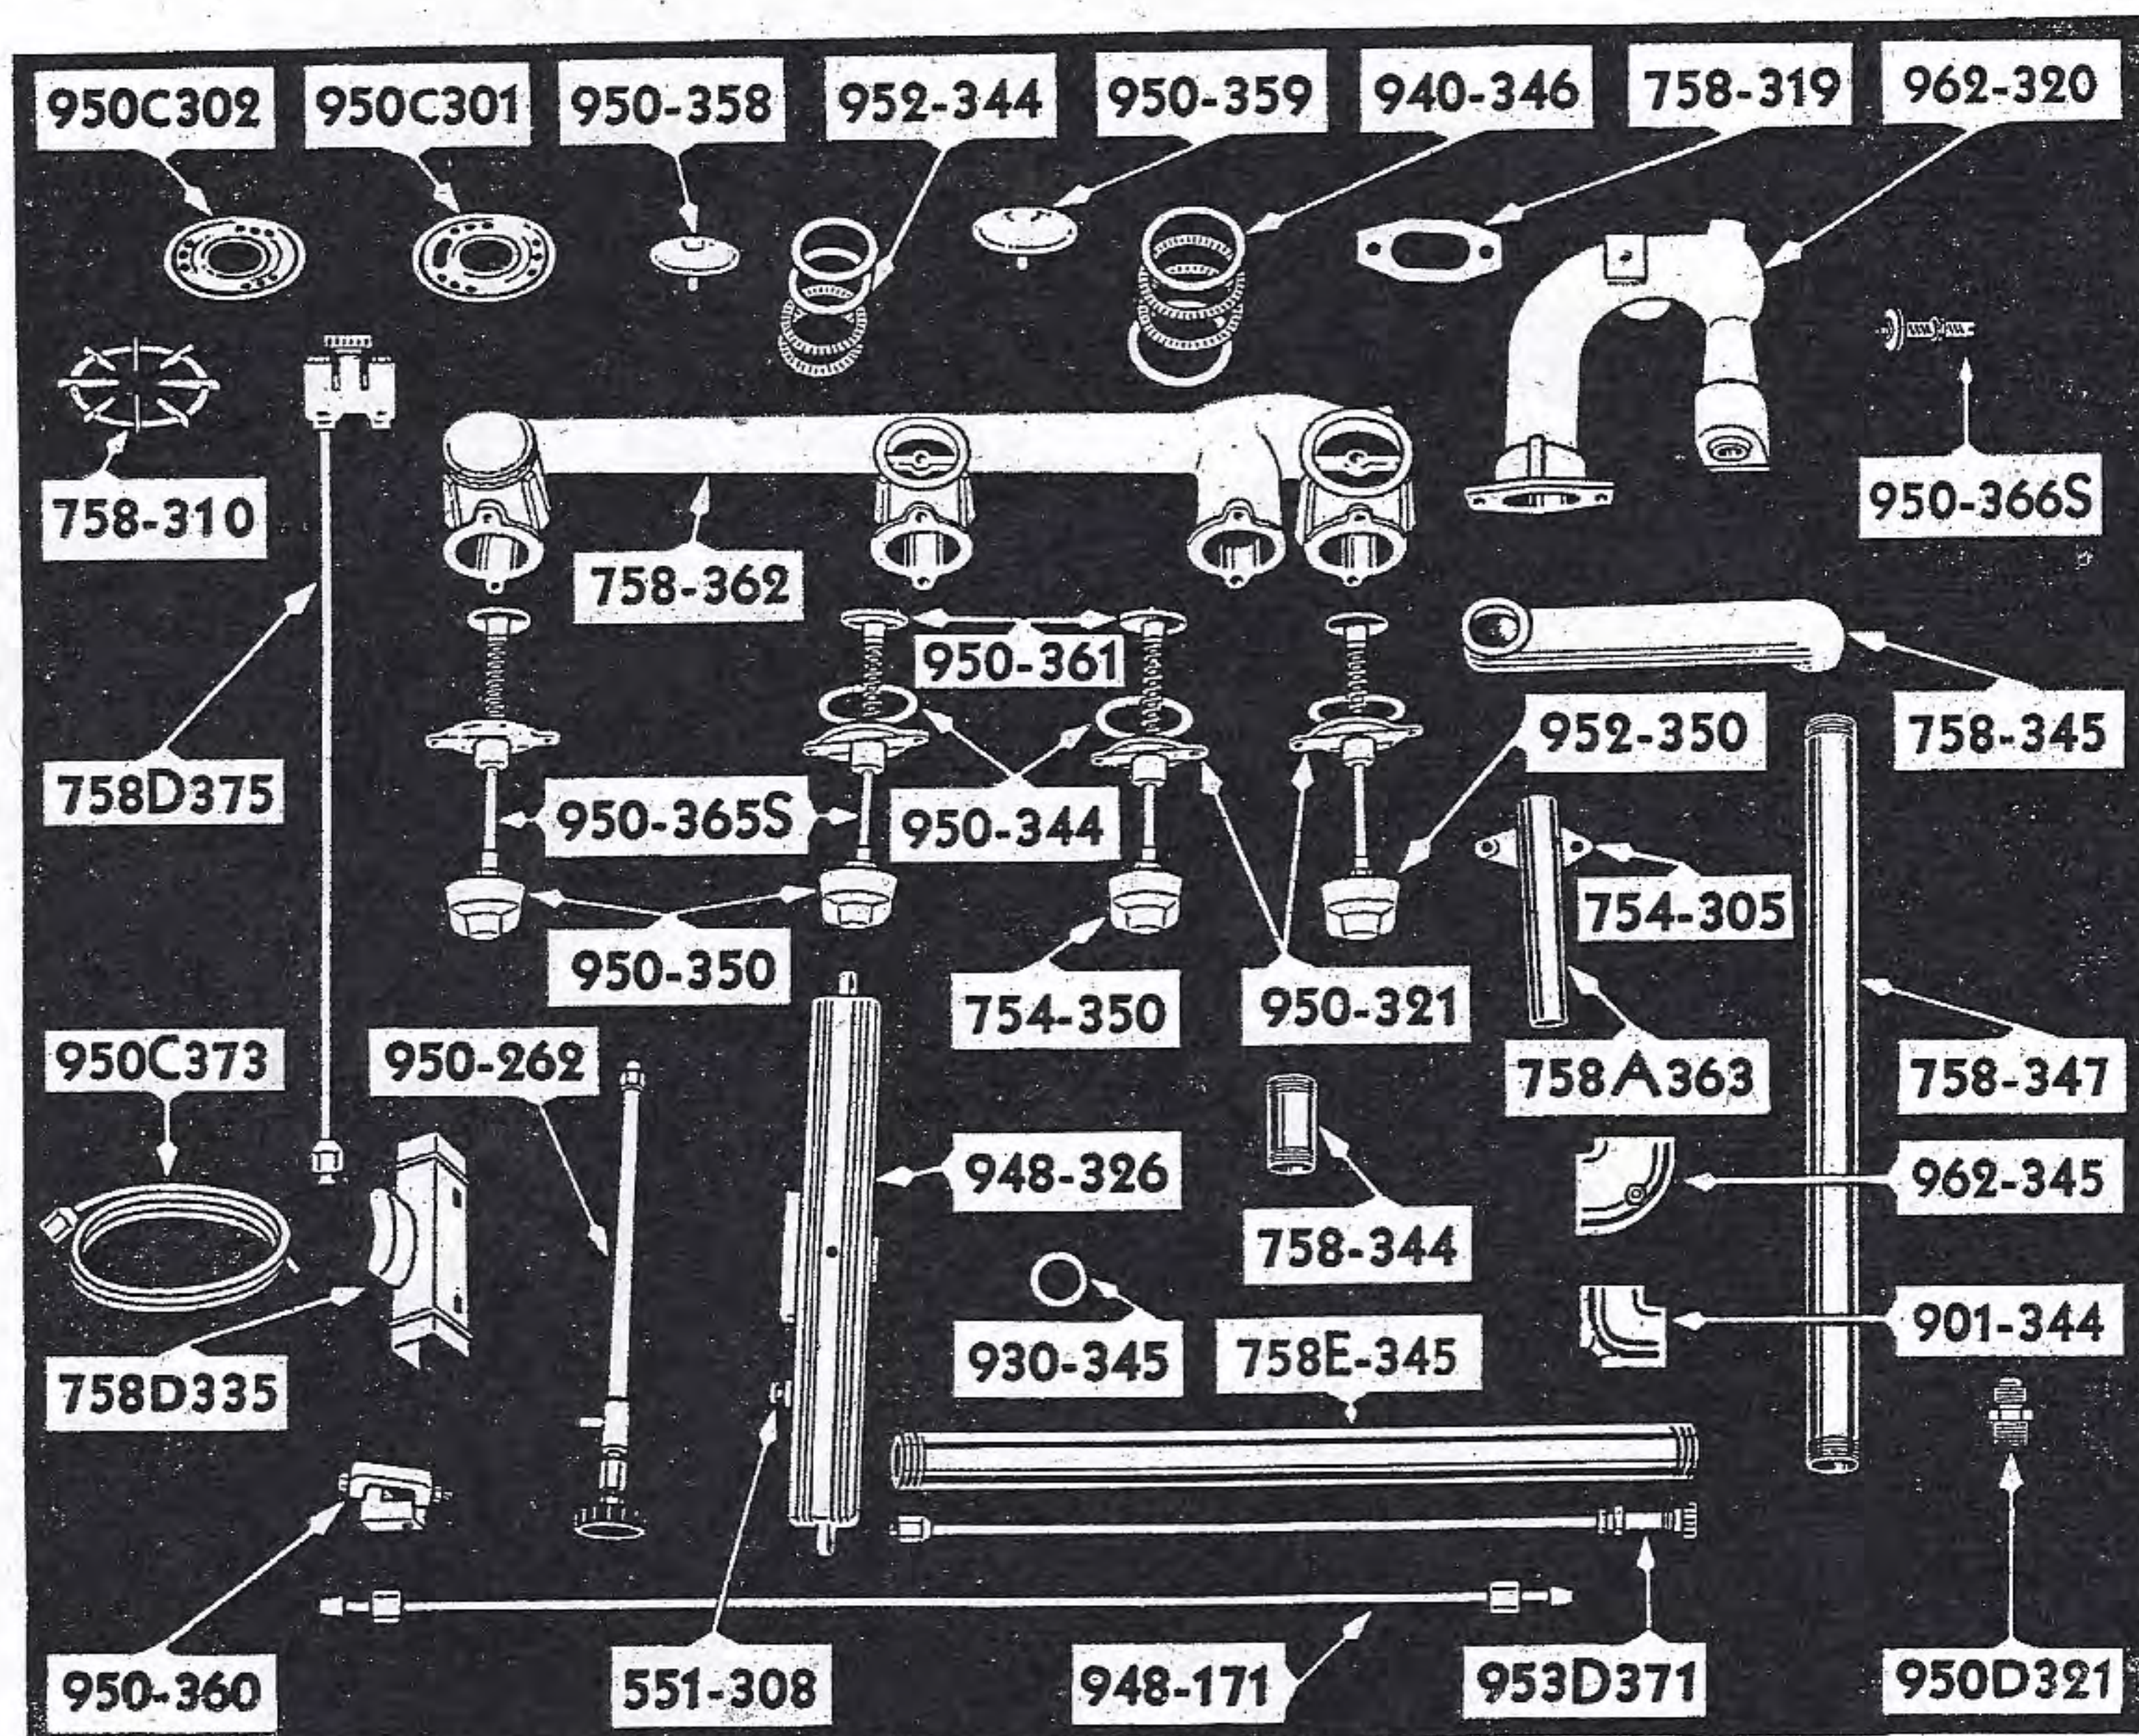

MASTER AND OVEN BURNER PARTS For Coleman Range Nos. 758, 758D and 758E

Use Generator No. 950-262. Illustrated on Page 47


Use Tank No. 758-191. Illustrated on Page 45

The No. 758D335 Master Sub-Flame Baffle and Lighter Tube is used on Stoves Nos. 758E and 758D

Stove No. 758 Uses No. 950-313 Master Sub-Flame Baffle

Refer to Numerical Listings for Parts, Description and Prices

COLEMAN STOVE BURNER PARTS ILLUSTRATIONS

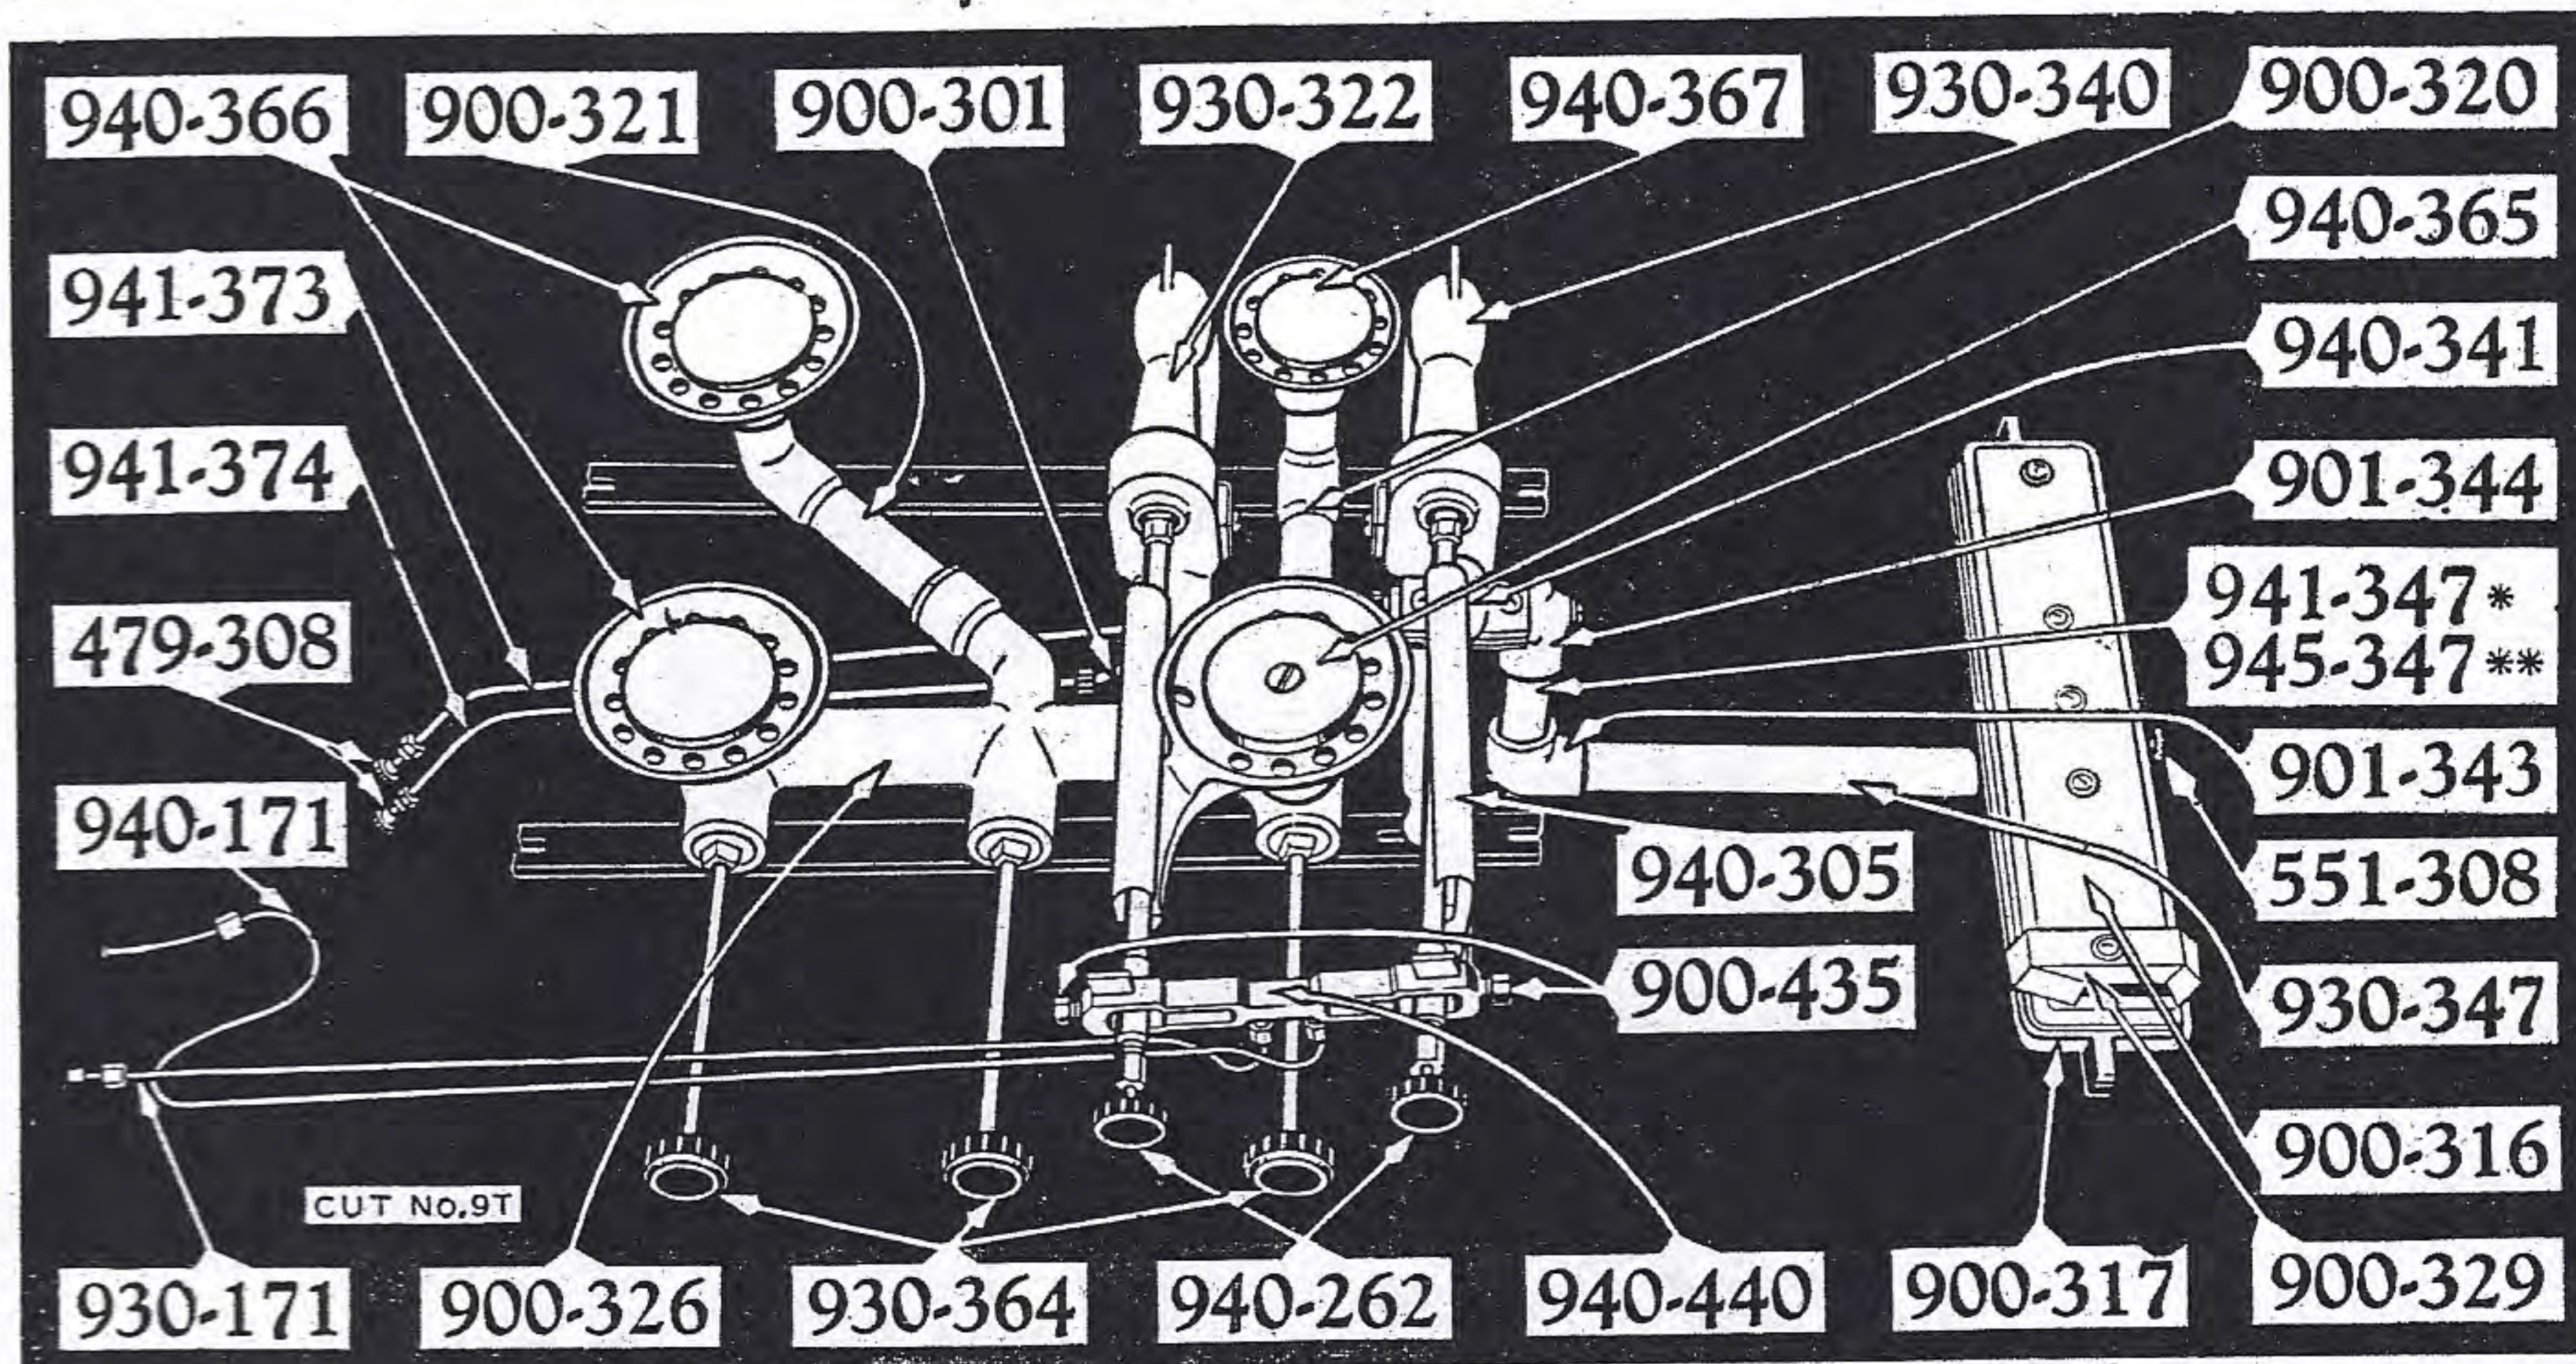

BURNER, GENERATOR AND OVEN BURNER PARTS

For Stove Model Nos. 940, 940A, 940B, 941, 941A, 941B, 942, 943, 944, 945, 945A, 946, 946A

*941-347 Used on Model No. 945A


**945-347 Used on Model No. 946A

Use Generator 940-262. Illustrated on Page 31

Model Nos. 940, 940A, 940B, 941, 941A, 941B, 942, 943, 944, Use Tank No. 953-191. Illustrated on Page 46

Model Nos. 945, 945A, 946, 946A, Use Tank No. 951-191. Illustrated on Page 45

NOTE: When ordering a Tank or Oven Burner Supply Pipes, mention Model Number of Stove on which they are to be used.

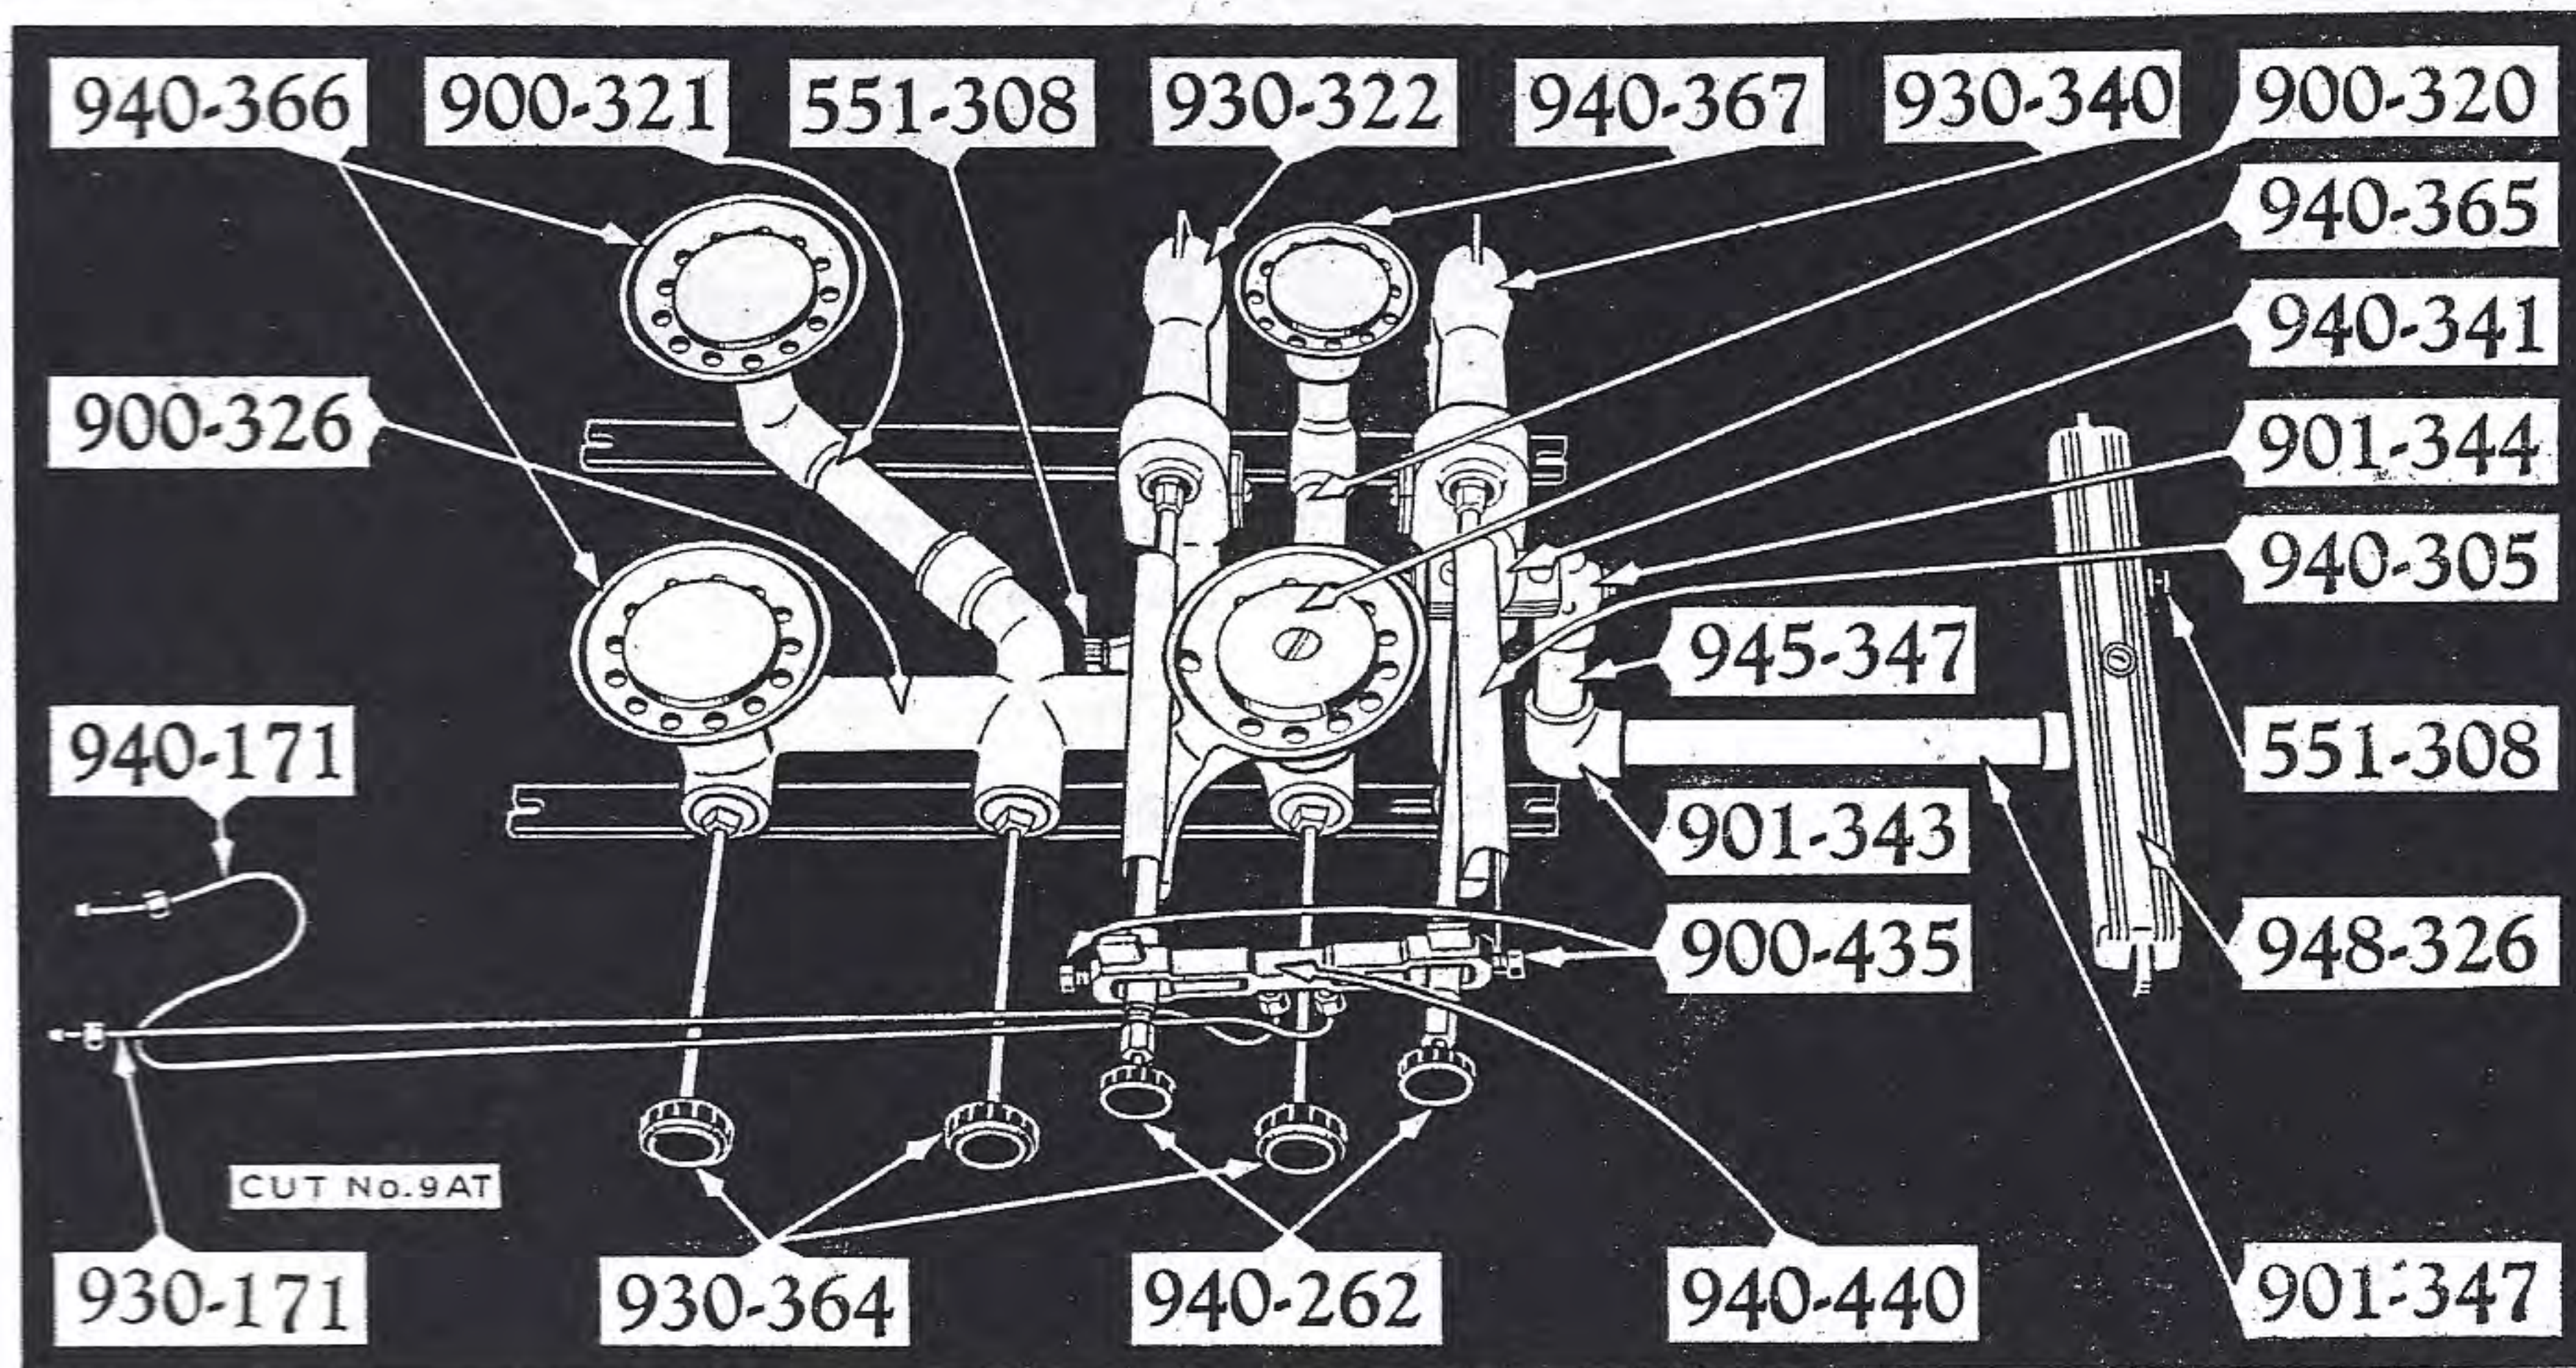

BURNER, GENERATOR AND OVEN BURNER PARTS


For Range Model Nos. 947 and 947A

Use Generator No. 940-262. Illustrated on Page 31

Use Tank No. 951-191. Illustrated on Page 45

Refer to Numerical Listings for Parts, Description and Prices

COLEMAN STOVE BURNER PARTS ILLUSTRATIONS

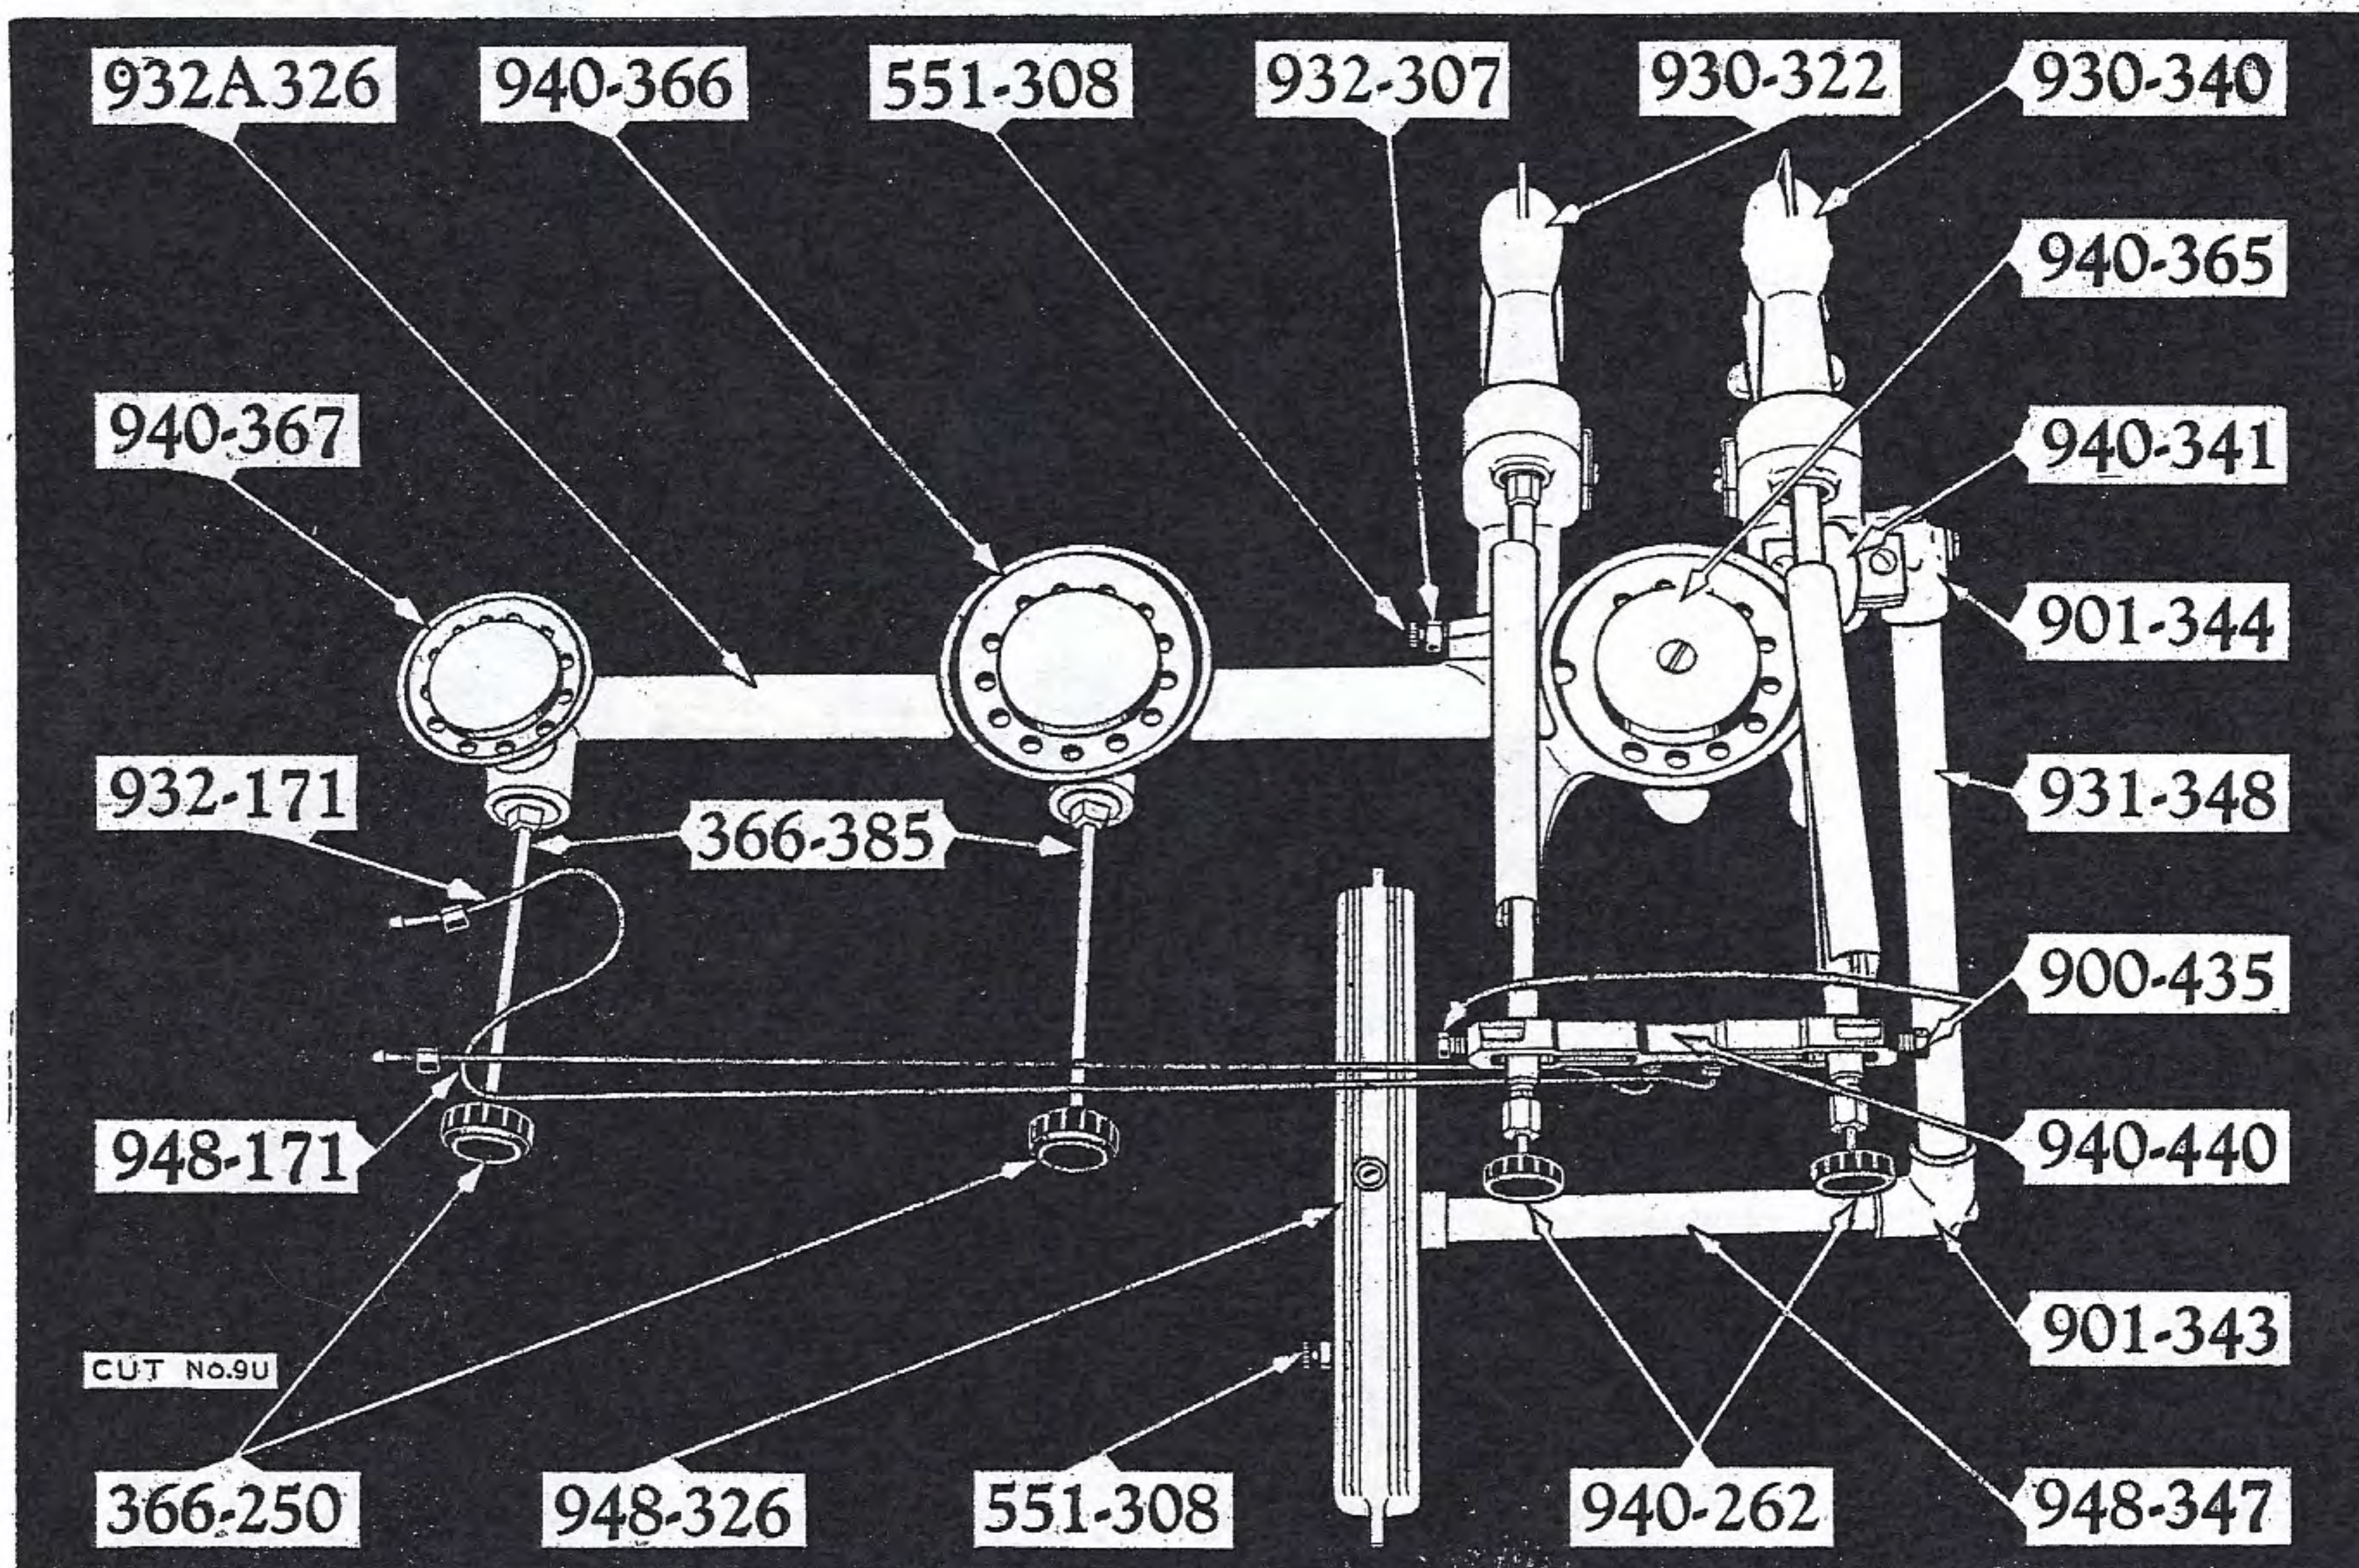


BURNER, GENERATOR AND OVEN BURNER PARTS For Range Model Nos. 948 and 948A

Use Generator 940-262. Illustrated on Page 31

Use Tank No. 951-191. Illustrated on Page 45

Refer to Numerical Listings for Parts, Description and Prices

COLEMAN STOVE BURNER PARTS ILLUSTRATIONS

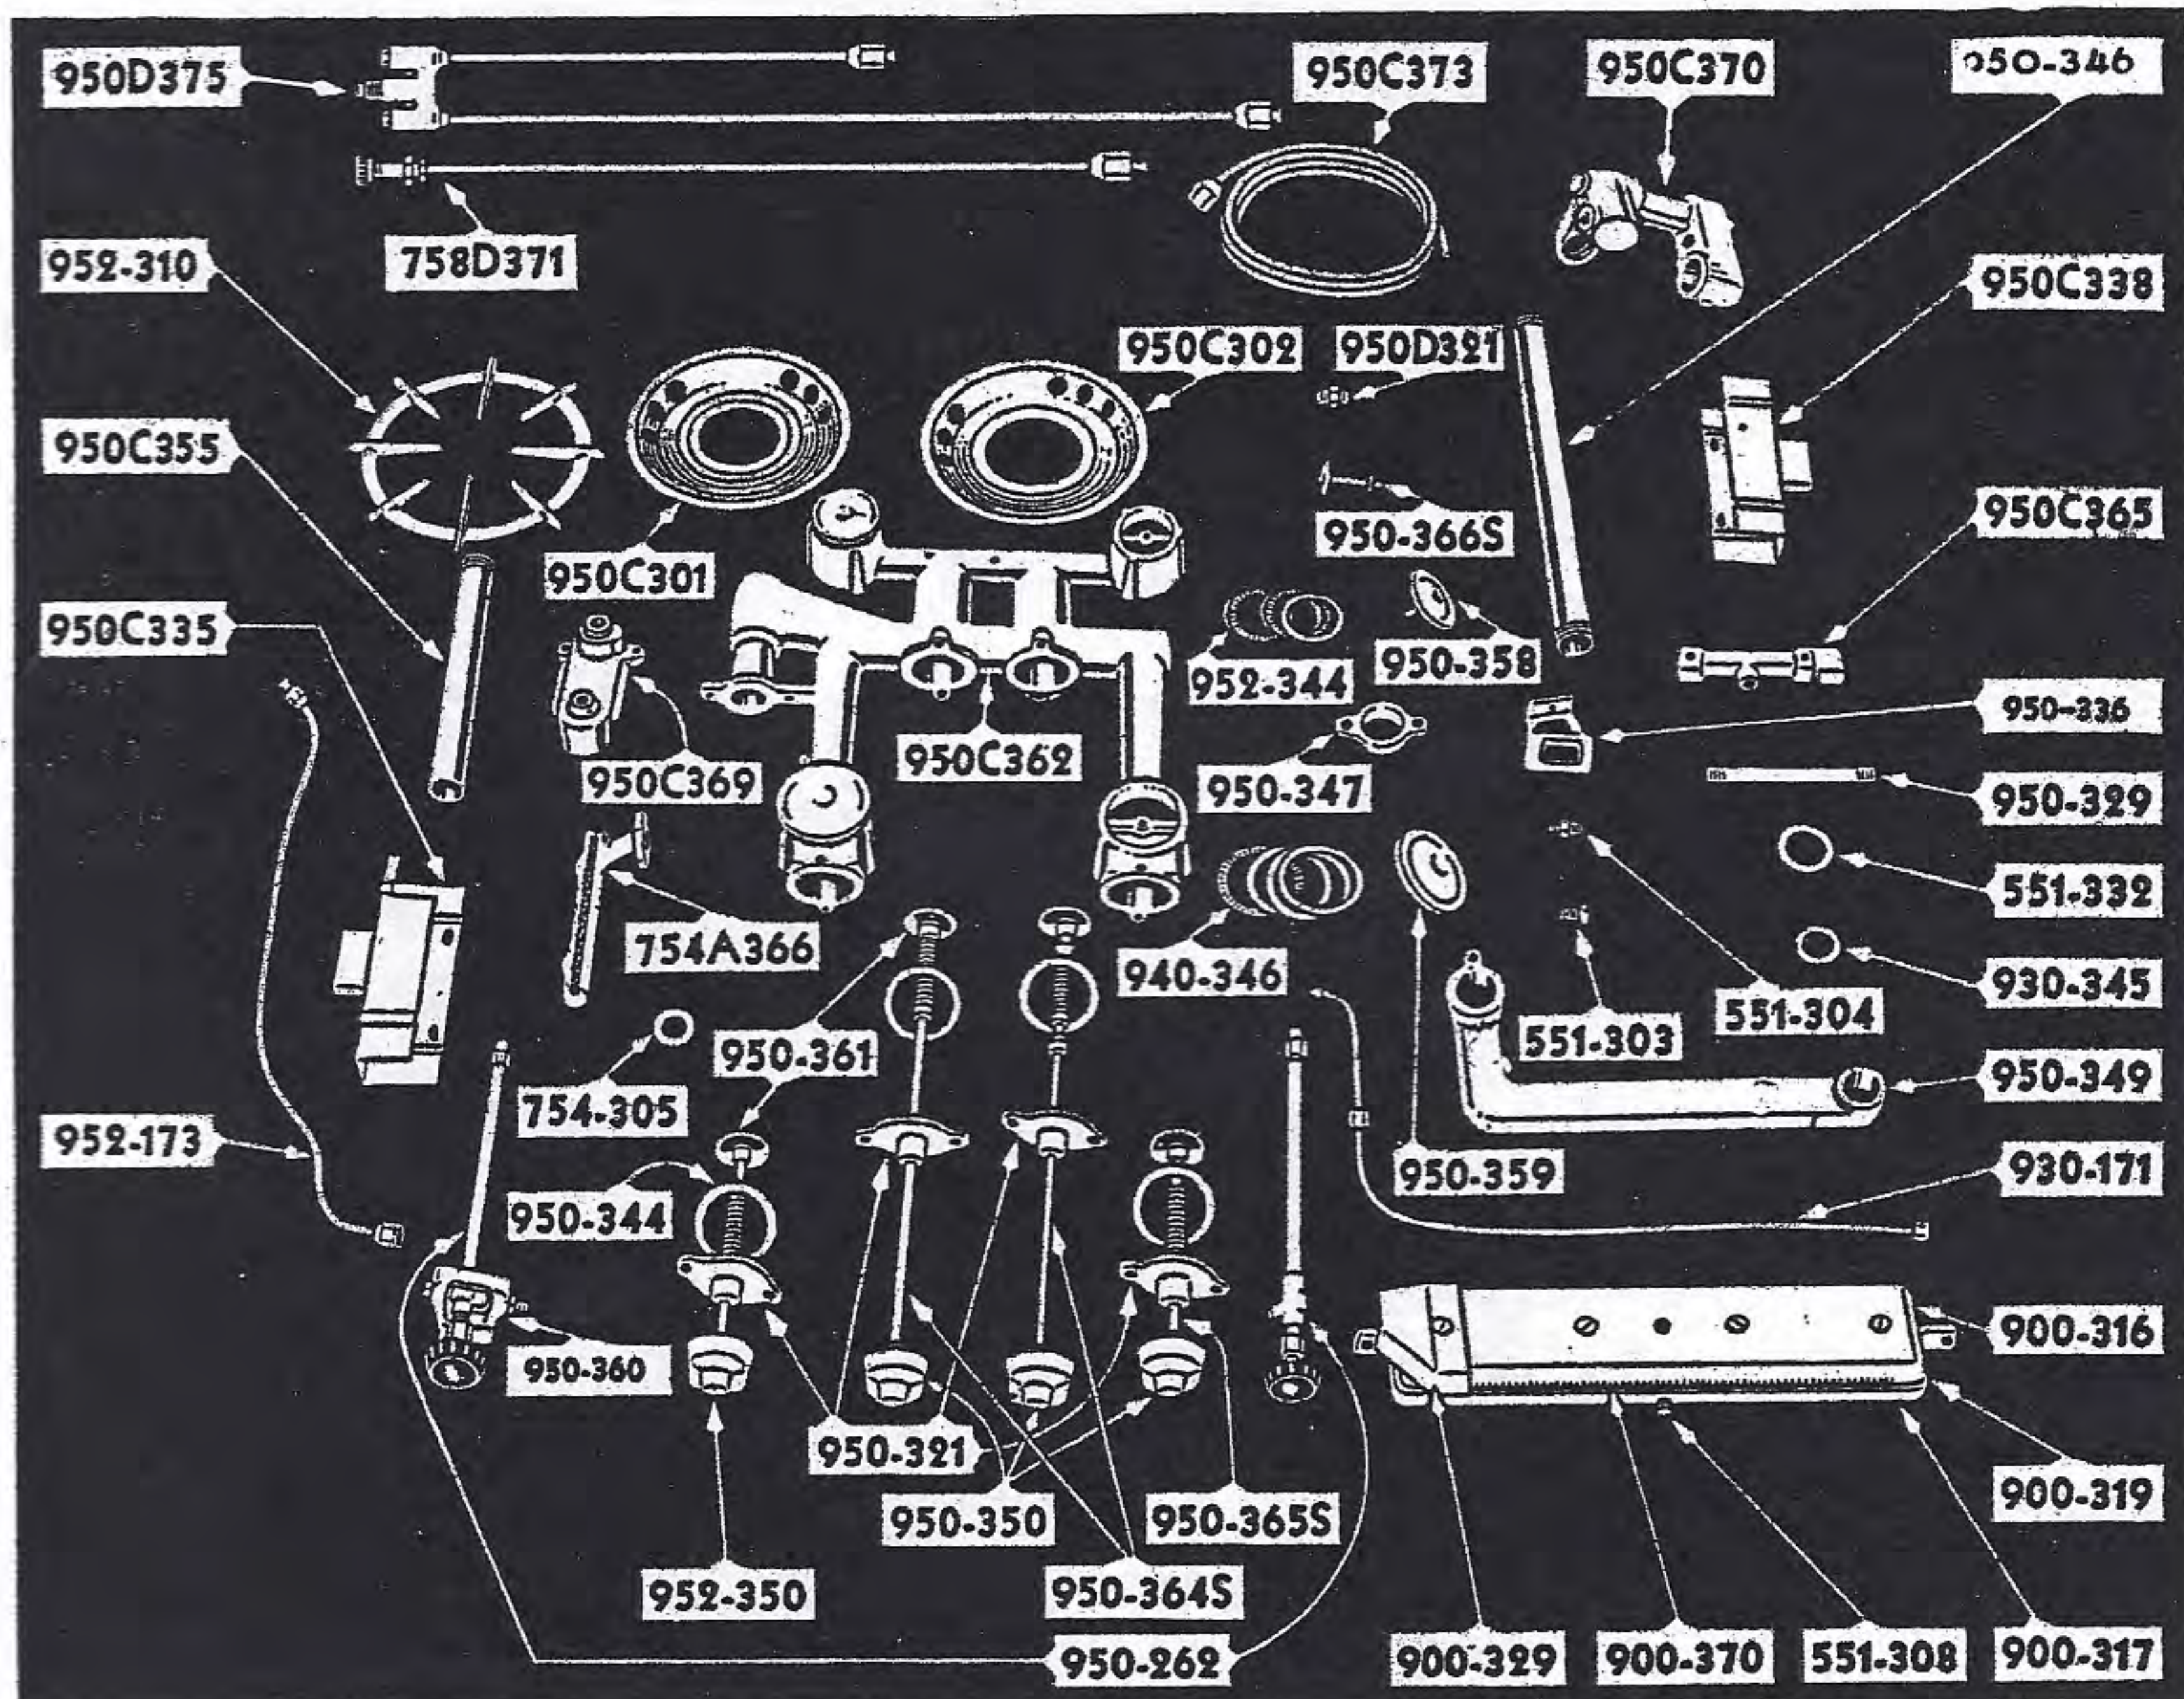

BURNER, GENERATOR AND OVEN BURNER PARTS

For Range Model Nos. 950A, 950B, 950C and 950D

Use Generator No. 950-262. Illustrated on Page 47


Use Tank No. 953-191. Illustrated on Page 46

No. 950C335 Master Sub-Flame Baffle and Lighter Tube; also No. 950C338 Oven Sub-Flame Baffle are used only on Stoves Nos. 950C and 950D

Stoves 950A and 950B use No. 950-305 and No. 950-313 Sub-Flame Baffles

Refer to Numerical Listings for Parts, Description and Prices

COLEMAN STOVE BURNER PARTS ILLUSTRATIONS

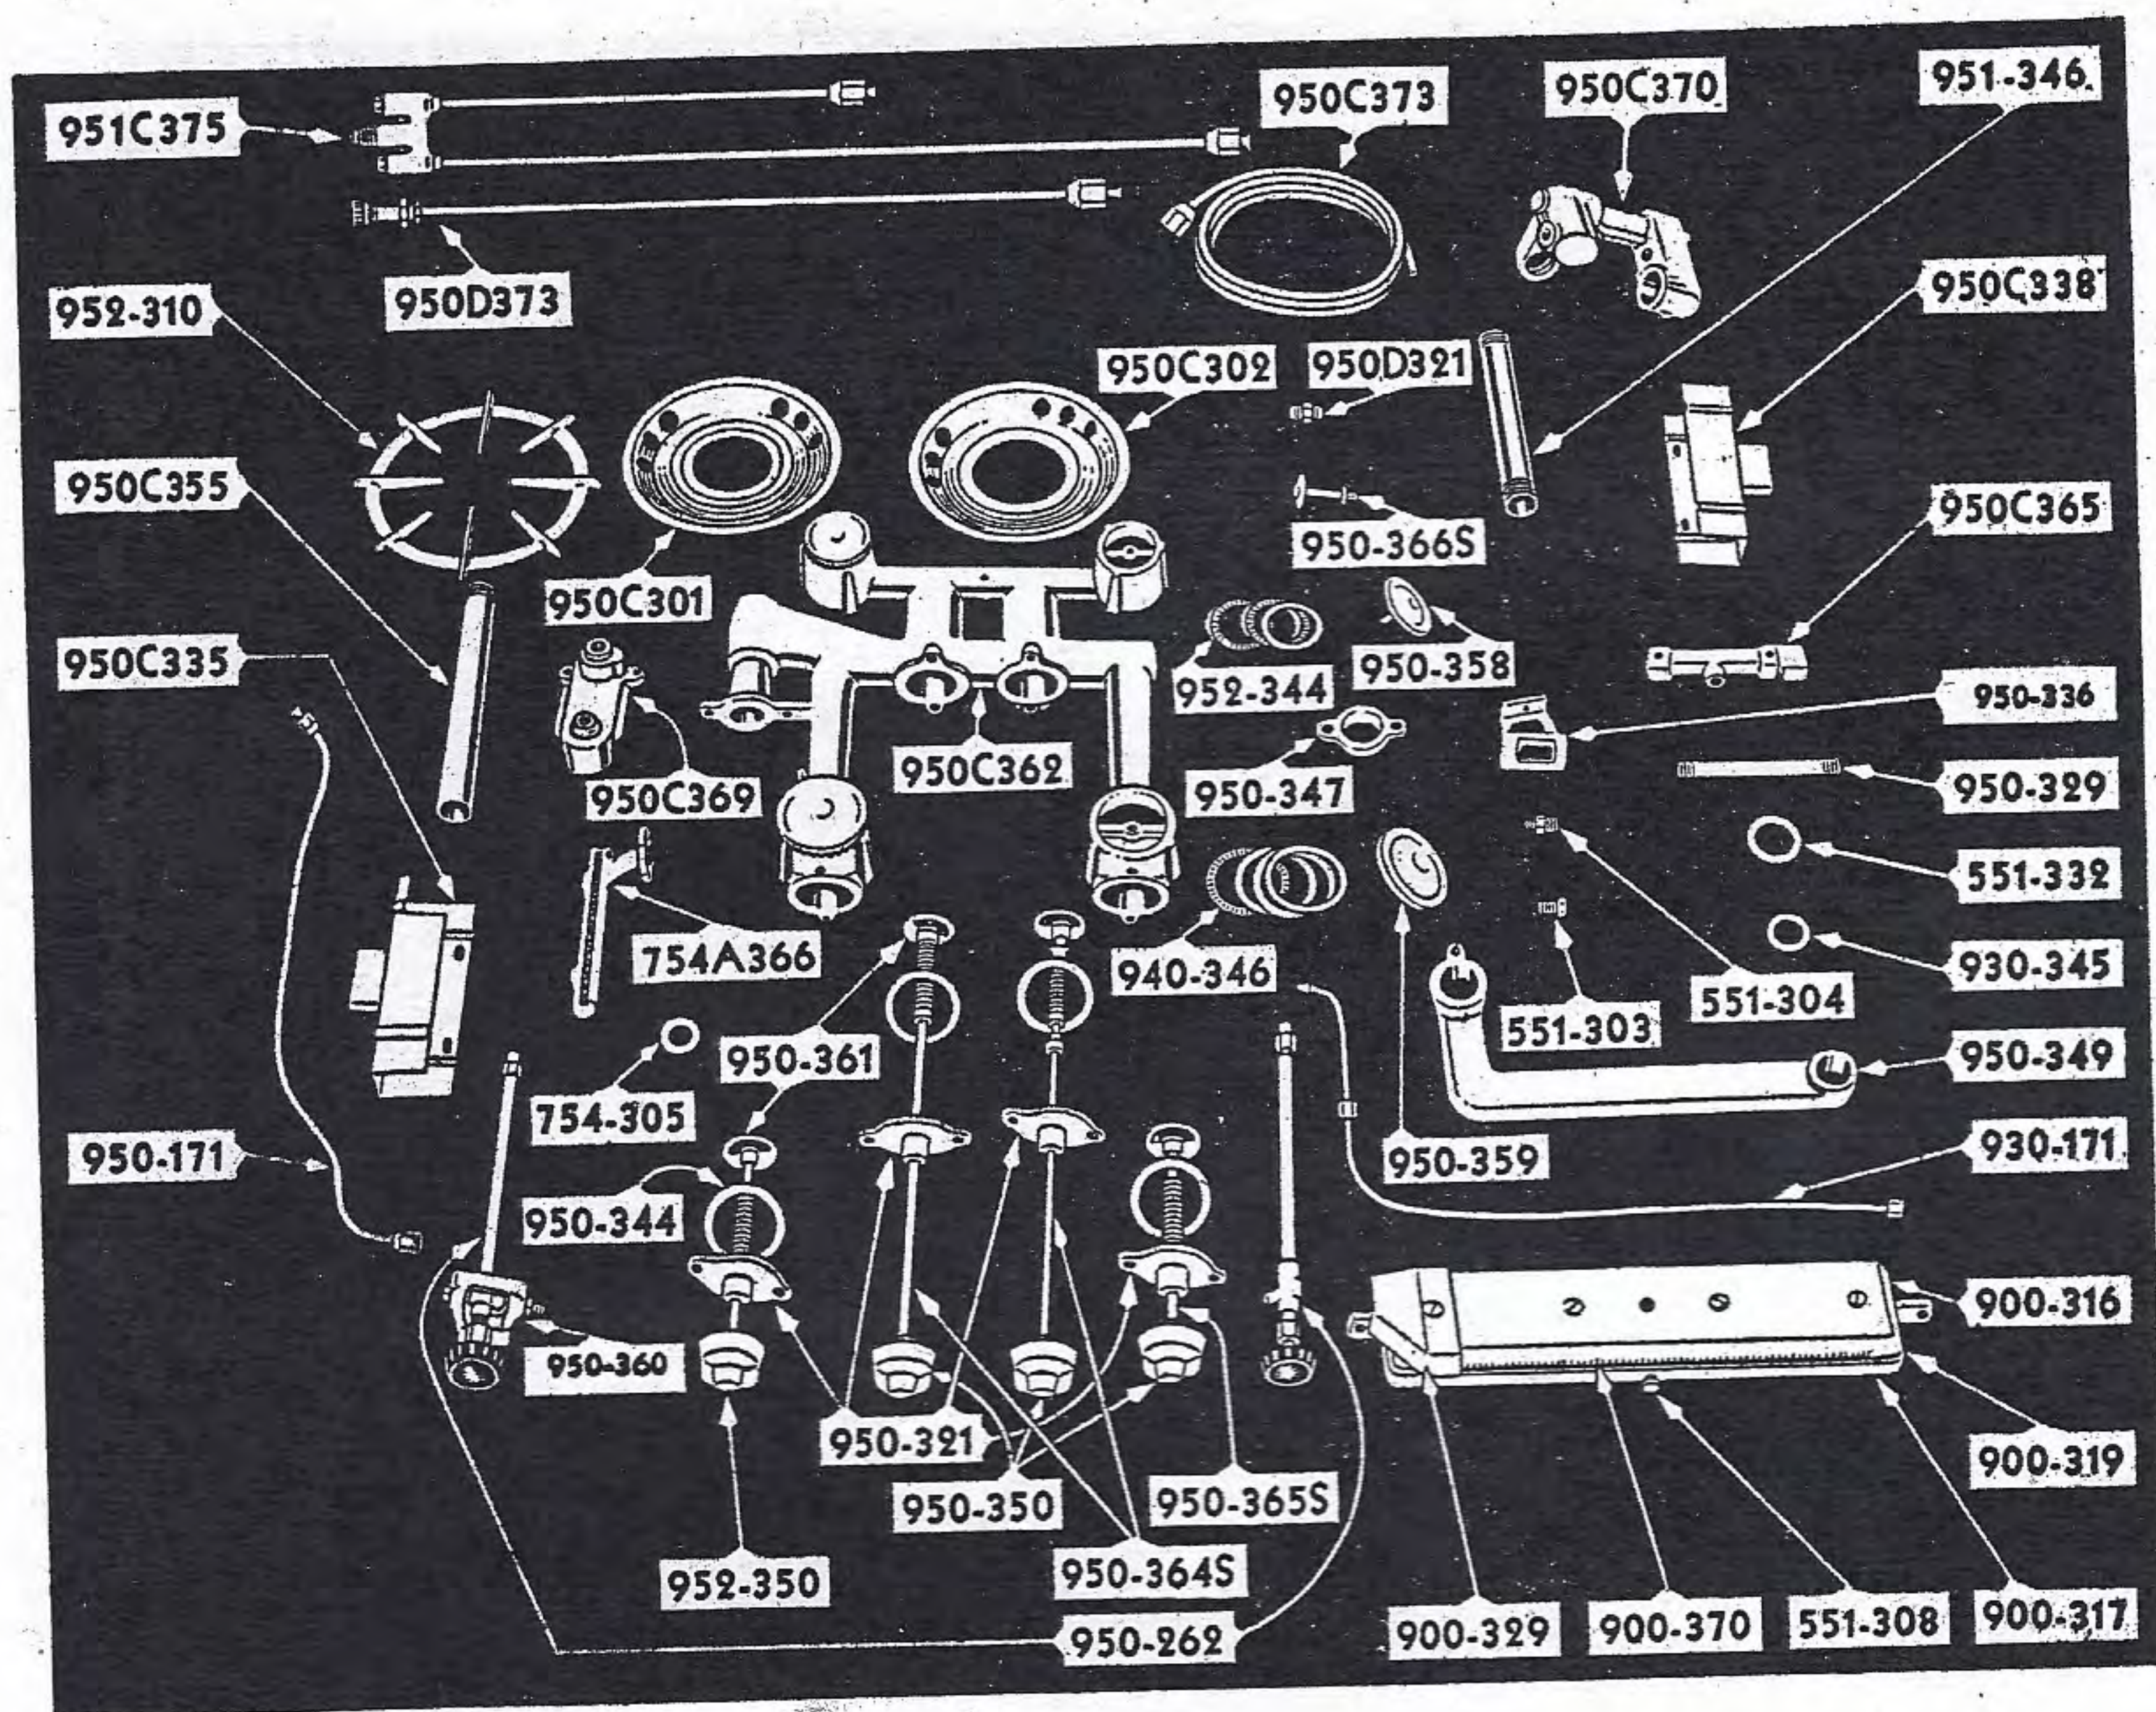

BURNER, GENERATOR AND OVEN BURNER PARTS

For Range Model Nos. 951A and 951C

Use Generator No. 950-262. Illustrated on Page 47


Use Tank No. 951-191. Illustrated on Page 45

No. 950C335 Master Sub-Flame Baffle and Lighter Tube; also No. 950C338 Oven Sub-Flame Baffle are used only on Stove No. 951C

Stove No. 951A uses No. 950-305 and No. 950-313 Sub-Flame Baffles

Refer to Numerical Listings for Parts, Description and Prices

COLEMAN STOVE PARTS ILLUSTRATIONS

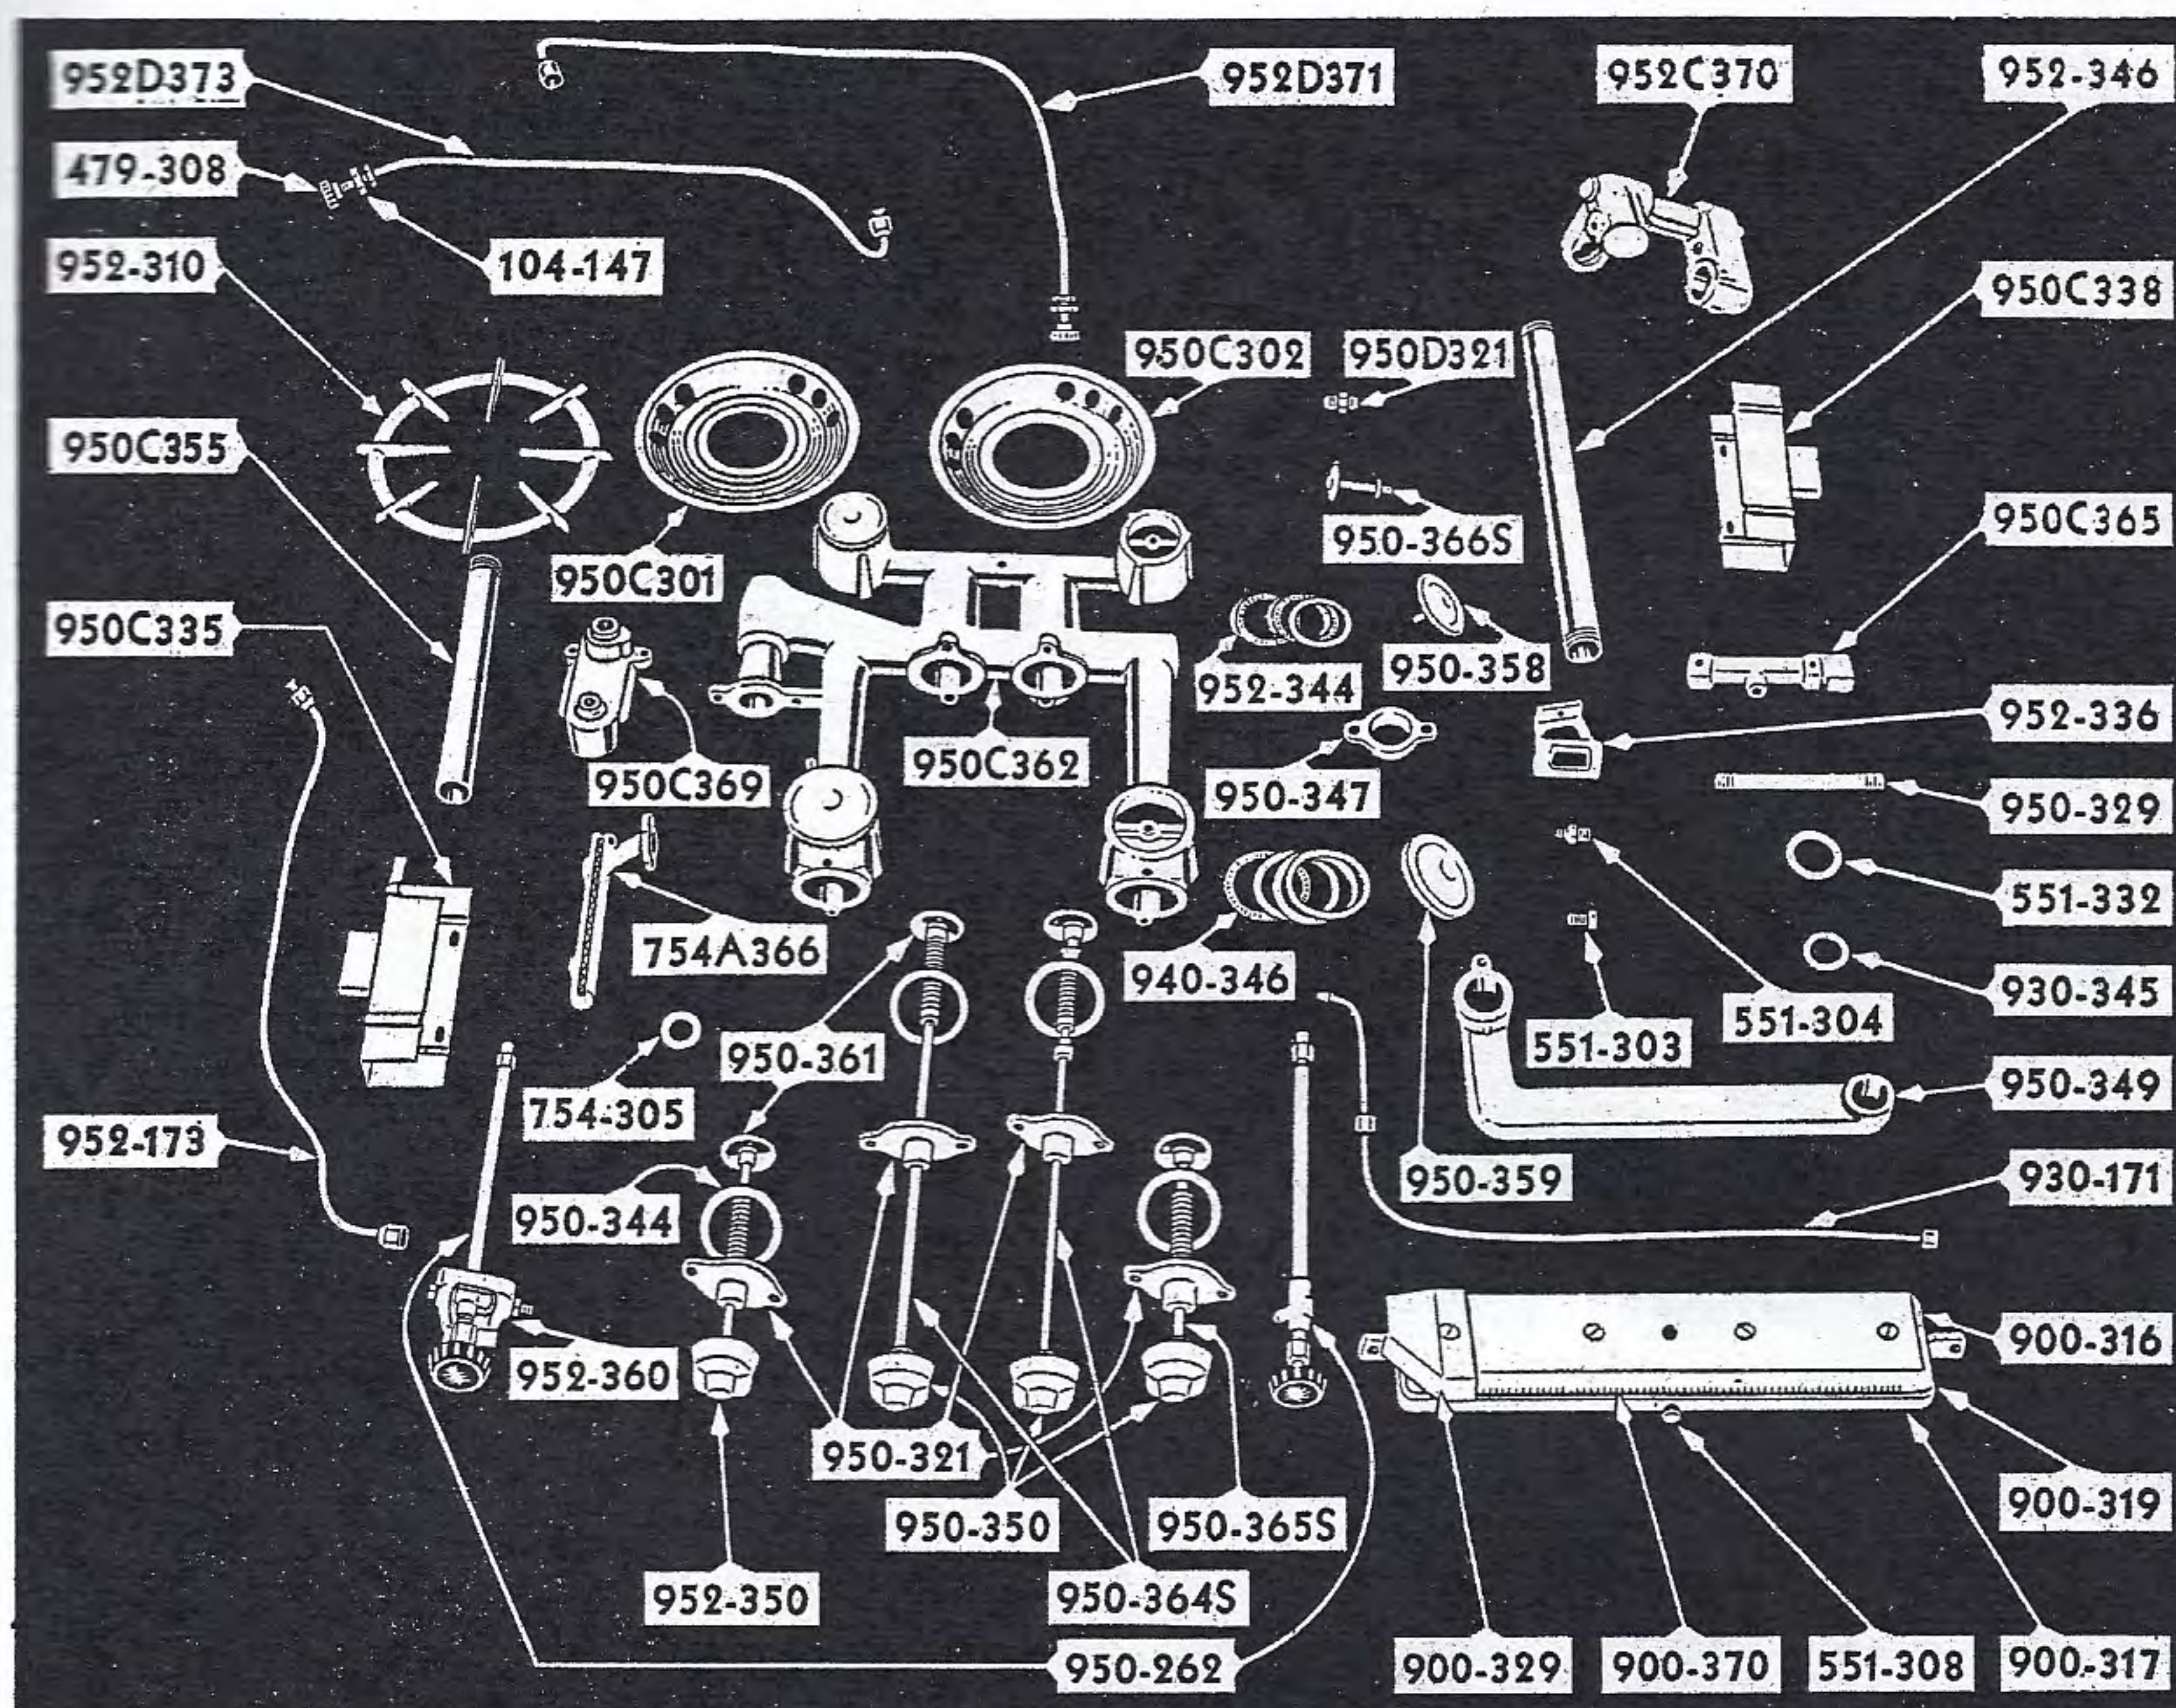

MASTER AND OVEN BURNER REPAIR PARTS LIST For Coleman Ranges Nos. 952A, 952B, 952C and 952D


Use Generator No. 950-262. Illustrated on Page 47

Use Tank No. 952-191. Illustrated on Page 46

No. 950C335 Master Sub-Flame Baffle and Lighter Tube; also No. 950C338 Oven Sub-Flame Baffle
are used only on Stoves Nos. 952C and 952D
Stove Nos. 951A and 952B use No. 950-305 and No. 950-313 Sub-Flame Baffles

Refer to Numerical Listings for Parts, Description and Prices

COLEMAN STOVE BURNER PARTS ILLUSTRATIONS

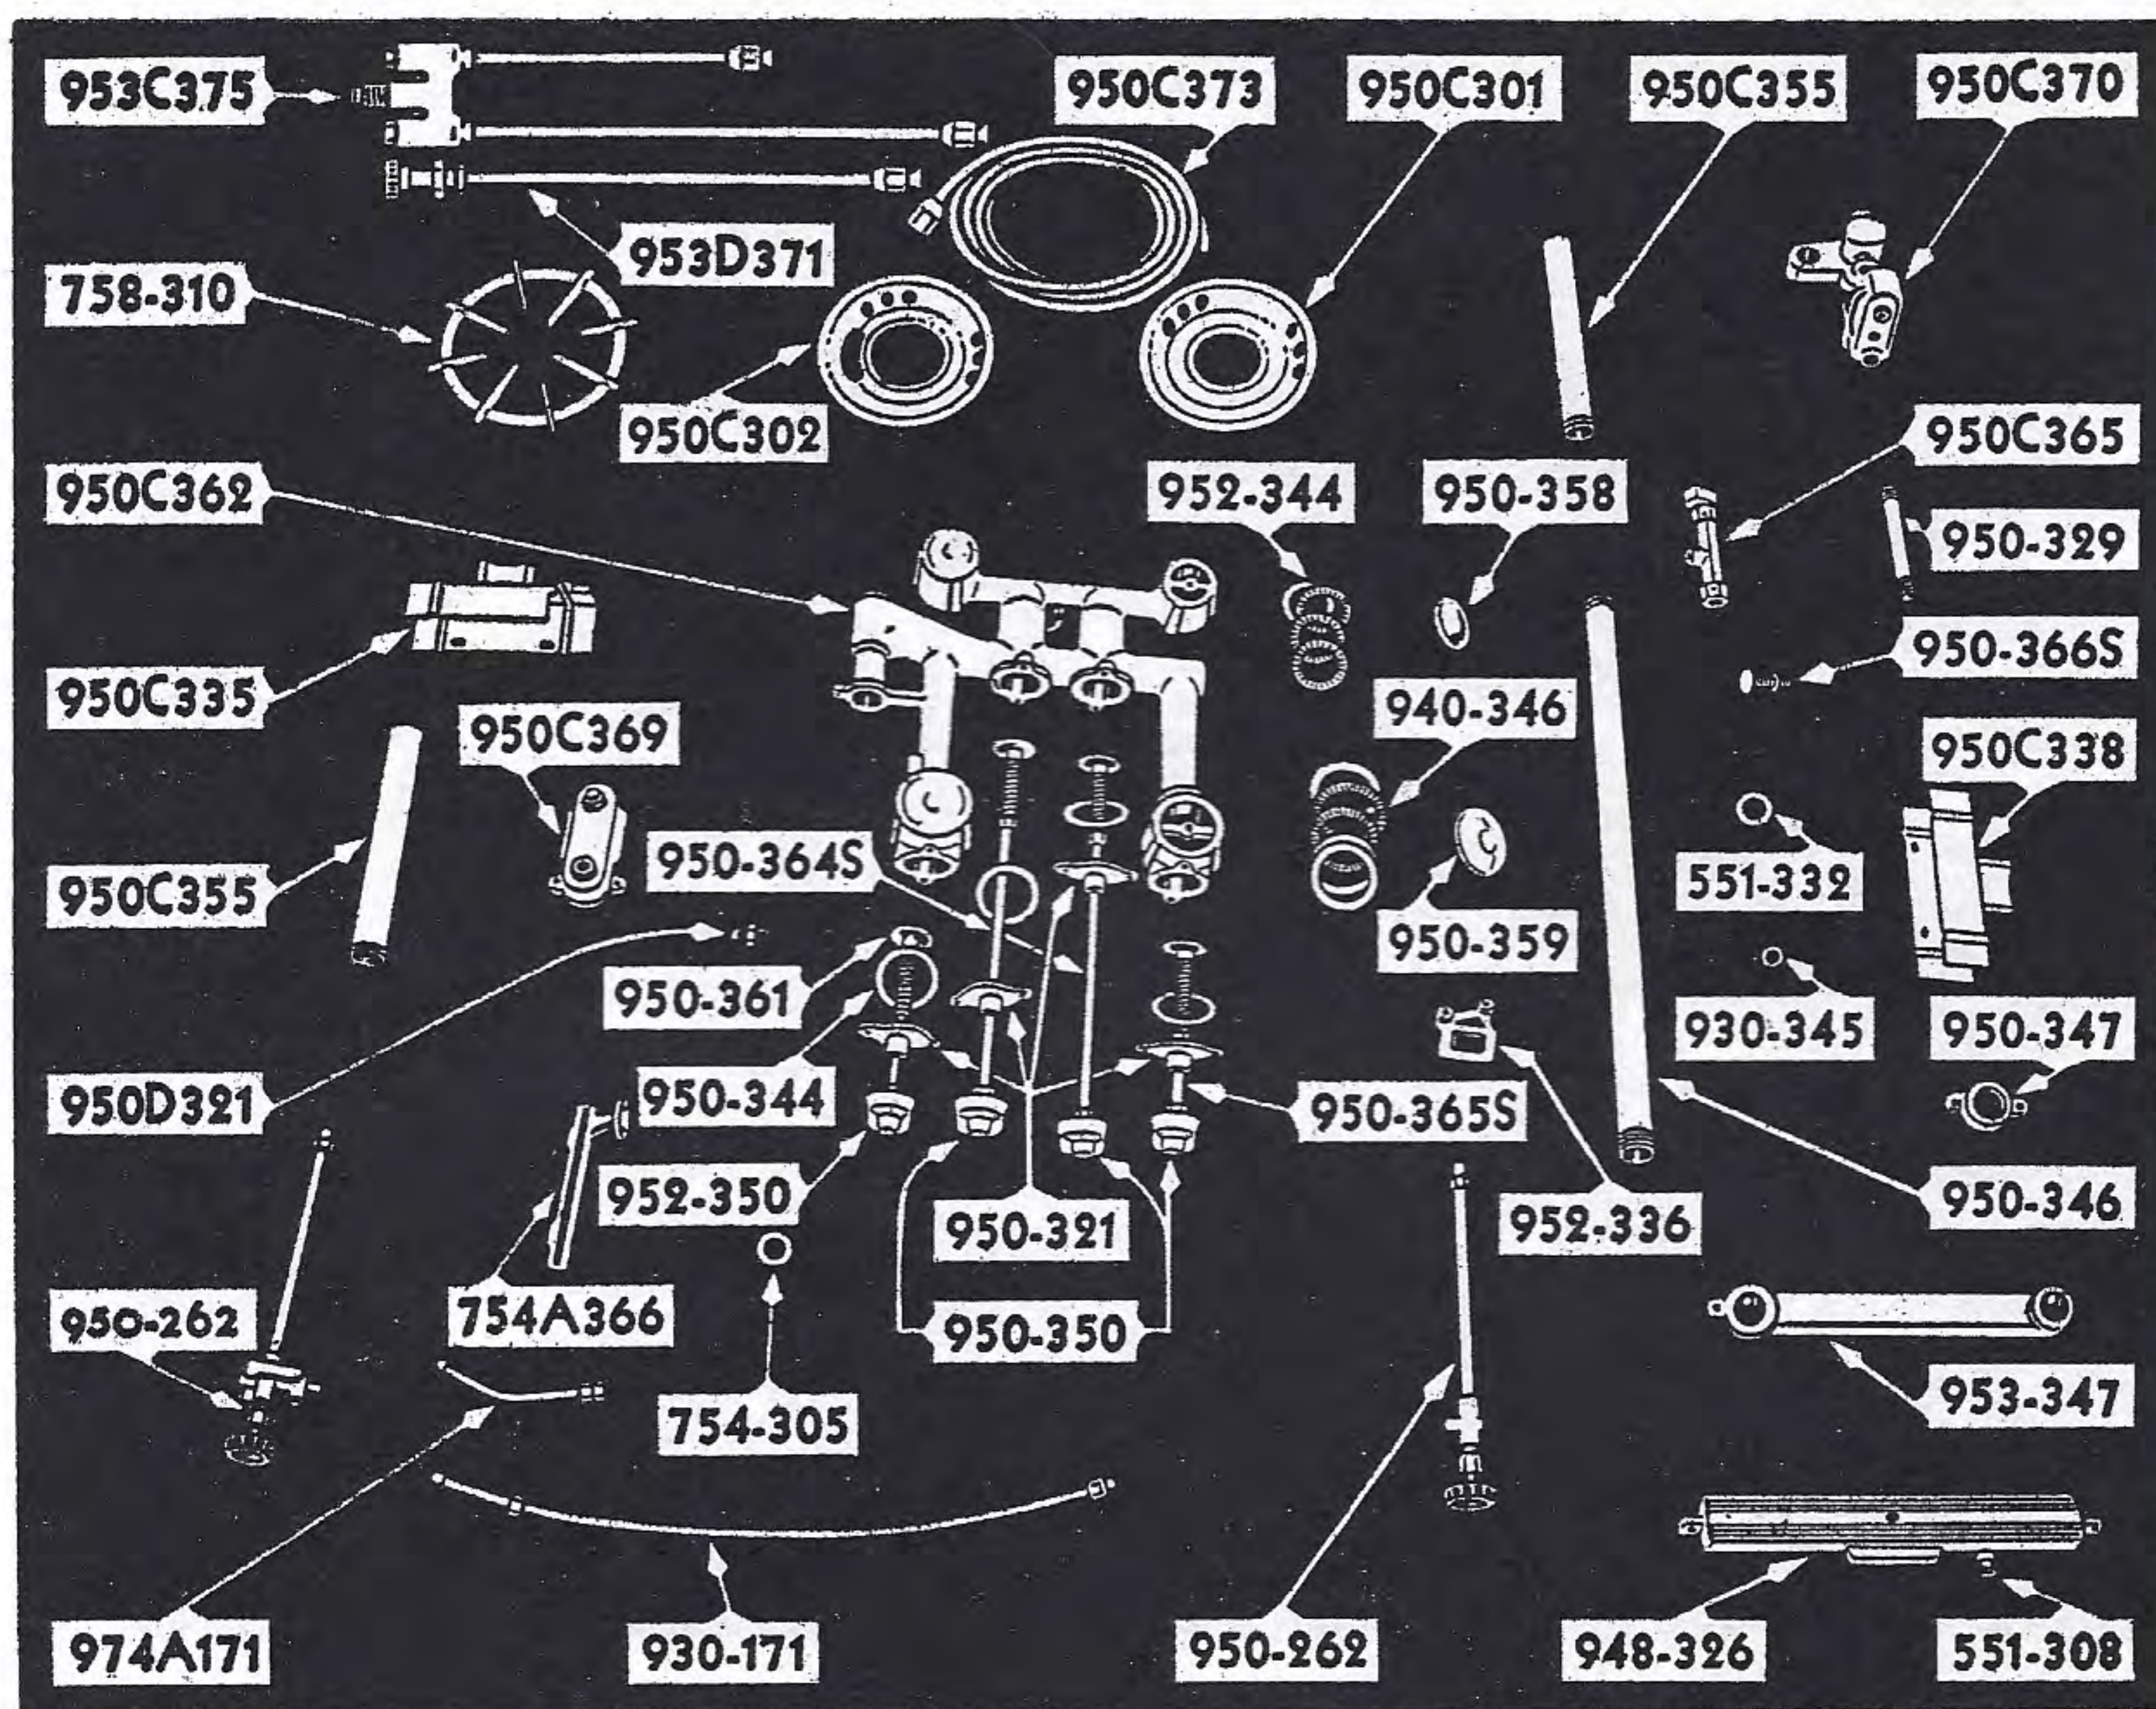

BURNER, GENERATOR AND OVEN BURNER PARTS

For Range Model Nos. 953A, 953C and 953D

 
Use Generator No. 950-262. Illustrated on Page 47

Use Tank No. 953-191. Illustrated on Page 46


No. 950C335 Master Sub-Flame Baffle and Lighter Tube; also No. 950C338 Oven Sub-Flame Baffle
are used only on Stove Nos. 953C and 953D
Stove No. 953A uses No. 950-305 and No. 950-313 Sub-Flame Baffles

Refer to Numerical Listings for Parts, Description and Prices

Complements of the Old Town Coleman Center



COLEMAN STOVE BURNER PARTS ILLUSTRATIONS

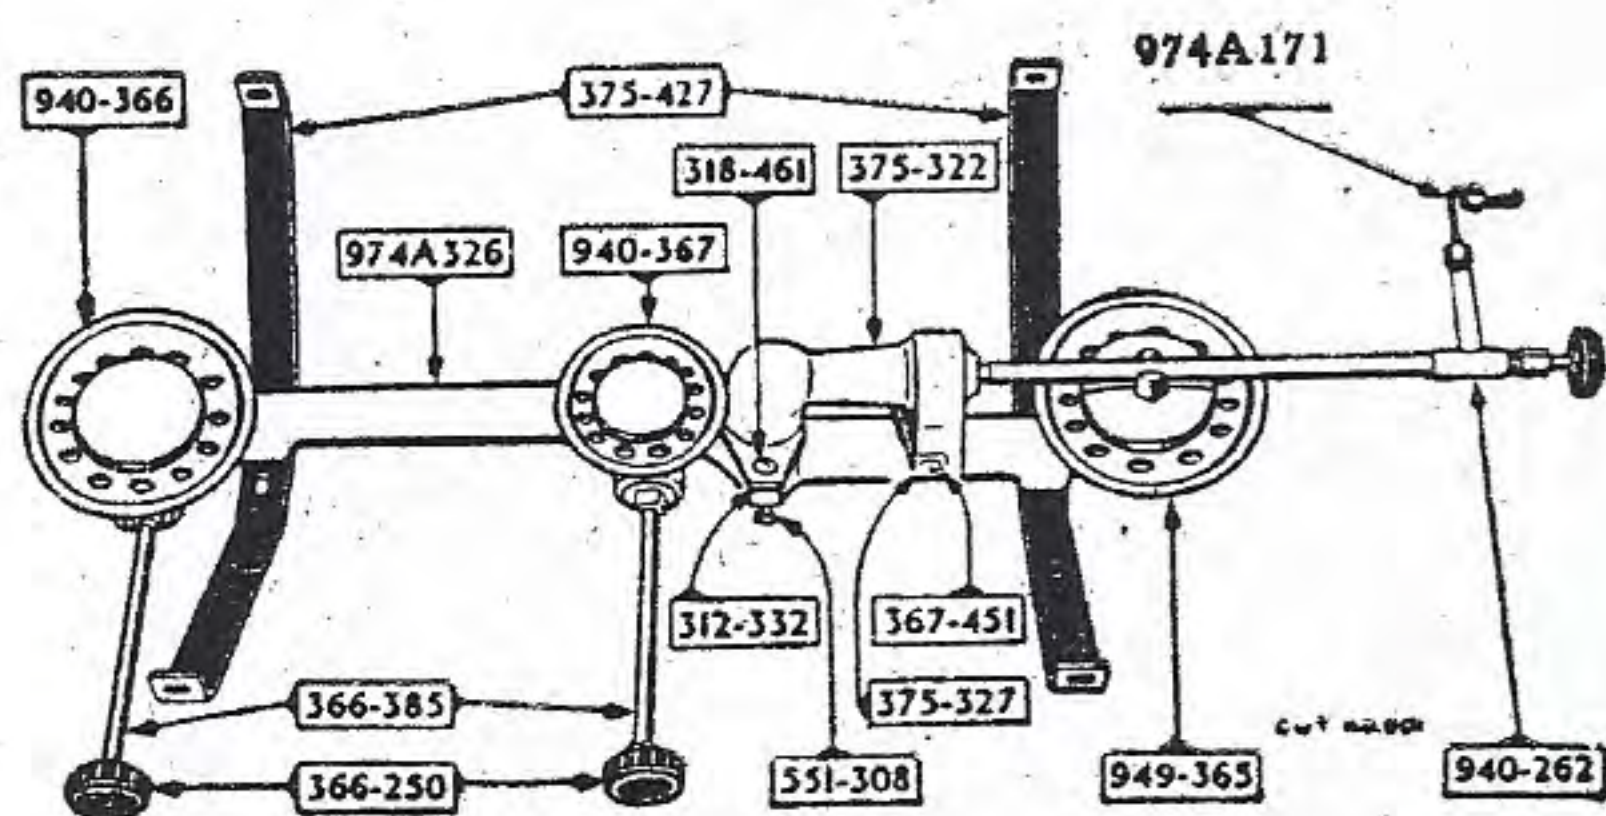


BURNER AND GENERATOR PARTS

For Stove Model Nos. 974A, 975A

Use Generator 940-262. Illustrated on Page 31

Use Tank No. 974-191. Illustrated on Page 30

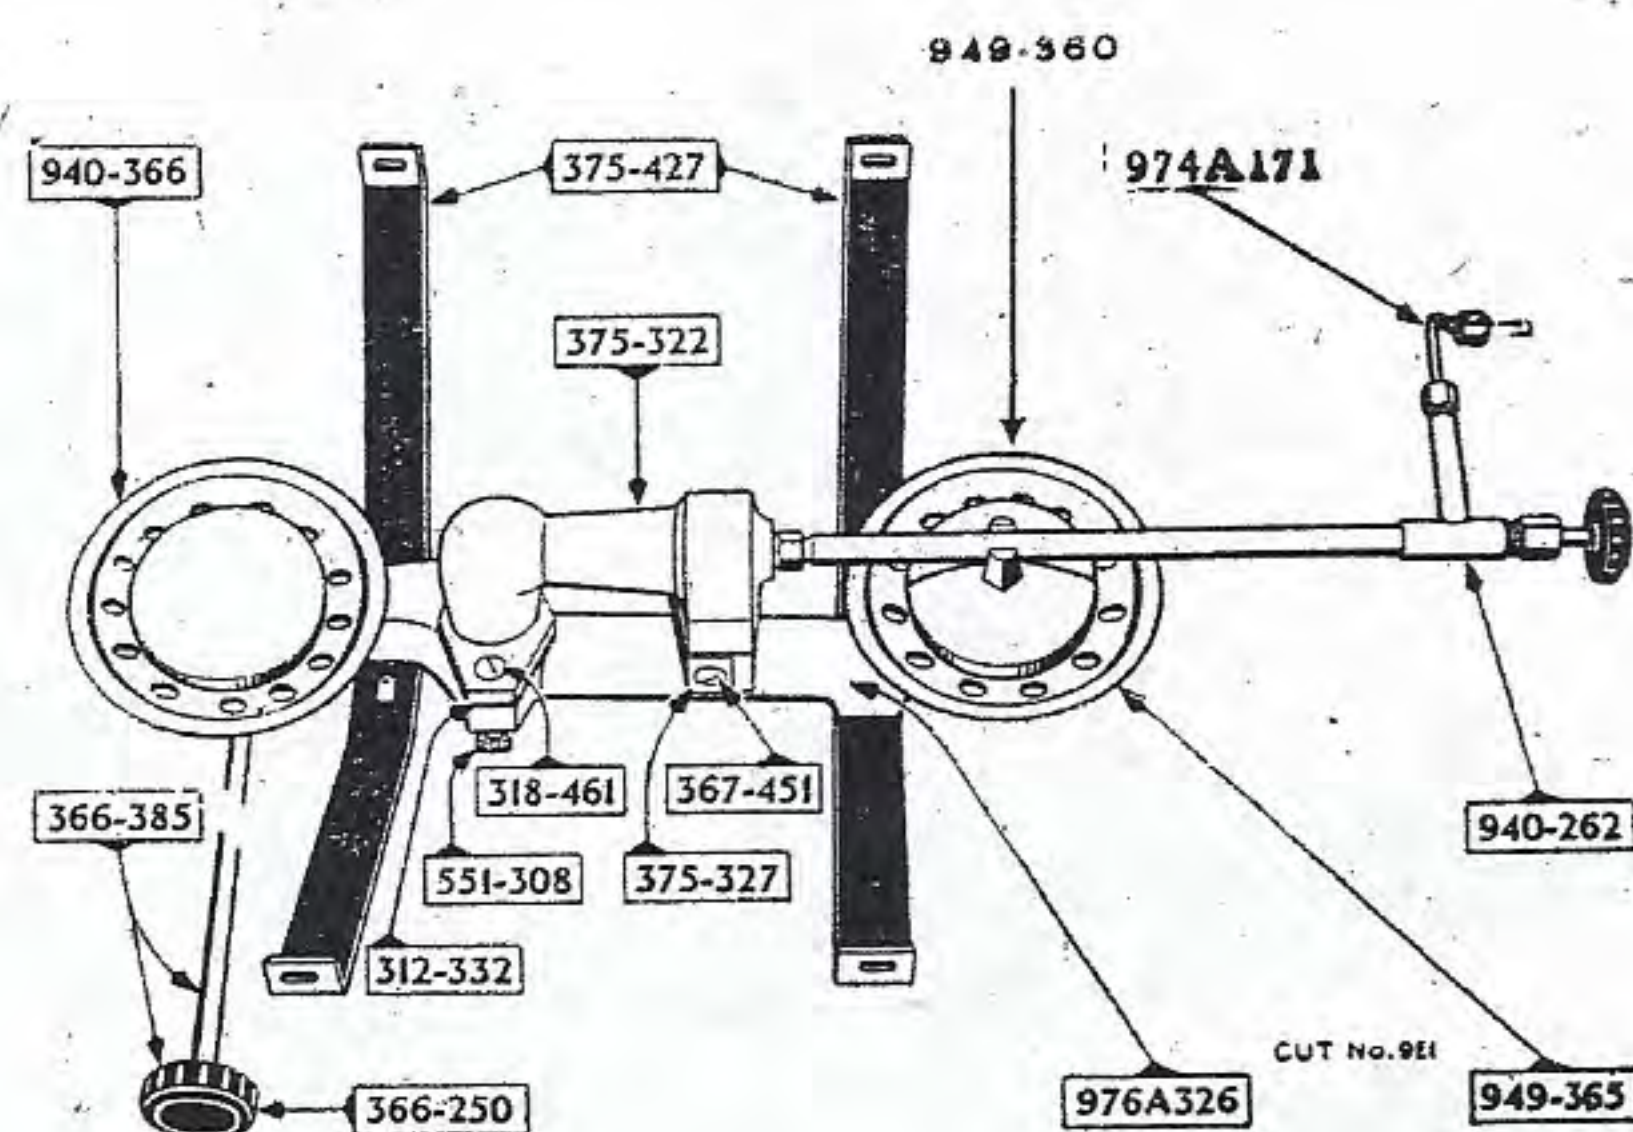


BURNER AND GENERATOR PARTS

For Stove Model No. 976A

Use Generator 940-262. Illustrated on Page 31

Use Tank No. 974-191. Illustrated on Page 30


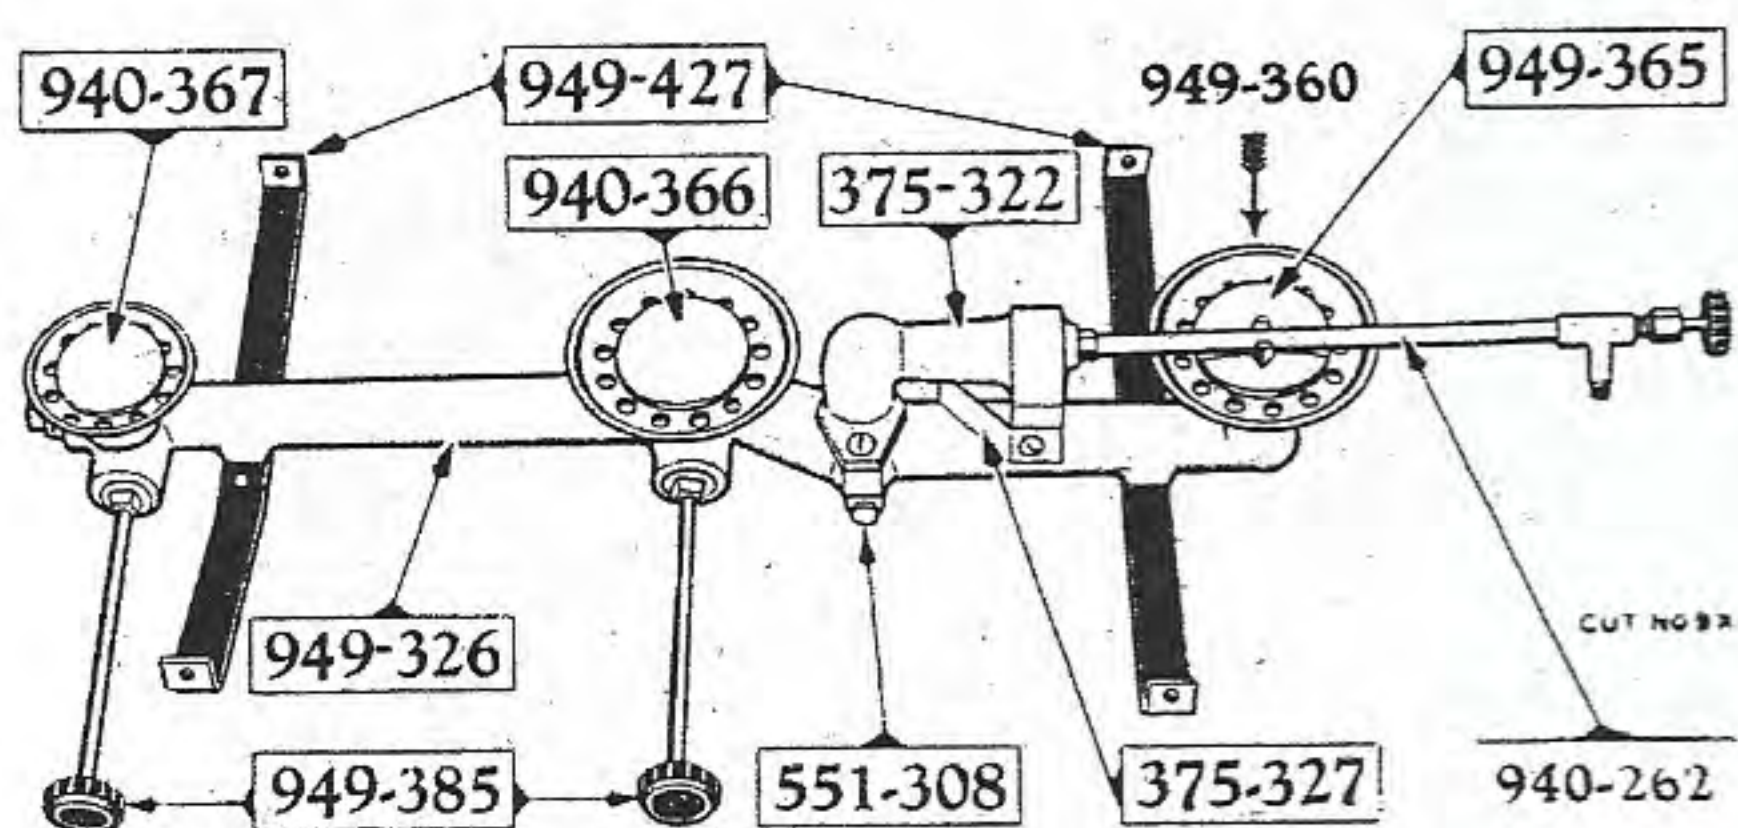


BURNER AND GENERATOR PARTS

For Stove Model Nos. 949, 949A


Use Generator 940-262. Illustrated on Page 31

Use Tank No. 974-191. Illustrated on Page 30

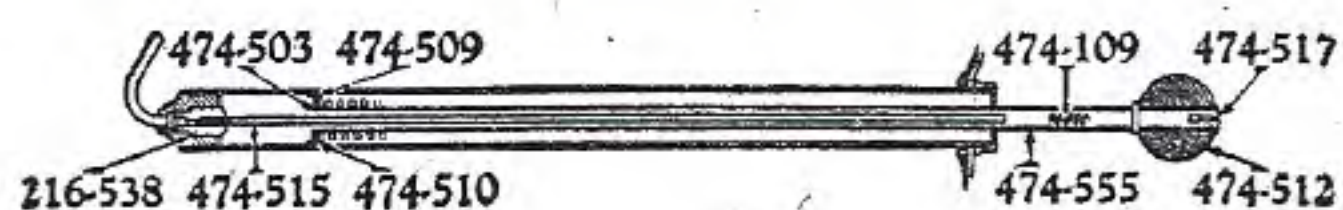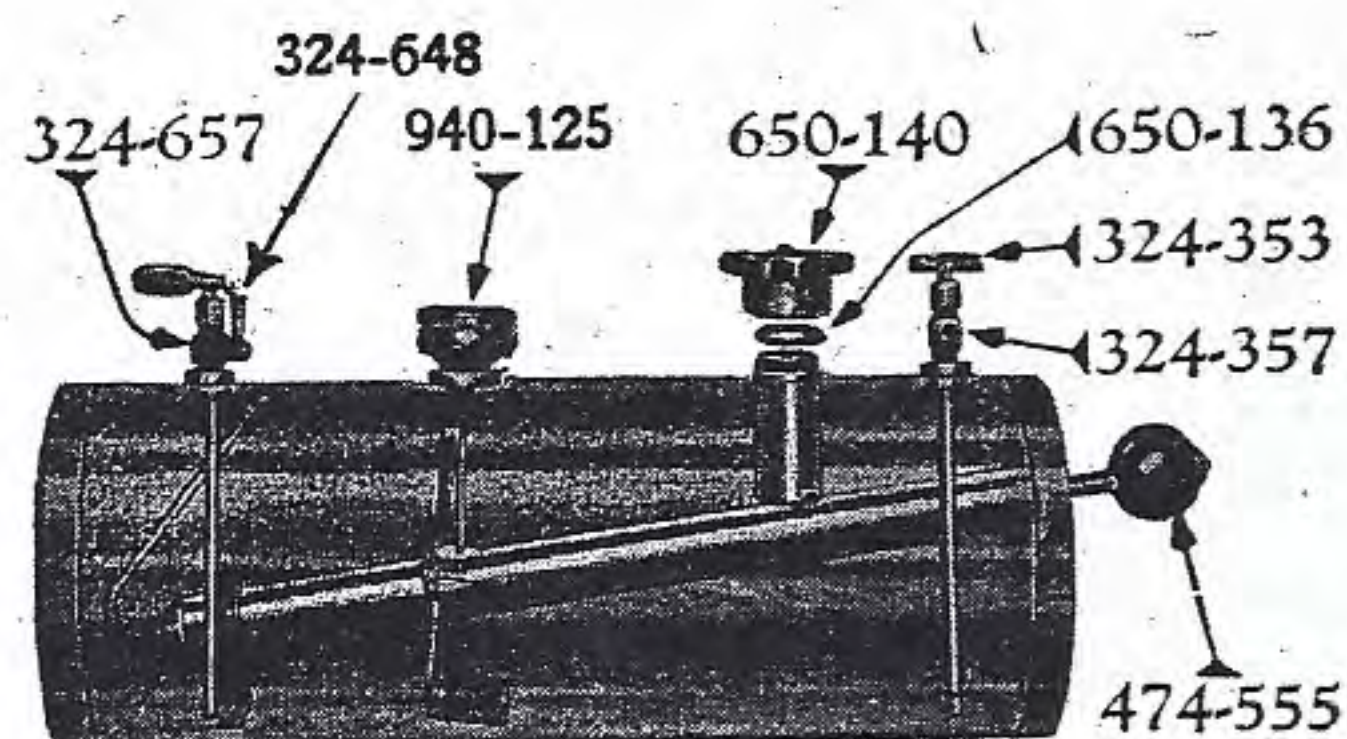


TANK No. 326-191

FUEL SUPPLY TANK PARTS

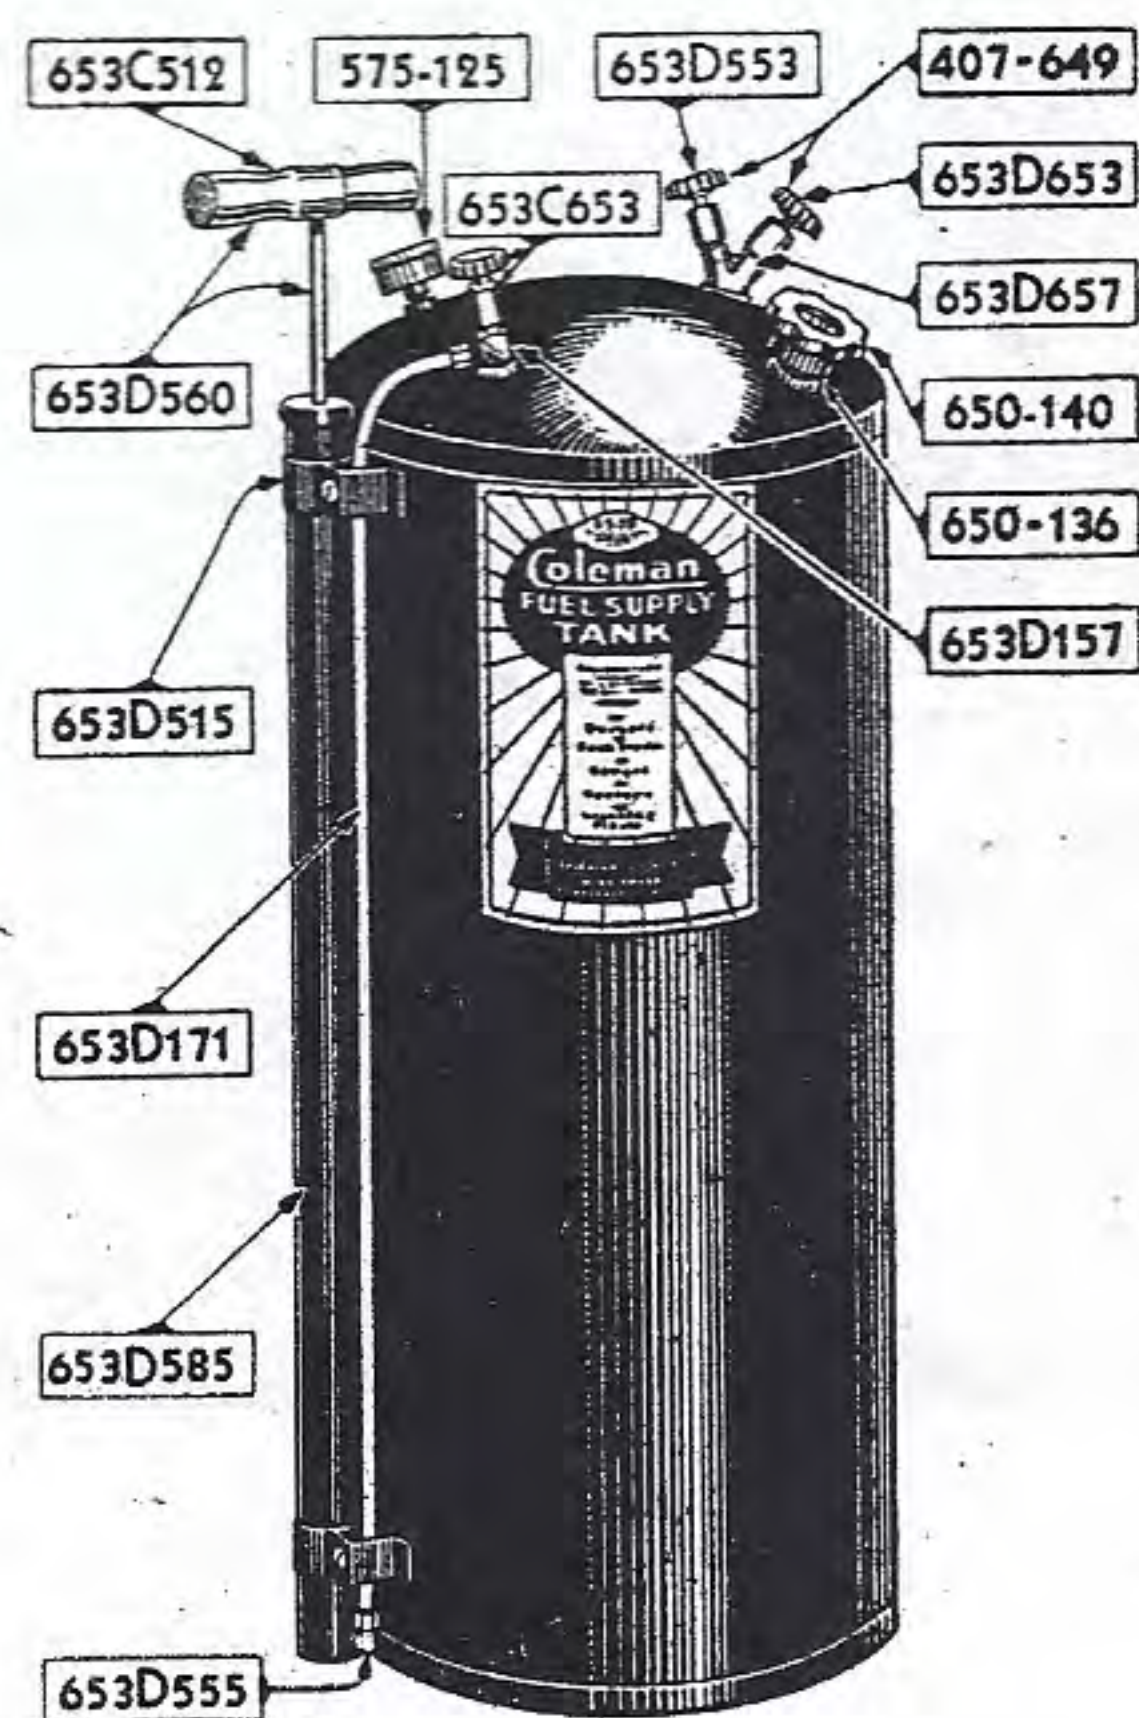

TANK No. 653D


COLEMAN STOVE TANK PARTS ILLUSTRATIONS

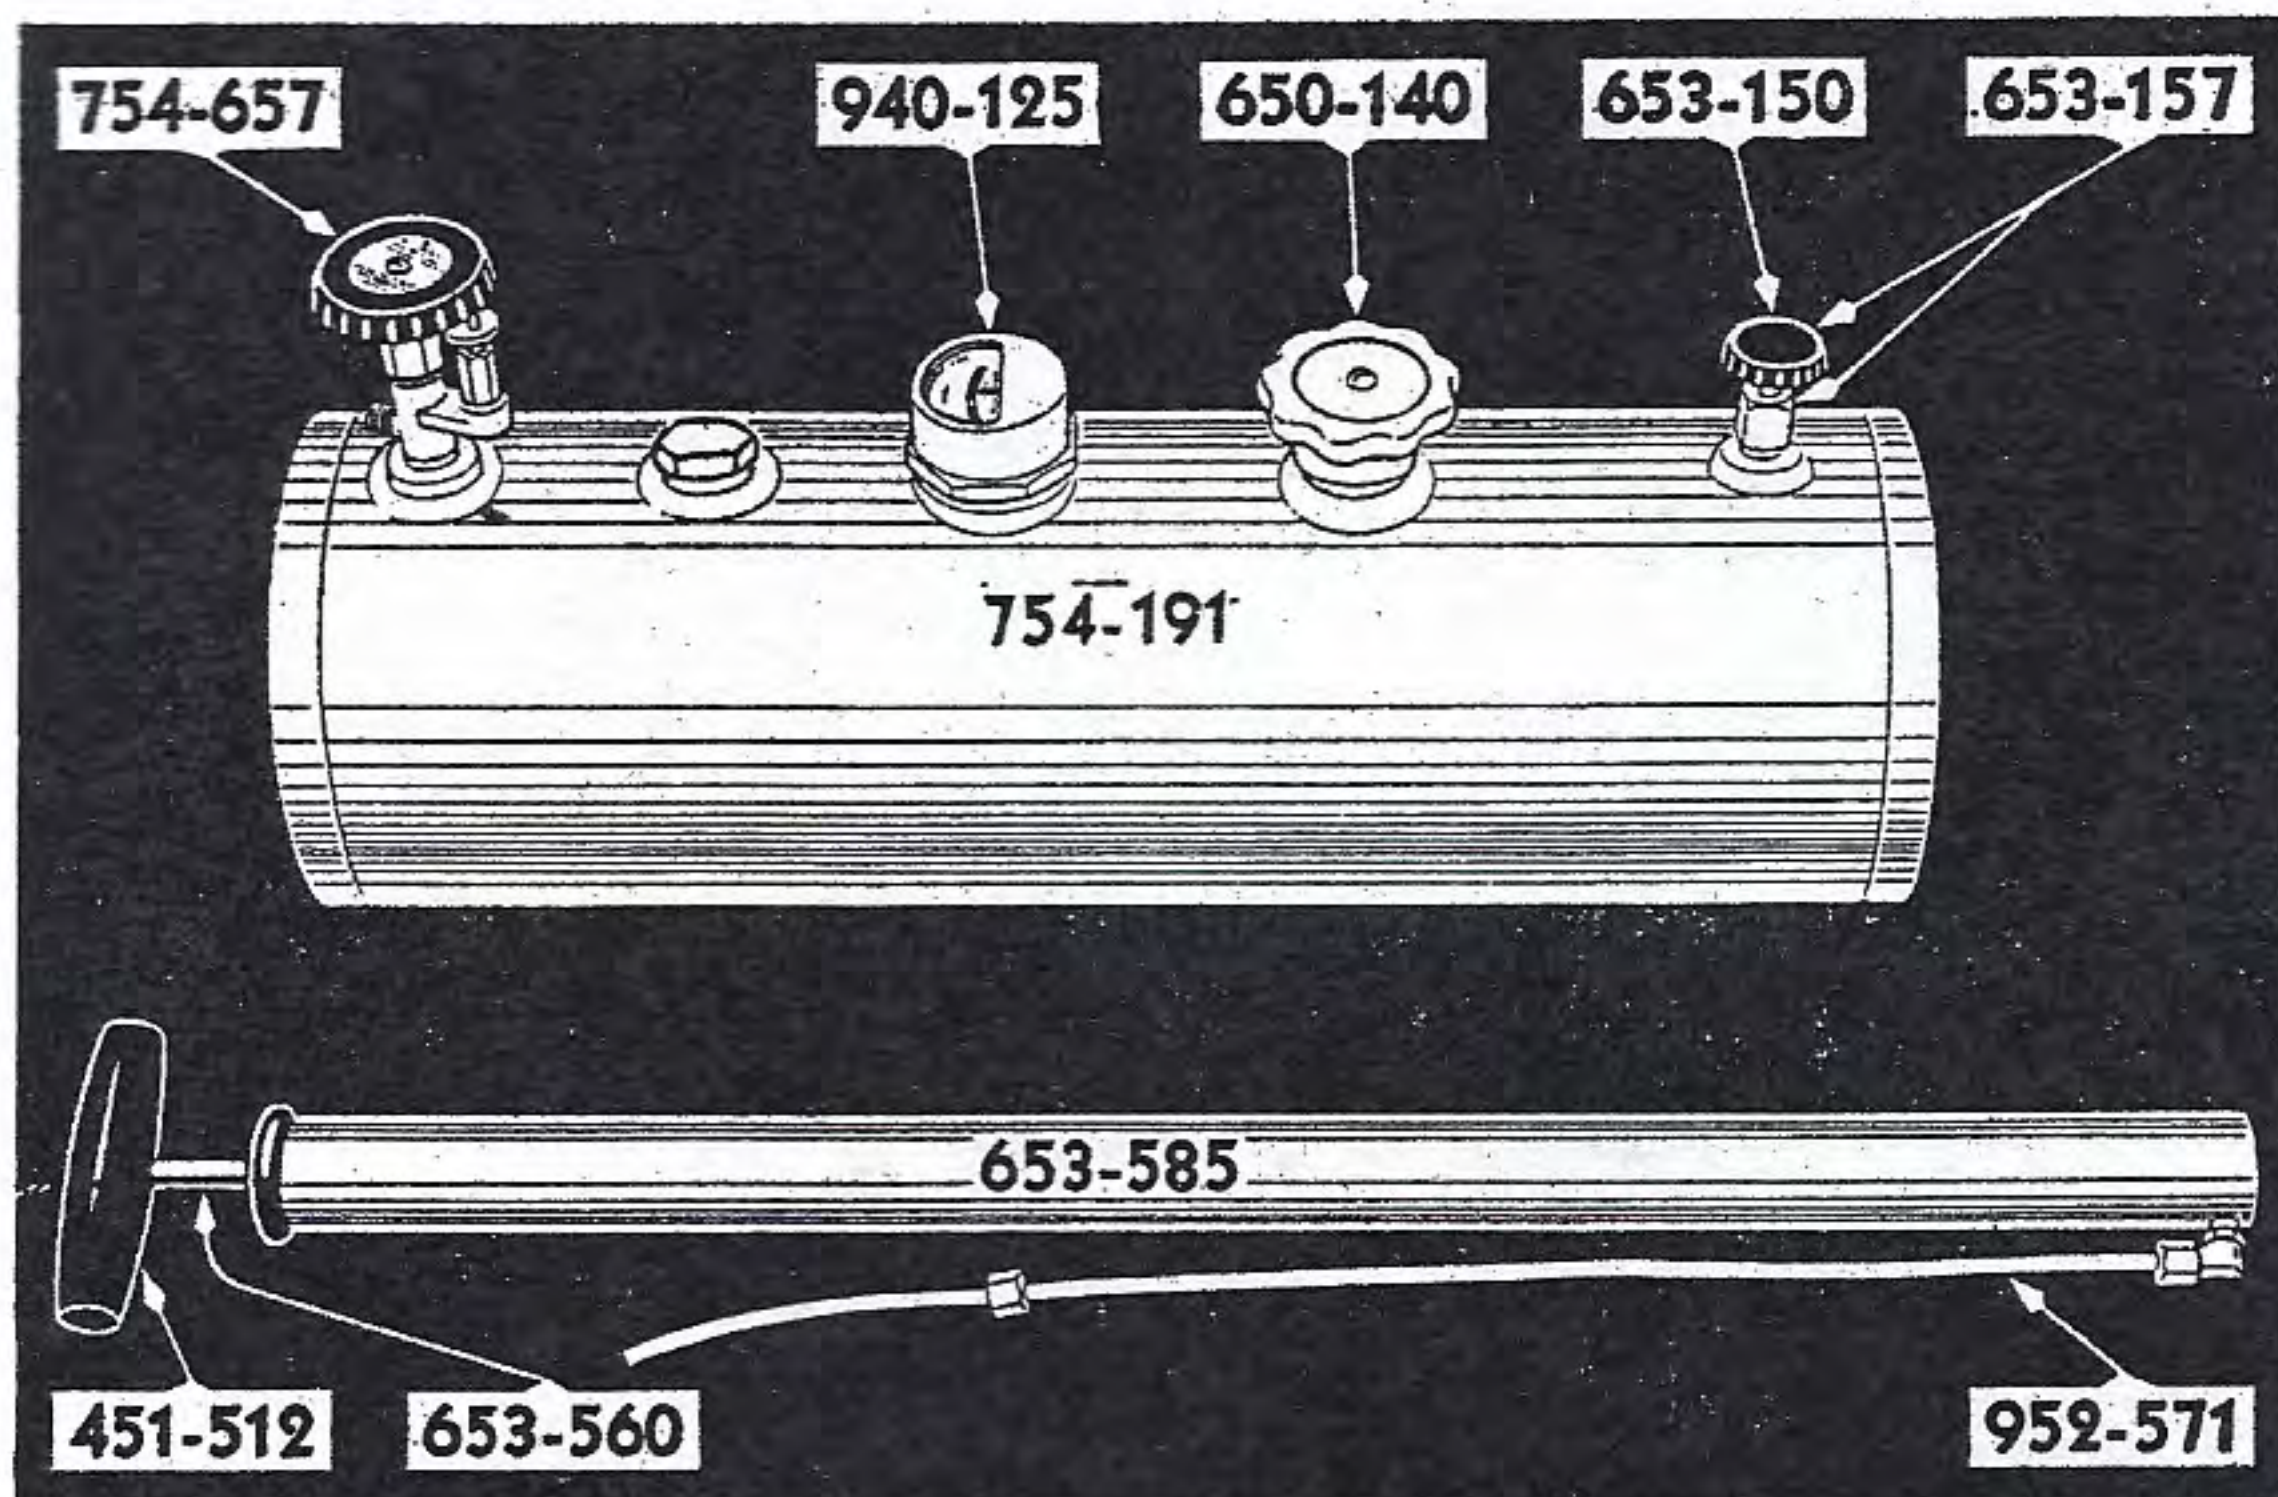

TANK No. 754-191

PUMP No. 653-585

Used on Stove Nos. 754A, 754B, 754C, 754D

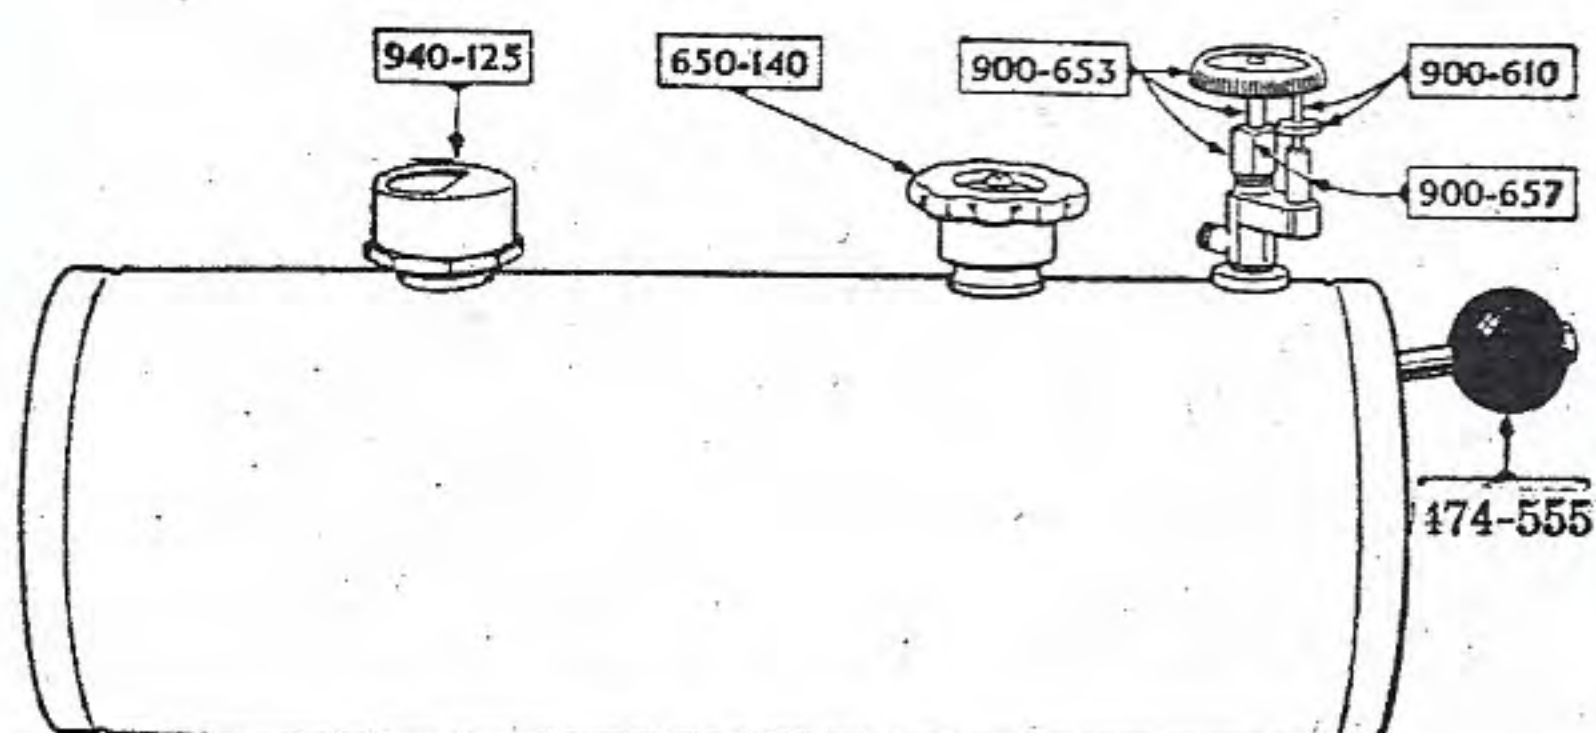


TANK No. 900-191

Use 474-515 Air Stem

Use 216-538 Check Valve


Used on Stove Nos. 900, 901, 902, 904, 905, 906, 907, 908, 909, 910, 911, 912, 913, 914, 915, 916, 920, 930, 931.

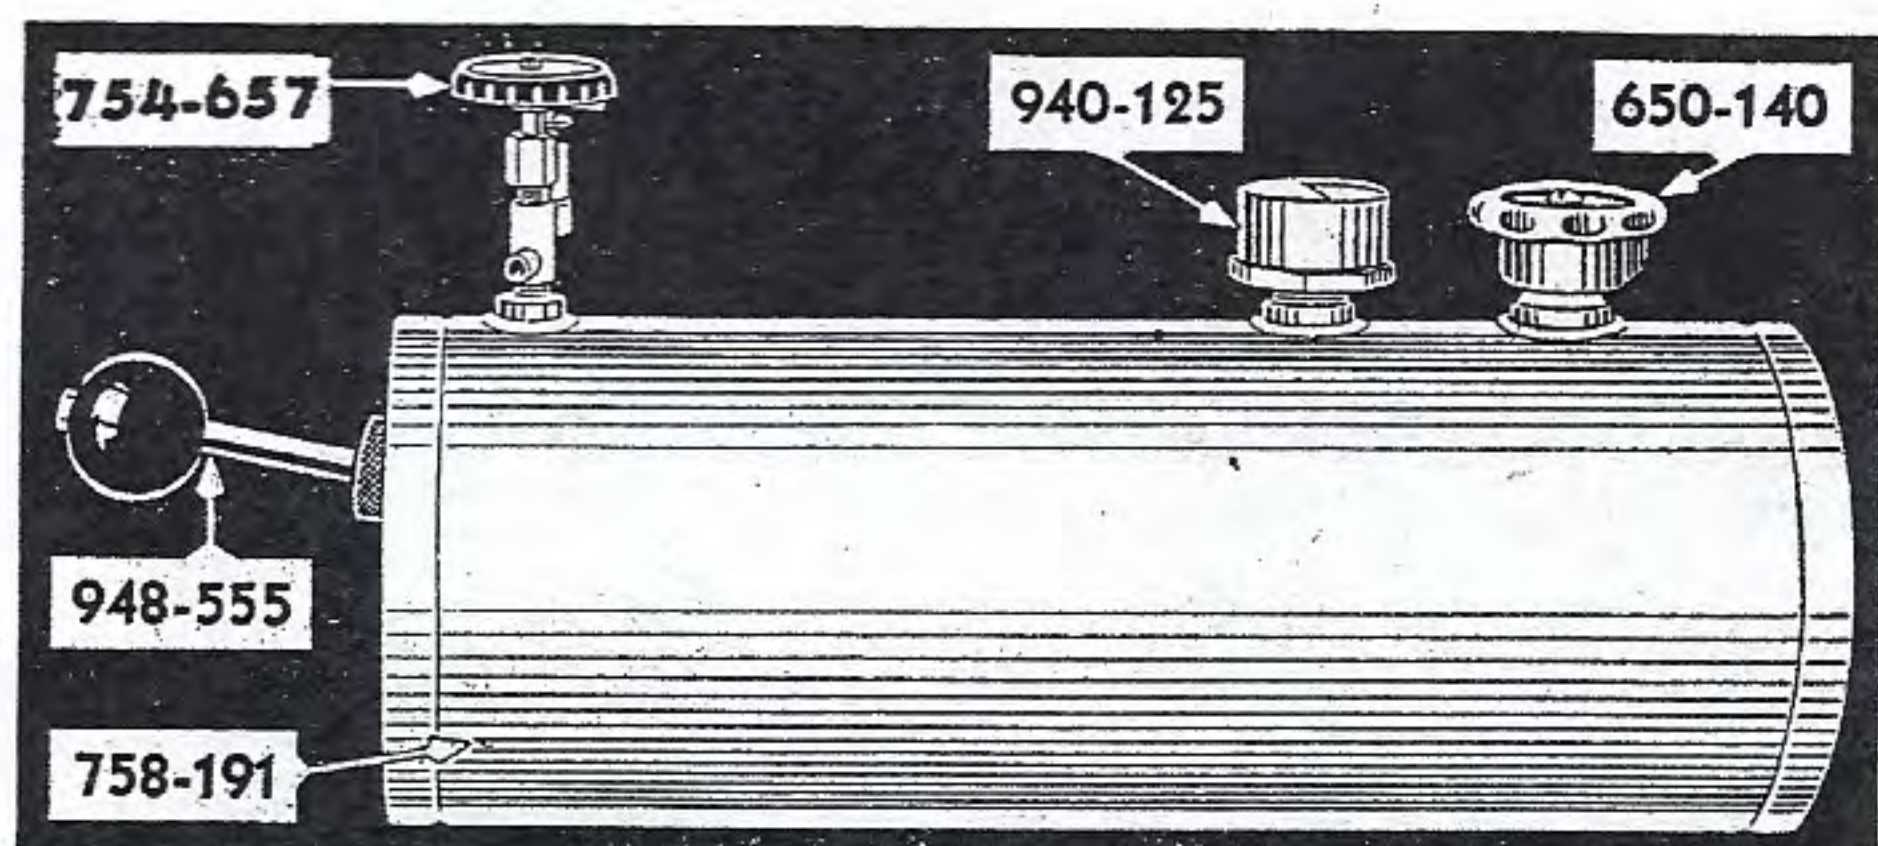

TANK No. 758-191


This Tank uses 940-532 Air Stem and 940-538 Check Valve

Used on Stove Nos. 758, 758D, 758E

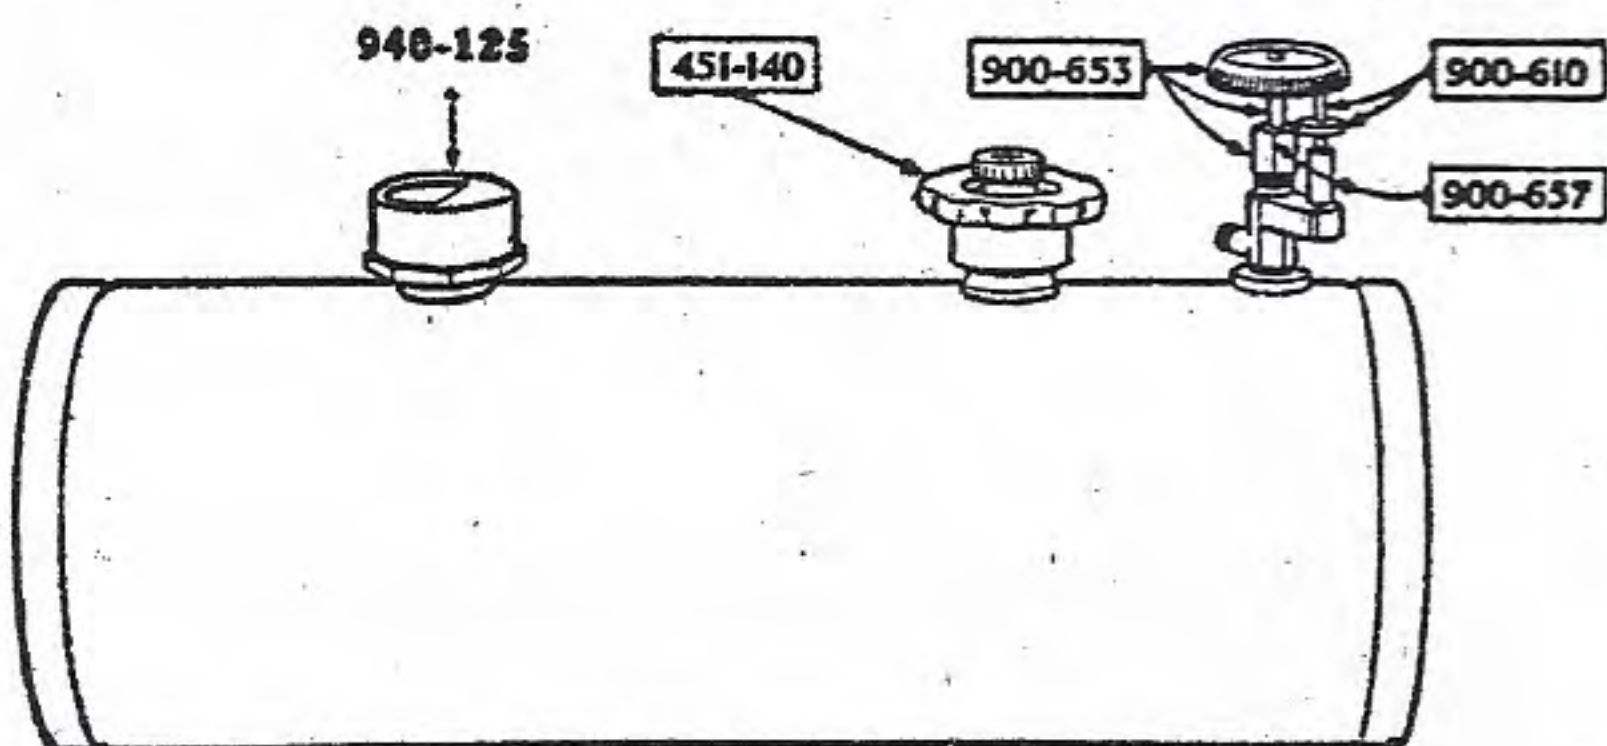

TANK No. 932-191

Use on Stove No. 932

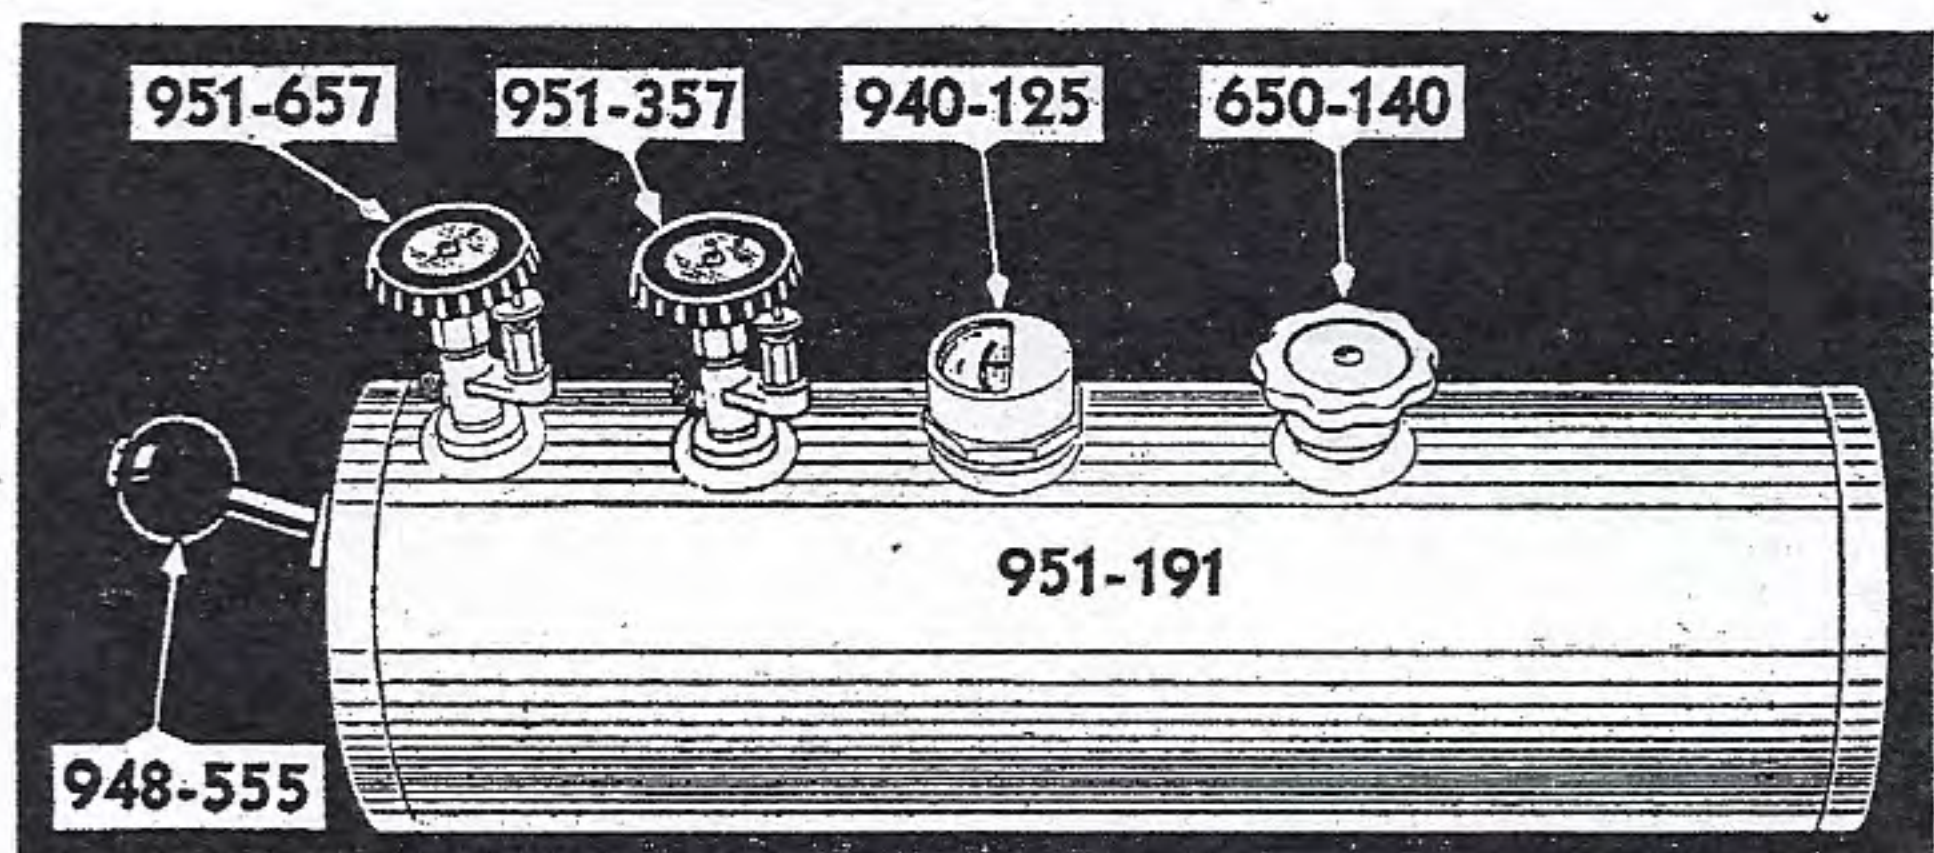


TANK No. 951-191

These Tanks use 940-532 Air Stem and 940-538 Check Valve

Used on Stove Nos. 945, 945A, 946, 946A, 947, 947A, 948, 948A, 951A, 951C


Refer to Numerical Listings for Parts, Description and Prices

COLEMAN STOVE TANK PARTS ILLUSTRATIONS

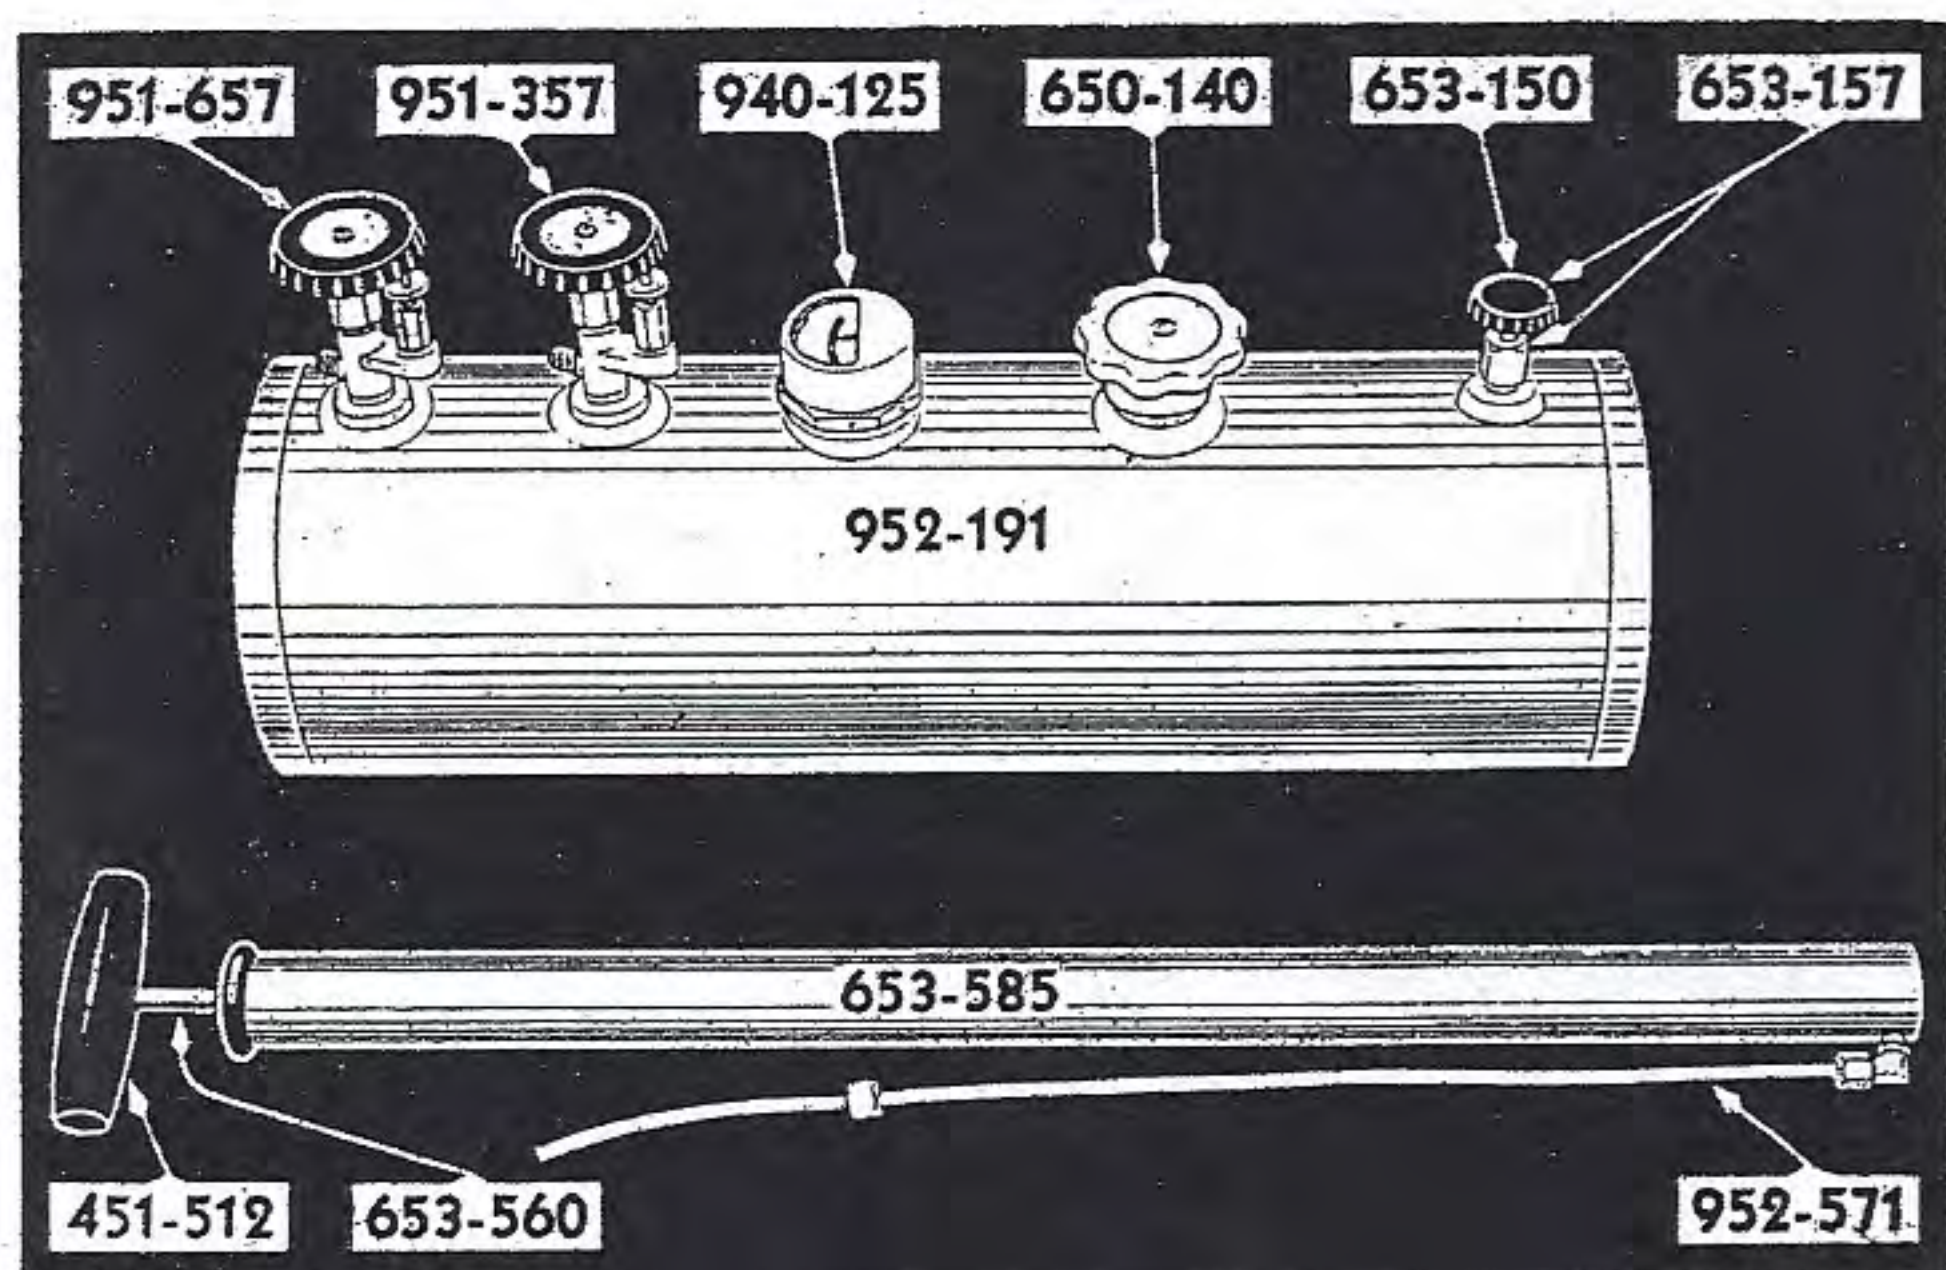

TANK No. 952-191

Used on Stove Nos. 952A, 952B, 952C, 952D

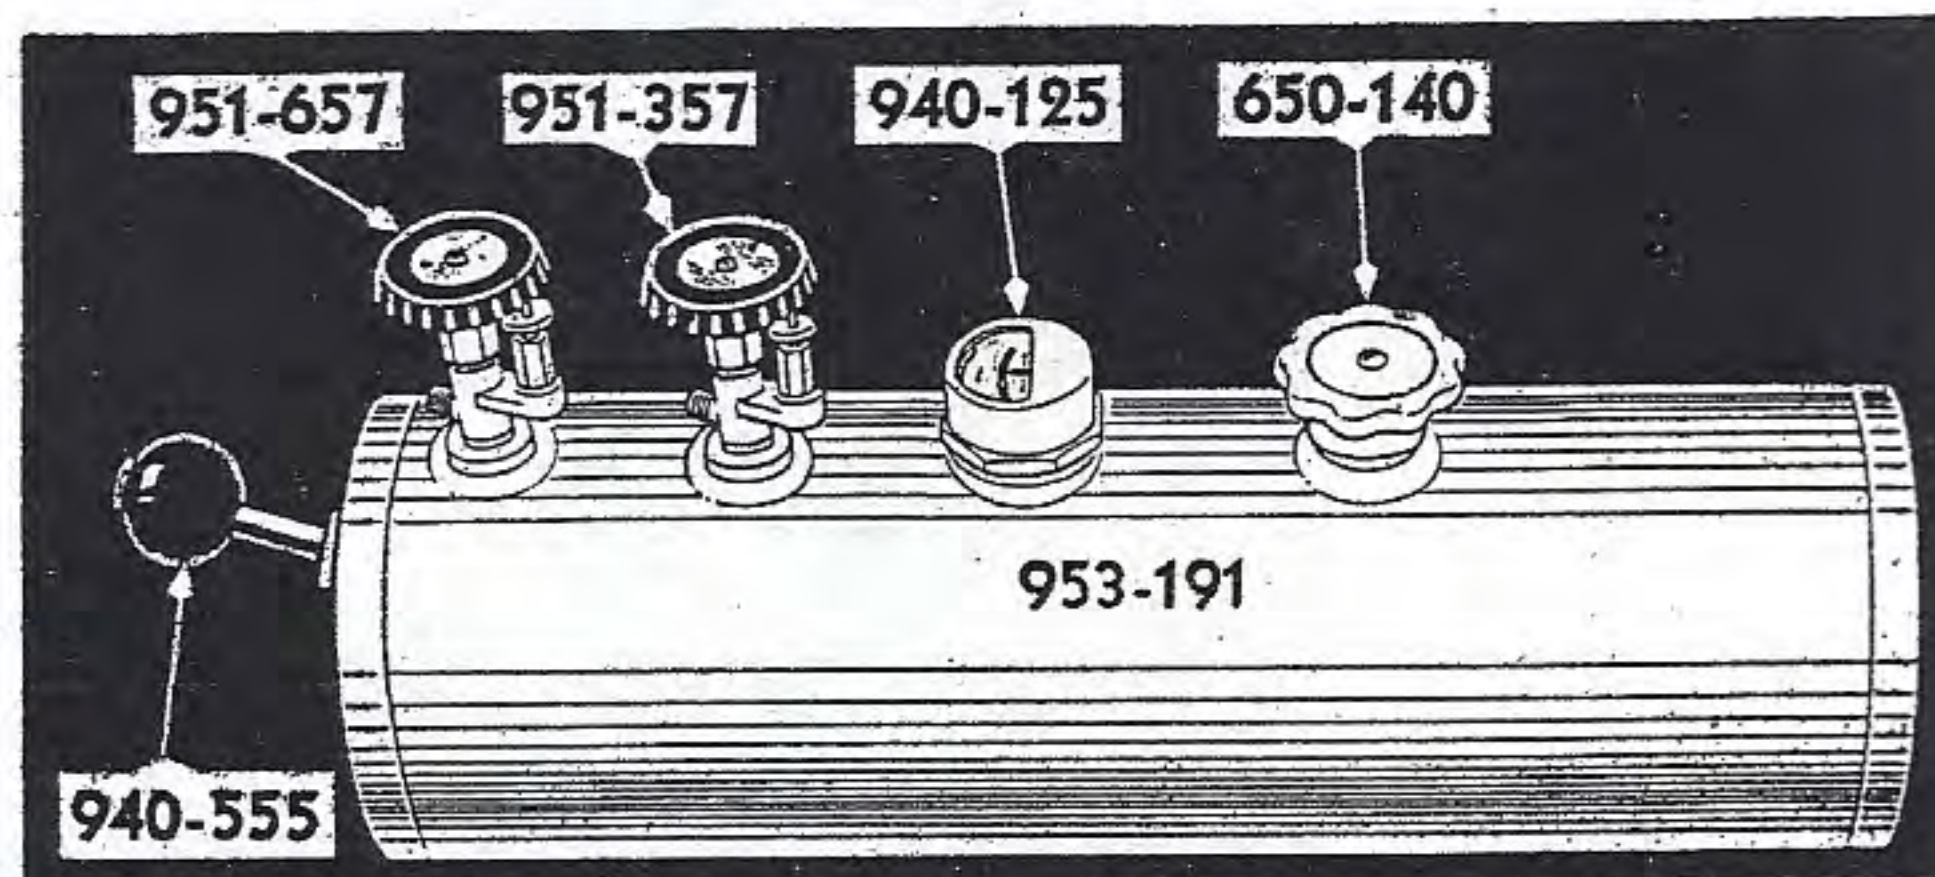


TANK No. 953-191

Uses 940-532 Air Stem


Uses 940-538 Check Valve

Used on Stove Nos. 940, 940A, 940B, 941, 941A, 943, 944,
950A, 950B, 950C, 950D, 953A, 953C, 953D

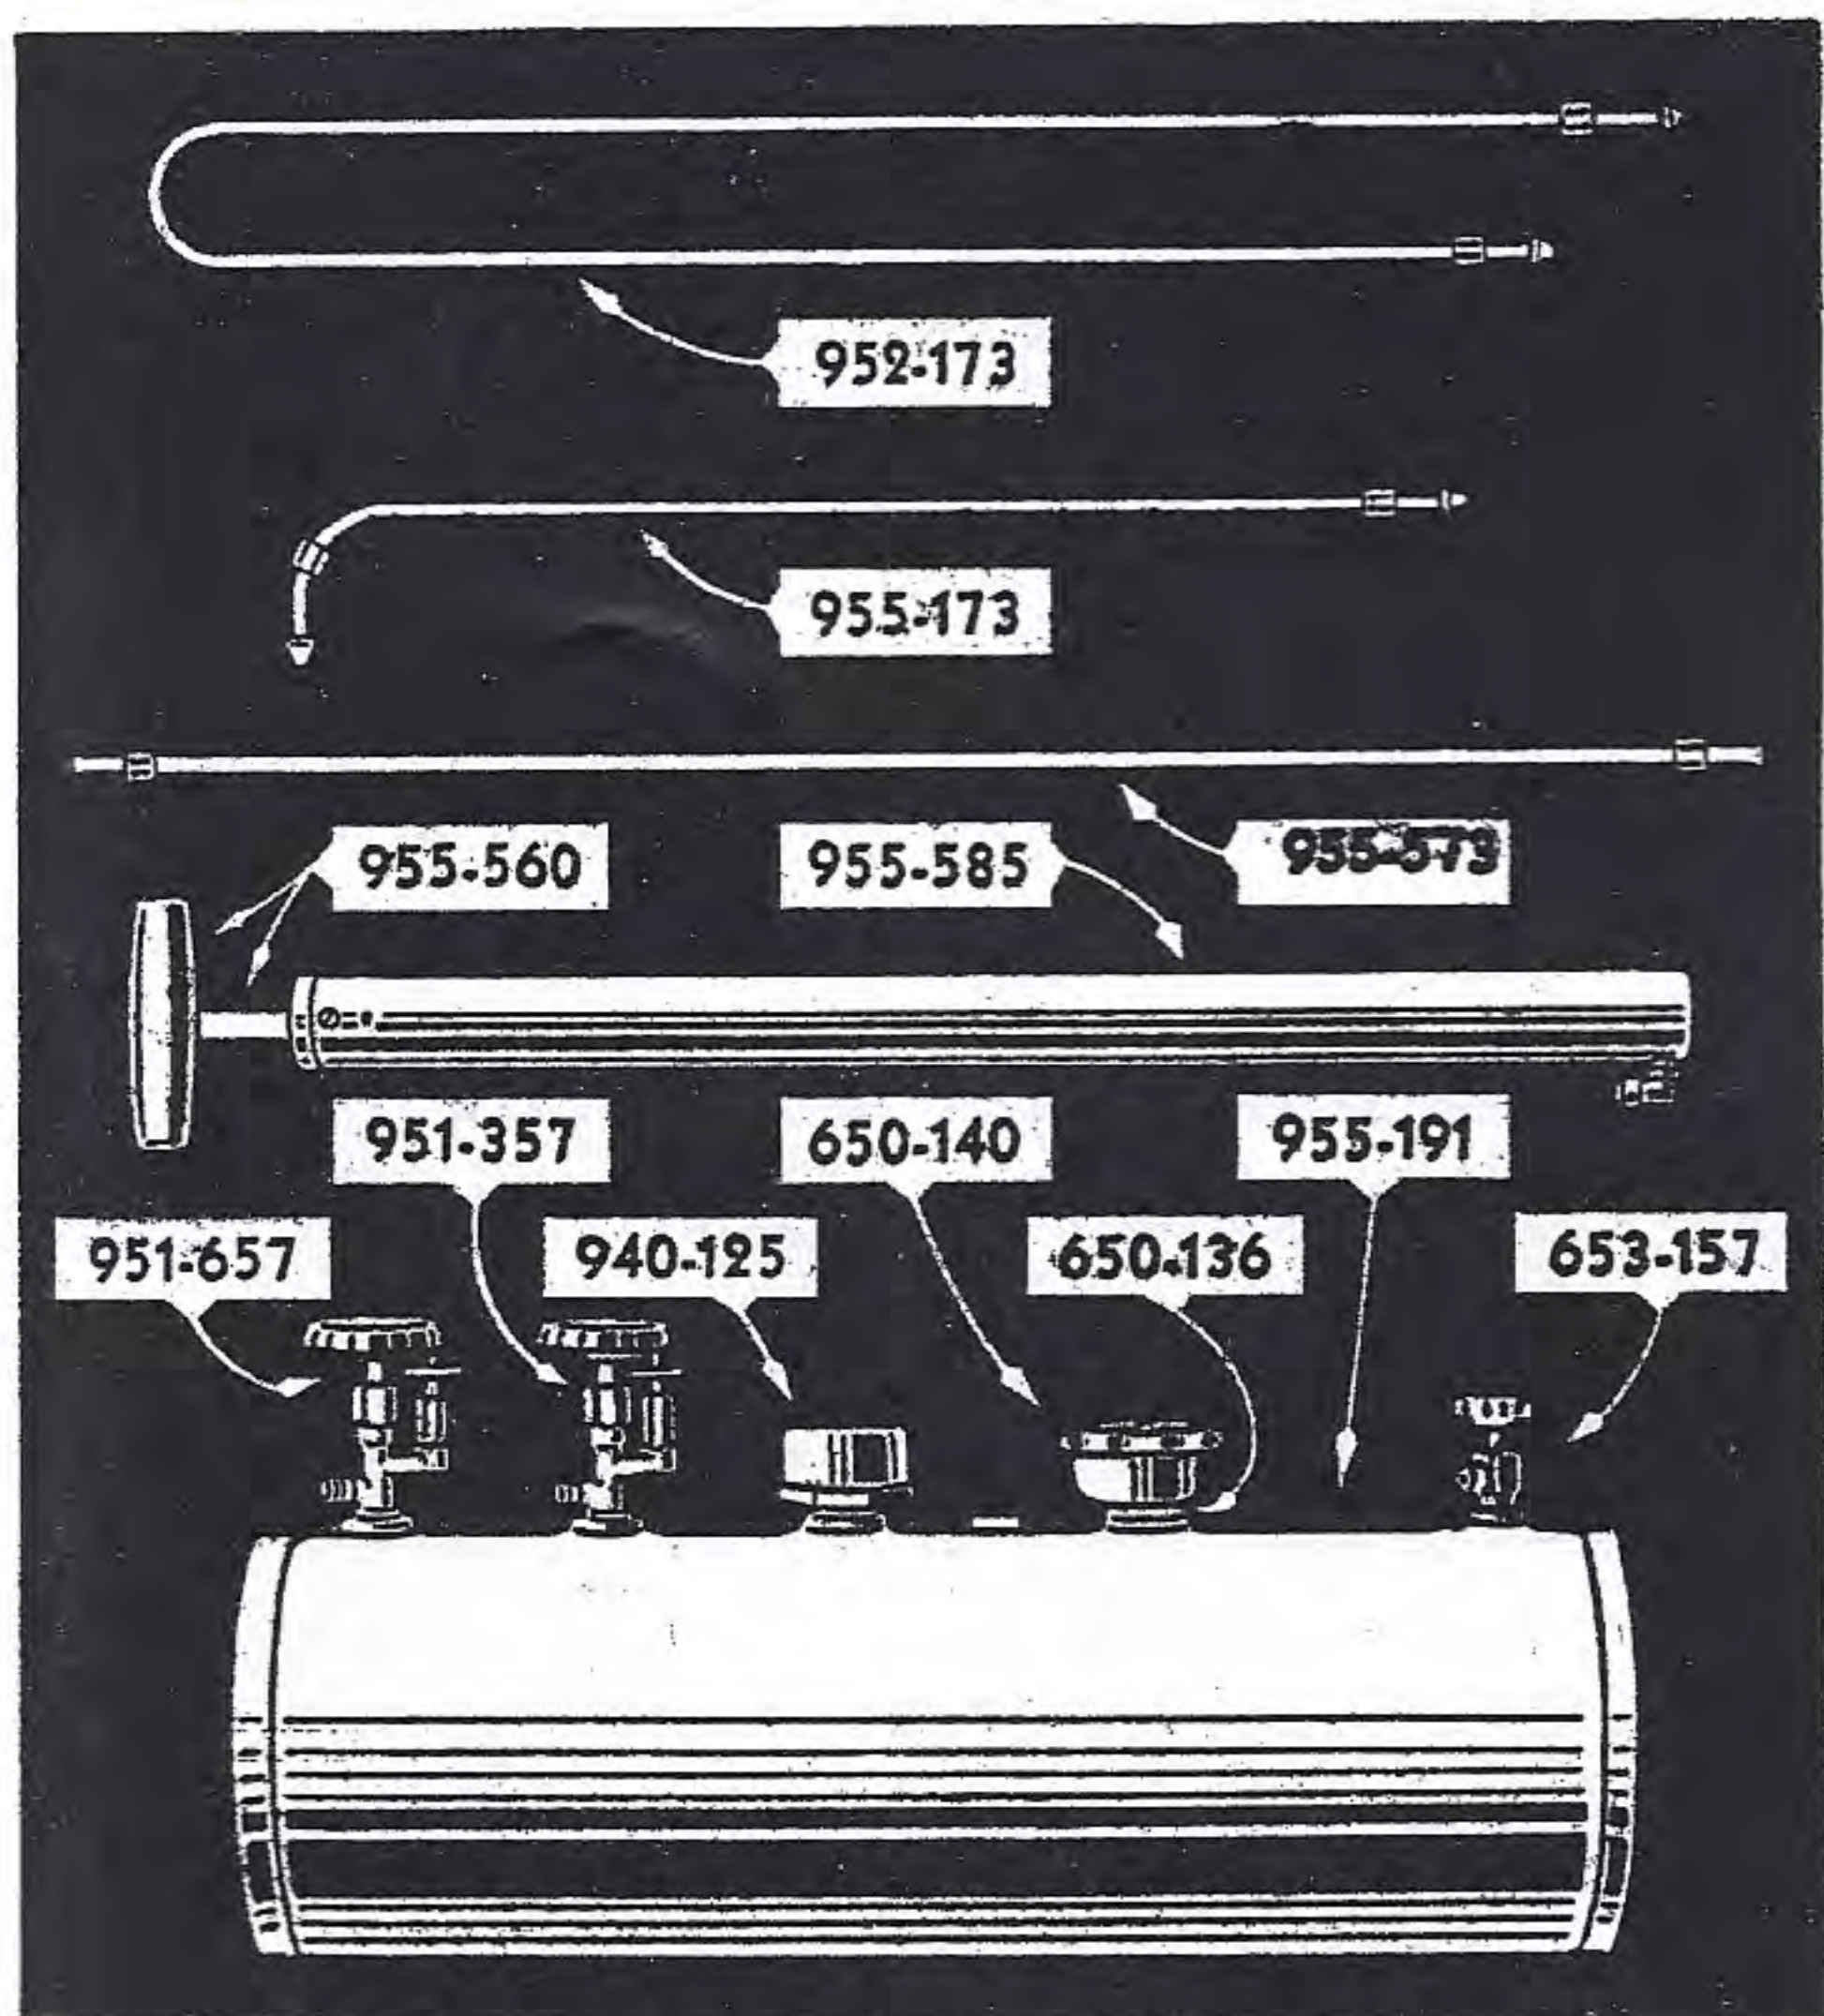


TANK No. 955-191


Used on Stove No. 955

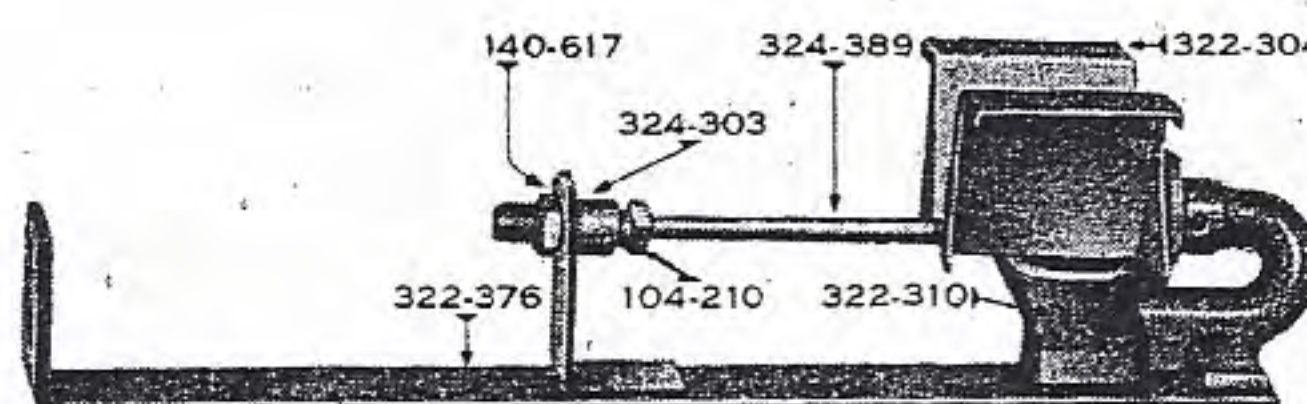

PREHEATER No. 322-383

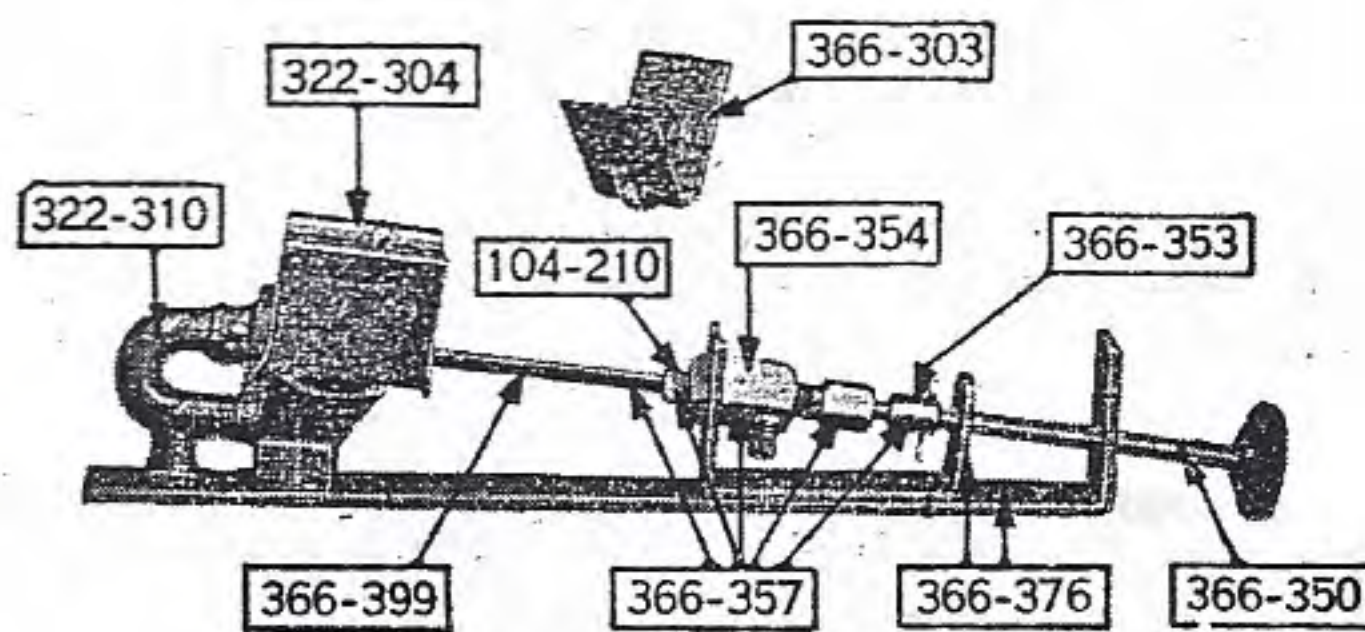


PREHEATER No. 366-383

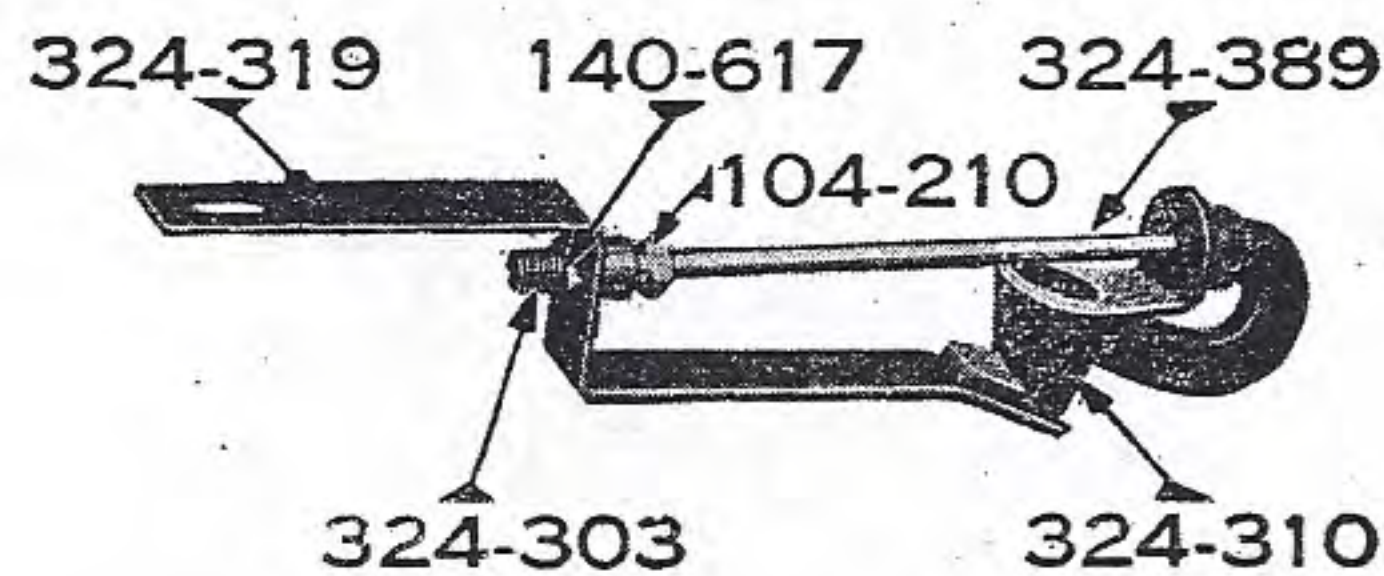

PREHEATER No. 324-383


Refer to Numerical Listings for Parts, Description and Prices

COLEMAN STOVE GENERATOR PARTS ILLUSTRATIONS

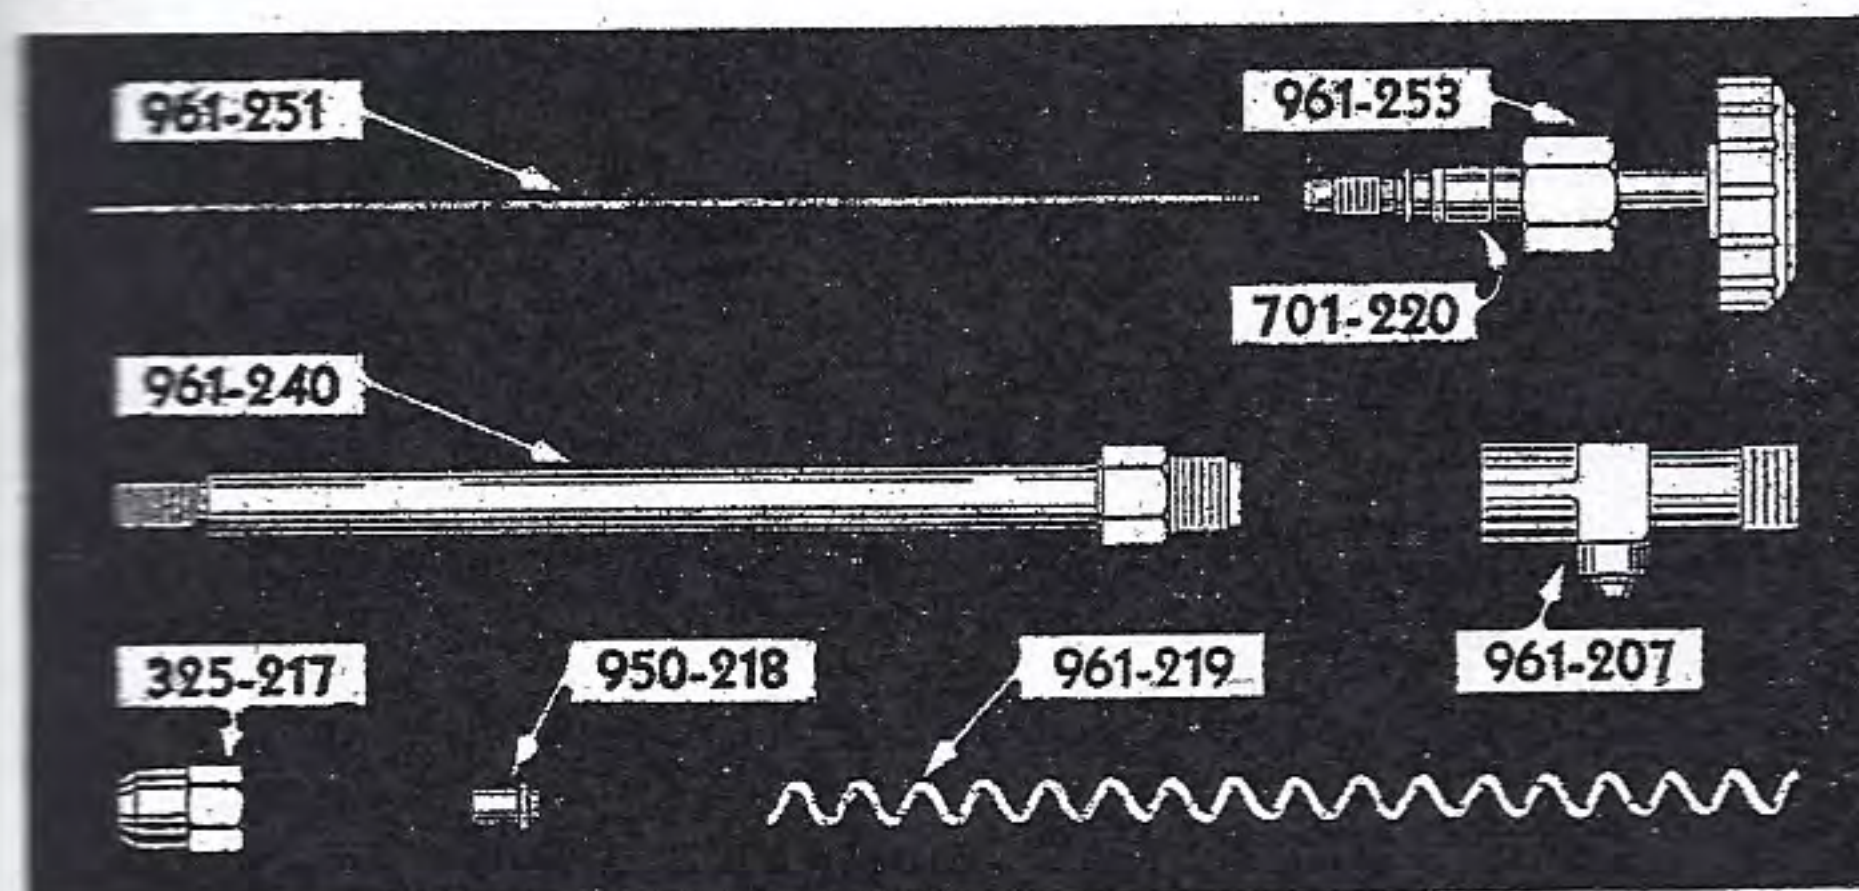


GENERATOR No. 961-262

Used on Stove Nos. 955, 961, 962, 963

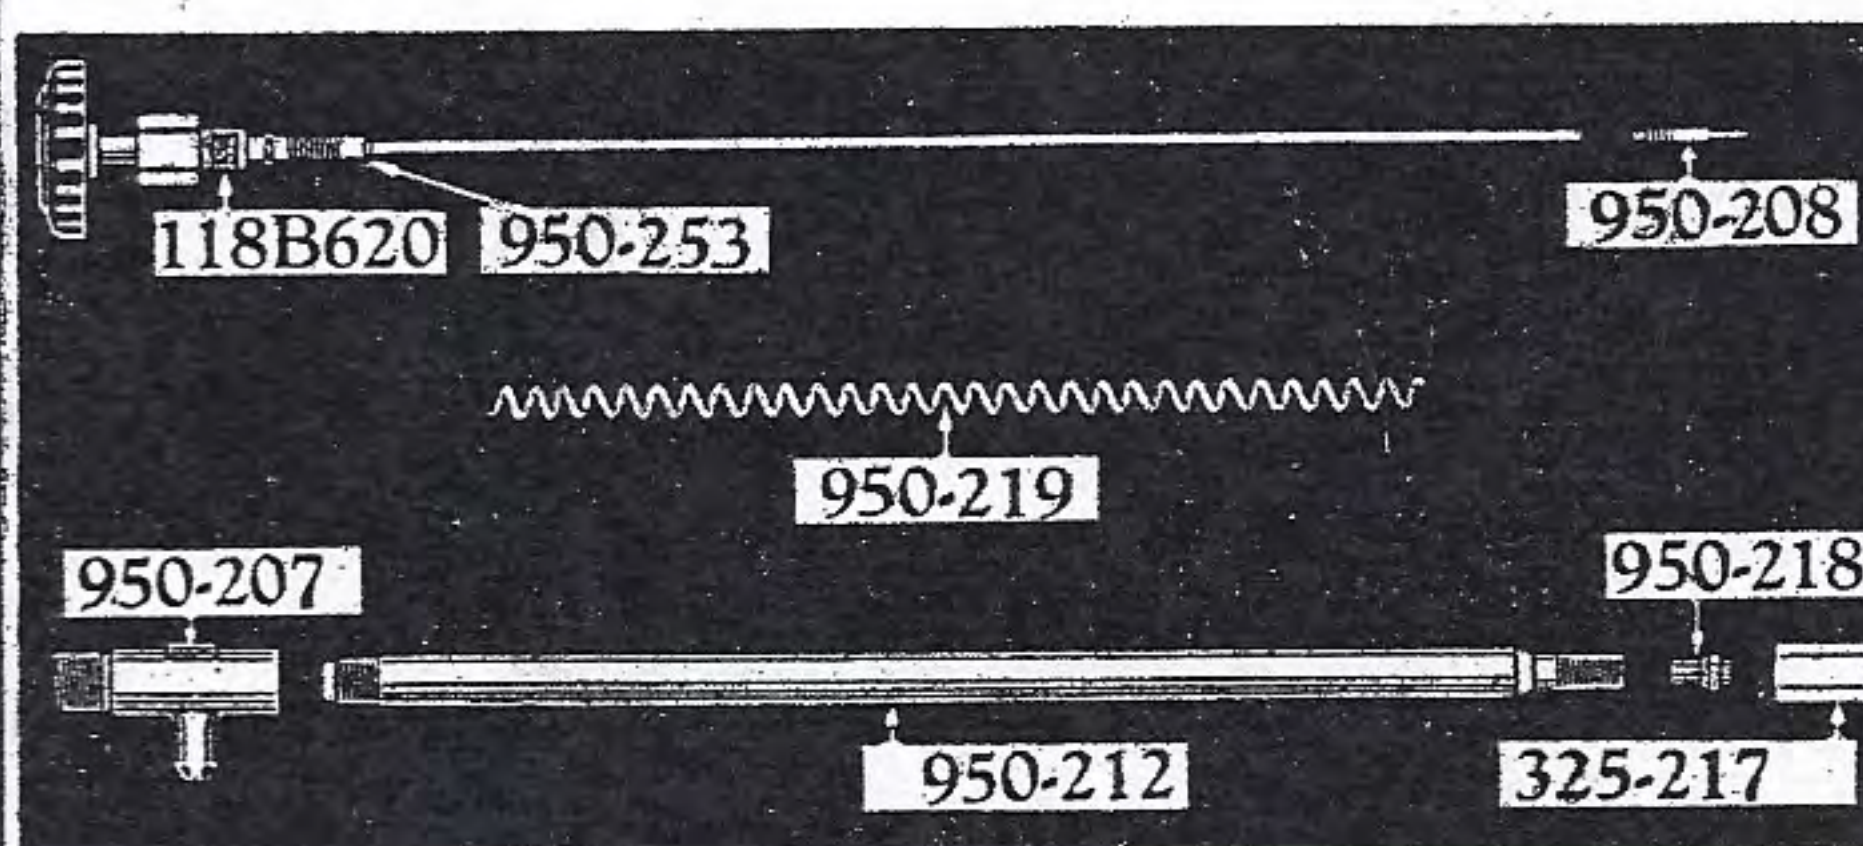

GENERATOR No. 950-262

Used on Stove Nos. 754A, 754B, 754C, 754D, 758, 758D, 758E, 950A, 950B, 950C, 950D, 951A, 951C, 952A, 952B, 952C, 952D, 953A, 953C, 953D

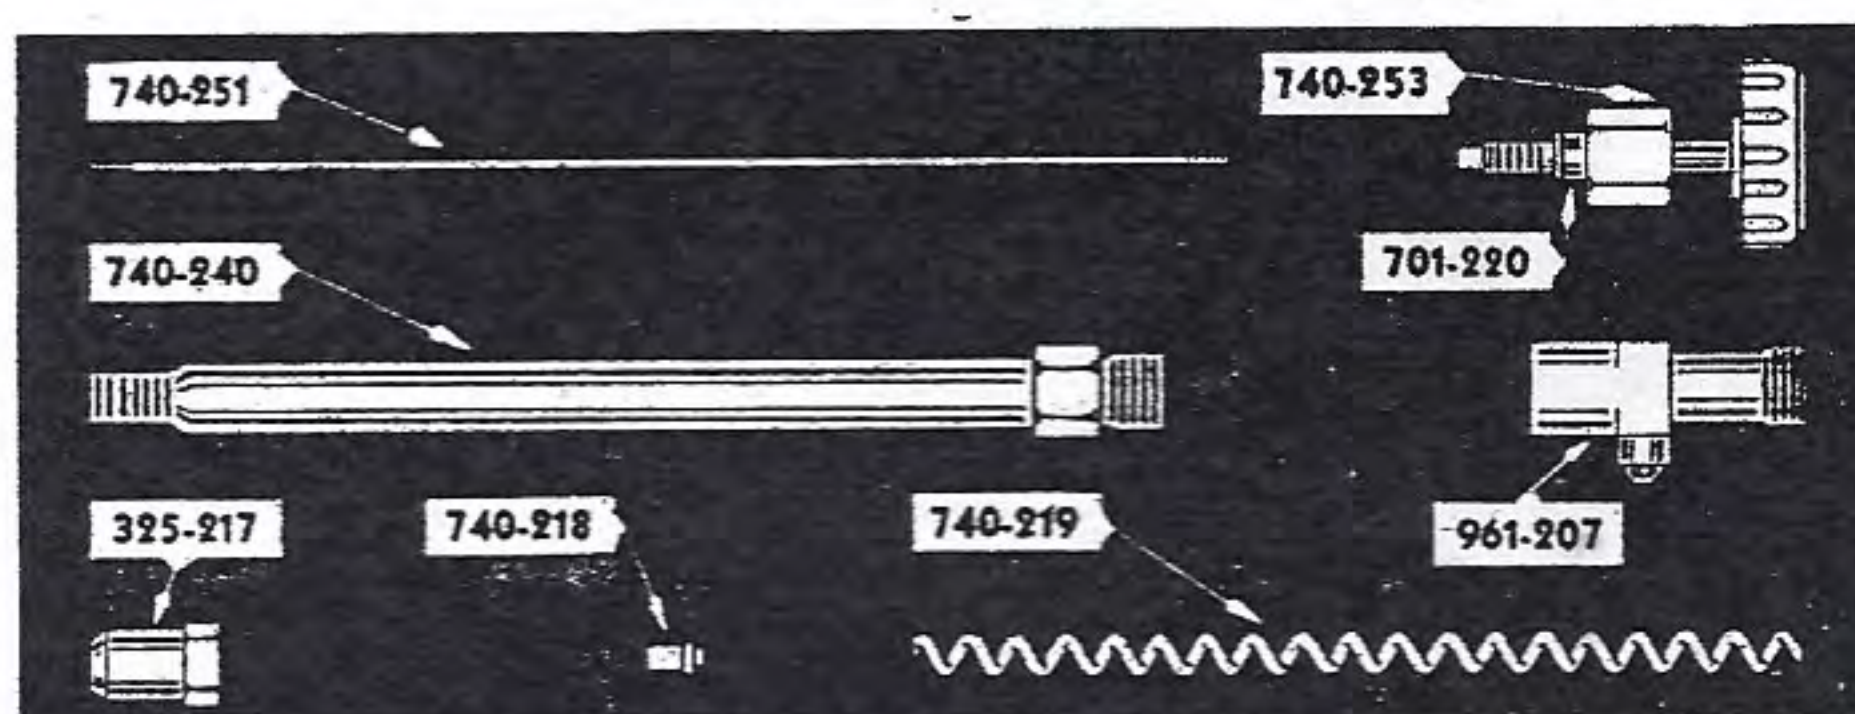

GENERATOR No. 740-262

Used on Stove Nos. 740, 740A, 741, 741A, 742, 742A

Refer to Numerical Listings for Parts, Description and Prices

The numerically arranged parts list gives the number, name, products on which used and the retail price of each item listed in this catalog.

In writing up a repair order, be sure to specify the part number and name, and whenever possible the model on which it is to be used.

COMPLETE PARTS LIST, NUMERICALLY ARRANGED

Order by Number	Part Name	Net Retail Price	Order by Number	Part Name	Net Retail Price
101-324	Burner Tube Lamp B, C, C331, P, 117, 117A, 118, 118A, 119, 119A, 129, 129A, 129G, 130G, 130K, 130P, 131P, 132A, 132P, 133, 134, 134P, 134G, 138A, 138B, 139, 143, 150B, 150G, 150R, 150L, 150BK, 150GK, 150IK, 150RK, 152 Lantern E20, 220, 220B, 228, 228B, 220BX, 235, 327, L427, 220C, 228C Fixtures 857, 857A, 858, 859	.21	104-218	Gas Tip (Marked "Q")—Obsolete Supply 118B128 Lamp B, C, C331, P, 117, 118, 119, 130G, 130K, 130P, 131P, 132P Lantern E20, 220, 220B, 228, 228B, L327, L427 Heater 480	
101-363	Shade Holder—Obsolete—Supply 117-342 Lamp B, C, C331, P		104-299	Coil Generator (Gas Tip Marked "Q") (Q99).....	.45
101-508	Washer Pump 101-522 Camp Stove 2E, 2F, 9E, 9F	.03	104-317	Burner Support Coupling..... Lamp B, C, C331, P, 130G, 130K, 130P, 131P Lantern E20, L327, L427, 220C, 228C Fixtures 857, 857A, 858, 859	.27
101-522	Pump Accessory	1.05	104-322	Air Intake Tube Lamp B, C, C331, P, 130G, 130P, 131P Lantern E20, L327, L427 Fixtures 857, 857A, 858, 859	.48
101-620	Valve Stem Packing..... Lamp 129, 129A, 129G, 130G, 130K, 130P, 131P, 134A, 134P, 138A, 138B, 150B, 150G, 150R, 150I Lantern 235 Fixtures 857, 857A, 858, 859 Valve 599A657	.03	104-326	Mixing Chamber Lamp B, C, C331, P, 117A, 118A, 119A	.69
101-653	Valve Stem Complete..... Lamp B, C, P, C331, 117A, 118A, 119A Heater 4	.42	104-341	Shade Holder Screw Lamp B, C, C331, P, 117A, 118A, 119A	.21
101-935	Handle Metal Washer Lamp C	.03	104-441	Ball Nut Lamp 129G, 130G, 130K, 130P, 134A, 134P, 134G Fixtures 857, 857A, 858, 859	.21
104-132	Filler Plug Air Stem Lamp B, C, P, 117, 117A, 129, 129A, 129G, 130G, 130K, 130P, 131P, 133, 134A, 134P, 134G, 143, 150B, 150G, 150R, 150L, 150BK, 150GK, 150RK, 150IK Lantern E20, L327 Camp Stove 10 Heater 15, 16 Handy Gas Plant 458, 458G Stove 373, 375, 375A, 376, 377, 378, 379	.27	104-469	Hanger Rod All Standard Lamps other than those with Pottery Vases	.21
104-136	Filler Plug Gasket Lamp B, C, P Lantern L327 Camp Stove 2B, 2C, 2D, 2G, 2H, 2F, 3H, 6F, 9A, 9B, 9C, 9H, 10, 418 Stove 370, 371, 386, 387, 387A	.03	104-657	Fuel Valve Complete..... Lamp B, C, C331, P	.99
104-145	Fiber Lamp Handle Lamp C	.42	104-905	Gas Tip Cleaning Needle Accessory	.09
104-147	Lock Nut Lamp C Burner 721, 722 Lantern 220B, 220BX, 228	.06	112-323	Burner Cap & Screens Lamp B, C, C331, P, 117, 117A, 118, 118A, 118B, 119, 119A, 129, 129A, 129G, 130G, 130K, 130P, 131P, 132P, 132A, 133, 134A, 134G, 134P, 138A, 138B, 139, 143, 150B, 150G, 150R, 150I, 150BK, 150GK, 150IK, 150RK, 151B, 151G, 152 Lantern E20, L327, L427, 220, 220B, 220BX, 228, 228B, 235, 220C, 228C Fixtures 857, 857A, 858, 859	.18
104-164	Filler Plug Complete Lamp B, C, P Lantern L327	.81	112-325	Burner Cap Screen Lamp B, C, C331, P, 117, 117A, 118, 118A, 118B, 119, 119A, 129, 129A, 129G, 130G, 130K, 130P, 131P, 132P, 132A, 133, 134A, 134P, 134G, 138A, 138B, 139, 143, 150B, 150G, 150R, 150I, 150BK, 150GK, 150IK, 150RK, 151B, 151G Lantern E20, L327, L427, 220, 220B, 228, 228B, 235 Fixtures 857, 857A, 858, 859	.03
104-210	Jamb Nut Lamp 117, 118, 119 Lantern 220, 228 Iron 3, 4, 8, 8A Preheater 322-383, 324-383, 362-383, 366-383	.03	112-443	Ceiling Plate Fixtures 857, 857A, 858, 859	.48
			115-136	Filler Plug Gasket Lamp C331, 117, 117A, 118, 118A, 119, 119A Lantern E20, 220, 228, L427 Heater 480 Stove 375, 375A, 376	.03
			115-164	Filler Plug Complete..... Lantern E20 (Separate Pump), 117, 117A Stove 375, 375A, 376	.81

COMPLETE PARTS LIST, NUMERICALLY ARRANGED

Order by Number	Part Name	Net Retail Price	Order by Number	Part Name	Net Retail Price
117-132	Filler Plug Air Stem—Obsolete—Supply 104-132		118B138	Fuel Tip Cleaning Needle.....	.21
117-144	Tip Protector & Screen.....	.21		Lamp 118B	
	Lamp 117, 117A, 118, 118A, 119, 119A			Lantern 220B, 220BK, 228B, 220C, 228C	
	Lantern 220, 228		118B140	Filler Plug Complete—Obsolete, Supply 204-140	
	Heater 5, 5A, 7		118B147	Handle Lock Nut	.15
117-145	Lamp Handle	.60		Lamp 118B, 129, 129A, 129G, 131P, 134, 134A, 134G, 134P	
	Lamp 117, 117A		118B148	Fuel & Air Wire Complete (Fuel Tip Marked "AB")	.99
117-164	Filler Plug Complete—Obsolete—Supply 115-164			Lamp 118B	
	Lamp 117, 117A			Lantern 220B, 220BX, 228B, 220C, 228C	
117-341	Shade Holder Screw	.09	118B218	Gas Tip (Marked "V")	.09
	Lamp 117, 118, 119			Lamp 117A, 118A, 118B, 119A, 129, 129A, 129G, 132A, 133, 134, 134A, 134P, 134G, 138A, 138B, 139, 143, 150B, 150G, 150R, 150I, 150BK, 150GK, 150IK, 150DK, 152	
117-342	Shade Holder	.42		Lantern 220B, 220BX, 228B, 235, 237A, 137B, 220C, 228C	
	Lamp B, C, C331, P, 117, 117A, 118, 118A, 118B, 119, 119A		118B299	Generator and Gas Tip Cleaning Needle (Less Jamb Nut) (Gas Tip Marked "V") (T44G).....	.60
117-361	Air Intake & Bracket.....	1.20		Lamp 117A, 118A, 118B, 119A, 132A, 133, 134, 134A, 134G, 134P, 139, 143, 150B, 150G, 150R, 150I, 152	
	Lamp 117, 118, 119			Lantern 220B, 228B, 220C, 228C	
118-140	Filler Plug Complete		118B322	Air Intake Tube	.48
	Lamp 118, 118A, 119, 119A—Obsolete			Lamp 117A, 118A, 119A, 132A, 133, 134, 134A, 134P, 134G, 143, 150B, 150G, 150R, 150I	
	Supply 204-140		118B324	Burner Tube—Obsolete—Supply No. 101-324	
118-147	Handle Lock Nut.....	.27	118B326	Mixing Chamber—Obsolete—Supply No. 104-326	
	Lamp 118, 118A, 119, 119A			Lamp B, C, C331, P, 117A, 118A, 118B, 119A, 129, 129A, 129G, 130G, 130K, 130P, 131P, 132P, 132A, 133, 134A, 134P, 134G, 138A, 138B, 139, 143, 150B, 150G, 150R, 150I, 150BK, 150GK, 150IK, 150RK, 152	
118-520	Pump Plunger Complete (Less Air Stem) Obsolete—Supply 216-520			Lantern E20, L327, L427, 220B, 220BX, 228B, 235	
118-653	Valve Stem Complete (T656).....	.45		Fixtures 857, 857A, 858, 859, 220C, 228C	
	Lamp 117, 118, 119		118B353	Tip Cleaner Stem Packed	.48
	Lantern 220, 228			Lamp 117A, 118A, 119A, 150B, 150G, 150R, 150I	
	Iron 609, 609A			Lantern 237A, 237B	
	Burner 463-398, 501, 751		118B357	Gas Tip Cleaner Complete Assembled.....	.99
118A304	Eccentric Block	.09		Lamp 118B	
	Lamp 117A, 118A, 119A, 129, 129A, 129G, 132A, 133, 134A, 134P, 134G, 138A, 138B, 139, 143, 150B, 150G, 150R, 150I, 152		118B399	Burner, Generator and Gas Tip Cleaner Complete Assembled—Obsolete	
	Lantern 220B, 220BX, 228B, 235, 220C, 228C			Lamp 118B	
118A307	Fuel Valve Body.....	.81	118B620	Valve Stem Packing	.03
	Lamp 117A, 118A, 119A, 150B, 150G, 150R, 150I			Lamp 118B, 132A, 132P, 133, 139, 143, 151B, 151G, 152	
118A357	Fuel Valve & Gas Tip Cleaner Complete Assem.	1.95		Lantern 220B, 220BX, 228B, 237A, 237B, 220C, 228C	
	Lamp 117A, 118A, 119A, 150B, 150G, 150R, 150I			Stove 375, 375A, 376, 377, 377A, 378, 378A, 379, 379A, 390, 390L	
118B108	Fuel Tip Cleaning Needle Spring—Discontinued			Handy Gas Plant 457, 457G, 458, 458G, 460, 460G, 575	
118B118	Fuel Tip (Marked "AB")	.09		Burner 463-398, 463-399, 501, 502, 556, 558, 751, 752	
	Lamp 118B			Generator 486-262, 552-262, 558-262, 940-262, 950-262, 372-262	
	Lantern 220B, 220BX, 228B, 220C, 228C			Water Heater 464	
	Lantern 220B, 220BX, 228B			Tank 653B, 653C	
118B136	Filler Plug Gasket	.03			
	Lamp 118B, 129, 129A, 129G, 130G, 130K, 130P, 131P, 132P, 132A, 133, 134, 134A, 134P, 134G, 138A, 138B, 139, 143, 150B, 150G, 150R, 150I, 150BK, 150BG, 150IK, 150RK, 151B, 151G, 152				
	Lantern 220B, 220BK, 228B, 237A, 237B, 220C, 228C				
	Camp Stove 2E, 2F, 4F, 5F, 9E, 9F, 412B, 413B, 415C, 416B, 416C, 417B, 418B, 419, 420, 413C, 415D				
	Heater 15, 16, 490, 490A				
	Hot Plate 470A, 371A, 370B, 386A, 387A, 391, 392, 393, 395, 391A				
	Cabin Range 390, 390L				
	Handy Gas Plant 458, 458G				
	Filler Plugs 220B140, 375-164				

COMPLETE PARTS LIST, NUMERICALLY ARRANGED

Order by Number	Part Name	Net Retail Price	Order by Number	Part Name	Net Retail Price
118B653	Valve Stem Complete Lamp 118B	.81	129A353	Valve Stem Complete Lamp 129, 129A, 129G, 134, 134A, 134G, 134P, 138A, 138B, 150BK, 150GK, 150IK, 150RK, (on lamps purchased after April, 1936; otherwise order 130-653)	.47
118B657	Fuel Valve and Fuel Tube Complete— Obsolete—Supply 118B161		129A357	Valve Assembly Complete..... Lamp 129, 129A, 129G, 134A, 134G, 134P, 138A, 138B, 150BK, 150RK, 150IK, 150GK	1.65
118C299	Roto-Cleaning Generator (Gas Tip Marked "V") (T44K) Lamp 129, 129G, 138A, 138B, 139, 150BK, 150GK, 150IK, 150RK, 152 Lantern 235	.60	130-657	Fuel Valve Complete Lamp 130G, 130K, 130P, 131P Fixtures 857, 857A, 858, 859	.99
129-164	Filler Plug Complete—Obsolete Supply 375-164		130-920	Globe Clamps Lamp 130G, 130K, 130P	.21
129-165	Fount Complete—Obsolete—Supply 134-165 Lamp 129G		130K365	Air Intake Tube Lamp 130K	.42
129-307	Valve Body—Obsolete—Supply 129A357 Lamp 129, 129G, 134, 134G, 134P, 150BK, 150GK, 150IK, 150RK On Lamp Models 129, 129G, 134, 134P, 134G, 150GK, 150BK, 150RK, 150IK, order 129A307 instead of 129-307 except for lamps having identification numbers on bottom of fount lower than "6-1." Lamps identified "5-12" and lower take 129-307.		130K399	Burner, Generator, Valve, Screw and Nut Complete Assembled Lamp 130K	3.75
129-310	Preheater Cup—Obsolete—Supply 235-310		131-145	Handle Lamp 131P	.42
129-335	Globe Holder Clamps (Packed) Lamp 129, 129G, 132A, 133, 134, 134P, 134G, 138A, 138B, 139, 143, 152 Fixtures 857, 857A, 858, 859	.42	131-399	Burner, Generator, Valve, Support Rod and Nut Complete Assembled..... Lamp 131P	3.75
129-341	Finale Lamp 129, 129A, 132A, 133, 134A, 139, 143, 152	.48	132-138	Fuel Tip Needle and Head..... Lamp 132, 132A, 133, 139, 143	.15
129-342	Finale Nut Lamp 129, 129A, 132A, 133, 134A, 139, 143, 152	.18	132-140	Filler Plug Complete—Obsolete—Supply 220B140	
129-343	Shade Support Rod Lamp 129, 129A, 132A, 133, 134A, 139, 143, 151	.15	132-146	Fuel and Air Wire (Fuel Tip Marked "★")..... Lamp 132, 132A, 133, 139, 143 Obsolete—Supply 132A148	
129-353	Tip Cleaner Stem Complete..... Lamp 129, 129A, 129G, 132A, 133, 134, 134A, 134G, 134P, 138A, 138B, 139, 143, 150BK, 150GK, 150IK, 150RK, 152	.21	132-147	Handle Lock Nut Lamp 132A, 132P, 133, 139, 143, 152	.15
129-357	Valve Complete—Obsolete—Supply 129A357		132-148	Fuel and Air Wire (With Fuel Tip and Fuel Needle) (Fuel Tip Marked "★")..... Lamp 132A, 132P, 133, 139, 143, 152	.81
129-361	Finale Fitting Assembly (Includes 129-341, 129-342, 129-343, 150-344) Lamp 129, 129A, 132A, 133, 134A, 139, 143, 152	.81	132-322	Air Intake Tube Lamp 132P	.48
129-365	Air Intake Tube Lamp 129, 129A, 129G, 138A, 138B, 139, 150BK, 150GK, 150IK, 150RK, 152 Lantern 235	.60	132-355	Pyrex Glass Globe (355) Lamp 129, 129G, 132A, 133, 134, 134G, 134P, 138A, 138B, 139, 143 Fixtures 857, 857A, 858, 859	1.00
129-399	Burner Complete Lamp 129, 129A, 129G, 138A, 138B	3.75	132-653	Valve Stem Complete Lamp 132A, 132P, 133, 143, 151B, 151G	.60
129A145	Handle Lamp 129A	.42	132-657	Valve Complete (Less Fuel and Air Wire)..... Lamp 132P	1.95
129A165S	Fount Complete—Obsolete Lamp 129, 129A		132A140	Filler Plug Complete—Obsolete Supply 220B140	
129A307	Valve Body Lamp 129, 129A, 129G, 134A, 134P, 134G, 138A, 138B, 139, 150BK, 150GK, 150RK, 150IK, (on lamps purchased after April, 1936 only; other- wise, order 129-307)	.81	132A145	Handle Lamp 132A	.48
			132A307	Valve Body—Obsolete—Supply 132A354	
			132A354	Valve Body Lamp 132A, 133, 139, 143, 152	.99
			132A357	Fuel Valve Complete (Fuel Tip Marked "S").... Lamp 132A, 133, 143	1.95
			132A399	Burner Complete Lamp 132A, 132P, 133, 143	4.05

COMPLETE PARTS LIST, NUMERICALLY ARRANGED

Order by Number	Part Name	Net Retail Price
132A557	Fuel Valve Complete (Fuel Tip Marked "S") Obsolete—Supply 132A357	
134-145	Handle Lamp 134A, 134G, 134P	.42
134-165	Fount Complete Lamp 134, 134A, 134G, 134P	4.05
134-399	Burner Complete Lamp 134, 134A, 134G, 134P	3.75
139-145	Handle Lamp 139	.42
139-165	Fount Lamp 139	4.80
139-399	Burner Complete Lamp 139, 152	4.05
139-653	Valve Stem Lamp 139, 152	.48
139-657	Valve Complete Lamp 139, 152	1.80
140-617	Lock Nut Lamp 138A, 138B Preheater 322-383, 324-383	.03
143-145	Handle Lamp 139, 143	.60
143-164	Filler Plug Complete—Obsolete—Supply 375-164	
143-165	Fount Complete—Obsolete—Supply 152-165 Lamp 143	
150-165	Fount Complete Lamp 150B, 150G, 150R, 150I, 150BK, 150GK, 150RK, 150IK	4.05
150-341	Finale Lamp 131P, 132P, 138A, 138B, 150B, 150R, 150I, 150G, 150BK, 150GK, 150RK, 150IK, 151B, 151G	.42
150-342	Finale Nut Lamp 131P, 132P, 138A, 138B, 150B, 150G, 150R, 150I, 150BK, 150GK, 150RK, 150IK, 151B, 151G	.18
150-343	Shade Support Rod Lamp 131P, 132P, 138A, 138B, 150B, 150G, 150R, 150I, 150BK, 150GK, 150RK, 150IK, 151B, 151G	.15
150-344	Shade Support Rod Nut Lamp 129, 129A, 131P, 132A, 132P, 133, 134A, 138A, 138B, 139, 143, 150B, 150G, 150R, 150I, 150BK, 150GK, 150RK, 150IK, 151B, 151G, 152	.03
150-361	Finale Fitting Assembly (Includes 150-341, 150-342, 150-343, 150-344)..... Lamp 131P, 132P, 138A, 138B, 150B, 150G, 150R, 150I, 150BK, 150GK, 150RK, 150IK, 151B, 151G	.81
150-399	Burner Complete—Obsolete Lamp 150B, 150G, 150R, 150I	
151-118	Fuel Tip (Marked "AL")..... Lamp 151B, 151G	.15
151-140	Filler Plug Complete—Obsolete Supply 220B140	
151-201	Generator Connection Lamp 151B, 151G	.42
151-218	Gas Tip (Marked "Δ")..... Lamp 151B, 151G	.09
151-238	Generator Cleaning Needle Lamp 151B, 151G	.15

Order by Number	Part Name	Net Retail Price
151-299	Generator and Cleaning Needle (Less Jamb Nut) (Gas Tip Marked "Δ") (T51)..... Lamp 151B, 151G	.60
151-304	Eccentric Block Lamp 151B, 151G	.21
151-328	Air Intake Tube Lamp 151B, 151G	.15
151-344	Burner Tube Lamp 151B, 151G	.21
151-353	Gas Tip Cleaner Complete Assembled..... Lamp 151B, 151G	.60
151-646	Fuel and Air Wire Complete (Fuel Tip Marked "AL")..... Lamp 151B, 151G	1.20
151-657	Fuel Valve Complete.....	3.30
152-145	Handle Lamp 152	.45
152-165	Fount Complete Lamp 152	6.00
152-399	Burner Lamp 152	4.05
152-653	Valve Stem Lamp 152	.48
152-657	Valve Lamp 152	1.80
155-218	Gas Tip (Marked "J")—Obsolete Cannot Supply	
155-299	Rotary Generator (Gas Tip Marked "J") (R55)—Obsolete—Supply 155B299	
155B299	Rotary Generator (Gas Tip Marked "Q") (R55)... Lamp 117, 118, 119, 130G, 130K, 130P, 131P, 132P, 220, 228 Lantern E20, 220, L227, 228, L327, L427 Lamp B, C, P, C331	.70
160-139	Mantle Only (No. 139).....	.30
160-322	Wick Trimmer Lamp 160	.21
160-371S	Wick Complete Lamp 160	.60
203-340	Ventilator Rod Lantern E20, L327, L427, 220B, 228B	.15
203-370	Burner (Less Generator and Valve)..... Lantern E20, L327	2.25
203-399	Burner, Generator & Valve Complete Assem.... Lantern L327, L427	3.75
203-409	Burner Frame Washer Lantern E20, L327, L427	.03
203-420	Baffle Plate Lantern E20, L327, L427	.21
203-441	Ventilator Ball Nut Lantern E20, 220, 220B, 220BX, 228, 228B, 237A, 237B, L327, L427, 220C, 228C	.15
203-489	Globe Base Rest..... Lantern E20, L327, L427	.21
203-498	Frame and Bail..... Lantern E20, L327, L427	1.20
203-653	Valve Stem Complete Lantern E20, L327	.42
203-657	Fuel Valve Complete..... Lantern L327	1.20

COMPLETE PARTS LIST, NUMERICALLY ARRANGED

Order by Number	Part Name	Net Retail Price	Order by Number	Part Name	Net Retail Price
204-131	Filler Plug Cap—Discontinued		216-532	Air Stem	.27
204-139	Filler Plug Disc, Gasket and Screw.....	.21		Lamp C331, 118, 118A, 118B, 119, 119A, 132A, 132P, 138A, 138B	
	Lamp C331, 118, 119			Lantern L427, 220, 220B, 220BX, 228, 228B, 235, 237A, 220C, 228C	
	Lantern E20, 220, 228, 235, L427			Camp Stove 2B, 2C, 2D, 2E, 2F, 3F, 3H, 6B, 9A, 9B, 9C, 9D, 9E, 9F, 412B, 413B, 415C, 416B, 416C, 417B, 418B, 419, 420, 514D	
	Heater 480			Heater 480	
204-140	Filler Plug Complete.....	.69		Stove 370B, 371A, 372, 386, 386A, 387, 391, 392, 393, 395, 391A	
	Lamp C331, 132P		216-538	Check Valve	.27
	Lantern E20, 220, 228, 235, L427			Lamp C331, 118, 118A, 118B, 119, 119A, 132A, 132P, 138A, 138B, 151B, 151G	
	Heater 480			Lantern 220, 220B, 220BX, 228, 228B, 235, 237B, L427, 220C, 228C	
204-399	Burner, Generator and Valve Complete Assem...	3.75		Camp Stove 2D, 2E, 2F, 3F, 3H, 6B, 9D, 9E, 9F, 416B, 416C, 417B, 415D	
	Lantern L427			Heater 4, 5, 5A, 7, 480, 490, 490A	
204-485	Ventilator (Porcelain—5¼" Base).....	1.95		Stove 372, 391, 500, 391A	
	Lantern E20, 220, L327, L427			396A, 397	
204-653	Valve Stem	.42		Tank 390-191, 900-191, 326-191	
	Lantern		216-620	Packing	.03
204-657	Fuel Valve Complete.....	.99		Camp Stove 2B, 2G, 9A, 9B, 9G, 412B, 415C, 416B, 416C, 417B	
	Lantern L427			Lamp 118A, 129, 131, 134, 150	
216-319	Base Lock Nut	.09		Stove 372, 391, 500	
	Lantern 220, 228		216-654	Valve Body	.99
216-326	Mixing Chamber	1.20		Lamp 117, 118, 119	
	Lamp 117, 118, 119			Lantern 220, 228	
	Lantern 220, 228		217-118	Fuel Tip (Marked "P")	.09
216-327	Valve Set Screw	.09		Lamp 117, 117A, 118, 118A, 119, 119A	
	Lamp 117, 118, 119			Lantern 220, 228	
	Lantern 220, 228		217-144	Tip Protector and Screen—Replaced by 117-144	
216-328	Valve Bracket Wedge	.06	217-148	Fuel Wire Complete (Fuel Tip Marked "P").....	
	Lamp 117, 118, 119			Lantern 220, 228	
	Lantern 220, 228			Obsolete	
216-340	Ventilator Rod	.09	217-160	Fuel Nipple	.33
	Lantern 220, 228			Lantern 220, 228	
216-429	Globe Base Rest	.27	217-165	Fount Complete	6.00
	Lantern 220, 228			Lantern 220, 228	
216-509	Pump Leather	.06	217-498	Frame and Bail—Obsolete	
	Lamp B, C, C331, P, 117, 117A, 118, 118A, 118B, 119, 119A, 129, 129A, 129G, 130G, 130K, 130P, 131P, 132P, 132A, 133, 134, 134A, 134P, 134G, 138A, 138B, 139, 143, 150B, 150G, 150R, 150I, 151B, 151G, 152			Lantern 220	
	Lantern E20, 220, 220B, 220BX, 228, 228B, 237A, 237B, L327, L427, 234, 242B, 235, 243A, 220C, 228C		220B140	Filler Plug Complete	.69
	Camp Stove 2B, 2D, 2E, 2F, 2H, 3F, 3H, 6B, 9A, 9B, 9D, 9E, 9F, 9H, 10, 412B, 413B, 415C, 416B, 416C, 417B, 418, 418B, 419, 420, 413C, 415D			Lamp C331, 118B, 132A, 132P, 138A, 138B, 139, 151B, 151G, 152	
	Heater 15, 16, 480, 490, 490A			Lantern E20, L427, 220, 220B, 220BX, 228, 228B, 237A, 237B, 220C, 228C	
	Iron 3, 4, 4A, 5, 8, 8A, 609, 609A			Heater 15, 16, 480, 490, 490A	
	Stove 370A, 370B, 371, 371A, 372, 373, 375, 375A, 376, 390, 390L, 393, 396, 397, 500			Camp Stove 2E, 2F, 4F, 6B, 9E, 9F, 412B, 413B, 413C, 415C, 416C, 417B, 418B, 419, 420, 415D	
	Handy Gas Plant 458, 458G			Stove 370A, 370B, 371A, 373, 386A, 387A, 390, 390L, 391, 392, 393, 395, 396, 396LC, 397, 391H	
	Trailer Hot Plates, Stoves 386, 386A, 391, 392, 395		220B165	Fount Complete	6.00
216-520	Pump Plunger Complete (Less Air Stem).....	.81		Lantern 220B, 220BX, 228B, 237B, 220C, 228C	
	Lamp C331, 118, 118A, 118B, 119, 119A, 132A, 132P, 138A, 138B		220B304	Eccentric Block—Obsolete—Supply 118A304	
	Lantern 220, 220B, 220BX, 228, 228B, 235, 237B, L427, 220C, 228C		220B322	Air Intake Tube	.69
	Camp Stove 2D, 2E, 2F, 9D, 9E, 9F			Lantern 220B, 220BX, 228B, 220C, 228C	
	Heater 480		220B328	Air Intake Tube Extension.....	.15
	Stove 372			Lantern 220B, 228B, 235	

COMPLETE PARTS LIST, NUMERICALLY ARRANGED

Order by Number	Part Name	Net Retail Price	Order by Number	Part Name	Net Retail Price
220B349	Ventilator Rod	.15	235-165	Fount Complete—Obsolete Lantern 235	
	Lantern 220B, 220BX, 235, 220C, 228C		235-310	Preheater Cup with Wick	.21
220B353	Tip Cleaner Stem Packed.....	.42		Lamp 129, 129A, 129G, 138A, 138B, 139, 152 Lantern 234, 235	
220B357	Gas Tip Cleaner Complete Assembled.....	.99	235-311	Spring Clip	.09
	Lantern 220B, 220BX, 228B, 220C, 228C			Lantern 235, 237A, 237B	
220B399	Burner Assem. Complete with Tip Cleaner.....	3.75	235-485	Ventilator—Obsolete—Supply 220B485	
220B423S	Bail	.21	235-653	Valve Stem Complete	.42
	Lantern 220B, 220BX, 220C			Lantern 235	
220B429	Globe Base Rest	.27	235-657	Fuel Valve Complete	.99
	Lantern 220B, 220BX, 228B			Lantern 235	
220B485	Ventilator	1.95	236-165	Fount Complete—Obsolete Lantern 237A	
	Lantern 220B, 220BX, 220C		236-320	Burner Cap—Obsolete—Supply 236-323 Lantern 237A, 237B	
220B498	Frame and Bail	1.20	236-323	Burner Cap and Screen	.42
	Lantern 220B, 220BX, 235, 220C			Lantern 237A	
220B653	Valve Stem Complete	.81	236-324	Burner Tube	.21
	Lantern 220B, 228B			Lantern 237A, 237B	
220B657	Fuel Valve Complete—Obsolete—Supply 220C657 Lantern 220B, 228B		236-340	Ventilator Rod	.21
220B950	Wrench	.21		Lantern 237A, 237B	
	Lantern 220B, 220BX, 228B, 236, 220C, 228C		236-370	Frame and Burner Complete	4.05
220C429	Base Rest—220C	.27		Lantern 237A, 237B	
	Lantern 220B, 228B		236-423	Bail	.21
220C653	Valve Stem Complete	.99		Lantern 237A, 237B	
	Lantern 220BX, 220C, 228C		236-485	Ventilator	1.95
220C657	Fuel Valve Complete	2.40		Lantern 237A, 237B	
	Lantern 220BX, 220C, 228C		236-603	Frame to Valve Connection Stud.....	.09
223-125	Pressure Gauge—Obsolete—Supply 575-125			Lantern 237A, 237B	
223-135	Gauge Bushing Plug—Obsolete—Supply 603-329		237-210	Jamb Nut	.15
223-538	Check Valve	.42		Lantern 237A, 237B	
	Lantern 242A		237-304	Tip Cleaner Eccentric Block.....	.09
	Camp Stove 2G, 2H, 4F, 6F, 9G, 9H			Lantern 237A, 237B	
	Stove 370, 370A		237-359	Preheater Cup Complete with Wick.....	.21
223-910	Filling Can Complete—Obsolete Supply 242K910			Lantern 237A, 237B	
223B520	Pump Plunger Complete (Less Air Stem) Obsolete—Supply 415C520		237A238	Cleaner Rod and Needle.....	.27
227-480	Ventilator (Porcelain 8¾" Base).....	2.70		Lantern 237A	
	Lantern 228, 228B, 228C		237A299	Generator Complete with Gas Tip (Marked "V") Lantern 237A, 237B	.70
228B423S	Bail	.21	237A429	Globe Base Rest	.27
	Lantern 228B, 228C			Lantern 237A	
228B498	Frame and Bail	1.20	237A653	Valve Stem Complete	.48
	Lantern 228B, 228C			Lantern 237A, 237B	
228C429	Base Rest—228C	.27	237A657	Valve Complete	2.70
234-165	Fount Complete—Obsolete—Supply 243A165			Lantern 237A, 237B	
234-485	Ventilator	.99	242-118	Fuel Tip (Marked "5")—Obsolete Supply 242A148	
	Lantern 234		242-139	Filler Plug Core and Gasket—Obsolete— Supply 242-140	
234-489	Globe Base Rest	.27		Lantern 234, 242A, 242B, 243, 243A	
	Lantern 234			Stove 500	
234-657	Valve Complete	1.95			
	Lantern 234				

COMPLETE PARTS LIST, NUMERICALLY ARRANGED

Order by Number	Part Name	Net Retail Price
242-140	Filler Plug Complete..... Stove 500 Lantern 234, 242A, 242B, 243A	.42
242-148	Fuel and Air Wire Complete (Fuel Tip Marked "5")—Obsolete—Supply 242A148	
242-165	Fount Complete—Obsolete—Supply 242B165	
242-218	Gas Tip (Marked "6")..... Lantern 234, 242A, 242B, 243A	.09
242-238	Generator Cleaning Needle (T33)..... Lantern 242A	.21
242-299	Generator (Gas Tip Marked "6") (T66).....	.60
242-304	Eccentric Block Lantern 242A, 242B, 234, 234A, 246B	.09
242-323	Burner Cap and Screen..... Lantern 234, 242A, 242B, 243A	.42
242-324	Burner Tube Lantern 234, 242A, 242B, 243A	.21
242-353	Tip Cleaner Stem Complete..... Stove 391, 395, 391A Lantern 234, 242A, 242B, 243A	.21
242-370	Frame and Burner Complete—Obsolete Supply 242A370	
242-423	Bail—Obsolete—Supply 242A423	
242-441	Ventilator Ball Nut..... Lantern 234, 242A, 242B, 243	.09
242-485	Ventilator—Obsolete—Supply 242K484	
242-489	Globe Base Rest—Obsolete—Supply 242A489	
242-518	Pump Leather Assembly..... Camp Stove 3F, 3H, 413B, 413C, 418B, 419, 420 Lantern 242A Stove 370	.21
242-520	Pump Plunger Complete—Obsolete Supply 242B520, 242B532, 242B538	
242-603	Frame to Valve Connection Stud..... Lantern 234, 242A, 242B, 243A	.09
242-607	Valve Body Less Plug—Obsolete Supply 242A657	
242-620	Valve Stem Packing..... Lantern 234, 242A, 242B, 243A Camp Stove 3F, 3H, 413B, 418B, 419, 420 Stove 371, 371A Tank 653D	.03
242-653	Valve Stem Complete..... Lantern 234, 242A, 242B, 243A	.42
242A148	Fuel and Air Wire Complete (Fuel Tip Marked "L")..... 242A, 242B, 243A	.48
242A370	Frame and Burner Complete..... Lantern 234, 242A, 242B	1.95

Order by Number	Part Name	Net Retail Price
242A423	Bail Lantern 234, 242A, 242B, 243A	.27
242A440	Ventilator Rod Lantern 234, 242A, 242B	.15
242A489	Globe Base Rest—Obsolete—Supply 242B489	
242A657	Valve Complete Lantern 242A, 242B, 243A	1.65
242B165	Fount Complete Lantern 242A, 242B	4.80
242B489	Globe Base Rest..... Lantern 242A, 242B	.21
242B520	Pump Plunger Complete (Less Air Stem)..... Lamp 139 Lantern 234, 237A, 242A, 242B, 243A Stove 500	.60
242B532	Air Stem Lamp 139, 152 Lantern 234, 237A, 242B, 243A Stove 500	.27
242B538	Check Valve Lamp 139, 152 Lantern 234, 237A, 242B, 243A Camp Stove 2B, 6B, 9A, 9B, 412B, 413B, 413C, 415C, 416B, 416C, 417B, 418B, 419, 420, 415D Stove 370B, 371A, 386, 386A, 387A, 391, 392, 395, 500, 391A	.27
242C489	Globe Base Rest..... Lantern 242C	.21
242K311	Spring Clip Lantern 234	.15
242K484	Ventilator Lantern 242A, 242B	.99
242K910	Filling Can Complete..... Lamp 129, 129A, 129G, 138A, 138B, 139, 152, Lantern 234, 237A, 237B	.42
243-165	Fount Complete—Obsolete—Supply 243A165	
243-323	Burner, Tube, Cap and Screen—Obsolete Supply 242-323 and 242-324	
243-338	Ventilator Pin—Obsolete—Supply 243A440	
243-370	Burner Complete Lantern 243A	1.95
243-484	Ventilator Lantern 243A	.99
243A165	Fount Complete—Obsolete—Supply 242B165 Lantern 243A	
* 243A440	Ventilator Locator Lantern 243A	.15
243A489	Globe Base Rest..... Lantern 243A	.27
246B520	Pump Plunger Assembly—Obsolete Supply 242B520	
301-218	Gas Tip (Marked "CR")..... Generator 514-265	.21

COMPLETE PARTS LIST, NUMERICALLY ARRANGED

Order by Number	Part Name	Net Retail Price
301-477	Fuel Tube Assembly (40" Long)..... Range 6, 16, 60, 106, 116, 160	2.40
301-657	Auxiliary Burner Valve Complete (Less Stem)... Range 6, 16, 60, 106, 116, 160	1.95
305-474	Fuel Tube (27¼" Long)—Obsolete Supply 306-477	
305-653	Valve Stem Complete..... Handy Gas Plant 5052 Water Heater 1 Preheater 544-383, 547-383 Urn Burner 404, 505, 707	.60
305-657	Fuel Valve Complete..... Preheater 544-383, 547-383	1.20
306-477	Fuel Tube Assembly (39" Long)..... Stove 7, 8, 9, 10, 14, 74, 84, 94, 104, 140	1.80
307-171	Fuel Tube (5¾" Long)..... Stove 200, 201, 202, 203, 204	.39
307-218	Gas Tip (Marked "A3").....	.18
307-238	Cleaning Needle and Holder..... Stove 372 Generator 514-264, 514-265, 515-262	.09
307-350	Auxiliary Burner Valve Core..... Stove 200, 201, 202, 203, 204, 600, 601, 602	.42
307-355	Auxiliary Burner Valve Opener (Less Knob)—Obsolete Stove 200, 201, 202, 203, 204, 600, 601, 602	
307-450	Square Nut (¼" Sq.)..... Burner 555	.03
307-451	Round Head Machine Screw (¼-20x3")..... Range 900, 901, 930, 931, 932	.03
308-171	Fuel Tube (14½" Long)—Obsolete Stove 600, 601, 602	
308-218	Gas Tip (Marked "A4").....	.18
308-238	Cleaning Needle and Holder..... Generator 940-262 Handy Gas Plant 457, 456	.09
310-171	Fuel Tube (6½" Long).....	.39
310-215	White Porcelain Wheel—Obsolete For Generator 514-262, 514-263, 515-262	
310-307	Preheater Valve Body Only—Obsolete	
310-345	Drain Plug Complete—Obsolete	
310-353	Preheater Valve Stem Complete—Obsolete Preheater 310-383	
310-357	Preheater Valve Complete..... Preheater 310-383	1.80
310-371	Preheater Fuel Tube (19½" Long)..... Stove 120, 121, 210, 211, 212, 213, 214, 323, 620, 621, 622, 623	.60
310-389	Preheater Generator—Obsolete—Supply 324-389	
310-657	Tank Fuel Valve Complete..... Tank 310-191	1.50

Order by Number	Part Name	Net Retail Price
313-410	Tank Bracket (Black)..... Stove 377A, 378A, 379A	.27
314-321	Master Burner Base (with Drain Plug)—Obsolete Stove 12, 12-3, 86, 86-4, 360, 361, 363, 365, 911, 913, 915, 920	
314-338	Auxiliary Burner Base Plug..... Stove 12, 12-3, 86, 86-4, 360, 361, 363, 365, 911, 913, 915, 920	.21
314-364	Auxiliary Burner Valve Stem Complete (10½" Long) Stove 12, 12-3, 86, 86-4	1.20
316-173	Fuel Tube (39" Long)..... Range 17, 17-0, 17-10, 18, 18-0, 18-10	.84
316-174	Fuel Tube (4½" Long)..... Range 17, 17-0, 17-10, 18, 18-0, 18-10	.39
316-175	Fuel Tube (11" Long)..... Range 17, 17-0, 17-10, 18, 18-0, 18-10, 224, 225, 624, 625	.60
316-317	Gasket Camp Stove 2B, 2G, 2H, 3F, 3H, 4F, 6B, 6F, 9A, 9B, 9G, 412B, 413B, 415C, 416C, 417B, 418, 418B, 419, 420 Stove 370, 370A, 370B, 371, 371A, 386, 386A	.09
316-323	Master Burner Cap..... Range 17, 17-0, 17-10, 18, 18-0, 18-10	1.65
318-173	Fuel Tube (8" Long)..... Range 224, 225, 624, 625	.42
318-218	Gas Tip (Marked "AO")..... Generator 501-262, 506-262, 514-262 Handy Gas Plant 5052 Heater 1 Water Heater 1 Urn Burner 5, 505	.18
318-233	Generator Saddle, Clamp, Bolt and Nut (7/32" High)—Obsolete	
318-342	Master Sub-Flame Burner Nipple..... Range 224, 225, 328, 362, 624, 625, 908, 912	.48
318-368	Master Sub-Flame Burner and Drain Plug Range 224, 225, 328, 362, 624, 625, 908, 912 —Obsolete	
318-461	Round Head Machine Screw (¼-20x1")..... Burner 463-398, 463-399, 501, 502, 751, 752 Handy Gas Plant 457, 457G Stove 376, 377, 377A, 378, 378A, 379, 379A Water Heater 464	.03
322-174	Fuel Tube (7½" Long)..... Range 322, 364, 364A, 366	.39
322-175	Fuel Tube (26½" Long)..... Range 322, 364, 364A, 366	.66
322-323	Master Burner Cap..... Range 322, 364, 364A, 366	1.95
322-335	Auxiliary Burner Extension..... Range 322 (28), 364	.81
322-339	Master Burner Extension..... Range 322 (28), 364	.81
322-342	Sub-Flame Nipple (¼"x8" Long)..... Range 322, 364, 364A, 366, 902, 914, 916	.33

COMPLETE PARTS LIST, NUMERICALLY ARRANGED

Order by Number	Part Name	Net Retail Price	Order by Number	Part Name	Net Retail Price
322-345	Oven Burner Supply Pipe (1/2"x9 1/4" Long).....	.48	326-191	Tank Complete (With Fittings) (Black).....	15.00
	Range 322 ("28)			Range 17, 17-0, 17-10, 18, 18-0, 18-10, 224, 225, 322, 328, 362, 364, 364A, 366	
322-349	Oven Burner Pilot Lighter.....	.81		Stove 6, 7, 8, 9, 10, 12, 12-3, 14, 16, 60, 74, 84, 86, 86-4, 94, 104, 106, 116, 120, 121, 140, 160, 200, 201, 202, 203, 204, 210, 211, 212, 213, 214, 324, 325, 326, 327, 329, 330, 360, 361, 363, 365, 600, 601, 602, 620, 621, 622, 623, 624, 625	
322-368	Sub-Flame Burner and Drain Plug.....	1.65	328-172	Preheater Fuel Tube (12" Long).....	.48
	Range 322 ("28)			Handy Gas Plant 457, 457G, 460, 460G, 575 Stove 375, 375A, 376	
322-377	Auxiliary Burner Valve Stem Complete.....	1.20	328-173	Fuel Tube (17" Long) (Tee to Oven Generator)—Obsolete	
	Range 322, 364, 364A, 366, 902, 914, 916			Range 328, 362	
322-456	Lock Nut	.09	328-175	Fuel Tube (2 1/2" Long) (Tank to Tee or Tee to Main Generator).....	.27
324-303	Connection (Preheater Fuel Tube to Preheater Generator)	.21		Range 328, 362	
	Preheater 322-383, 324-383 Radiant Heater 5B		328-327	Hood for Oven Burner Pilot Lighter.....	.15
324-310	Preheater Pan—Obsolete Supply Preheater 324-383			Range 224, 225, 328, 624, 625, 908	
324-318	Preheater Bracket—Obsolete Supply Preheater 324-383		328-380	Oven Burner Complete (With Drain Plug, Pilot Lighter, Hood, Bolt and Nuts).....	4.80
324-323	Burner Cap	1.65		Range 223, 225, 328, 362, 624, 625, 908	
	Stove 375, 375A, 376		328-657	Fuel Tube and Fuel Valve Complete.....	1.20
324-353	Preheater Tank Valve Stem Complete.....	.42		Range 322, 328, 362, 364, 364A, 366	
	Tank 326-191		361-172	Preheater Fuel Tube (22" Long)—Obsolete Stove 360, 361, 363, 365	
324-357	Preheater Tank Valve Complete (Fuel Tip Marked "F").....	1.20	361-173	Fuel Tube (27 1/2" Long)—Obsolete Stove 360, 361, 363, 365 —Supply 316-173	
	Tank 326-191		362-350	Preheater Valve Stem Extension.....	.33
324-389	Preheater Generator (Less Jamb Nut) (Gas Tip Marked "S").....	.33		Preheater 362-383 Range 328, 362 Stove 324	
	For Preheater 324-583, 322-383		362-364	Auxiliary Burner Valve Stem Complete.....	1.20
324-648	Indicator Handle and Screw (Right Hand Tank) (See 324-649 for Left Hand)—Obsolete Tank 326-191			Range 362, 912	
324-649	Indicator Handle and Screw (Left Hand Tank)—Obsolete Tank 326-191		362-950	Wrench	.21
324-653	Tank Fuel Valve Stem Complete.....	.42		Accessory	
	Tank 326-191		364-326	Manifold (Casting Only).....	3.00
324-657	Tank Fuel Valve Complete.....	.99		Range 364	
	Tank 326-191		364-348	Oven Burner (Casting Only)—Obsolete Range 364 Left or Right Hand Oven	
325-217	Tip Protector	.15	364-364	Auxiliary Burner Valve Stem Complete (10 1/2" Long)—Obsolete Stove 360, 361, 363, 365, 911, 913, 915, 920	
	Burner 463-398, 463-399, 501, 502, 558, 751, 752 Generator 552-262, 558-262, 940-262, 740-262, 950-262, 390-262 Handy Gas Plant 457, 457G, 460, 460G, 575 Stove 390, 390L, 393, 396, 396LC, 396A, 397, 490, 490A Water Heater 464		364-368	Oven Burner Sub-Flame and Drain Obsolete—Supply 322-368	
325-240	Generator Valve Body and Fuel Nipple.....	.81	364A172	Fuel Tube (30 3/8" Long).....	.81
	Generator 940-262			Range 364, 364A, 366	
325-264	Generator—Obsolete—Supply 940-262		364A373	Oven Burner Pilot Lighter.....	.48
325-418	Gas Tip (Marked "4").....	.18		Range 364A, 914	
	Burner 463-398, 463-399, 501, 502, 751, 752 Generator 552-262, 940-262 Handy Gas Plant 457, 457G, 575 Stove 375, 375A, 376, 376A, 377, 377A, 378, 378A, 379, 379A Water Heater 464		366-172	Preheater Fuel Tube (26 7/8" Long).....	.81
				Range 322	
			366-174	Fuel Tube (6" Long)	.39
				Range 322	
			366-250	Wheel and Nut.....	.42
				Stove 375, 375A, 376, 377, 377A, 378, 378A, 379, 379A	

COMPLETE PARTS LIST, NUMERICALLY ARRANGED

Order by Number	Part Name	Net Retail Price	Order by Number	Part Name	Net Retail Price
366-303	Flame Conductor—Obsolete Range 322 ('29), 364, 364A, 366		372-262	Generator Complete (Gas Tip Marked "B") Stove 372—Obsolete—Return Used Generator for reconditioning	
366-320	Mixing Chamber (Right Hand Oven) Obsolete—Supply 366A374, specify right or left		372-327	Burner Baffle Stove 372	.42
366-321	Mixing Chamber (Left Hand Oven) Obsolete—Supply 366A374, specify right or left		372-353	Auxiliary Valve Complete..... Stove 372	.81
366-323	Simmering Burner Cap..... Stove 375, 375A	.81	372-444	Grate Stove 372	.99
366-326	Burner Manifold (Casting Only) (Right Hand Oven) Range 322 ('29), 364A, 366, 902, 914, 916	4.80	373-189	Tank (Less Fittings)..... Stove 373	6.00
366-340	Mixing Chamber (Right Hand Oven) Obsolete—Supply 366A340		373-201	Generator to Valve Connection..... Stove 373	.33
366-341	Mixing Chamber (Left Hand Oven) Obsolete—Supply 366A341		373-370	Burner Complete Stove 373	3.75
366-350	Preheater Valve Stem Extension..... Preheater 366-383	.42	373-444	Grate Stove 373	1.95
366-353	Preheater Valve Stem Complete (Less Extension) Preheater 362-383, 366-383	.48	373-618	Fuel Tip (Marked "AD")..... Heater 15, 16	.15
366-354	Preheater Valve Body..... Preheater 362-383, 366-383	.60	373-657	Instant-Gas Valve Complete—Obsolete Supply 485-657	
366-357	Preheater Valve and Generator Complete (Less Extension)—Obsolete Preheater 362-383, 366-383		375-164	Filler Plug Complete Handy Gas Plant 458, 458G Lamp 129, 129A, 129G, 130G, 130K, 130P, 131P, 133, 134A, 134P, 134G, 143, 150B, 150G, 150R, 150I, 150BK, 150GK, 150RK, 150IK Stove 375, 375A, 376, 377, 378, 378A, 379, 379A	.81
366-373	Oven Burner Pilot Lighter..... Range 322 ('29), 366, 902, 914, 916	.48	375-171	Fuel Tube (3½")—Obsolete Supply 328-172	
366-375	Sub-Flame Burner and Drain Plug (Left Hand Oven)..... Range 322 ('29), 364A, 366, 902, 914, 916	1.95	375-191	Tank Complete (With Fittings)—Obsolete Supply 375A189	
366-399	Preheater Generator (With Needle) (Less Jamb Nut) (Gas Tip Marked "S")..... Preheater 362-383, 366-383	.48	375-322	Mixing Chamber—Obsolete Stove 375, 375A, 376, 377, 377A, 378, 378A, 379, 379A	
366A374	Mixing Chamber (Right or Left Hand Oven)..... Range 322 ('29), 364A, 366, 902, 914, 916	1.65	375-326	Burner Manifold (Casting Only)..... Stove 375, 375A	2.40
366-451	Machine Screw (¼-20x¾" O.H.)..... Stove 376, 377, 377A, 378, 378A, 379, 379A	.03	375-327	Air Intake Adjuster—Obsolete Stove 375, 375A, 376, 377, 377A, 378, 378A, 379, 379A	
370-434	Grate Stove 370, 370A, 370B, 386, 386A	.48	375-410	Tank Band (Black)..... Stove 375, 375A, 376, 377, 377A, 378, 378A, 379, 379A	.21
370-455	Auxiliary Valve Complete..... Stove 370, 370A, 370B	.60	375-444	Grate—Supply 375A444	
371-411	Grate Clip—Obsolete—Supply 371-935		375A189	Tank Complete (With Fittings)..... Stove 375, 375A, 376	7.50
371-434	Grate Stove 371, 371A, 387, 387A	.99	375A444	Grate Stove 375, 375A, 378, 378A, 379, 379A	1.20
371-455	Auxiliary Valve Complete..... Stove 371, 371A, 387, 387A, 392	.60	376-444	Grate (Black) Stove 376, 377, 377A	1.20
371-935	Grate Clips and Bolts..... Stove 371, 387, 387A	.21	378-189	Tank Complete Stove 377, 378, 379	8.25
372-171	Fuel Tube (6" Long)..... Stove 372	.39	378-409	Tank Support (Black)..... Stove 377, 377A, 378, 378A, 379, 379A	.18
372-175	Tank Complete (With Fittings and Valve)—Obsolete Stove 372				
372-240	Generator Valve Body and Fuel Nipple..... Stove 372	.48			

COMPLETE PARTS LIST, NUMERICALLY ARRANGED

Order by Number	Part Name	Net Retail Price	Order by Number	Part Name	Net Retail Price
386-165	Tank Complete (Less Valve and Generator)—Obsolete—Supply 416B165 Camp Stove 2B, 9A, 9B Stove 386		390-322	Burner Mixing Chamber—Obsolete Supply 390-370	
386-355	Auxiliary Valve Complete.....	.60	390-325	Burner Screen	.42
	Stove 386, 386A, 391			Stove 390, 390L	
386-935	Grate Clips and Bolts.....	.21	390-326	Manifold (Castings Only)—Obsolete Stove 390, 390L	
	Stove 370A, 370B, 386, 386A, 391, 391A		390-335	Sub-Flame Baffle	.99
387-322	Burner Mixing Chamber.....			Stove 390, 390L	
	Obsolete—Supply 387A322		390-344	Sub-Flame Complete	.81
387-326	Burner Manifold (Casting Only).....	2.70		Stove 390, 390L	
	Stove 387, 387A		390-346	Oven Supply Pipe (Down).....	.99
387-332	Burner Gasket	.15		Stove 390, 390L	
	Stove 387, 387A		390-347	Oven Burner Stud	.27
387-640	Eccentric Block and Fuel Needle.....	.15		Stove 390, 390L	
	Camp Stove 418, 418B, 420		390-348	Oven Burner—Obsolete Stove 390, 390L	
	Stove 387, 387A, 391, 392, 395, 391A		390-350	Valve Wheel (Green).....	.42
387-646	Fuel and Air Tube with Fuel Tip (Marked "AD")	.60		Range 390, 390L	
	Camp Stove 418, 418B, 420		390-364	Auxiliary Valve (Complete).....	.99
	Stove 387, 387A, 392, 395			Stove 390, 390L	
387-653	Valve Stem Complete (Less Needle and Holder).	.60	390-370	Burner Mixing Chamber.....	1.95
	Stove 387, 387A, 392, 395			Stove 390, 390L	
387-655	Valve Complete (Less Generator and Valve Stem)	1.65	390-375	Drain Body and Tube.....	1.65
	Stove 387, 387A, 392, 418, 418B, 420			Stove 390, 390L	
387-660	Valve and Generator Assembly.....	3.00	390-358S	Giant Burner Cap and Stud.....	.42
	Camp Stove 418, 418B, 420			Stove 390, 390L	
	Stove 387, 387A, 392		390-459	Oven Burner Baffle.....	.81
387-935	Grate Clips and Bolts.....	.33		Stove 390, 390L	
	Stove 387A		390-520	Pump Plunger Complete.....	1.20
387A165	Tank Complete (Less Valve and Generator).....	4.80		Stove 390, 390L, 393, 490, 490A	
390-171	Feed Wire	.39	390-532	Air Stem	.48
	Stove 390, 390L			Stove 390, 390L, 393, 396, 396LC, 397	
390-190	Tank (Less Valve and Generator).....	10.80	390-607	Valve Body	.81
	Stove 390, 390L			Stove 390, 390L	
390-240	Valve Body	.99	390-648S	Fuel and Air Tubes with Fuel Needle (Fuel Tip Marked "AX").....	.81
	Range 390, 390L			Stove 390, 390L	
390-251S	Valve Stem Complete (Less Needle).....	.99	390-653S	Lighting Lever Complete.....	.21
	Range 390, 390L			Stove 390, 390L	
390-262	Generator Complete	3.00	390-655	Valve Complete (Less Generator and Valve Stem)	1.20
	Stove 390, 390L			Stove 390, 390L	
390-301	Heat Bowl (Giant).....	.42	391-165	Tank Complete (Less Valve and Generator).....	5.10
	Stove 390, 390L, 393, 396, 396LC, 396A, 397			Stove 391, 391A	
390-302	Heat Bowl (Standard).....	.42	391-308	Drain Cap	.15
	Stove 390, 390L			Stove 387, 387A, 391, 392, 395, 490L, 391A	
390-308	Drain Plug—Obsolete—Supply 551-308		391-322	Burner Mixing Chamber.....	1.20
390-310	Grate	1.20		Stove 391	
	Range 390, 390L		391-325	Air Regulator	.18
390-317	Valve Stem Bonnet.....	.42		Stove 387, 387A, 391, 392	
	Stove 390, 390L		391-326	Burner (Casting Only).....	1.95
390-318	Oven Supply Pipe Flange.....	.27		Stove 391	
	Stove 390, 390L, 394		391-432	Gasket	.09
				Stove 391, 392	

COMPLETE PARTS LIST, NUMERICALLY ARRANGED

Order by Number	Part Name	Net Retail Price	Order by Number	Part Name	Net Retail Price
391-434	Grate Stove 391, 391A	.42	393-325	Air Intake Adjuster..... Stove 393, 396, 396A, 397	.15
391-640	Eccentric Block and Fuel Needle—Obsolete Supply 387-640		393-326	Master Burner Manifold—Obsolete Stove 393, 397	
391-646	Fuel and Air Wire Complete..... Stove 391, 391A	.69	393-327	Sub-flame Baffle Stove 393, 396, 396A, 397	.42
391-653	Valve Stem Stove 391, 391A	.48	393-336	Auxiliary Burner Manifold—Obsolete Stove 393, 395, 397	
391-655	Valve Complete Stove 391	1.20	393-338	Oven Manifold Plug Stove 393	.09
391-660	Fuel Valve and Generator Complete..... Stove 391, 391A	2.70	393-340	Oven Manifold Gasket..... Stove 393	.15
391A326	Master Burner and Bunsen Assembled..... Stove 391A	2.70	393-344	Sub-flame Complete with Fillers..... Stove 393, 396, 396A, 397	1.20
391A319	Manifold Pipe Stove 391A	1.05	393-345	Master to Auxiliary Burner Supply Pipe..... Stove 393, 395, 396, 396A, 397	.81
391A360	Auxiliary Burner Body with Valve Complete..... Stove 391A	3.00	393-351	1/4-20x5" Steel Machine Screw..... Stove 393	.09
392-165	Tank Complete (Less Valve and Generator)..... Stove 392, 395	4.80	393-352	1/4-20x3 1/4" Steel Machine Screw F.H..... Stove 393, 396, 396A, 397	.15
392-322	Burner Mixing Chamber..... Stove 392	.81	393-364	Master Burner Valve Complete..... Stove 393, 396A, 397	.81
392-326	Burner (Casting Only)—Obsolete Stove 392		393-365S	Auxiliary Valve Stem Complete..... Stove 393, 395, 396, 396LC, 396A, 396A-LC, 397	.81
392-345	Burner Fillers Complete Stove 392	.81	393-375	Drain Tube Complete..... Stove 393, 395, 396, 396LC, 396A, 396A-LC, 391A	.99
392-434	Grate Stove 392, 393, 395	.81	393-434	Auxiliary Burner Grate..... Stove 393, 395	1.20
393-190	Tank Complete (Less Valve and Generator)..... Stove 393	7.50	393-520	Pump Plunger Complete..... Stove 393, 396, 396LC	1.20
393-191	Tank Complete (With Valve and Generator)..... Stove 393	11.10	393-607	Valve Body Stove 393, 396, 396LC, 396A, 396A-LC, 397	1.50
393-219	Generator Filler Coil..... Stove 393, 396, 396LC, 396A, 396A-LC, 397	.21	393-648	Fuel and Air Tube with Fuel Needle (Fuel Tip Marked "BN")..... Stove 393, 396, 396LC, 396A, 396A-LC, 397	.42
393-240	Generator Tube Stove 393, 396, 396LC, 396A, 396A-LC, 397	1.20	393-653	Lighting Lever Complete..... Stove 393, 396, 396LC, 396A, 396A-LC, 397	.48
393-251	Cleaner Rod and Needle..... Stove 393, 396, 396LC, 396A, 396A-LC, 397	.33	393-660	Valve and Generator Complete..... Stove 393, 396, 396LC, 396A, 396A-LC, 397	3.60
393-253	Valve Stem Complete (Less Cleaner Rod and Needle) Stove 393, 396, 396LC, 396A, 396A-LC, 397	.48	394-304	Oven Pipe Elbow—Obsolete Oven 394	
393-262	Generator Renewal Parts, including Generator Tube, Coil, Tip, Tip Protector, Cleaner Rod and Needle (Gas Tip Marked "...")..... Stove 393, 396, 396LC, 396A, 396A-LC, 397	1.50	394-305	Oven Feed Pipe (Down)..... Stove 394, 396, 396LC, 396A, 396A-LC, 397	.81
393-301	Heat Bowl (Auxiliary)..... Stove 393, 395, 396, 396A, 397	.21	394-306	Feed Pipe Oven 394	.60
393-316	Sub-flame Gasket Stove 393, 396, 396A, 397	.03	394-307	Oven Control Valve Body..... Oven 394	1.20
393-317	Sub-flame Nipple Stove 393, 396, 396A, 397	.15	394-325	Oven Burner Screen..... Oven 394, 396, 396LC, 396A, 396A-LC, 397	.27
			394-326	Oven Burner Oven 394	2.25

COMPLETE PARTS LIST, NUMERICALLY ARRANGED

Order by Number	Part Name	Net Retail Price
394-364S	Valve Stem Complete..... Oven 394, 396, 396LC, 396A, 396A-LC, 397	.81
395-219	Generator Filler Coil..... Hot Plate 395	.15
395-240	Generator Tube and Bushing..... Hot Plate 395	.81
395-262	Complete Set Generator Renewal Parts, includ- ing Tube, Gas Tip, Bushing, Coil, Needle and Holder	1.20
	Hot Plate 395	
395-325	Air Regulator	.03
	Hot Plate 395	
395-326	Master Burner (Casting Only).....	2.40
	Hot Plate 395	
395-653	Valve Stem Less Needle and Holder.....	.60
	Hot Plate 395	
395-660	Valve and Generator Assembly.....	3.30
	Hot Plate 395	
396-190	Tank Complete (Less Valve and Generator).....	9.00
	Stove 396	
396-191	Tank Complete (With Valve and Generator).....	12.60
	Stove 396	
396-306	Oven Feed Pipe (Cross).....	.60
	Stove 396, 396LC, 396A, 396A-LC, 397	
396-326	Master Burner Manifold.....	2.40
	Stove 396, 396LC, 396A, 396A-LC, 397	
396-328	Oven Connecting Ell.....	.81
	Stove 396, 396LC, 396A, 396A-LC, 397	
396-330	Oven Burner Manifold.....	1.65
	Stove 396, 396LC, 396A, 396A-LC, 397	
396-336	Auxiliary Burner Manifold.....	1.65
	Stove 396, 396LC, 396A, 396A-LC, 397	
396-346S	Burner Fillers	1.20
	Stove 396, 396LC, 396A, 396A-LC, 397	
396-434	Grate	1.65
	Stove 396, 396LC, 396A, 396A-LC, 397	
396-449	Drip Pan	2.40
	Stove 396, 396LC, 396A, 396A-LC, 397	
396A190S	Tank Complete (Less Valve and Generator).....	9.00
	Stove 396A, 396A-LC, 396B	
396A191	Tank Complete (With Valve and Generator).....	12.60
	Stove 396A, 396A-LC, 396B	
396A520	Pump Plunger Complete.....	1.20
	Stove 396A, 396A-LC, 396B	
397-371	Drain Tube Complete.....	.81
	Stove 397	
401-164	Filler Plug Complete.....	.60
	Camp Stove 2B, 2C, 2D, 2G, 2H, 3F, 3H, 6F, 9A, 9B, 9C, 9D, 9G, 9H, 10, 418 Stove 370, 371, 386, 387	
401-218	Gas Tip (Marked "B").....	.18
	Camp Stove 3F, 3H, 413B, 413C, 418, 418B, 419, 420 Stove 371, 371A, 387, 387A, 392, 395	

Order by Number	Part Name	Net Retail Price
401-417	Machine Screw (10-24) Square..... Burner 501, 502, 554, 558, 751, 752 Camp Stove 2D, 9D, 10 Heater 1, 2, 4, 5, 5A, 7 Handy Gas Plant 457, 457G, 458, 458G, 575 Water Heater 1	.38
401-489	Key and Ring (Only)—Obsolete	
402-656	Generator Valve Stem Complete Obsolete—Supply 405-262	
403-170	Fuel Tube (8-13/16" Long).....	.48
	Camp Stove 2C, 9C	
405-170	Fuel Tube (5 3/8" Long).....	.48
	Camp Stove 2D, 9D	
405-175	Tank and Generator Complete Assembled Obsolete—Cannot Supply	
405-239	Gas Tip and Holder (Gas Tip Marked "B").....	.21
	Camp Stove 2C, 2D, 2E, 2F, 9C, 9D, 9E, 9F	
405-262	Generator (Gas Tip Marked "B").....	1.95
	Camp Stove 2C, 2D, 9C, 9D	
405-357	Auxiliary Burner Valve Stem Complete.....	.99
	Camp Stove 2D, 9D	
405-365	Burner Cap (2 Piece, Bolt and Nut).....	.60
	Burner 544, 556 Camp Stove 2D, 2E, 2F, 9D, 9E, 9F, 10 Handy Gas Plant 458, 458G Stove 373	
407-170	Fuel Tube (5 1/2" Long).....	.66
	Camp Stove 2E, 2F, 9E, 9F	
407-262	Generator (Gas Tip Marked "B").....	1.95
	Camp Stove 2E, 2F, 9E, 9F	
407-322	Mixing Chamber Shield—Obsolete Supply 410-322	
407-329	Generator Clamp—Obsolete—Supply 101-508	
407-357	Auxiliary Burner Valve Stem Complete.....	.81
	Camp Stove 2E, 2F, 9E, 9F Stove 373	
407-618	Fuel Tip (Marked "AE").....	.15
	Camp Stove 2E, 2F, 9E, 9F Heater 15 Stove 372, 373	
407-649	Valve Wheel	.21
	Camp Stove 418, 418B, 420 Hot Plate 387, 387A Stove 392, 395 Tank 653D	
407-653	Valve Stem Complete—Obsolete Supply 407-660	
407A256	Generator Regulating Stem Complete.....	.60
	Camp Stove 2E, 2F, 9E, 9F	
409-327	Machine Screw (10-24x3/8" R.H.).....	.03
	Iron 3, 4, 5	

COMPLETE PARTS LIST, NUMERICALLY ARRANGED

Part Number	Part Name	Net Retail Price	Order by Number	Part Name	Net Retail Price
412-155	Pump Leather Lamp 220 Camp Stove 2C, 9C	.06	412-262	Complete Set of Generator Renewal Parts including Tube, Gas Tip, Bushing, Coil, Needle and Holder (Gas Tip Marked "AK").....	1.20
412-156	Pump Plunger Complete (Less Air Stem).....	.60		Camp Stove 2B, 2G, 2H, 4F, 6B, 6F, 9A, 9B, 9G, 9H, 412B, 415C, 416B, 416C, 417B, 415D	
412-171	Fuel Tube (3-13/16" Long).....	.33		Stove 370, 370A, 370B, 386, 386A, 391, 391A	
412-218	Gas Tip (Marked "GS").....	.21	412-322	Burner Mixing Chamber—Obsolete Supply 412-322S	
412-255	Generator Valve Stem Complete.....	.99	412-322S	Burner Mixing Chamber and Drain Plug.....	.60
412-351	Generator (Gas Tip Marked "GS").....	1.95		Camp Stove 4F, 6B, 6F, 412B, 417B	
412-352	Mixing Chamber Shield—Obsolete Camp Stove 2E, 2F, 9E, 9F, 10 Stove 372, 373			Stove 370, 370A, 370B	
412-585	Pump Camp Stove 10 Iron 3, 4, 4A, 5, 8, 8A, 609, 609A Lamp 129, 129A, 129G, 130G, 130K, 130P, 133, 134, 134A, 143	.75	412-326	Burner Manifold (Casting Only).....	1.20
412-165	Tank Complete (With Fittings) (Less Valve and Generator)—Obsolete Supply 417B165			Camp Stove 4F, 6B, 6F, 412B, 417B	
412-207	Valve Body Camp Stove 2B, 2G, 2H, 4F, 6B, 6F, 9A, 9B, 9G, 9H, 412B, 415C, 416B, 417B, 416C, 415D Stove 370, 370A, 370B, 386, 386A, 391	.81		Stove 370, 370A, 370B	
412-212	Generator Tube—Obsolete—Supply 412-240		412-353	Tip Cleaner Stem Complete.....	.21
412-218	Gas Tip (Marked "AK").....	.18		Camp Stove 2B, 2G, 2H, 3F, 3H, 4F, 6B, 6F, 9A, 9B, 9G, 9H, 412B, 413B, 413C, 415C, 416B, 416C, 417B, 418, 418B, 419, 420, 415D	
412-219	Generator Filler Coil.....	.15		Stove 370, 370A, 370B, 371, 371A, 386, 386A, 387, 387A, 392	
412-240	Generator Tube and Bushing.....	.81	412-355	Auxiliary Valve Complete.....	.81
412-249	Wheel and Bushing.....	.21		Camp Stove 4F, 6B, 6F, 412B	
412-251	Cleaner Rod and Needle.....	.33		Stove 370B	
412-253S	Valve Stem (Less Cleaning Needle).....	.48	412-365	Burner Cap Complete.....	.42
	Camp Stove 2B, 2G, 2H, 4F, 6B, 6F, 9A, 9B, 9G, 9H, 412B, 415C, 416C, 417B, 415D			Camp Stove 4F, 6B, 6F, 412B, 417B	
				Stove 370, 370A, 370B	
			412-507	Pump Cap Clip.....	.03
				Camp Stove 2B, 2G, 2H, 4F, 6B, 6F, 9A, 9B, 9G, 9H, 412B, 413B, 415C, 416B, 416C, 417B, 415D, 392, 395, 391A	
				Stove 370, 370A, 370B, 386, 386A, 387A, 391, 392, 395	
			412-520	Pump Plunger Complete.....	.60
				Camp Stove 2G, 2H, 4F, 6F, 9G, 9H	
				Stove 370, 370A	
			412-640	Eccentric Block and Needle.....	.15
				Camp Stove 2B, 2G, 2H, 4F, 6B, 6F, 9A, 9B, 9G, 9H, 412B, 415C, 416B, 416C, 417B, 415D	
				Stove 370, 370A, 370B, 386, 386A, 500	
			412-646	Fuel and Air Tube with Fuel Tip (Marked "O")..	.33
				Camp Stove 2B, 2G, 2H, 4F, 6B, 6F, 9A, 9B, 9G, 9H, 412B, 415C, 416B, 416C, 417B, 415D	
				Camp Stove 370, 370A, 370B, 386, 386A, 500	
			412-655	Instant Lighting Valve Complete (Less Generator and Valve Stem).....	1.50
				Camp Stove 2B, 2G, 2H, 4F, 6B, 6F, 9A, 9B, 9G, 9H, 412B, 415C, 416B, 416C, 417B, 415D	
				Stove 370, 370A, 370B, 386, 386A	
			412-660	Valve and Generator Assembly Complete.....	2.70
				Camp Stove 2B, 2G, 2H, 4F, 6B, 6F, 9A, 9B, 9G, 9H, 412B, 415C, 416B, 417B, 415D	
				Stove 370, 370A, 370B, 386, 386A	
			412B165	Tank Complete (With Fittings) (Less Valve & Generator)—Obsolete Supply 417B165	
			413-115	Feed Tube Connection	.09
				Stove 395	

COMPLETE PARTS LIST, NUMERICALLY ARRANGED

Order by Number	Part Name	Net Retail Price	Order by Number	Part Name	Net Retail Price
413-165	Tank Complete (With Fittings) (Less Valve and Generator)—Obsolete Supply 413B165		413-660	Valve and Generator Assembly Complete..... Camp Stove 3F, 3H, 413B, 413C, 419 Stove 371, 371A, 387	3.00
413-207	Valve Body Camp Stove 3F, 3H, 413B, 418, 419, 420 Stove 371, 371A, 387, 387A, 392, 395	.81	413A326	Burner Manifold (Casting Only)..... Camp Stove 3F, 3H, 413B, 419 Stove 371, 371A	1.95
413-212	Generator Tube—Obsolete—Supply 413-240		413B165	Tank Complete (With Fittings) (Less Valve and Generator)..... Camp Stove 413B, 413C, 3F, 3H Stove 371, 371A	4.80
413-219	Generator Filler Coil..... Camp Stove 3F, 3H, 413B, 413C, 418, 418B, 419, 420 Stove 371, 387, 387A, 392	.15	413C302	Master Burner Bowl..... Camp Stove 413C, 415D Stove 391A	.45
413-240	Generator Tube and Bushing..... Camp Stove 3F, 3H, 413B, 418, 418B, 419, 420 Stove 371, 371A, 387, 387A, 392	.81	413C306	Auxiliary Burner Bowl..... Camp Stove 413C, 415D Stove 391A	.45
413-262	Complete Set of Generator Renewal Parts includ- ing Tube, Gas Tip, Bushing, Coil, Needle and Holder (Gas Tip Marked "B")..... Camp Stove 3F, 3H, 413B, 413C, 418, 418B, 419, 420 Stove 371, 371A, 387, 387A, 392	1.20	413C326	Master Burner Manifold and Bunsen..... Camp Stove 413C, 415D Stove 391A	1.95
413-301	Burner Cap Cover..... Camp Stove 3F, 419, 420 Stove 372, 387, 387A, 392	.15	413C345	Master Cap and Fillers..... Camp Stove 413C, 415D Stove 391A	.75
413-322	Burner Mixing Chamber..... Camp Stove 3F, 3H, 413B, 418, 418B, 419, 420 Stove 371, 371A	.75	413C346	Auxiliary Cap and Fillers..... Camp Stove 413C, 415D Stove 391A	.75
413-326	Burner Manifold (Casting Only)—Obsolete Supply 413A326		413C319	Manifold Pipe Camp Stove 413C	.90
413-345	Burner Fillers Camp Stove 3F, 2G, 9G, 419, 420 Stove 372, 387, 387A, 392	.60	413C360	Auxiliary Burner (Manifold with Valve Stem).... Camp Stove 413C	1.50
413-357	Auxiliary Valve Complete..... Camp Stove 3F, 3H, 413B, 418, 418B, 419, 420	.81	415C355	Auxiliary Valve Complete..... Stove 415C, 416C	.60
413-520	Pump Plunger Complete (Less Air Stem)..... Camp Stove 3F, 3H, 418 Stove 371, 387 Lamp 151B, 151G	.60	415C520	Pump Plunger Complete..... Stove 370B, 371A, 386, 386A, 387A, 391, 392, 391A, 395, 412B, 413B, 415C, 416C, 417B, 418B, 419, 420, 415D	.60
413-532	Pump Air Stem..... Camp Stove 418 Lamp 151B, 151G Stove 371, 387	.27	415D319	Manifold Pipe Camp Stove 415D	.90
413-640	Eccentric Block and Fuel Needle..... Camp Stove 3F, 3H, 413B, 413C, 419 Stove 371, 371A	.15	415D326	Master Burner Manifold and Bunsen Assembled. Camp Stove 415D	1.95
413-646	Fuel and Air Tube with Fuel Tip (Marked "AD") Camp Stove 3F, 3H, 413B, 413C, 419 Stove 371, 371A	.60	415D360	Auxiliary Burner Manifold with Valve Stem..... Camp Stove 415D	1.50
413-651S	Valve Stem Complete (Less Needle and Holder) Obsolete—Supply 413-653		416-165	Tank Complete (With Fittings) (Less Valve and Generator)—Obsolete Camp Stove 2G, 2H, 9G, 9H	
413-653	Valve Stem Complete (Less Needle and Holder). Camp Stove 3F, 3H, 413B, 413C, 418, 418B, 419, 420 Stove 371, 371A	.81	416-322	Burner Mixing Chamber..... Camp Stove 2B, 2G, 2H, 9A, 9B, 9G, 9H, 415C, 416C	.60
413-655	Valve Complete (Less Generator and Valve Stem) Camp Stove 3F, 3H, 413B, 419 Stove 371, 371A	1.65	416-326	Burner Manifold (Casting Only)..... Camp Stove 2G, 9G	1.65
			416-345	Burner Fillers—Obsolete—Supply 413-345	
			416-355	Auxiliary Valve Complete..... Camp Stove 2B, 2G, 2H, 9A, 9B, 9G, 9H, 416B	.81
			416-434	Grate—Obsolete Camp Stove 415C, 416C	

COMPLETE PARTS LIST, NUMERICALLY ARRANGED

Order by Number	Part Name	Net Retail Price
416A301	Burner Cap Cover..... Camp Stove 2B, 2H, 3H, 9A, 9B, 9H, 413B, 415C, 416B, 416C, 418, 418B Stove 371, 371A, 386, 386A, 387, 387A, 391, 395 Handy Gas Plants 558, 558G Urn Burner 556	.15
416A321	Spacer (2 per Burner)..... Camp Stove 2B, 2H, 3H, 9A, 9B, 9H, 413B, 415C, 416B, 416C, 418, 418B Stove 371, 371A, 386, 386A, 387, 387A	.15
416A326	Burner Manifold (Casting Only)..... Camp Stove 2B, 2H, 3H, 9A, 9B, 9H, 415C, 416B, 416C Stove 386, 386A	1.65
416B165	Tank Complete (With Fittings) (Less Valve and Generator)..... Stove 386A Camp Stove 415C, 416B, 416C, 415D	4.05
417-165	Tank (Complete with Fittings) (Less Valve and Generator)—Obsolete Supply 417B165	
417B165	Tank Complete with Fittings (Less Valve and Generator)..... Stove 370A, 370B Camp Stove 4F, 417B	3.75
417B355	Auxiliary Valve Complete..... Camp Stove 4F, 417B	.60
418-326	Burner (Casting Only)..... Camp Stove 418, 418B, 420	1.95
418-165	Tank Complete with Fittings (Less Valve and Generator) Supply 418B165 Camp Stove 419	
451-112	Tank Fuel Valve Complete..... Handy Gas Plant 5052	1.65
451-132	Filler Plug Air Stem Handy Gas Plant 457, 457G, 460, 460G, 5052, 575 Radiant Heater 2 Tank 457-199, 465-199	.27
451-139	Filler Plug Core and Gasket..... Handy Gas Plant 5052 Heater 2 Tank 457-199, 465-199	.48
451-140	Filler Plug Complete..... Handy Gas Plant 457, 457G, 460, 460G, 552, 575 Heater 2 Tank 457-199, 465-199	.99
451-504	Pump Barrel Top Plug..... Heater 2 Lantern E20 Pump 451, 627, 628	.15
451-509	Pump Leather Handy Gas Plant 457, 457G, 460, 460G, 575 Heater 2 Lantern E20 Pump 451, 627, 628 Tank 457-199, 465-199	.09

Order by Number	Part Name	Net Retail Price
451-512	Pump Handle Pump 451 Tank 653B	.21
451-522	Jumbo Pump Accessory	1.80
454-218	Gas Tip (Marked "T")..... Burner 554	.21
454-238	Cleaning Needle and Holder..... Burner 554	.09
454-256	Generator Valve Stem Complete..... Burner 554	.99
454-262	Generator (Gas Tip Marked "T")..... Burner 554	1.95
454-413	Generator Clamp Burner 554	.09
457-124	Bail Bucket Handy Gas Plant 457, 457G, 575	.21
457-125	Bail Handy Gas Plant 457, 457G, 458, 458G, 460, 460G, 575	.48
457-189	Tank Complete—Supply 457-199 Handy Gas Plant 457, 457G, 460, 460G, 5052	
457-199	Tank Complete with Pump.....	10.95
458-124	Bail Bracket—Obsolete Handy Gas Plant 458, 458G	
458-130	Lock Nut Handy Gas Plant 458, 458G Burner 556	.06
458-189	Tank Complete—Obsolete Handy Gas Plant 458, 458G, 575	
458-301	Connection (Fuel Tube to Generator)..... Handy Gas Plant 458, 458G Burner 556	.27
458-303	Iron Pipe Nipple (3/8"x3")..... Handy Gas Plant 458, 458G Burner 556	.42
458-304	Lock Nut Handy Gas Plant 458, 458G Burner 556	.15
458-305	Baffle Washer Handy Gas Plant 458, 458G	.09
458-319	Baffle Handy Gas Plant 458, 458G Burner 556	.60
458-324	Air Intake Adjuster..... Handy Gas Plant 458, 458G Burner 556	.06
458-325	Mixing Chamber Shield—Obsolete Handy Gas Plant 458, 458G Burner 556	
460-321	Burner Support Handy Gas Plant 460, 460G	.15

COMPLETE PARTS LIST, NUMERICALLY ARRANGED

Order by Number	Part Name	Net Retail Price	Order by Number	Part Name	Net Retail Price
460-322	Bail Support	.15	472-238	Cleaning Needle and Holder.....	.09
	Handy Gas Plant 460, 460G			Generator 486-262, 514-263	
460-330	Grate	.99		Heater 2, 4, 5, 5A, 5B, 7, 16	
	Handy Gas Plant 460, 460G			Stove 372	
460-331	Grate Bracket	.15		Urn Burner 404	
	Handy Gas Plant 460, 460G		472-262	Generator (Gas Tip Marked "4B")	
460-335	Drip Pan Complete	1.95		Obsolete—Cannot Supply	
	Handy Gas Plant 460, 460G		472-303	Radiant—Obsolete—Supply 475-303	
463-327	Spacer	.03		Heater 2, 4	
	Burner 463-398		472-657	Tank Fuel Valve Complete.....	1.20
463-451	Round Head Machine Screw (1/4"-20x2 1/4").....	.03		Heater 2	
	Burner 463-398, 463-399		474-109	Air Stem Spring.....	.06
465-189	Tank (Less Fittings)—Obsolete—Supply 465-199			Heater 4, 5, 5A, 5B, 7	
465-218	Gas Tip (Marked "Z").....	.18	474-171	Fuel Tube (4 5/8" Long).....	.39
	Burner 555			Heater 4	
465-238	Cleaning Needle and Holder.....	.21	474-218	Gas Tip (Marked "4H").....	.18
	Burner 555			Heater 4, 5, 5A, 5B, 7	
465-262	Generator (Gas Tip Marked "Z").....	3.30	474-262	Generator (Gas Tip Marked "4H")—Obsolete—	
	Burner 555			Supply 940-262	
465-322	Mixing Chamber—Obsolete			Heater 4, 7	
	Burner 555		474-310	Preheater Pan	.81
465-325	Air Regulator	.09		Heater 4	
	Burner 555		474-389	Preheater Generator (Gas Tip Marked "N").....	.42
465-332	Asbestos Gasket	.09		Heater 4	
	Burner 555		474-503	Hexagon Brass Nut (3/8" No. 27).....	.06
465-657	Instant-Gas Valve Complete.....	2.40		Heater 4, 5, 5A, 5B, 7	
	Tank 457-199, 465-199, 653D		474-509	Pump Leather	.09
471-238	Cleaning Needle and Holder.....	.09		Heater 1, 4, 5, 5A, 5B, 7	
	Camp Stove 2C, 2D, 2E, 2F, 3F, 3H, 9C, 9D, 9E,			Stove 377, 377A, 378, 378A, 379, 379A	
	9F, 10, 413B, 413C, 418, 418B, 419, 420		474-510	Pump Plunger Lower Washer.....	.03
	Generator 514-262			Heater 4, 5, 5A, 5B, 7	
	Handy Gas Plant 5052		474-512	Pump Handle	.15
	Heater 1			Heater 4, 5, 5A, 5B, 7	
	Urn Burner 505		474-515	Air Stem	.42
	Stove 371, 371A, 387, 395			Heater 4, 5, 5A, 7	
	Water Heater 1		474-517	Handle Nut—Obsolete	
471-322	Sub-Flame Burner Cap.....	.09		Heater 4, 5, 5A, 5B, 7	
	Heater 1, 2, 4, 5, 5A, 5B, 7, 9, 15		474-555	Pump Plunger Complete (Less Air Stem).....	1.65
472-125	Air Gauge—Obsolete—Supply 575-125			Heater 4, 5, 5A, 7	
472-128	Machine Screw (10-24x3/16" R.H.).....	.09	475-115	Combination Fuel and Air Gauge	
	Heater 2, 4, 5, 5A, 5B, 7			Obsolete—Supply 940-125	
472-171	Fuel Tube (6 1/2" Long).....	.45	475-171	Fuel Tube (3 3/8" Long).....	.39
	Heater 2			Heater 5, 5A, 5B, 7	
472-189	Tank Complete (With Fittings)		475-191	Tank Complete (With Fittings)—Obsolete	
	Obsolete—Cannot Supply			Supply 475B191	
472-193	Tank, Drip Pan and Generator		475-193	Tank, Drip Pan and Generator	
	Complete Assembled—Obsolete—Cannot Supply			Complete Assembled—Obsolete—Supply 475B191	
472-233	Generator Clamps, Bolts and Nuts.....	.18	475-262	Thermo Safety Generator (Gas Tip Marked "4H")	4.80
	Heater 2, 4, 5, 5A, 5B, 7			Heater 5, 5A, 5B	
			475-303	Radiant	.42
				Heater 5, 5A, 5B, 7, 15, 16	
			475-310	Preheater Pan	.60
				Heater 5, 5A, 5B, 7	

COMPLETE PARTS LIST, NUMERICALLY ARRANGED

Order by Number	Part Name	Net Retail Price
475-318	Gas Tip (Marked "S")..... Handy Gas Plant 5052 Heater 5, 5A, 5B, 7 Urn Burner 404, 505, 707 Water Heater 1	.09
475-323	Main Burner Cap (7/8")..... Heater 1, 2, 4, 5, 5A, 5B, 7, 15, 16 Burner 555	.09
475-357	Preheater Tank Valve Complete (Fuel Tip Marked "E") Obsolete—Supply 475A357	
475-370	Burner Manifold (With Main and Sub-Flame Burner Caps)..... Heater 5, 5A, 5B, 7	4.05
475-389	Preheater Generator (Gas Tip Marked "S")..... Heater 5, 5A, 7	.42
475-404	Foot (Right) Heater 5	.99
475-405	Foot (Left) Heater 5	.99
475-415	Door Trim Heater 5, 5A, 5B, 7	.81
475-417	Top (Porcelain)—Obsolete Heater 5, 5A, 5B	
475-418	Top Trim (Right)..... Heater 5	.48
475-419	Top Trim (Left)..... Heater 5	.48
475-455	Machine Screw (10-24x3/8" O.H.)..... Burner 501, 502, 558, 751, 752 Handy Gas Plant 457, 457G, 458, 458G, 575	.03
475-653	Tank Fuel Valve Stem Complete..... Heater 5	.42
475-657	Tank Fuel Valve Complete—Obsolete Supply 475A657	
475A170	Drip Pan (Only)..... Heater 5A, 7	.99
475A191	Tank Complete (With Fittings) Obsolete—Supply 475B191 Heater 5A	
475A357	Preheater Tank Valve Complete (Fuel Tip Marked "E")..... Heater 5, 5A, 7	1.65
475A404	Foot (Right) Heater 5A, 5B	.99
475A405	Foot (Left) Heater 5A, 5B	.99
475A407	Post Top Heater 5A, 5B, 7	.42
475A408	Frame Trim (Right)..... Heater 5A, 5B, 7	.48
475A409	Frame Trim (Left)..... Heater 5A, 5B, 7	.48

Order by Number	Part Name	Net Retail Price
475A418	Top Trim (Right)..... Heater 5A, 5B	.48
475A419	Top Trim (Left)..... Heater 5A, 5B	.48
475A648	Indicator Handle and Screw—Obsolete Heater 5A, 5B, 7	
475A653	Valve Stem (Less Indicator Handle and Screw).. Heater 5A, 5B, 7	.42
475A657	Tank Fuel Valve Complete..... Heater 5A, 5B, 7	1.20
475B170	Drip Pan Heater 5B	.99
475B171	Preheater Fuel Tube (5 1/2" Long) Heater 5B	.39
475B191	Tank Complete (With Fittings)..... Heater 5, 5B	12.00
475B218	Preheater Gas Tip (Marked "S")—Obsolete Supply 475-318	
475B289	Preheater Generator (Rotary Type) (Gas Tip Marked "S")..... Heater 5B	.70
475B357	Preheater Tank Valve Complete (Fuel Tip Marked "E")..... Heater 5B	1.20
477-125	Air Gauge—Obsolete—Supply 575-125	
479-140	Filler Plug Complete—Obsolete Supply 220B140	
479-149	Air Valve Complete Heater 15, 16 Stove 373	.60
479-191	Tank and Fittings (Less Generator)—Obsolete Supply 486-191	
479-193	Tank and Generator Assembled—Obsolete Supply 486-193	
479-217	Needle Protector Camp Stove 418, 418B, 413C, 420 Generator 486-262 Stove 371A, 372, 387, 387A, 392, 395	.15
479-218	Generator Gas Tip (Marked "W")..... Burner 556 Generator 486-262 Handy Gas Plant 458, 458G Heater 15, 16 Stove 373	.18
479-219	Generator Filler Coil..... Burner 556 Generator 486-262 Handy Gas Plant 458, 458G Heater 15, 16 Stove 372, 373	.21
479-256	Generator Valve Stem Complete—Obsolete Supply 486-253	
479-262	Generator Complete (Gas Tip Marked "W") Obsolete—Supply 486-262	

COMPLETE PARTS LIST, NUMERICALLY ARRANGED

Order by Number	Part Name	Net Retail Price	Order by Number	Part Name	Net Retail Price
479-307	Drain Outlet Heater 15, 16 Stove 375	.21	486-253	Valve Stem Complete (Less Needle and Holder) .. Burner 556 Generator 486-262 Handy Gas Plant 458, 458G Heater 15, 16 Stove 373	.50
479-308	Drain Cap Heater 15, 16 Stove 375	.09	486-262	Generator Complete Burner 556 Handy Gas Plant 458, 458G Heater 15, 16 Stove 373	2.70
479-370	Burner Manifold (With Main and Sub-Flame Burner Caps)..... Heater 15	4.05	486-310	Sub-Flame Burner Casting..... Heater 15, 16	.50
479A240	Generator, Valve Body and Fuel Nipple..... Burner 556 Generator 486-262 Handy Gas Plant 458, 458G Heater 15, 16 Stove 373	.48	486-370	Burner Manifold (With Main Burner Caps)..... Heater 15, 16	3.75
479A262	Generator Complete (Gas Tip Marked "W") Obsolete—Supply 486-262		486-406	Valve Catch Heater 15, 16	.15
480-361	Vaporizing Tube Heater 480	1.20	486-407	Valve Latch Heater 15, 16	.15
480-362	Burner Cap Complete..... Heater 480	.42	490-171	Feed Wire Complete..... Heater 490, 490A	.42
480-374	Radiant Heater 480	.48	490-207	Generator Valve Heater 490, 490A	.81
480-399	Burner Unit Complete (With Generator) Obsolete—No Stock		490-218	Gas Tip (Marked "&")..... Heater 490, 490A	.18
480-455	Machine Screw (1/4-20x1 1/4" R.H.)..... Burner 555, 558	.03	490-219	Generator Filler Coil..... Heater 490, 490A	.21
480-653	Valve Stem Complete..... Heater 480	.48	490-240	Generator Tube Heater 490, 490A	1.20
480-654	Valve Body Heater 480	.99	490-251	Cleaner Rod and Needle..... Heater 490, 490A	.48
480-657	Fuel Valve Complete..... Heater 480	1.80	490-253	Valve Stem Complete (Less Cleaner Rod and Needle)..... Heater 490, 490A	.48
485-191	Tank and Fittings (Less Generator) Obsolete—Supply 486-191		490-260	Generator Support and Direction Place..... Heater 490, 490A	.27
485-193	Tank and Generator Assembled Obsolete—Supply 486-193		490-262	Generator Complete (Gas Tip Marked "&")..... Heater 490	2.70
485-648S	Fuel Tube Heater 15, 16 Stove 373	.60	490-309	Drain Nipple Heater 490, 490A	.21
485-653	Instant-Gas Valve Stem Complete..... Heater 15, 16 Stove 373	.60	490-323	Burner Cap Cover..... Heater 490, 490A	.15
485-657	Instant-Gas Valve Complete..... Heater 15, 16 Stove 373	2.40	490-324	Generator Guide Heater 490, 490A	.48
486-191	Tank and Fittings (Less Generator)..... Heater 15, 16	9.90	490-341	Drain Nipple—Obsolete—Supply 490-309	
486-193	Tank, Valve and Generator Assembled..... Heater 15, 16	11.60	490-345	Burner Fillers Heater 490	1.20
486-212	Generator Tube Generator 486-262 Stove 372	.99	490-370	Burner Casting with Auxiliary Burner Cap..... Heater 490, 490A	1.95
486-219	Generator Filler Coil—Obsolete—Supply 479-219		490-372	Drain Tube Assembly..... Heater 490, 490A	.42
			490-475	Drain Body and Tube—Obsolete Supply 490-309 and 490-372	
			490-607	Valve Body Heater 490, 490A	1.20
			490-653	Lighting Lever Complete..... Heater 490, 490A	.27

COMPLETE PARTS LIST, NUMERICALLY ARRANGED

Order by Number	Part Name	Net Retail Price
490-655	Fuel and Air Tube with Fuel Needle (Fuel Tip Marked "AD")..... Heater 490, 490A	1.95
490A191	Tank Complete (With Valve and Generator)—Obsolete Heater 490A	
490A218	Gas Tip (Marked "#")..... Heater 490A	.18
490A251	Cleaner Rod and Needle—Obsolete Heater 490A	
490A262	Generator Complete (Gas Tip Marked "#")..... Heater 490A	2.70
490A345	Burner Fillers Heater 490A	1.20
500-165	Fount Stove 500	4.95
500-210	Generator Jamb Nut Stove 500	.09
500-212	Generator Tube Stove 500	.48
500-218	Gas Tip (Marked "BX")..... Stove 500	.18
500-219	Generator Filler Coil Stove 500	.15
500-251	Generator Regulating Needle Stove 500	.33
500-253	Generator Valve Stem Complete..... Stove 500	.42
500-254	Generator Valve Body..... Stove 500	.42
500-262	Valve and Generator Complete..... Stove 500	1.65
500-289	Generator Tube, Needle, Coil and Gas Tip Assembled (Marked "BX")..... Stove 500	.81
500-312	Burner Cap Stove 500	.15
500-319	Frame Base Plate Stove 500	.48
500-326	Burner Casting Stove 500	1.20
500-327	Air Baffle Stove 500	.15
500-353	Lighting Stem Complete Stove 500	.21
500-357	Valve Body and Fuel Tube..... Stove 500	1.20
500-365	Burner Rings (Set of 6)..... Stove 500	.42
500-367	Burner Manifold Complete Stove 500	1.95
500-429	Base Rest (Collar) Stove 500	.33
500-435	Grate Complete with Nuts..... Stove 500	.81
500-657	Fuel Valve Body Complete..... Stove 500	1.95

Order by Number	Part Name	Net Retail Price
501-203	Generator Clean Out Plug..... Generator 501-262, 506-262, 514-262, 514-263, 515-262 Handy Gas Plant 5052 Urn Burner 4, 5, 404, 505, 707 Water Heater 1	.15
501-223	Filler Coil and Asbestos Cord..... Burner 4, 5, 404, 505 Generator 501-262, 506-262, 514-262, 514-263, 515-262 Handy Gas Plant 5052 Water Heater 1	.27
501-225	Tip Cleaner Complete Generator 501-262, 502-262	.81
501-262	Generator (Gas Tip Marked "AO")—Obsolete Supply 514-262	
502-218	Gas Tip (Marked "4B")..... Burner 4, 404, 721, 722 Generator 501-262, 506-262, 514-263 Heater 2	.21
503-223	Filler Coil and Asbestos Cord..... Burner 707 Generator 515-262	.27
504-218	Gas Tip (Marked "MB")..... Generator 515-262 Urn Burner 707	.21
506-238	Cleaning Needle and Holder..... Generator 501-262, 406-262 Urn Burner 4, 5	.15
506-262	Generator (Gas Tip Marked "AO")..... Urn Burner 5	3.90
507-262	Generator (Gas Tip Marked "4B")..... Urn Burner 4	3.90
514-211	Generator Valve Clean Out Plug..... Generator 501-262, 506-262, 514-262, 514-263, 515-262 Handy Gas Plant 5052 Urn Burner 4, 5, 404, 505, 707 Water Heater 1	.09
514-262	Generator (Gas Tip Marked "AO")..... Handy Gas Plant 5052 Urn Burner 505 Water Heater 1	3.90
514-264	Generator (Gas Tip Marked "MB")..... Stove 7, 8, 9, 10, 14, 74, 84, 104, 140	3.90
514-265	Generator (Gas Tip Marked "CR")..... Range 6, 16, 60, 106, 116, 160	3.90
530-148	Fuel and Air Wire Fuel Tip (Marked "O")..... Stove 530	.69
530-165	Tank Complete Stove 530	4.50
530-210	Jamb Nut Stove 530	.09
530-299	Vaporizer Complete (Tip Marked "+")..... Stove 530	.65

COMPLETE PARTS LIST, NUMERICALLY ARRANGED

Order by Number	Part Name	Net Retail Price	Order by Number	Part Name	Net Retail Price
530-304	Eccentric Block Stove 530	.09	544-657	Preheater Valve Complete..... Handy Gas Plant 5052 Preheater 544-383, 547-383 Urn Burner 404, 505, 707 Water Heater 1	2.40
530-353	Tip Cleaner Stem Complete..... Stove 530	.30	545-301	Hexagon Brass Nut (12-24) Handy Gas Plant 5052 Preheater 544-383, 547-383 Urn Burner 4, 5, 404, 505, 707 Water Heater 1	.03
530-375	Burner Head Stove 530	.63	545-302	Machine Screw (10-24x $\frac{3}{4}$ " R.H.)— Obsolete — Supply 405-139 Handy Gas Plant 5052 Range 6, 16, 60, 106, 116, 160 Urn Burner 4, 5, 404, 505, 707 Water Heater 1	
530-475	Frame Assembly Stove 530	1.95	545-303	Stand Base— Obsolete —Cannot Supply	
530-484	Utility Cup (Small) Stove 530	.81	545-304	Iron Pipe Nipple ($\frac{3}{8}$ "x3")— Obsolete Range 6, 16, 60, 106, 116, 160 Urn Burner 4, 5, 404, 505, 707	
530-485	Utility Cup (Large) Stove 530	1.50	545-323	Burner Cap— Obsolete —Cannot Supply	
530-507	Pump Cap Clip Stove 530	.09	545-329	Machine Screw (10-24x $\frac{1}{2}$ " F.H.)..... Camp Stove 2D, 9D, 10	.03
530-520	Pump Plunger Complete (Less Air Stem)..... Stove 530	.60	546-323	Burner Cap Urn Burner 5	1.95
530-532	Pump Air Stem Stove 530	.27	547-335	Preheater Wick— Obsolete Preheater 547-383	
530-653	Valve Stem Complete Stove 530	.81	549-218	Gas Tip (Marked "N") Preheater 310-383	.09
530-657S	Fuel Valve Complete Stove 530	3.00	550-205	Generator Plug Generator 550	.75
530-950	Wrench Stove 530	.21	550-207	Generator Valve Body (10")..... Generator 550	1.80
540-923	Burner Cap Urn Burner 404	1.65	550-209	Valve Stem Needle (10" Gen.)..... Generator 550	.30
542-329	Preheater Fuel Tube (12 $\frac{3}{4}$ " Long) Urn Burner 707	.60	550-211	Generator Wick (10")— Obsolete Cannot Supply	
543-323	Burner Cap— Obsolete Handy Gas Plant 5052 Urn Burner 505 Water Heater 1		550-218	Gas Tip (10" and 12" Gen.)..... Generator 550	.39
543-325	Sub-Flame Cap Burner 543 (Old Style) Stove 7, 8, 9, 10, 14, 74, 84, 94, 104, 140	.42	550-233	Generator Clamp Generator 550	.45
543-657	Auxiliary Burner Valve Complete (Less Stem)— Obsolete Stove 7, 8, 9, 10, 14, 74, 84, 94, 104, 140		550-243	Generator Ell and Connection Obsolete —Cannot Supply	
544-289	Preheater Generator (Gas Tip Marked "S")..... Handy Gas Plant 5052 Preheater 544-383 Urn Burner 404, 505, 707 Water Heater 1	.48	550-253	Valve Stem Complete (10")..... Generator 550	1.50
544-329	Preheater Fuel Tube (10 $\frac{1}{4}$ " Long)..... Handy Gas Plant 5052 Range 6, 16, 60, 106, 116, 160 Stove 7, 8, 9, 10, 14, 74, 84, 94, 104, 140 Urn Burner 404, 405 Water Heater 1	.60	550-257	Generator Valve Complete (10")— Obsolete —Cannot Supply	
544-383	Preheater Complete (Less Preheater Fuel Tube)— Obsolete Handy Gas Plant 5052 Range 6, 16, 60, 106, 116, 160 Stove 7, 8, 9, 10, 14, 74, 84, 94, 104, 140 Urn Burner 404, 505, 707 Water Heater 1		550-262	Generator Complete (10")..... Generator 550	5.70
			550-307	Generator Valve Body (12")..... Generator 550	1.80
			550-309	Valve Stem Needle (12" Gen.)— Obsolete —Cannot Supply	

COMPLETE PARTS LIST, NUMERICALLY ARRANGED

Order by Number	Part Name	Net Retail Price	Order by Number	Part Name	Net Retail Price
550-311	Generator Wick (12").....	.57	551-321	Leg	.21
	Generator 550			Burner 501, 502, 558, 751, 752	
550-353	Valve Stem Complete (12")—			Handy Gas Plant 457, 457G, 458, 458G, 575	
	Obsolete—Supply 550-363		551-322	Mixing Chamber	.99
550-357	Generator Valve Complete (12")—			Burner 463-398, 463-399, 501, 502, 751, 752	
	Obsolete—Cannot Supply			Handy Gas Plant 457, 457G, 575	
550-363	Generator Complete (12")—			Water Heater 464	
	Obsolete—Cannot Supply		551-325	Air Intake Adjuster.....	.15
550-407	Generator Valve Body (16").....	1.80		Handy Gas Plant 457, 457G, 575	
	Generator 550		551-326	Burner Casting	2.70
550-409	Valve Stem Needle (16" Gen.).....	.30		Burner 463-398, 463-399, 501, 502	
	Generator 550			Handy Gas Plant 457, 457G, 575	
550-411	Generator Wick (16")—			Water Heater 464	
	Obsolete—Cannot Supply		551-327	Burner Plug—Obsolete	
550-418	Gas Tip (16" Generator).....	.39		Burner 463-398, 463-399, 501, 502, 751, 752	
	Generator 550			Handy Gas Plant 457, 457G, 575	
550-453	Valve Stem Complete (16")—			Water Heater 464	
	Obsolete—Cannot Supply		551-332	Asbestos Gasket	.06
550-457	Generator Valve Complete (16")—.....	3.75		Burner 463-398, 463-399, 501, 502, 558, 751, 752	
	Generator 550			Handy Gas Plant 457, 457G, 460, 460G, 575	
550-464	Generator Complete (16").....	5.70		Stove 390, 390L	
	Generator 550			Water Heater 464	
551-240	Generator Valve Body and Fuel Nipple.....	.69	551-335	Drip Pan and Feet Assembled—Obsolete—	
	Burner 463-398, 463-399, 501, 502, 558, 751, 752			Supply 552-335	
	Generator 552-262, 558-262			Burner 501, 502, 752	
	Handy Gas Plant 457, 457G, 460, 460G, 575		551-357	Preheater Valve Complete.....	1.20
	Water Heater 464			Burner 463-398, 501, 751	
551-253	Generator Valve Stem (Less Cleaning		552-212	Generator Tube	1.20
	Needle and Holder)—Obsolete			Burner 501, 502, 558, 751, 752	
	Supply 552-262			Generator 552-262, 558-262	
551-262	Generator (Gas Tip Marked "4")—			Handy Gas Plant 457, 457G, 460, 460G, 575	
	Obsolete—Supply 552-262			Water Heater 464	
551-303	Set Screw	.15	552-219	Generator Filler Coil.....	.21
	Burner 463-398, 463-399, 501, 502, 555, 558, 751, 752			Burner 558	
	Handy Gas Plant 457, 457G, 460, 460G, 575			Generator 552-262, 558-262	
	Stove 377, 377A, 378, 378A, 379, 379A			Handy Gas Plant 457, 457G, 460, 460G, 575	
	Water Heater 464		552-253	Generator Valve Stem (Less	
551-304	Feed Wire Nipple	.21		Cleaning Needle and Holder).....	.81
	Burner 463-399, 502, 555, 558, 752			Burner 501, 502, 751, 752	
	Handy Gas Plant 457, 457G, 460, 460G, 575			Generator 552-262	
	Stove 377, 377A, 378, 378A, 379, 379A			Handy Gas Plant 457, 457G, 575	
	Water Heater 464			Water Heater 464, 463-398, 463-399	
551-308	Drain Plug	.15	552-262	Generator Complete (Gas Tip Marked "4").....	3.00
	Burner 463-398, 463-399, 501, 502, 555, 556, 558, 751, 752			Burner 501, 502, 751, 752, 463-398, 463-399	
	Camp Stove 6B, 3F, 4F, 6F, 412B, 413B, 415C, 417B, 419, 420			Handy Gas Plant 457, 457G, 575	
	Handy Gas Plant 457, 457G, 458, 458G, 460, 460G, 575			Water Heater 464	
	Stove 370B, 371, 371A, 373, 375, 375A, 376, 377, 377A, 378, 378A, 379, 379A, 387, 387A, 390, 390L		552-326	Burner Casting	4.05
551-310	Preheater Pan	.60		Burner 751, 752	
	Burner 463-398, 501, 751		552-335	Drip Pan and Feet Assembled.....	.99
	Water Heater 464			Burner 558, 751, 752	
			553-327	Grate Bracket	.21
				Handy Gas Plant 457, 457G, 575	
			553-330	Grate	.99
				Handy Gas Plant 457, 457G, 458, 458G, 575	

COMPLETE PARTS LIST, NUMERICALLY ARRANGED

Order by Number	Part Name	Net Retail Price	Order by Number	Part Name	Net Retail Price
553-335	Baffle and Flange Assembled..... Burner 558 Handy Gas Plant 457, 457G, 575	1.95	599-172	1/8" x 6' Feed Wire and Conn. Comp.....	1.20
554-371	Fuel Nipple Burner 554	.42	599-169	1/8" x 8' Feed Wire and Conn. Comp.....	1.50
555-321	Leg Burner 555	.21	599-173	1/8" x 10' Feed Wire and Conn. Comp.....	1.80
555-335	Drip Pan and Feet Assembled..... Burner 555	1.95	599-174	1/8" x 15' Feed Wire and Conn. Comp.....	2.40
557-323	Burner Cap Stove 495	.21	599-175	1/8" x 20' Feed Wire and Conn. Comp.....	3.30
558-218	Gas Tip (Marked "J")..... Burner 558 Generator 558-262 Handy Gas Plant 460, 460G	.18	599-176	3/16" x 2' Feed Wire and Conn. Comp.....	.60
558-238	Cleaning Needle and Holder..... Burner 558 Generator 558-262 Handy Gas Plant 460, 460G	.09	599-177	3/16" x 3' Feed Wire and Conn. Comp.....	.75
558-253	Generator Valve Stem (Less Cleaning Needle and Holder)..... Burner 558 Generator 558-262 Handy Gas Plant 460, 460G	.99	599-178	3/16" x 4' Feed Wire and Conn. Comp.....	.90
558-262	Generator (Gas Tip Marked "J")..... Burner 558 Handy Gas Plant 460, 460G	3.00	599-179	3/16" x 5' Feed Wire and Conn. Comp.....	1.05
558-322	Mixing Chamber Burner 558 Handy Gas Plant 460, 460G	.99	599-180	3/16" x 6' Feed Wire and Conn. Comp.....	1.20
558-326	Burner (Casting Only)..... Burner 558 Handy Gas Plant 460, 460G	3.75	599-181	3/16" x 8' Feed Wire and Conn. Comp.....	1.50
558-368	Burner Casting—Obsolete—Supply 558-326		599-182	3/16" x 10' Feed Wire and Conn. Comp.....	1.80
575-125	Pressure Gauge Handy Gas Plant 457, 457G, 460, 460G, 575 Radiant Heater 2, 4, 7 Stove 377, 378, 379 Tank 575, 653B, 653C, 653D, 305-189, 457-199, 465-199	1.65	599-183	3/16" x 15' Feed Wire and Conn. Comp.....	2.40
599-101	1/8" O.D. x .040 Wall, Soft Seamless Brass Tubing, Per Foot (See Page 9) Special		599-184	3/16" x 20' Feed Wire and Conn. Comp.....	3.30
599-102	3/16"x3/64" Wall, Soft Annealed Seamless Brass Tubing, Per Foot (See Page 9) Special		599-117	Filler Plug Gasket (Special Filler Plug)..... Special	.09
328-172	1/8" x 1' Feed Wire and Conn. Comp.....	.48	599-140	Special Filler Plug Complete (With Hollow Wire Connection)..... Special	1.50
599-165	1/8" x 2' Feed Wire and Conn. Comp.....	.60	599-202	Close Nipple Handy Gas Plant 460, 460G	.21
599-166	1/8" x 3' Feed Wire and Conn. Comp.....	.75	599-210	3/8" Close Nipple..... Burner 554 Handy Gas Plant 457, 457G, 575	.15
599-167	1/8" x 4' Feed Wire and Conn. Comp.....	.90	599-250	Bushing (3/8" to 1/2")..... Handy Gas Plant 457, 457G, 575	.21
599-168	1/8" x 5' Feed Wire and Conn. Comp.....	1.05	599-653	Valve Stem Complete—Obsolete Supply 599A653	
			599-657	Wall Valve Complete—Obsolete Supply 599A657	
			599-901	Hollow Wire Male Plug (Open)..... Special	.09
			599-902	Hollow Wire Male Plug (Blind)..... Special	.09
			599-910	Tank Cleaning Tube.....	.42
			599-911	Hollow Wire Jamb (Blind)..... Special	.03
			599-912	Hollow Wire Jamb..... Special	.03
			599-913	Hollow Wire Jamb Nut..... Special	.03
			599-914	Hollow Wire Ell.....	.27
			599-915	Hollow Wire Corner Tee..... Special	.42
			599-917	Hollow Wire Tee..... Special	.33
			599-920	Hollow Wire Ell (With Nail Plate)..... Special	.42

COMPLETE PARTS LIST, NUMERICALLY ARRANGED

Order by Number	Part Name	Net Retail Price
599-921	Hollow Wire Tee (With Nail Plate) Obsolete—Supply 599-917	
599-924	Hollow Wire Cross—Obsolete—Supply 599-916	
599-925	Reducing Nipple (1/8" IPS Threads Male to Hollow Wire)..... Special	.48
599-926	Reducing Coupling Nipple (1/8" IPS Threads Female to Hollow Wire)..... Special	.48
599-927	Reducing Nipple (1/4" IPS Threads Male to Hollow Wire)..... Special	.48
599-928	Reducing Coupling Nipple (1/4" IPS Threads Female to Hollow Wire)..... Special	.60
599-930	Reducing Coupling Nipple (1/4" SAE Female to Hollow Wire Jamb Nut)..... Special	.33
599-931	Reducing Coupling Nipple (1/4" SAE Female to 3/16" SAE Male)..... Special	.33
599-932	Jamb Nut (3/16" SAE)..... Special	.18
599-933	Hollow Wire Nipple (With Jamb and Drop Nut).. Special	.60
599-934	Reducing Coupling Nipple (3/16" SAE Female to Hollow Wire Jamb Nut)..... Special	.33
599-935	Reducing Nipple (1/4" SAE Male to Hollow Wire Jamb Nut)..... Special	.48
599-936	Tee (3/16" SAE).....	.33
599-937	Reducing Nipple Coupling (1/4" SAE Male to 3/16" SAE Female)..... Special	.42
599-940	Tee (3/16" SAE Nickel Plated)..... Special	.33
599-960	Tank Cleaning Tube..... Heater 490, 490A	.42
599A653	Valve Stem Complete..... Special	.42
599A657	Valve Complete	1.20
601-136	Filler-Plug Gasket..... Iron 1, 2	.03
603-132	Filler Plug Air Stem..... Iron 3, 4, 4A, 5, 8, 8A, 609, 609A	.27
603-136	Filler Plug Gasket..... Iron 3, 4, 4A, 5, 8, 8A, 609, 609A Lantern 234, 242A, 242B, 243A Stove 500	.03
603-139	Filler Plug Core and Gasket..... Iron 3, 4, 4A, 5, 8, 8A, 609, 609A	.27

Order by Number	Part Name	Net Retail Price
603-147	Lock Nut Iron 3, 4, 4A, 5, 8, 8A, 609, 609A	.09
603-159	Fount (Less Filler Plug)—Obsolete—Supply 604-159 Iron 3, 5	
603-164	Filler Plug Complete..... Iron 3, 4, 4A, 5, 8, 8A, 609, 609A	.48
603-218	Gas Tip (Marked "I")..... Burner 463-398, 501, 751 Iron 3, 4, 4A, 8, 8A, 609, 609A	.09
603-299	Generator, Cleaning Needle and Holder (Gas Tip Marked "I")..... Iron 3, 4, 8, 8A, 12	.60
603-326	Burner Manifold (Less Plug)..... Iron 3, 4, 4A, 8A, 609, 609A	.99
603-329	Burner Plug Handy Gas Plant 457, 457G, 458, 458G, 575 Iron 3, 4, 4A Stove 375, 375A, 376	.09
603-365	Burner Manifold and Plug Obsolete—Supply 603-326	
603-401	Base—Supply 604-401 Iron 3, 4, 5, 8, 8A	
603-402	Body—Obsolete—Supply 604-402	
603-406	Lid Plate (Lower)..... Iron 3, 4, 4A, 5	.48
603-407	Lid Plate (Upper)..... Iron 3, 4, 4A, 5	.60
603-439	Pilot Flame Baffle Plate..... Iron 3, 4, 5, 609	.15
603-445	Iron Handle—Obsolete—Supply 604-445	
603-446	Handle Bracket—Obsolete—Supply 604-446	
603-451	Handle Bolt (3/16"x5" Carriage)..... Iron 1, 2, 3, 4, 4A, 5, 8, 8A	.09
603-455	Lid Plate to Base Screw (1 3/4"-No. 12 O.H. M.S.)..... Iron 3, 4, 4A, 5	.09
603-456	Hexagon Brass Nut (1/4"-18) Obsolete—Supply 604A456	
603-457	Machine Screw (1/4-20 x 11/16" R.H.)..... Iron 3, 4, 5	.03
603-605	Air Wire—Obsolete—Supply 604A604	
603-638	Cleaning Needle and Holder..... Iron 3, 4, 8, 8A, 12	.27
603-653	Generator Valve Stem and Pack Nut (Less Needle and Holder)..... Iron 3, 4, 4A, 8, 8A, 12	.45
603-657	Generator, Valve, Fuel Intake and Air Wire Complete Assembled Obsolete—Supply 604A657	
604-159	Fount (Less Filler Plug)..... Iron 3, 4, 4A, 8, 8A, 609, 609A	1.80

COMPLETE PARTS LIST, NUMERICALLY ARRANGED

Order by Number	Part Name	Net Retail Price
604-299	Roto-Type Generator (Gas Tip Marked "T")..... Burner 463-398, 501, 751 Iron 4A, 609, 609A	.70
604-301	Burner Slot Cleaner	.06
604-401	Base	1.65
	Iron 4A	
604-402	Body (Blue Porcelain).....	1.20
	Iron 3, 4, 4A	
604-440	Stand	.33
	Iron 1, 2, 4, 5, 8, 8A	
604-445	Iron Handle	.33
	Iron 1, 2, 3, 4, 4A	
604-446	Handle Bracket—Obsolete—Supply 604A446	
604-648	Fuel Intake and Air Wire (Fuel Intake Marked "AY") Obsolete—Supply 604A648	
604-654	Valve Body	.75
	Iron 4, 4A, 8, 8A, 609A	
604-659	Fuel Intake Protector and Screen Obsolete—Supply 609-659	
604-905	Cleaning Needle Tool	.30
	Accessory	
604-920	Fuel Measuring Cup	.33
	Iron 4, 4A, 8, 8A, 609, 609A	
604A189	Fount, Valve and Generator Complete Assembled	4.05
	Iron 4A, 609	
604A446	Handle Bracket	.27
	Iron 3, 4, 4A, 609	
604A456	Hexagon Brass Nut (1/4-20).....	.03
	Iron 1, 2, 3, 4, 4A, 5, 8, 8A Lantern 234, 237A, 237B, 242A, 242B, 243A Range 900, 901, 930, 931, 932	
604A604	Air Wire—Obsolete—Supply 604A648 Iron 3, 4, 4A, 8, 8A	
604A618	Fuel Intake (Marked "AY")—Obsolete— Supply 604A648 Iron 4A, 8, 8A	
604A648	Fuel Intake and Air Wire (Fuel Intake Marked "AY").....	.42
	Iron 4, 4A, 8, 8A, 609A	
604A657	Generator, Valve, Fuel Intake and Air Wire Complete Assembled	1.95
	Iron 3, 4, 4A, 609A	
605-210	Jamb Nut	.03
	Iron 5 Lamp 117A, 118A, 118B, 119A, 129, 129A, 129G, 132A, 133, 134A, 134P, 134G, 138A, 138B, 139, 143, 150B, 150G, 150R, 150I, 150BK, 150GK, 150RK, 150IK, 151B, 151G, 152 Lantern 220B, 220BX, 228B, 234, 242A, 242B, 243A, 220C, 228C	
605-218	Gas Tip (Marked "D").....	.18
	Iron 5	

Order by Number	Part Name	Net Retail Price
605-299	Generator, Cleaning Needle and Holder (Gas Tip Marked "D").....	.54
	Iron 5	
605-370	Burner Manifold and Burner Tube Complete Assembled—Obsolete—Cannot Supply	
605-638	Cleaning Needle and Holder.....	.21
	Iron 5	
605-950	Wrench	.21
	Handy Gas Plant 5052 Heater 1, 2, 4, 5, 5A, 5B, 7, 480 Iron 3, 4, 4A, 5, 8, 8A Lamp C331, 117, 117A, 118, 118A, 118B, 119, 119A Lantern E20, L327, L427, 220, 220B, 220BX, 228, 228B, 220C, 228C Stove 376, 377, 377A, 378, 378A, 379, 379A Tank 652C Water Heater 1	
608-159	Fount (Less Filler Plug)—Obsolete— Supply 604-159	
608-189	Fount, Valve and Generator Complete Assembled Obsolete—Supply 604A189	
608-370	Burner Manifold and Burner Tube Complete Assembled—Obsolete—Supply 603-326 Iron 8	
608-402	Iron Body Casting.....	.66
	Iron 8, 8A, 12	
608-451	Lid Plate to Base Screw.....	.06
	Iron 8, 8A	
608-657	Generator, Valve, Fuel Intake and Air Wire Complete Assembled.....	1.95
	Iron 8B—Supply 604A189	
608A159	Fount (Less Filler Plug)—Obsolete Iron 8A—Supply 604-159	
608A189	Fount, Valve and Generator Complete Assembled—Obsolete Iron 8A—Supply 604A189	
608A445	Iron Handle	.33
	Iron 8A	
609-401	Base—Obsolete—Supply 604-401 Iron 609, 609A	
609-402	Body (Porcelain)	.99
	Iron 609, 609A	
609-444	Stand	.42
	Iron 604A, 609, 609A	
609-445	Handle	1.20
	Iron 609, 609A	
609-648	Fuel Tip and Air Wire (Fuel Tip Marked "AY")	.42
	Iron 609	
609-657	Generator, Valve, Fuel Tip and Air Wire Complete—Obsolete Iron 609	
609-659	Fuel Intake Protector and Screen.....	.21
	Iron 4, 4A, 8, 8A, 609, 609A	

COMPLETE PARTS LIST, NUMERICALLY ARRANGED

Order by Number	Part Name	Net Retail Price	Order by Number	Part Name	Net Retail Price
604-159	Front (Less Filler Plug) Supply 604-159		653-560	Pump Plunger Complete..... Tank 653B	.81
604-189	Front, Valve and Generator Obsolete—Supply 604A189		653-585	Pump Complete (Less Air Wire)..... Tank 653B	2.40
604-205	Flame Baffle	.15	653-653	Valve Stem Complete..... Tank 653B	.60
625-503	Pump Leather	.09	653C153	Air Valve Stem Complete (Green)..... Tank 653B, 653C	.48
625-528	Connection (Hose to Air Valve)..... Pump 625	.42	653C157	Air Valve Complete..... Tank 653B, 653C	.99
625-532	Check Valve	.21	653C512	Pump Handle	.27
628-512	Pump Handle—Obsolete Pump 628		653C553	"Operating" Valve Stem Complete (Red)..... Tank 653C	.60
628-526	Hose Connection Body—Obsolete Pump 628		653C560	Pump Plunger Complete..... Tank 653C	.81
628-538	Check Valve—Obsolete Pump 628		653C585	Pump Complete (Less Air Wire)..... Tank 653C	2.40
628-580	Hose Connection, Check Valve and Clamps—Obsolete Pump 628		653C653	"Reserve" Valve Stem Complete (Black)—Obsolete Tank 653C, 653D	
650-125	Air Gauge—Obsolete Tank 652C		653D157	Air Valve Complete..... Tank 653D	.99
650-131	Filler Plug Cap (Only)—Obsolete Handy Gas Plant 5052 Heater 1, 4, 5, 5A, 5B, 7 Tank 652C		653D171	Air Wire—Obsolete—Cannot Supply Tank 653D	
650-136	Filler Plug Gasket..... Handy Gas Plant 457, 457G, 460, 460G, 5052, 575 Heater 1, 2, 4, 5, 5A, 5B, 7 Stove 377A, 378A, 379A Tank 652C, 653B, 653C, 653D, 457-199, 465-199	.06	653D509	Pump Leather	.12
650-140	Filler Plug Complete..... Heater 1, 4, 5, 5A, 5B, 7 Stove 377A, 378A, 379A Tank 652C, 653B, 653C, 653D	.99	653D515	Pump Bracket Clamp	.15
650-157	Air Valve Complete..... Tank 652C	1.20	653D553	"Reserve" Valve Stem Complete..... Tank 653D	.60
650-657	Tank Fuel Valve Complete—Obsolete Handy Gas Plant 5052 Tank 652C		653D555	Pump Check Valve—Obsolete Tank 653D	
650-651	Valve Stem Complete..... Tank 652C	.60	653D560	Pump Plunger Complete..... Tank 653D	.99
653-132	Air Stem—Obsolete—Supply 653C153		653D585	Pump Complete (Less Air Wire)—Obsolete Tank 653D	
653-150	Air Stem—Obsolete—Supply 653C153		653D653	"FUEL LINE" Valve Stem Complete..... Tank 653D	.60
653-157	Air Valve Complete—Obsolete—Supply 653C157		701-218	Gas Tip (Marked "AW") Obsolete—Supply 502-218	
653-503	Pump Ell	.42	701-220	Valve Stem Packing..... Range 740, 740A, 741, 741A, 742, 742A, 393, 396, 396A, 396B	.03
653-515	Pump Bracket Clamp..... Tank 653B, 653C	.15	701-250	Bakelite Wheel and Set Screw (Black)..... Burner 721, 722 Stove 390, 390L	.39
653-516	Pump Bracket Clamp Wrong Number—Supply 653-515		701-271	Drying Unit (Short)..... Burner 721, 722	3.00
			701-301	Heat Bowl	.75

COMPLETE PARTS LIST, NUMERICALLY ARRANGED

Order by Number	Part Name	Net Retail Price
701-310	Burner Cap Stud Bushing..... Burner 721, 722	.30
701-325	Air Adjuster Burner 721, 722	.45
701-650	Bakelite Wheel and Set Screw (Red)..... Stove 390, 390L	.39
721-301	Stand Burner 721, 722	.90
721-326	Burner (Casting Only)..... Burner 721, 722	1.80
722-321	Grate Ring Support..... Burner 721, 722	.09
722-322	Grate Ring Burner 721, 722	.90
740-125	Combination Fuel and Air Gauge..... Range 740, 740A, 741, 741A, 742, 742A Tank 740-191, 141-191	3.95
740-157	Air Valve Complete Range 740, 740A, 741, 741A Tank 740-191, 141-191	.99
740-171	Gas Feed Wire..... Range 740, 740A	1.20
740-191	Tank Complete (With Fittings)..... Range 740, 740A	12.00
740-218	Gas Tip (Marked "÷")..... Range 740, 740A, 741, 741A, 742, 742A	.18
740-219	Generator Filler Coil..... Range 740, 740A, 741, 741A, 742, 742A	.21
740-240	Generator Tube and Bushing..... Range 740, 740A, 741, 741A, 742, 742A	1.20
740-251	Cleaner Rod and Needle..... Range 740, 740A, 741, 741A, 742, 742A	.33
740-253	Valve Stem Complete (Less Cleaner Rod and Needle)..... Range 740, 740A, 741, 741A, 742, 742A	.60
740-262	Generator Complete (Gas Tip Marked "÷")..... Range 740, 740A, 741, 741A, 742, 742A	3.00
740-305	Sub-Flame Baffle—Obsolete Range 740, 740A	
740-308	Drain Plug—Obsolete Range 740, 740A	
740-312	Giant Burner Cap..... Stove 396, 396LC, 396A, 396A-LC, 397	.18
740-313	Standard Burner Cap..... Stove 396, 396LC, 396A, 396A-LC, 397	.18
740-334	Drain Cap Gasket—Obsolete—Supply 740-374 Range 740, 740A, 741, 741A, 742, 742A	
740-360S	Auxiliary Valve Handle Complete..... Range 740, 740A, 741, 741A, 742	.33
740-364	Auxiliary Valve (Less Handle)..... Range 740, 740A	.81

Order by Number	Part Name	Net Retail Price
740-365	Oven Valve (Less Handle)..... Range 740, 740A	.81
740-373	Drain Tube Range 740, 740A	.81
740-374	Drain Cap and Gasket..... Range 740, 740A, 741, 741A, 742, 742A	.33
740-380	Oven Burner Range 740, 740A, 741, 741A, 742, 742A	3.30
740-410	Tank Band Range 740, 740A, 741, 741A, 742, 742A	.15
740-560	Pump Plunger Complete..... Range 740, 740A, 741, 741A, 742, 742A	.60
740-571	Pump Air Wire..... Range 740, 740A, 741, 741A, 742, 742A	.42
740-653	Valve Stem Complete..... Tank 740-191, 741-191	.42
740-657S	Tank Fuel Valve Complete (Master)..... Tank 740-191, 741-191	1.20
740-734	Grate Range 740, 740A	.60
741-174	Connecting Tube Range 741, 741A, 742, 742A	.81
741-191	Tank Complete (With Fittings)..... Range 741, 741A, 742, 742A	13.50
741-305	Master Sub-Flame Baffle—Obsolete Range 741, 741A, 742, 742A	
741-308	Oven Sub-Flame Baffle—Obsolete Range 741, 741A, 742, 742A	
741-323	Air Regulator Range 741, 741A, 742, 742A	.15
741-326	Burner Manifold (Casting Only)—Obsolete Range 741, 741A, 742, 742A	
741-345	Oven Pipe Connection..... Range 741, 741A, 742, 742A	.48
741-346	Oven Down Pipe..... Range 741, 741A, 742, 742A	1.20
741-364	Valve Stem (Less Handle)..... Range 741, 741A, 742, 742A	.60
741-365	Valve Stem Range 741, 741A, 742, 742A	.60
741-371	Master Drain Tube..... Range 741, 741A, 742, 742A	.81
741-373	Oven Drain Tube..... Range 741, 741A, 742, 742A	.81
741-657S	Tank Fuel Valve (Oven)..... Range 741, 741A, 742, 742A	1.20
742-312	Giant Burner Cap (Vitreous)..... Range 742, 742A	.42
742-313	Standard Burner Cap (Vitreous)..... Range 742, 742A	.42

COMPLETE PARTS LIST, NUMERICALLY ARRANGED

Order by Number	Part Name	Net Retail Price	Order by Number	Part Name	Net Retail Price
745A360	Valve Handle—Obsolete—Supply 740-360		851-49	Valve Lever and Screw—Obsolete Supply 851A13	
754-191	Tank Complete (With Fittings).....	15.00	851-96	Valve and Burner Support Tube with Chains and Rings.....	2.40
	Range 754A, 754B, 754C, 754D			Fixture 851	
754-305	Sub-Flame Gasket	.06	851A13	Valve Lever	.18
	Range 754A, 754B, 754C, 754D, 758, 758D, 758E, 950C, 950D, 951C, 952C, 952D, 953C, 953D, 955, 961, 962, 963			Fixture 851, 854	
754-345	Oven Supply Pipe.....	.99	852-16	Ornamental Tee	1.65
	Range 754A, 754B, 754C, 754D			Fixture 852, 855	
754-346	Oven Down Pipe Connection.....	1.50	852-53	Valve Stem Complete.....	.60
	Range 754A, 754B, 754C, 754D			Fixture 852, 853, 855, 856	
754-350	Oven Control Valve Handle (Red).....	.42	852-57	Valve and Burner Support Tube Complete.....	2.70
	Range 754A, 754B, 754C, 754D, 758, 758D, 758E, 962			Fixture 852, 853	
754-362	Burner Manifold (Casting Only).....	4.95	853-03	Canopy	1.20
	Range 754A, 754B			Fixture 853, 856	
754-365S	Oven Control Valve Complete.....	.99	853-04	Casing (1½" Long).....	.21
	Range 754A, 754B, 754C, 754D			Fixture 853, 856	
754-657	Carburetor Valve Complete.....	2.40	854-32	Gas Tip (Marked "⬡")	.15
	Tank 754-191, 758-191			Fixture 854, 855, 856	
758-191	Tank Complete	13.50	854-96	Valve and Burner Support Tube with Chains and Rings	2.40
	Range 758, 758D, 758E			Fixture 854	
758-310	Grate	.48	857A07	Pipe Hanger	.70
	Range 758, 758D, 758E, 953A, 953C, 953D			Fixture 857A	
758-319	Burner Mixing Chamber Gasket.....	.06	857A08	Casing (14½" Long)	.81
	Range 758, 758D, 758E, 962			Fixture 857A	
758-320	Burner Mixing Chamber.....	2.40	857A11	Support Rod	.09
	Range 758			Fixture 857A, 858, 859	
758-327	Air Regulator	.09	857A31	Fuel Tube Complete.....	.75
	Range 758, 758D			Fixture 857A	
758-344	Oven Supply Pipe (Short)—Obsolete		857A56	Heat Bell	.60
	Range 758, 758D, 758E, 962			Fixture 857A, 858, 859	
758-345	Upper Oven Connection.....	.99	858-01	Fuel Tube Connection.....	.33
	Range 758, 758D, 758E, 962			Fixture 857, 857A, 858	
758-346	Lower Oven Connection.....	1.65	858-03	Air Intake Bushing.....	.18
	Range 758, 758D			Fixture 857, 857A, 858, 859	
758-347	Oven Supply Pipe (Long).....	.99	858-04	Casing (24" Long) (N.P.).....	.81
	Range 758, 758D, 758E, 962			Fixture 857, 858	
758-373	Drain Tube	.48	858-30	Generator Complete	.39
	Range 758			Fixture 857, 857A, 858, 859	
758A363	Master Burner Sub-Flame—Obsolete		858-31	Fuel Tube Complete.....	.81
	Range 758, 758D, 758E, 962			Fixture 857, 858	
758D375	Drain Body and Tube.....	1.65	858-55	Arms and Connections.....	5.70
	Range 754C, 754D, 758D, 758E			Fixture 858	
758E345	Cross Supply Pipe.....	.90	858-70	Burner Complete	3.75
	Range 758E			Fixture 858, 859	
851-04	Casing (24" Long).....	.81	890-108	Wall Bracket Cover	.42
	Fixture 851, 852, 854, 855			Fixture 890	
851-30	Burner Support Tube.....	.21	890-112	Tip Nozzle	.21
	Fixture 851, 854			Fixture 890, 891, 892	
851-32	Gas Tip (Marked "R").....	.15			
	Fixture 851, 852, 853				

COMPLETE PARTS LIST, NUMERICALLY ARRANGED

Order by Number	Part Name	Net Retail Price
890-113	Fuel Ell Fixture 890, 892	.81
890-116S	Gas Tip (Marked ∇) (For 6-oz. Butane)..... Fixture 890, 891, 892	.09
890-117S	Gas Tip (Marked @) (For 6-oz. Propane)..... Fixture 890, 891, 892	.09
890-118S	Gas Tip (Marked $\gg$) (For 15-lb. Systems)..... Fixture 890, 891, 892	.09
890-121	Globe Holder Nut..... Fixture 890, 891, 892	.15
890-124	Screen (For 15-lb. System)..... Fixture 890, 891, 892	.09
890-153	Burner Valve Stem Complete..... Fixture 890, 891, 892	.60
890-157	Burner Valve (Less Gas Tip)..... Fixture 890, 891, 892	1.80
890-158S	Burner Casting and Insert..... Fixture 890, 891, 892	1.80
890-165	Wall Bracket Arm..... Fixture 890, 191	1.20
890-171	Fuel Tube Fixture 890	.60
891-105S	Ceiling Plate and Set Screw..... Fixture 891, 892	.60
891-109	Ceiling Plate Cover..... Fixture 891, 892	.60
891-110	Pipe Casing Fixture 891, 892	1.20
891-112	Feed Pipe Fixture 891, 892	.99
892-102	Lower Double Arm Fixture 892	.60
892-106	Center Connection Tee..... Fixture 892	1.20
892-171	Fuel Tube Fixture 892	.42
900-115	Combination Fuel and Air Gauge Obsolete—Supply 740-125	
900-118	Fuel Tip (Marked "AX")..... Handy Gas Plant 457, 457G, 458, 458G, 575 Stoves 375, 375A, 377, 377A, 378, 378A, 379, 379A	.18
900-171	Fuel Tube (21½" Long)..... Range 900, 901	.66
900-191	Tank Complete (With Fittings).....	13.50
900-301	Drain Nipple Stoves 391, 392, 395, 396, 396LC, 396A, 396A-LC, 397	.27

Order by Number	Part Name	Net Retail Price
900-319	Oven Burner Gasket..... Range 900, 901, 930, 931, 932, 940, 940A, 940B, 941, 941A, 941B, 942, 943, 944, 945, 945A, 946A, 950A, 950B, 950C, 950D, 951A, 951C, 952A, 952B, 952C, 952D	.60
900-323	Master Burner—Obsolete—Supply 940-365 Range 900, 901, 930, 931, 932	
900-325	Air Intake Adjuster—Obsolete—Supply 930-325	
900-326	Burner Manifold (Casting Only)..... Range 900, 901, 930, 931, 940, 940A, 940B, 941, 941A, 941B, 942, 943, 944, 945, 945A, 946A, 947, 947A	3.00
900-329	Oven Burner Baffle..... Range 900, 932, 941, 941A, 941B, 942, 943, 944, 945, 945A, 946, 950A, 950B, 950C, 950D, 951A, 951C, 952A, 952B, 952C, 952D	.33
900-339	Sub-Flame Burner Gasket.....	.06
900-340	Oven Burner Mixing Chamber..... Range 900	2.40
900-341	Sub-Flame Burner Range 900, 901, 930, 931, 932	.99
900-345	Oven Burner Ell Gasket..... Range 900, 901, 930, 931, 932, 940, 940A, 940B, 941, 942, 943, 944, 945, 947, 948	.06
900-350	Auxiliary Valve Wheel and Nut..... Range 900, 901	.42
900-370	Oven Burner Complete..... Range 900, 901, 940, 940A, 940B, 941, 941A, 941B, 942, 943, 944, 945, 945A, 950A, 950B, 950C, 950D, 951A, 951C, 952A, 952B, 952C, 952D	3.95
900-435	Set Screw	.18
900-436	Generator Clamp—Obsolete Range 900, 901, 930, 931, 932	
900-451	Round Head Brass Machine Screw (¼-20x¾").. Range 900, 901, 930, 931, 932	.06
900-454	Round Head Brass Machine Screw (¼-20x1¼").. Range 900, 901, 930, 931, 932	.06
900-610	Instant-Gas Valve Safety Lock..... Handy Gas Plant 457, 457G, 458, 458G, 575 Heater 15, 16 Stove 373, 375, 375A, 376, 377, 377A, 378, 378A, 379, 379A Tank 457-199, 465-199	.15
900-653	Instant-Gas Valve Stem Complete..... Handy Gas Plant 457, 457G, 458, 458G, 460, 460G, 575 Stove 375, 375A, 376, 377, 377A, 378, 378A, 379, 379A Tank 457-199, 465-199	.81
900-657	Instant-Gas Valve Complete..... Handy Gas Plant 457, 457G, 458, 458G, 460, 460G, 575 Stove 375, 375A, 376, 377, 377A, 378, 378A, 379, 379A Tank 457-199, 465-199	2.40

COMPLETE PARTS LIST, NUMERICALLY ARRANGED

Order by Number	Part Name	Net Retail Price	Order by Number	Part Name	Net Retail Price
901-329	Oven Burner Lighter Baffle—Obsolete Range 901, 930, 931		932-326	Burner Manifold (Casting Only)—Obsolete Range 932, 948	
901-344	Oven Burner Ell.....	.60	932-385	Auxiliary Valve Complete—Obsolete Supply 366-385	
	Range 754A, 754B, 754C, 754D, 758E, 901, 930, 931, 932, 940, 940A, 940B, 941, 941A, 941B, 942, 943, 944, 945, 945A, 946A, 947, 947A, 948, 948A, 962		932-430	Bakelite Knob	.21
902-171	Fuel Tube (7¼" Long).....	.39	940-171	Fuel Tube (26" Long).....	.66
	Handy Gas Plant 458, 458G Range 902, 908, 912, 914, 916			Range 940, 940A, 940B, 941, 941A, 941B, 942, 943, 944, 945, 945A, 946A, 947, 947A, 948 Tank 326-191, 754-191, 758-191, 900-191, 932-189, 940-191, 940A191, 945A191, 948-191, 948A191, 949-191, 950-191, 951-191, 952-191, 953-191, 955-191, 974-191	
902-172	Fuel Tube (9¼" Long).....	.45	940-191	Tank Complete (With Fittings) Obsolete—Supply 953-191	
	Range 902, 908, 912, 914, 916		940-212	Generator Tube	1.50
902-173	Fuel Tube (14¼" Long).....	.54		Generator 940-262	
	Range 741, 741A, 742, 742A, 902, 914, 916 Stove 377A, 378A, 379A		940-262	Special Chrome Alloy Generator (Gas Tip Marked "4").....	3.00
902-323	Master Burner Cap.....	2.40		Stove 375, 375A, 376, 377, 377A, 378, 378A, 379, 379A	
	Range 902, 914, 916		940-341	Oven Sub-Flame and Fillers.....	1.50
908-172	Fuel Tube (2½" Long).....	.39		Range 940, 940A, 940B, 941, 941A, 941B, 942, 943, 944, 945, 945A, 946A, 947, 947A, 948, 948A	
	Stove 377, 378, 379		940-344	Standard Burner Fillers.....	.81
911-171	Fuel Tube (17½" Long).....	.48		Range 940, 940A, 940B, 941, 941A, 941B, 942, 943, 944, 945, 945A, 946A, 947, 947A, 948, 948A, Stove 378, 378A, 379, 379A, 393, 395, 396, 397, 949, 949A, 974A, 975A, 396LC, 396A, 396A-LC, 419, 420	
	Range 912 Stove 911, 913, 915, 920		940-345	Burner Fillers	.99
930-171	Fuel Tube (21½" Long).....	.66		Range 940, 940A, 940B, 941, 941A, 941B, 942, 943, 944, 945, 945A, 946A, 947, 947A, 948, 948A Stove 377, 377A, 378, 378A, 379, 379A, 393, 397, 949, 949A, 974, 974A, 975, 975A, 976, 976A	
	Range 754A, 754B, 754C, 754D, 930, 931, 940, 940A, 940B, 941, 941A, 942, 943, 944, 945, 945A, 946A, 947, 947A, 948, 950A, 950B, 950C, 950D, 951A, 951C, 952A, 952B, 952C, 952D, 953A, 953C, 953D		940-346	Burner Fillers	1.20
930-219	Generator Filler Coil.....	.21		Burner 721, 722 Range 390, 390L, 740, 740A, 741, 741A, 742, 742A, 754A, 754B, 754C, 754D, 758, 758D, 758E, 940, 940A, 940B, 941, 941A, 941B, 948, 948A, 950A, 950B, 950C, 950D, 951A, 951C, 952A, 952B, 952C, 952D, 953A, 953C, 953D, 955, 961, 963 Stove 395	
	Generator 940-262		940-347	Master and Oven Sub-Flame Fillers.....	.60
930-253	Generator Valve Stem (Less Cleaning Needle and Holder).....	.99		Range 940, 940A, 940B, 941, 941A, 941B, 942, 943, 944, 945, 945A, 946A, 947, 947A, 948, 948A	
	Generator 940-262		940-359	Burner Cap and Stud Obsolete—Supply 950-359	
930-325	Air Intake Adjuster.....	.09	940-365	Master Burner	4.50
	Range 930, 931, 932, 940, 940A, 940B, 941, 941A, 941B, 942, 943, 944, 945, 945A, 946A, 947, 947A, 948, 948A			Range 940, 940A, 940B, 941, 941A, 941B, 942, 943, 944, 945, 945A, 946A, 947, 947A, 948, 948A	
930-345	Oven Burner Ell Gasket.....	.09	940-366	Giant Burner	3.00
	Range 754A, 754B, 754C, 754D, 758, 758D, 758E, 941A, 941B, 945A, 946A, 947A, 948A, 950A, 950B, 950C, 950D, 951A, 951C, 952A, 952B, 952C, 952D, 953A, 953C, 953D, 962			Range 940, 940A, 940B, 941, 941A, 941B, 942, 943, 944, 945, 945A, 946A, 947, 947A, 948, 948A Stove 377, 377A, 378, 378A, 379, 379A, 949, 949A, 974A, 975A, 976A	
930-348	Supply Pipe (11¾" Long).....	.66	940-367	Standard Burner	1.95
	Range 930, 940, 940A, 940B			Range 940, 940A, 940B, 941, 941A, 941B, 942, 943, 944, 945, 945A, 946A, 947, 947A, 948, 948A Stove 378, 378A, 379, 379A, 949, 949A, 974A, 975A	
930-364	Auxiliary Valve Stem Complete.....	.99			
	Range 930, 931, 940, 940A, 941, 941A, 941B, 942, 943, 944, 945, 946A, 947, 947A, 948				
930-373	Oven Burner Drain Tube (27¼" Long).....	.60			
	Range 930, 940, 940A, 940B, 941, 942				
930-409	Tank Bracket Brace.....	.27			
	Tank 940A191				
930-410	Tank Bracket Band.....	.27			
	Tank 940A191				
932-171	Fuel Tube	.60			
	Range 741, 741A, 742, 742A, 932, 948A				
932-191	Tank Complete (With Fittings).....	10.80			
	Range 932				
932-307	Drain Plug Body.....	.27			
	Range 932, 945, 945A, 946A, 947, 947A, 948, 948A				

COMPLETE PARTS LIST, NUMERICALLY ARRANGED

Order by Number	Part Name	Net Retail Price	Order by Number	Part Name	Net Retail Price
940-532	Air Stem Heater 5B Stove 377A, 378A, 379A Tank 758-191, 940-191, 940A191, 948A191, 949-191, 950-191, 951-191, 953-191, 974-191	.60	950-218	Gas Tip (Marked "...")..... Generator 950-262, 390-262 Stove 390, 390L, 396, 396A, 396LC, 396A-LC, 397	.18
940-538	Check Valve Heater 5B Stove 377A, 378A, 379A Tank 758-191, 940-191, 940A191, 948A191, 949-191, 950-191, 951-191, 953-191, 974-191	.60	950-219	Generator Filler Coil..... Generator 950-262, 393-262 Stove 390, 390L	.21
940-555	Pump Plunger Complete (Less Air Stem)..... Heater 5B Stove 377A, 378A, 379A Tank 940-191, 940A191, 949-191, 950-191, 953-191, 974-191	1.65	950-253	Valve Stem Complete (Less Needle)..... Generator 950-262	.99
940A191	Tank Complete (With Fittings) Obsolete—Supply 953-191		950-262	Generator Complete Range 754A, 754B, 754C, 754D, 758, 758D, 758E, 950A, 950B, 950C, 950D, 951A, 951C, 952A, 952B, 952C, 952D, 953A, 953C, 953D	3.00
945-347	Supply Pipe (3 1/8" Long)..... Range 941, 942, 945, 946A, 947, 947A	.48	950-305	Master Sub-Flame Baffle..... Range 754A, 754B, 950A, 950B, 951A, 952A, 952B, 953A	.42
948-171	Fuel Tube (33 1/2" Long)..... Range 758, 758D, 758E, 948A	.81	950-313	Oven Sub-Flame Baffle..... Range 758, 950A, 950B, 951A, 952A, 952B, 953A	.42
948-191	Tank Complete (With Fittings) Obsolete—Supply 951-191		950-322	Master Burner Mixing Chamber..... Range 950A, 950B, 951A, 952A, 952B, 953A	1.65
948-326	Oven Burner Range 754A, 754B, 754C, 754D, 758, 758D, 758E, 947, 947A, 948, 948A, 953A, 953C, 953D, 962	1.95	950-329	Sub-Flame Supply Pipe..... Range 390, 390L, 950A, 950B, 950C, 950D, 951A, 951C, 952A, 952B, 952C, 952D, 953A, 953C, 953D, 955, 961, 963	.42
948-555	Pump Plunger Complete (Less Air Stem)..... Range 758, 758D, 758E, 945, 945A, 947, 947A, 951A, 951C Tank 758-191, 948-191, 948A191, 951-191	1.65	950-332	Sub-Flame Supply Pipe Lock Nut Obsolete—Supply 1-23	
948A191	Tank Complete (With Fittings) Obsolete—Supply 951-191		950-340	Oven Burner Mixing Chamber..... Range 950A, 950B, 951A, 953A	2.40
949-191	Tank Complete (With Fittings) Obsolete—Supply 974-191		950-344	Valve Gasket—Obsolete Range 754A, 754B, 754C, 754D, 758, 758D, 758E, 950A, 950B, 950C, 950D, 951A, 951C, 952A, 952B, 952C, 952D, 953A, 953C, 953D, 955, 961, 962	
949-326	Burner Manifold (Casting Only)—Obsolete Stove 949, 949A		950-345	Air Intake Pipe..... Range 754A, 754B, 950A, 950B, 951A, 952A, 952B, 953A	.60
949-360	Master Burner Cover and Fillers..... Stove 377, 377A, 378, 378A, 379, 379A, 949, 949A, 974A, 975A, 976A	.99	950-346	Oven Supply Pipe (Down)..... Range 950A, 950B, 950C, 950D, 953C, 953D	.99
949-365	Master Burner Cap..... Stove 377, 377A, 378, 378A, 379, 379A, 949, 949A, 974A, 975A, 976A	3.30	950-347	Oven Supply Pipe Flange..... Range 758, 758D, 950A, 950B, 950C, 950D, 951A, 951C, 952A, 952B, 952C, 952D, 953A, 953C, 953D	.21
949-415	Generator Clamps—Wrong Number Supply 949-460		950-349	Oven Burner to Supply Pipe Connector..... Range 950A, 950B, 950C, 950D, 951A, 951C, 952A, 952B, 952C, 952D	1.20
949-460	Generator Clamp Complete..... Stove 377, 377A, 378, 378A, 379, 379A, 949, 949A, 974A, 975A, 976A	.60	950-350	Valve Handle and Nut (Black)..... Range 754A, 754B, 754C, 754D, 758, 758D, 758E, 950A, 950B, 950C, 950D, 951A, 951C, 952A, 952B, 952C, 952D, 953A, 953C, 953D, 955, 961, 962, 963	.42
950-171	Fuel Tube (7" Long)..... Range 950A, 950B, 951A, 951C	.45	950-358	Standard Burner Cap Cover and Bolt..... Range 754A, 754B, 754C, 754D, 758, 758D, 758E, 950A, 950B, 950C, 950D, 951A, 951C, 952A, 952B, 952C, 952D, 953A, 953C, 953D, 955, 961, 962, 963 Stove 393	.42
950-191	Tank Complete (With Fittings) Obsolete—Supply 953-191		950-359	Giant Burner Cap Cover and Bolt..... Burner 721, 722 Range 754A, 754B, 754C, 754D, 758, 758D, 758E, 950A, 950B, 950C, 950D, 951A, 951C, 952A, 952B, 952C, 952D, 953A, 953C, 953D, 955, 961, 962, 963 Stove 393	.42
950-207	Generator Valve Body..... Generator 950-262	.60	950-360	Generator Clamp Complete Range 758, 758D, 758E, 950A, 950B, 950C, 950D, 951A, 951C	
950-208	Cleaning Needle Generator 950-262, 390-262 Stove 390, 390L	.18			
950-212	Generator Tube Generator 950-262, 390-262 Stove 390, 390L	1.50			

COMPLETE PARTS LIST, NUMERICALLY ARRANGED

Order by Number	Part Name	Net Retail Price	Order by Number	Part Name	Net Retail Price
950-361	Valve Disc with Pin..... Range 754C, 754D, 758D, 758E, 950C, 950D, 951C, 952C, 952D, 953C, 953D, 955, 961, 962, 963	.60	952-191	Tank Complete (With Fittings)..... Range 952A, 952B, 952C, 952D	16.50
950-363	Master Burner Sub-Flame..... Range 950A, 950B, 951A, 952A, 952B, 953A	.99	952-310	Grate—Obsolete—Supply 758-310 Burner 721, 722 Range 754A, 754B, 754C, 754D, 950A, 950B, 950C, 950D, 951A, 951C, 952A, 952B, 952C, 952D, 953A	
950-364S	Valve Stem Complete (Long).....	.99	952-336	Generator Clamp (Casting Only)—Obsolete Supply 952-360 Range 754C, 754D, 952A, 952B, 952C, 952D, 953C, 953D	
950-365S	Valve Stem Complete (Short)..... Range 754A, 754B, 754C, 754D, 758, 758D, 758E, 950A, 950B, 950C, 950D, 951A, 951C, 952A, 952B, 952C, 952D, 953A, 953C, 953D	.99	952-340	Oven Burner Mixing Chamber..... Range 952A, 952B	2.40
950-366S	Air Intake Adjuster Stem Complete..... Range 754A, 754B, 754C, 754D, 758E, 950A, 950B, 950C, 950D, 951A, 951C, 952A, 952B, 952C, 952D, 953A, 953C, 953D, 955, 961, 962, 963	.48	952-344	Standard Burner Fillers..... Range 740, 740A, 741, 741A, 742, 742A, 754A, 754B, 754C, 754D, 758, 758D, 758E, 950A, 950B, 950C, 950D, 951A, 951C, 952A, 952B, 952C, 952D, 953A, 953C, 953D, 955, 961, 963	.81
950-373	Oven Drain Tube..... Range 950A, 950B	.60	952-346	Oven Supply Pipe (Down)..... Range 952A, 952B, 952C, 952D, 953A	.99
950-374	Master Drain Tube..... Range 950A, 950B	.60	952-350	Valve Handle and Nut (Green)..... Range 754C, 754D, 758D, 758E, 950C, 950D, 951C, 952C, 952D, 953C, 953D, 955, 961, 962, 963	.42
950-375	Oven Burner Sub-Flame..... Range 950A, 950B, 951A, 952A, 952B, 953A	1.65	952-360	Generator Clamp Complete..... Range 754A, 754B, 754C, 754D, 952A, 952B, 952C, 952D, 953A, 953C, 953D	.81
950-657	Master Carburetor Valve (Dial Type)..... Range 950A, 950B Tank 950-191	2.40	952-374	Master Burner Drain Tube..... Range 754A, 754B, 952A, 952B	.60
950C331S	Burner Adjusting Screw and Nut—Obsolete Range 955, 961, 963		952-571	Pump Air Wire..... Range 754A, 754B, 754C, 754D, 952A, 952B, 952D Tank 754-191, 952-191	.45
950C365	Oven Burner Sub-Flame..... Range 950C, 950D, 951C, 952C, 952D, 953C, 953D, 955, 961, 963	1.20	952C345	Drain Cap Range 390, 390L, 490, 754C, 754D, 952A, 952C, 952D, 955, 961, 963	.15
950C369	Master Burner Mixing Chamber..... Range 754C, 754D, 950C, 950D, 951C, 952C, 952D, 953C, 953D	1.20	952C370	Oven Burner Mixing Chamber..... Range 952C, 952D	2.40
950C370	Oven Burner Mixing Chamber—Obsolete Range 950C, 950D, 951C, 953C, 953D		952D375	Drain Body and Tube..... Range 952C, 952D, 955	1.95
950C373	Outside Drain Tube..... Range 390, 390L, 740, 741, 742, 740A, 741A, 742A, 754C, 754D, 758D, 758E, 950C, 950D, 951C, 952C, 952D, 953, 953C, 953D, 955	1.20	953-191S	Tank Complete Range 940, 940A, 940B, 941, 941A, 941B, 942, 943, 944, 950A, 950B, 950C, 950D, 953A, 953C, 953D	16.50
950D321	Drain Nipple Range 390, 390L, 754C, 754D, 758D, 758E, 950C, 950D, 951C, 952C, 952D, 953D, 955, 961, 962, 963	.27	953-346	Oven Supply Pipe (Down)..... Range 953A	.99
950D373	Hand Drain Range 951C	1.80	953-373	Oven Drain Tube—Obsolete Supply 951-373	
950D375	Drain Body and Tubes..... Range 950C, 950D	1.95	953-374	Master Drain Tube—Obsolete Supply 951-374	
951-191	Tank Complete (With Fittings)—Obsolete— Supply 953-191 Range 945, 945A, 946, 946A, 947, 947A, 948, 948A, 951A, 951C		953A460	Thermometer Range 390, 390L, 953C, 953D	1.65
951-346	Oven Supply Pipe (Down)..... Range 951A, 951C	.81	955-173	Fuel Tube (Oven)—Obsolete—Supply 940-171 Range 955	
951-357	Oven Instant-Gas Valve..... Tank 758-191, 940-191, 940A191, 948-191, 948A191, 950-191, 951-191, 952-191, 953-191, 955-191	2.40	955-191	Tank Complete—Obsolete Range 955	
951-657	Master Instant-Gas Valve Tank 940-191, 940A191, 948-191, 948A191, 949-191, 950A191, 951-191, 952-191, 953-191, 955-191	2.40	955-344	Burner Fillers Range 955, 961, 963	.99
952-173	Fuel Tube (40" Long)..... Range 950C, 950D, 952A, 952B, 952C, 952D, 955	.90	955-360	Vaporizer Clamp Range 955	.81

COMPLETE PARTS LIST, NUMERICALLY ARRANGED

Order by Number	Part Name	Net Retail Price	Order by Number	Part Name	Net Retail Price
955-514	Pump Clamp Range 955	.27	961-612	Generator Clamp Screw..... Range 955, 961, 962, 963	.15
955-560	Pump Plunger Complete—Obsolete Range 955		961-617	Air Tip Range 961, 962, 963	.27
955-571	Pump Air Tube Range 955	.42	961-618	Fuel Tip Range 961, 962, 963	.27
955-585	Pump Complete Range 955	2.70	961-657	"Choke" Complete Range 961, 962, 963	3.30
961-172	"Y" Connection Assembly Range 961, 963	1.95	962-320	Burner Mixing Chamber..... Range 758E, 962	1.95
961-174	Manifold Drain Tube Assembly..... Range 961, 963	.42	962-343	Burner Fillers (Small)..... Range 962	.90
961-175	Carburetor Drain Assembly Range 961, 963	.81	962-344	Burner Fillers (Large)..... Range 962	1.05
961-177	Exterior Drain Tube Assembly..... Range 961, 962, 963	1.95	962-345	Oven Supply Pipe Ell..... Range 958E, 962	.42
961-178	Drain Tube Extension..... Range 961, 963	1.65	962-346	Oven Cross Supply Pipe..... Range 962	.81
961-207	Valve Body Range 740, 740A, 741, 741A, 742, 742A, 955, 961, 962, 963	.99	962-371	"Y" Connection Assembly.....	1.20
961-219	Generator Filler Coil Range 955, 961, 962, 963	.21	962-372	Carburetor Drain Assembly..... Range 962	.99
961-240	Generator Tube and Bushing..... Range 955, 961, 962, 963	1.50	962-374	Drain Tube (Short)..... Range 962	.42
961-251	Cleaner Rod and Needle..... Range 955, 961, 962, 963	.33	962-375	Carburetor Complete Range 962	6.60
961-253	Valve Stem Complete..... Range 955, 961, 962, 963	.81	974-191	Tank Complete (With Fittings)..... Range 949, 949A, 974, 974A, 975, 975A, 976, 976A Stove 377A, 378A, 379A	13.50
961-262	Generator Complete Range 955, 961, 962, 963	3.00	974A171	Fuel Tube (6½" Long)..... Range 950C, 950D, 953A, 953C, 953D, 974A, 975A, 976A	.39
961-320	Oven Down Pipe Packing..... Range 955, 961, 963	.15	974A172	Fuel Tube (5½" Long) Obsolete—Replaced by 974A171	
961-343	Oven Down Pipe—Obsolete Range 955, 961, 963		974A326	Burner Manifold (Casting Only)..... Stove 378, 378A, 379, 974A, 975A	2.40
961-375	Carburetor Complete Range 961, 963	7.05	975-171	Fuel Tube—Obsolete—Supply 328-172	
961-376	Oven Burner Mixing Chamber..... Range 955, 961, 963	2.40	975-191	Tank Complete (With Fittings)—Obsolete Supply 974-191 and 328-172 Fuel Tube	
961-464S	Auxiliary Burner Valve Complete (Long)..... Range 955, 961, 963	.99	975-409	Tank Support Stove 377A, 378A, 379A	.18
961-465S	Auxiliary Burner Valve Complete (Short)—Obsolete Range 955, 961, 962, 963		975-410	Tank Bracket Stove 974, 974A, 975, 976, 976A	.27
961-465G	Master Burner Valve Complete—Obsolete Range 955, 961, 962, 963		976-326	Burner Manifold (Casting Only)..... Stove 376, 976	1.80
			976-444	Grate—Obsolete—Supply 376-444	

FOR LONGEST SERVICE FOR BEST SERVICE

Use only Genuine Coleman Parts and Accessories on these Coleman Appliances . . . Each individual part is designed to exact precision and to work perfectly with all other parts; therefore, only Genuine Parts and Accessories can be trusted to give satisfactory service. The use of other than Genuine Coleman Parts and Accessories invalidates the Coleman guarantee.

The Coleman Line Now Includes Appliances for Cooking, Lighting, Heating and Ironing for which every home--both city and country is a prospect all the year round.

The Parts Display Cabinet illustrated on the inside front cover will help advertise your store as headquarters for Coleman Appliances and service.

Always Use Fresh, Clean, Unleaded Fuel in Coleman Appliances

Coleman Gasoline Pressure Appliances are built to operate properly on any fresh, clean unleaded motor gasoline or Stove and Lamp naphtha. "STRAIGHT-RUN" gasolines and naphthas make the best appliance fuels.

Many of the lower priced unleaded motor gasolines are excellent fuels for gasoline pressure stoves, ranges, heaters, camp stoves, lamps, lanterns, irons, blow torches, etc. Such gasolines may be either white or colored.

DO NOT USE ANY FUEL CONTAINING LUBRICATING OIL, GRAPHITE, OR ETHYL FLUID. Such substances rapidly clog appliance generators.

Many oil companies now market "Stove and Lamp Naphthas" which are carefully refined and so handled as to prevent any contamination in storage or shipment.

Ask your oil company representative if one or more of his fuels are suitable for this class of service. If he does not know, ask him to find out and arrange to keep on hand a supply of fuel for your Appliances.

Ways to Store and Handle Fuels for Gasoline Pressure Appliances

1. Keep the fuel in clean, small closed metal cans with vapor tight caps, and store in a cool place. Never use glass containers even for pouring gasoline. (Exposure to air, sunlight, or heat causes gasoline to become discolored and form gums which rapidly clog generators and other important parts of the appliance.)
2. When transferring gasoline from one container to another, keep the metal containers in actual contact with each other. Rest the spout of the can on the edge of the funnel.
3. Buy a fresh supply often—once a week during hot weather.
4. Clean out fount, or tank frequently—once a month in hot weather. If the appliance has not been used for several months, rinse the fount with fresh, clean fuel before using.
5. When an appliance will not be used for several weeks be sure to remove all gasoline from the tank before storing it away. This will prevent the formation of those varnish-like gums which clog appliance generators.