

139, 152, 152A

GASOLINE AND KEROSENE TWO MANTLE




Model 139



Model 152, 152A

MODEL 152A SHOWN

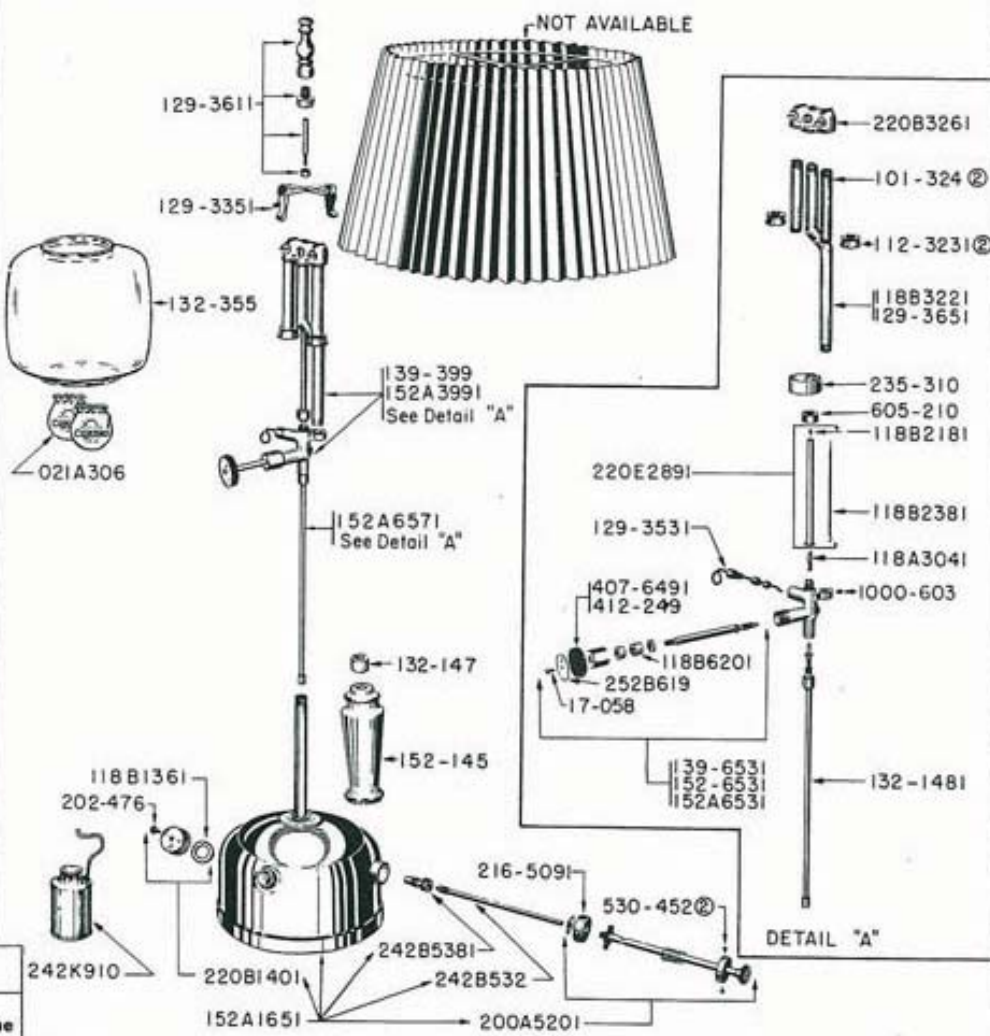

② Quantity of Parts Used in Assembly

MODEL	FINISH	FUEL
139	Ivory & Gold	Kerosene or Gasoline
152	Ivory & Gold	Kerosene or Gasoline
152A	Ivory & Gold	Gasoline

PART NUMBER	DESCRIPTION	USED ONLY ON MODELS
17-058	Machine Screw	
021A306	(21A) Mantle (Pk'd 2)	
101-324	Tube (Burner)	
112-3231	Cap & Screen (Burner)	
118A3041	Eccentric Block	
118B1361	Gasket (Filler Cap)	
118B2181	Gas Tip (Mk'd V)	
118B2381	Needle Assy.	
118B3221	Tube (Air Intake)	152A
118B6201	Packing (Valve Stem)	
129-3351	Clamp (Globe—Pk'd 2)	
129-3531	Stem (Tip Cleaner)	
129-3611	Finale Assy.	
129-3651	Tube (Air Intake)	139, 152
132-147	Nut (Handle)	
132-1481	Tube Assy. (Fuel & Air)	
132-355	(355) Globe	
139-399	Burner Assy.	139, 152
139-6531	Stem Assy.	139

PART NUMBER	DESCRIPTION	USED ONLY ON MODELS
152-145	Handle	
152-6531	Stem Assy.	152
152A1651	Fount (Complete) with Gasoline only on	152A, 139, 152
152A3991	Burner Assy.	152A
152A6531	Stem Assy.	152A
152A6571	Valve (Less Generator)	152A
200A5201	Plunger Assy. (Pump)	
202-476	Screw	
216-5091	Leather (Pump)	
220B1401	Filler Cap	
220B3261	Mixing Chamber	
220E2891	(T44DL) Generator	
235-310	Preheater Cup	139, 152
242B532	Stem (Air)	
242B5381	Check Valve	
242K910	Filling Can	139, 152
252B619	Disc (Direction)	
407-6491	Wheel (Valve)	152A
412-249	Wheel (Valve)	139, 152
530-452	Screw	
605-210	Jamb Nut	
1000-603	Machine Screw (#6—32x $\frac{3}{8}$ Rd. Hd. Stl.)	