


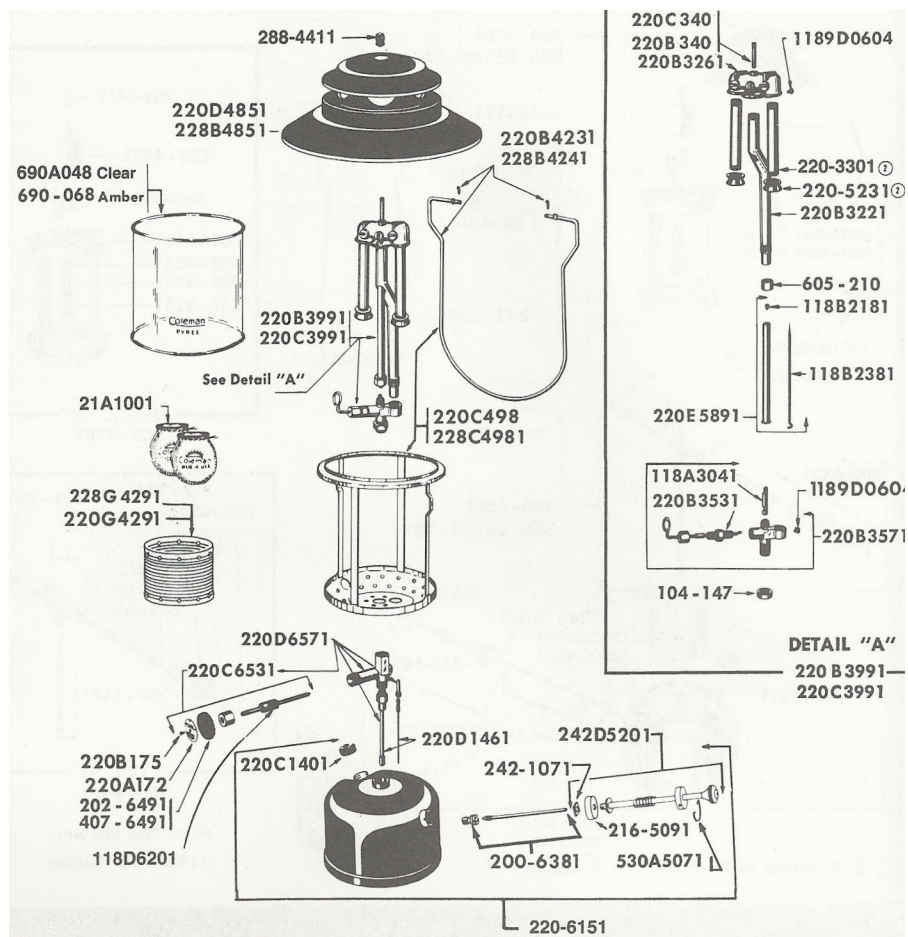

PART NO.	DESCRIPTION	USED ON	PART NO.	DESCRIPTION	USED ON
8B197	Enamel, Fount Green		220C3991	Burner, Complete	F
21A1001	021A Mantle		220C4981	Frame and Bail	F
220-3301	Burner Tube		220C6531	Stem Assembly	
104-147	Nut (27/64" -27 Hex)		220D1461	Tube Assembly (Fuel and Air)	
118A3041	Eccentric Block		220D4851	Ventilator	
118B1361	Filler Cap Gasket (for Cap with Disc)		220D6571	Valve Assy. (Less Generator and Cleaner Assy.)	
118B2181	Gas Tip (Marked "V".)		290-6151	Fount, Complete	
118B2381	Needle Assembly		220E5891	T44DL Generator	
118D6201	Valve Stem Packing		228B4241	Bail	
200-6381	Check Valve and Stem		228C4981	Frame and Bail (Aug. '71)	
288-4411	Ball Nut		228G4291	Globe Base Rest	F
216-5091	Pump Cup		242-1071	Push On Nut	
220-5231	Burner Cap and Screen		242D5201	Pump Plunger Assembly	
220A172	Direction Disc		407-6491	Valve Wheel (Black)	
220B175	Self-Tapping Screw (#4 - 40 x 5/16")		530A5071	Pump Cap Clip	
220B3221	Air Intake Tube		605-210	Jamb Nut	
220B3261	Mixing Chamber with Screw		690A048	330 Clear Pyrex Globe	
220B340	Ventilator Rod	D,E	690-068	330A Amber Pyrex Globe - Accessory	
220B3531	Tip Cleaner Stem		1189D0604	Self-Tapping Screw (#6 - 32 x 1/4", Type F)	
220B3571	Gas Tip Cleaner Assembly				
220B3991	Burner, Complete	D,E			
220B950	Wrench				
220C1401	Filler Cap, Complete				
220C340	Ventilator Rod	F			
220B4231	Bail				