 


BURNER, TANK AND HANDY GAS PLANT PARTS ILLUSTRATIONS

 


Pump No. 101-522

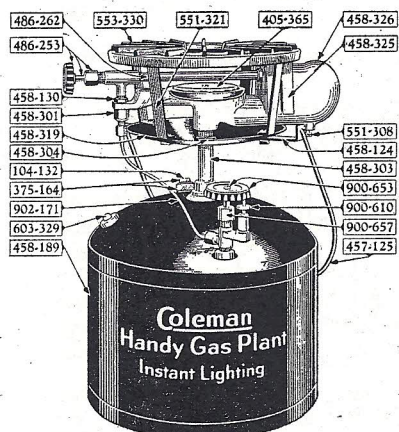


HANDY GAS PLANT
Model Nos. 458, 458G


Appliance Obsolete
Repair Parts Available

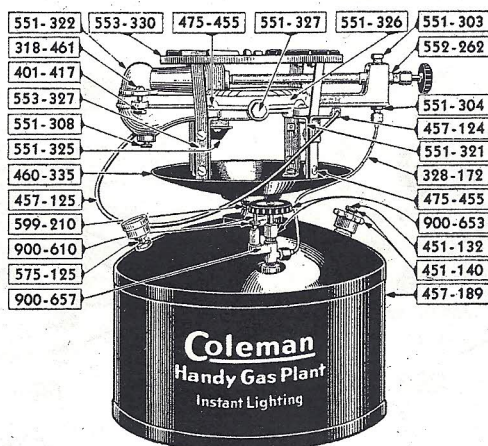

 HANDY GAS PLANT
Model Nos. 457, 457G, 575



Pump No. 451-522

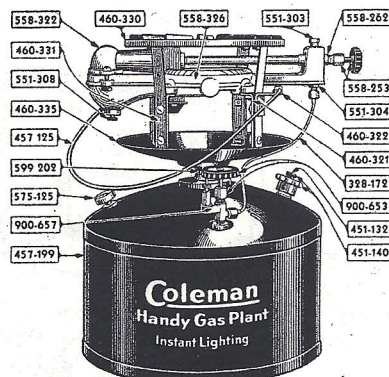 

HANDY GAS PLANT
Model Nos. 460, 460G

Order by Number	Part Name	Net Retail Price
101-522	Pump. Model Nos. 458, 458G.....	\$1.05
104-132	Filler Plug Air Stem. Model Nos. 458, 458G.....	.27
118B136	Filler Plug Gasket. Model Nos. 458, 458G.....	.03
118B620	Valve Stem Packing. Model Nos. 457, 457G, 458, 458G, 460, 460G, 575.....	.03
216-509	Pump Leather. Model Nos. 458, 458G.....	.06
308-238	Cleaning Needle & Holder. Model Nos. 457, 457G.....	.09
318-461	R. H. Machine Screw (1/4x1"). Model Nos. 457, 457G....	.03
325-217	Gas Tip Bushing. Model Nos. 457, 457G, 460, 460G, 575	.15
325-418	Gas Tip (Marked "4"). Model Nos. 457, 457G, 575....	.18
328-172	Fuel Tube (12" Long). Model Nos. 457, 457G, 460, 460G, 575	.48
375-164	Filler Plug Complete. Model Nos. 458, 458G.....	.81
401-417	Machine Screw Nut. Model Nos. 457, 457G, 458, 458G, 575	.03
416A301	Burner Cap Cover. Nos. 458, 458G, 554, 556.....	.15
451-132	Filler Plug Air Stem. Model Nos. 457, 457G, 460, 470G, 575	.27
451-140	Filler Plug Complete. Model Nos. 457, 457G, 460, 470G, 575	.99
451-509	Pump Leather. Model Nos. 457, 457G, 460, 470G, 575....	.09
451-522	Jumbo Pump. Model Nos. 457, 457G, 460, 460G.....	1.80
457-124	Bail Bracket. Model Nos. 457, 457G.....	.21
457-125	Bail. Model Nos. 457, 457G, 458, 458G, 460, 460G.....	.48
457-199	Tank Complete. Model Nos. 457, 457G, 460, 460G.....	10.95
458-124	Bail Bracket. Model Nos. 458, 458G.....	.09
458-130	Lock Nut. Model Nos. 458, 458G.....	.06
458-189	Tank Complete. Model Nos. 458, 458G, 575—Obsolete	
458-301	Connection (Fuel Tube to Gen.) Model Nos. 458, 458G....	.27
458-303	Iron Pipe Nipple (3/8x3"). Model Nos. 458, 458G.....	.42
458-304	Lock Nut. Model Nos. 458, 458G.....	.15
458-305	Baffle Washer. Model Nos. 458, 458G.....	.09
458-319	Baffle. Model Nos. 458, 458G.....	.60
458-324	Air Intake Adjuster. Model Nos. 458, 458G.....	.06
458-325	Mixing Chamber Shield. Model Nos. 458, 458G—Obsolete	
458-326	Burner Manifold. Model Nos. 458, 458G—Obsolete	
472-238	Cleaning Needle & Holder. Model Nos. 458, 458G.....	.09
475-455	R. H. Machine Screw (10-24x3/8). Model Nos. 457, 457G, 458, 458G, 575	.03
460-321	Burner Support. Model Nos. 460, 460G.....	.12
460-322	Bail Support. Model Nos. 460, 460G.....	.12
460-330	Grate. Model Nos. 460, 460G.....	.99
460-331	Grate Bracket. Model Nos. 460, 460G.....	.15
460-335	Drip Pan Complete. Model Nos. 460, 460G.....	1.95
479-217	Needle Protector. Model Nos. 458, 458G.....	.15

Order by Number	Part Name	Net Retail Price
479-218	Generator Gas Tip (Marked "W"). Model Nos. 458, 458G \$	.18
486-212	Generator Tube. Model Nos. 458, 458G.....	.99
486-253	Generator Valve Stem Complete. Model Nos. 458, 458G	.60
486-262	Generator Complete (Gas Tip Marked "W"). Model Nos. 458, 458G.....	2.70
551-240	Generator Valve Body & Fuel Nipple. Model Nos. 457, 457G, 460, 460G, 575.....	.69
551-303	Set Screw. Model Nos. 457, 457G, 460, 460G, 575.....	.15
551-304	Feed Wire Nipple. Model Nos. 457, 457G, 460, 460G, 575	.21
551-308	Drain Plug. Model Nos. 457, 457G, 460, 460G, 458, 458G, 575	.15
551-321	Leg. Model Nos. 457, 457G, 458, 458G, 575.....	.21
551-322	Mixing Chamber. Model Nos. 457, 457G, 575.....	.99
551-325	Air Intake Adjuster. Model Nos. 457, 457G, 575.....	.15
551-326	Burner Casting. Model Nos. 457, 457G, 575.....	2.70
551-332	Asbestos Gasket. Model Nos. 457, 457G, 460, 460G, 575	.06
552-212	Generator Tube. Model Nos. 457, 457G, 460, 460G, 575	1.20
552-219	Generator Filler Coil. Model Nos. 457, 457G, 460, 460G, 575	.21
552-253	Generator Valve Stem (less Cleaning Needle and Holder). Model Nos. 457, 457G, 575.....	.81
552-262	Chrome Alloy Generator. (Gas Tip Marked "4"). Model Nos. 457, 457G, 575.....	3.00
553-327	Grate Bracket. Model Nos. 457, 457G, 575.....	.21
553-330	Grate. Model Nos. 457, 457G, 458, 458G, 575.....	.99
553-335	Baffle & Flange Assembled. Model Nos. 457, 457G, 575.	1.95
558-218	Gas Tip (Marked "J"). Model Nos. 460, 460G.....	.18
558-238	Cleaning Needle & Holder. Model Nos. 460, 460G....	.09
558-253	Generator Valve Stem (Less Cleaning Needle & Holder). Model Nos. 460, 460G.....	.99
558-262	Generator. (Gas Tip Marked "J"). Model Nos. 460, 460G	3.00
558-322	Mixing Chamber. Model Nos. 460, 460G.....	.99
558-326	Burner (Casting Only). Model Nos. 460, 460G.....	3.75
575-125	Pressure Gage. Model Nos. 457, 457G, 458, 458G, 575	1.65
599-202	Close Nipple. Model Nos. 460, 460G.....	.21
599-210	3/8" Close Nipple. Model Nos. 457, 457G, 575.....	.15
603-329	1/8" IPS Plug. Model Nos. 457, 457G, 458, 458G, 575...	.09
650-136	Filler Plug Gasket. Model Nos. 457, 457G, 460, 460G, 575	.06
900-118	Fuel Tip (Marked "AX"). Model Nos. 457, 457G, 458, 458G, 575	.18
900-610	Inst. Gas Valve Safety Lock. Model Nos. 457, 457G, 458, 458G, 575.....	.15
900-653	Inst. Gas Valve Stem Complete. Model Nos. 457, 457G, 458, 458G, 460, 460G, 575.....	.81
900-657	Inst. Gas Valve Complete. Model Nos. 457, 457G, 458, 458G, 460, 460G, 575.....	2.40
902-171	Fuel Tube (6 1/2" Long). Model Nos. 458, 458G.....	.39