 



COLEMAN SELF-HEATING IRON PARTS

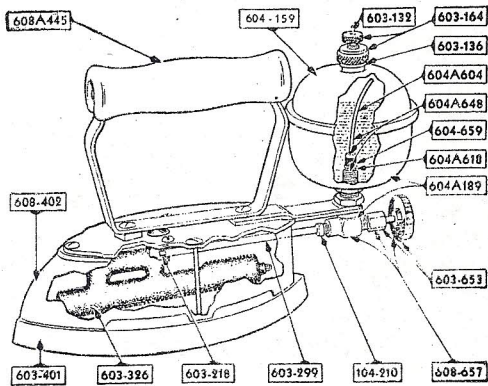

INSTANT-LIGHTING IRON

Model Nos. 8, 8A and 12

 
Use Generator No. 603-299

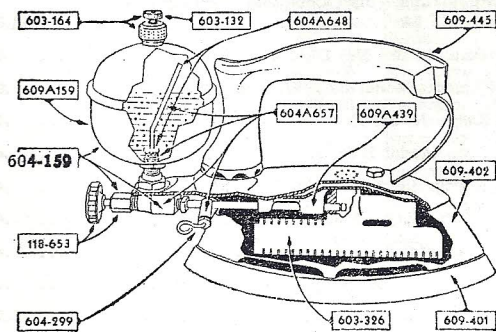

INSTANT-LIGHTING GASOLINE IRON

Model Nos. 609 and 609A

 Use Generator No. 604-299

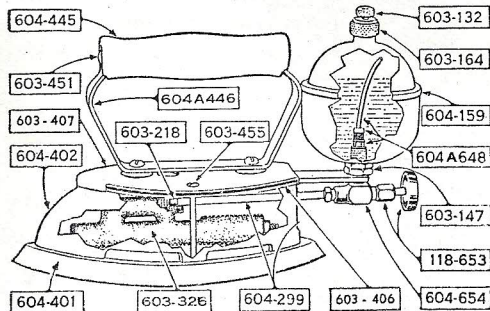

INSTANT-LIGHTING IRON

Model Nos. 4 and 4A

Use Generator No. 604-299

604A189—Fount, Valve and Generator Complete Assembled.

604A657—Generator, Valve, Fuel Intake and Air Wire Complete Assembled.

Order by Number	Part Name	Net Retail Price
104-210	Jamb Nui. Model Nos. 4, 8, 8A.....	\$.03
118-653	Valve Stem Complete. Model Nos. 609, 609A.....	.45
216-509	Pump Leather. All Models.....	.06
216-620	Valve Stem Packing. All Models.....	.03
362-950	Wrench. All Models.....	.21
410-585	Pump. All Models.....	.75
603-132	Filler Plug Air Stem. All Models.....	.27
603-136	Filler Plug Gasket. All Models.....	.03
603-139	Filler Plug Core & Gasket. All Models.....	.27
603-147	Lock Nut. All Models.....	.09
603-164	Filler Plug Complete. All Models.....	.48
603-218	Gas Tip. All Models.....	.09
603-299	Generator, Cleaning Needle, and Holder (Gas Tip Marked "T"). All Models.....	.60
603-326	Burner Manifold & Plug. All Models.....	.99
603-406	Lid Plate, Lower.....	.48
603-407	Lid Plate, Upper.....	.60
603-451	Handle Bolt & Nut. Model Nos. 4, 4A, 8, 8A.....	.09
603-455	Lid Plate to Base Screw. Model Nos. 4, 4A.....	.09
603-653	Generator Valve Stem & Pack Nut (Less Needle and Holder). Model Nos. 4, 4A, 8, 8A.....	.45
604-159	Fount (less Filler Plug). Model Nos. 4, 4A, 8, 8A, 609, 609A.....	1.80
604-299	Roto-Type Generator (Gas Tip Marked "T"). Model Nos. 4A, 609, 609A.....	.70
604-401	Base. Model No. 4A.....	1.65
604-402	Body (Blue Porcelain). Model Nos. 4, 4A.....	1.20
604-440	Stand. Model Nos. 4, 8, 8A.....	.33
604-445	Iron Handle. Model Nos. 4, 4A.....	.33
604-654	Valve Body. Model Nos. 4, 4A, 8, 8A, 609A.....	.75
604-920	Fuel Measuring Can. All Models.....	.33
604A189	Fount, Valve & Generator. Model Nos. 4, 4A, 8, 8A, 609, 609A.....	4.05
604A446	Handle Bracket. Model Nos. 4, 4A, 609.....	.27
604A604	Air Wire. Model Nos. 4, 4A, 8, 8A.....	.09
604A618	Fuel Intake (Marked "AY"). Model Nos. 4A, 8, 8A....	.15
604A648	Fuel Intake and Air Wire (Fuel Intake Marked "AY") Model Nos. 4, 4A, 8, 8A, 609A.....	.42
	SUPPLY 609-648 on 609.....	.42
604A657	Generator, Valve, Fuel Tip and Air Wire Complete Model Nos. 4, 4A, 609A.....	1.95
	SUPPLY 609-657 on 609.....	1.95
608-402	Body Casting. Model 8, 8A.....	.66
608-451	Lid Plate to Base Screw. Model Nos. 8, 8A.....	.06
608A445	Handle. Model Nos. 8, 8A.....	.33
609-401	Base. Model Nos. 609, 609A—Obsolete—Supply 604-401	
609-402	Body (Porcelain). Model Nos. 609, 609A.....	.99
609-444	Stand. Model Nos. 604A, 609, 609A.....	.42
609-445	Handle. Model Nos. 609, 609A.....	1.20
609-659	Fuel Intake Protector & Screen. Model Nos. 4, 4A, 8, 8A, 609A.....	.21
609A159	Fount (less Filler Plug)—Discontinued. SUPPLY 604-159.	
609A189	Fount, Valve & Generator—Discontinued. SUPPLY 604A189.	
609A439	Flame Baffle. Model Nos. 4, 4A, 8A, 609, 609A.....	.15