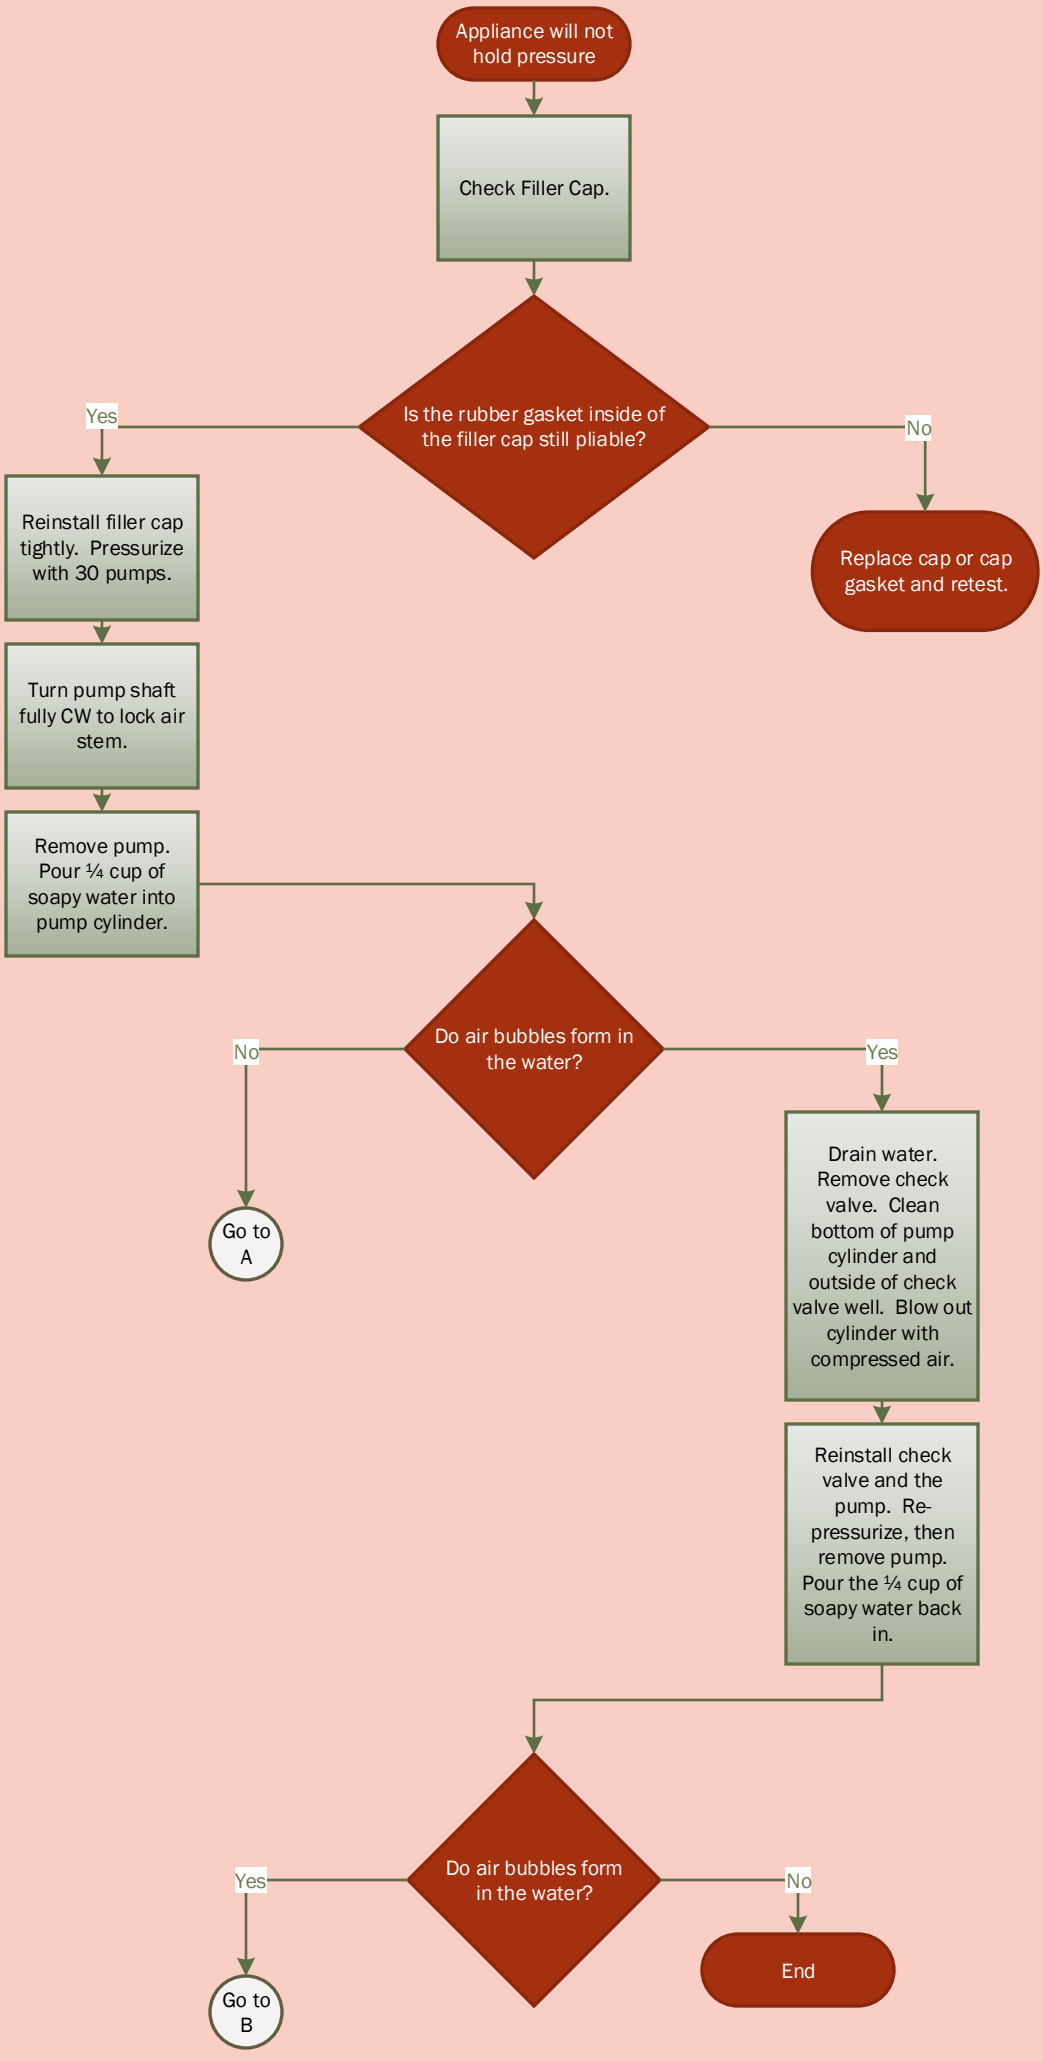
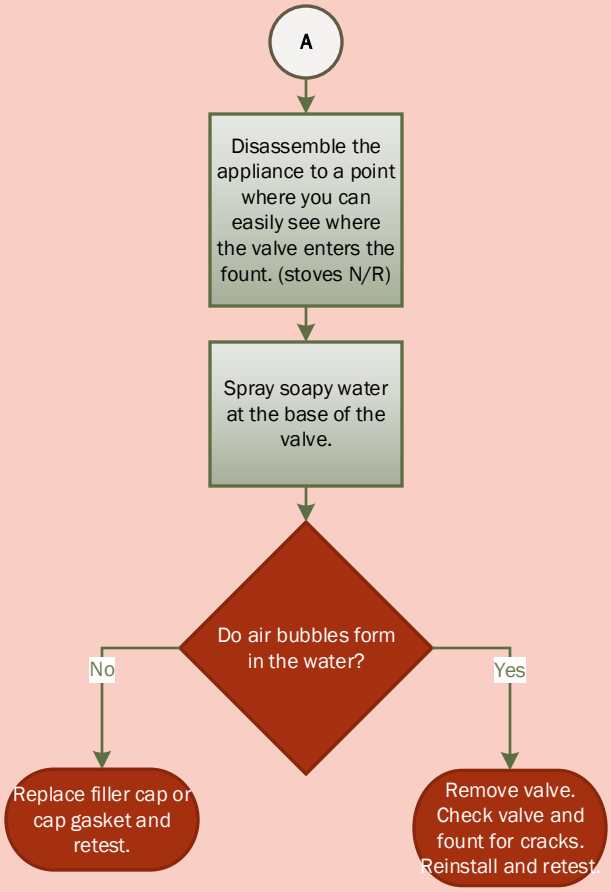
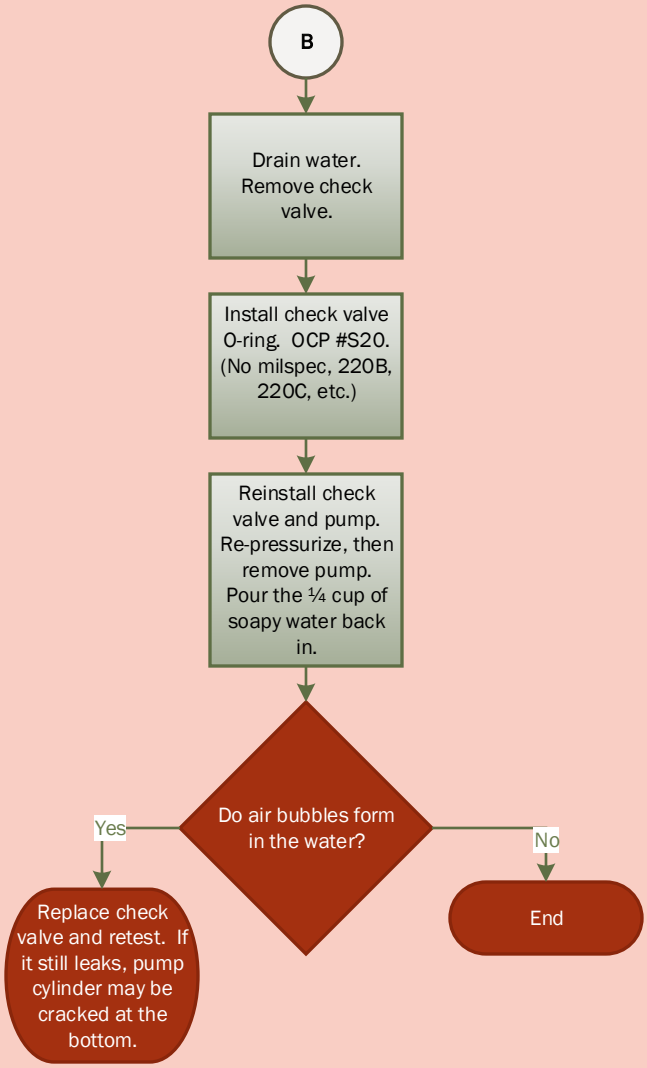

Appliance will not hold pressure
Check Filler Cap.
Is the rubber gasket inside of the filler cap still pliable?
Yes
No
Reinstall filler cap tightly. Pressurize with 30 pumps.
Replace cap or cap gasket and retest.
Turn pump shaft fully CW to lock air stem.
Remove pump. Pour ¼ cup of soapy water into pump cylinder.
Do air bubbles form in the water?
No
Yes
Go to A
Drain water. Remove check valve. Clean bottom of pump cylinder and outside of check valve well. Blow out cylinder with compressed air.
Reinstall check valve and the pump. Re-pressurize, then remove pump. Pour the ¼ cup of soapy water back in.
Do air bubbles form in the water?
Yes
No
Go to B
End





Copyright 2026 Frank Bebb