


PARTS LIST


**413C, 413D,
413E, 413F**
INSTANT LIGHTING GASOLINE
CAMP STOVE (TWO BURNER)

COLEMAN STOVES

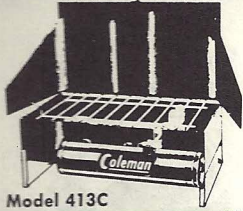


Model 413C


STOVES

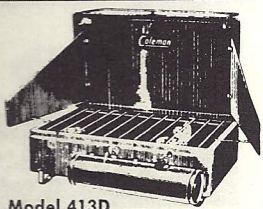


Model 413D

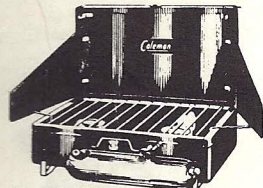

Model 413E

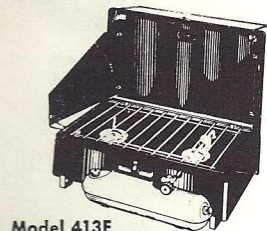

Model 413F

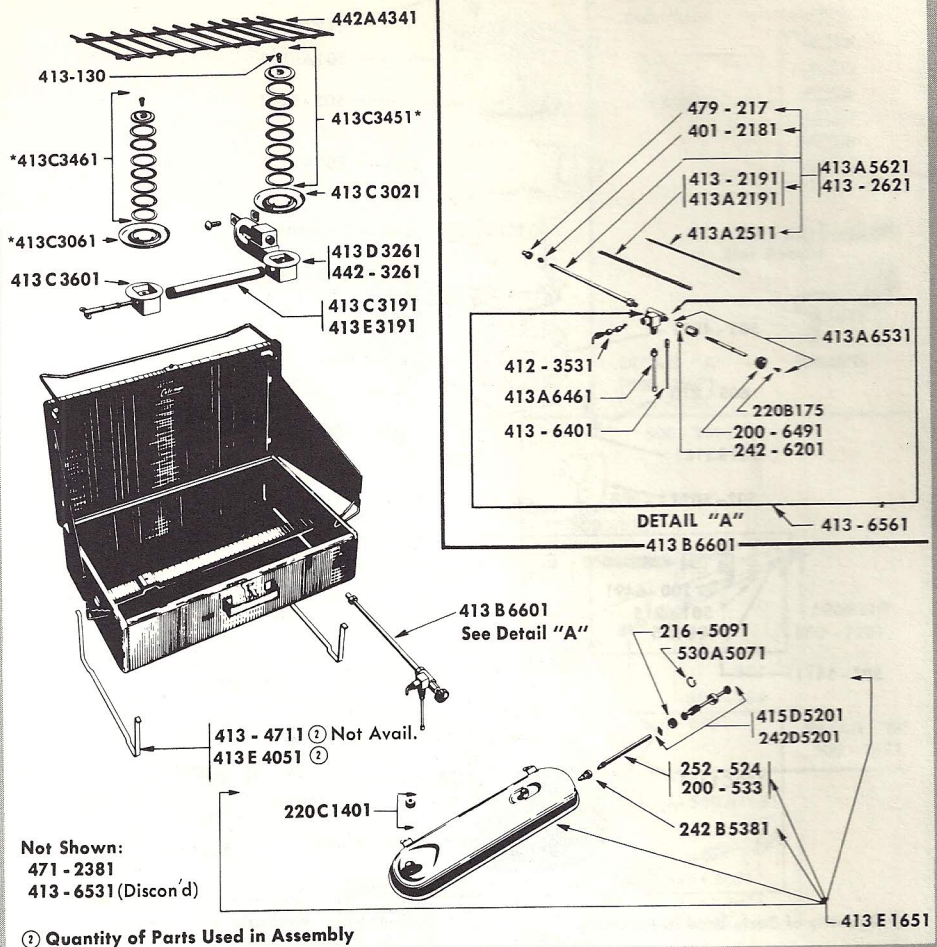

Not Shown:
471 - 2381
413 - 6531 (Discon'd)

② Quantity of Parts Used in Assembly

MODEL 413F SHOWN

MODEL	FINISH (Enamel)	BURNERS	DISTANCE BETWEEN CENTERS	TANK CAPACITY (In Pints)	DIMENSION (Folded — in Inches)		
					Height	Width	Depth
413C	FOREST GREEN ALL MODELS	2	11"	3½	5½	22½	13¾
413D		2	11"	3	5¼	22¼	13¾
413E		2	11"	3½	5¼	22¼	13¾
413F		2	11"	3½	5¼	22¼	13¾

(All Models Discontinued)

PART NO.	DESCRIPTION	USED ON	PART NO.	DESCRIPTION	USED ON
8B119	Forest Green Enamel — Pressurized Spray		413A2511	Needle Assembly	413E, 413F
8B147	Red Lacquer — Pressurized Spray Tanks		413A5621	Generator	413E, 413F
118B1361	Filler Cap Gasket — Used with 220B1401, 220C1401 Cap with Disc		413A6461	Tube Assembly (Fuel and Air)	
200 - 533	Air Stem	413E, 413F	413A6531	Stem Assembly	413E, 413F
200 - 6491	Valve Wheel		413B6601	Valve and Generator, Complete	
242D5201	Pump Plunger Assembly	413E, 413F	413C3021	Master Burner Bowl	
216 - 5091	Pump Cup		413C3061	Aux. Burner Bowl	413C
220B175	Self-Tapping Screw (#4 — 40 x 5/16")		413C3191	Manifold Pipe	413C
220 - 6361	Filler Cap Gasket & Disc Ass'y. — Discontinued		413C3451	Master Burner Cap and Fillers	
220C1401	Filler Cap, Complete		413C3461	Aux. Cap and Fillers	
242 - 6201	Valve Stem Packing		413C3601	Valve Stem (Aux. — Br. Body with Valve)	
242B5381	Check Valve		413C6551	Valve — Replaced by 413-6561	413E, 413F
252 - 524	Air Stem	413C	413D3261	Master Burner Body — Replaced by 413-5281	413C, 413D, 413E, 413F
401 - 2181	Gas Tip (Marked "B")		413E3191	Manifold Pipe	413D, 413E, 413F
412 - 3531	Lighter Stem		413E1651	Tank (Less Generator and Valve)	
413 - 130	Screw		413G4051	Leg	413D, 413E, 413F
413 - 2071	Valve Body — Use 413-6561.	413C, 413D	413G4341	Grate — Replaced by 442A4341	
413 - 2191	Generator Coil	413C, 413D	415D5201	Pump Plunger Assembly — Sub 242D5201.	413C, 413D
413 - 2621	Generator — Replaced by 413B6601	413C, 413D	442 - 3261	Master Burner Body — Replaced by 413-5281	413F
413 - 4711	Leg — Not Available	413C	442A4341	Grate	
*413 - 5281	Manifold Assembly		471 - 2381	Needle and Holder	413C, 413D
413 - 6401	Block and Needle Assembly		479 - 217	Tip Protector	
413 - 6531	Stem Assembly — Not Available	413C, 413D	530A5071	Pump Cap Clip	
413 - 6551	Valve — Replaced by Complete 413B6601	413C, 413D	1059D1004	Screw (#10 — 32X¼") (for Cap and Disc)	
413 - 6561	Valve with Stem Assembly (Less Generator)	413E, 413F, 413G			
413A207	Valve Body — Use 413-6561.	413E, 413F			
413A2191	Generator Coil	413E, 413F			

*To order Burner Bowls and Fillers for 413-5281, see 413G.